


EN5330 3A Voltage Mode Synchronous Buck PWM DC-DC Converter

Description

The EN5330 is a Power System on a Chip DC-DC converter. It is specifically designed to meet the precise voltage and fast transient requirements of present and future high-performance, low-power processor, DSP, FPGA, memory boards and system level applications in a distributed power architecture. Advanced circuit techniques, ultra high switching frequency, and very advanced, high-density, integrated circuit and proprietary inductor technology deliver high-quality, ultra compact, non-isolated DC-DC conversion. Operating this converter requires only three external components that include small value input and output ceramic capacitors and a soft-start capacitor.

The EN5330 significantly helps in system design and productivity by offering greatly simplified board design, layout and manufacturing requirements. In addition, a reduction in the number of vendors required for the complete power solution helps to enable an overall system cost savings.

Typical Application Circuit

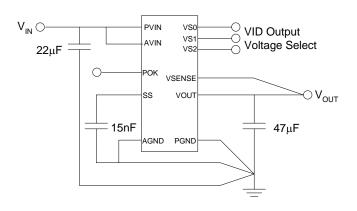

Features

- Up to 10W output power (at $V_{OUT}=3.3V$)
- External inductor is NOT required
- Lead-Free packaging
- 5MHz operating frequency
- More than 90% efficient
- V_{OUT} accuracy of 2% over line, load and temperature
- 1/3 the board area of discrete component solutions
- Very fast transient response
- All high speed switching signals contained inside the part
- Wide input voltage range of 2.375V to 5.5V
- Digital voltage selector with options for common output voltages from 0.8V to 3.3V
- External resistor divider and OVP option for output voltages from 0.8V to V_{IN}-600mV
- Output enable pin and Power OK signal
- Programmable soft-start time
- Over-current protection
- Thermal shutdown, short circuit, output overvoltage and input under-voltage protection

Applications

- Servers, workstations and PCs
- Broadband, networking, LAN/WAN, optical telecommunications equipment
- Point of load regulation for low-power processors, network processors, DSPs, FPGAs, and ASICs
- Low voltage, distributed power architectures with 2.5V, 3.3V or 5V rails


Ordering Information

Part Number	Temp Rating (°C)	Package	
EN5330DC	0 to 70	36-pin DFN	
EN5330DC-T	0 to 70	36-pin DFN T&R	
EN5330DI	-40 to +85	36-pin DFN	
EN5330DI-T	-40 to +85	36-pin DFN T&R	
EN5330DC-E	DFN Evaluation Board		

1

Pin Configuration

This diagram is a top-view of the component and represents the on-board layout requirements for the landing pads and thermal connection points. Specific dimensions for the pads are presented on page 10. Pin 1 of the device is signified by the white dot marked on the top of the device.

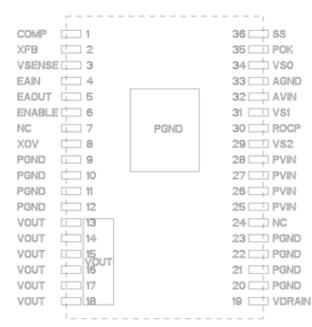

Block Diagram Analog PWM Circuit Power - AVIN ENABLE ⊡ xov AND Soft-Start ss 🗋 VOUT POWER – РОК GOOD 0.9Veel ROCP OVER-CURRENT REFERENCE VOLTAGE UNDER VOLTAGE LOCKOUT ANE THERMAL SHUTDOWN OVER-VOLTAGE BANDGAP REFERENCE POWER ERROR AMPLIFIER 0.95Veel 1.2V GATE Indu VS2 AND VOUT VS1 П セ VS0 PWM COMP. П POWER NFET Compensa VOLTAGE XFB SELECTOR Network - VSENSE SAWTOOTH ENERATO




l


 $sales @cdiweb.com \sim 1\text{--}800\text{--}777\text{--}7334$

Typical Efficiency

 $V_{IN}\,{=}\,3.3V$ and $V_{OUT}\,{=}\,2.5V$

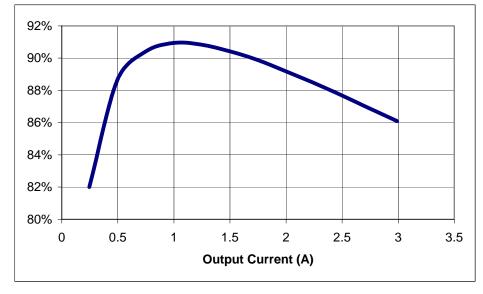


Waveforms

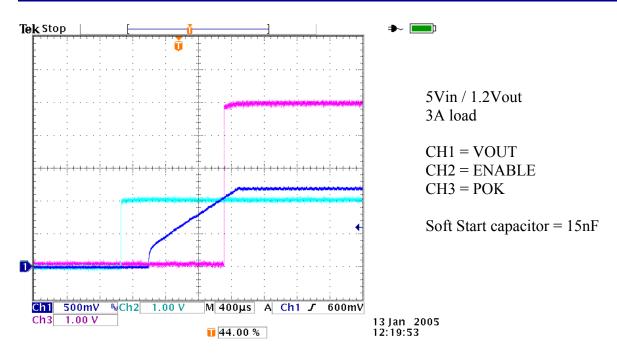



ENT DISTRIBUTORS, INC.



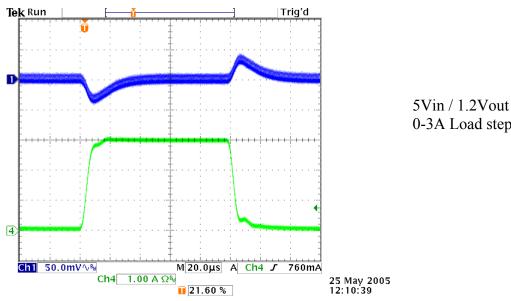

EN5330

0-3A Load step

Absolute Maximum Ratings

CAUTION: Stresses in excess of the absolute maximum ratings may cause permanent damage to the device. Exposure to absolute maximum ratings for extended periods can adversely affect device reliability.

PARAMETER	SYMBOL	MIN	MAX	UNITS
Input Supply Voltage	V_{IN}	-0.5	6.5	V
Input Voltage – Enable		-0.5	V _{IN}	V
Input Voltage – VS0, VS1 & VS2 (Note 1)		-0.5	2.8	V
Storage Temperature Range	T _{STG}	-65	150	°C
Operating Junction Temperature	T_{J}		150	°C
MSL per JEDEC J-STD-020A Level 3 (Note 2)			240	°C
ESD Rating (based on Human Body Model)			2000	V

NOTES:

VS0, VS1 and VS2 pins have an internal pull-up resistor, only ground potentials should be placed on them as required. 1.

Evaluation for MSL3 at 255°C in process. 2.

Recommended Operating Conditions

PARAMETER	SYMBOL	MIN	MAX	UNITS
Input Supply Voltage	V _{IN}	2.375	5.5	V
Operating Junction Temperature	T _J	-40	125	°C

Thermal Characteristics

PARAMETER	SYMBOL	TYPICAL	UNITS
Thermal Resistance: Junction to Ambient (0 LFM) (Note 3)	θ_{JA}	28	°C/W
Thermal Resistance: Junction to Case (0 LFM)	θ_{JC}	6	°C/W

NOTES:

Based on a four-layer board and proper thermal design in line with JEDEC EIJ/JESD 51 Standards.

Electrical Characteristics

NOTE: V_{IN} =3.3V and over operating temperature range unless otherwise noted. Typical values are at T_A =



25°C.

PARAMETER	SYMBOL	TEST CONDITIONS	MIN	ТҮР	MAX	UNITS
Operating Input Voltage	V _{IN}		2.375		5.5	V
Quiescent Supply Current	IQ	No switching, AVIN = 3.3V, PVIN = 3.3V, ENABLE=0V		15		mA
No-Load Operating Current	I _{NL}	Includes PWM, gate drive and inductor ripple current.		45		mA
Switching Frequency	F _{OSC}			5		MHz
Thermal Overload Trip Point	T _J			160		°C
V _{OUT}				·	1	
Range	V _{OUT}	Using external voltage divider	0.8			V
Accuracy	V _{OUT}	Over line, load and temperature			±2.0	%
Line Regulation	ΔV_{OUT}	$V_{IN} = 2.5$ to 5.0 volts		3		mV
Load Regulation	ΔV_{OUT}	$I_{LOAD} = 0$ to 3A		3		mV
Temperature	ΔV_{OUT}	$T_A = 0$ to 70°C		+0.25 -0.45		%
Regulation	ΔV_{OUT}	T_{A} = -40 to 85°C		+0.65 -0.55		%
Transient Response	$(I_{OUT} = 0\%)$	to 100% or 100% to 0% of Rated Loa	d)			
Peak Deviation	V _{OUT}	$V_{IN} = 5V, 1.2V < V_{OUT} < 3.3V$		3	5	%
Output Voltage Rip	ple (with 5 x	10µF X5R or X7R ceramic capacitors	5)			
Peak-to-peak	V _{OUT-PP}	$V_{IN} = 5.0V, V_{OUT} = 1.2V, I_{OUT} = 3A,$ $C_{OUT} = 50uF, 5 \times 10\mu F X5R \text{ or } X7R$ ceramic capacitors		20		mV
Output Current (No	ote 4)		-			
Max Continuous Output Current	I _{OUT}				3	А
Over-Current Threshold	I _{OCP}			4.5		А
Short-Circuit Current	I _{SC}			4		А
Enable Operation						
Disable Threshold V _{DISABLE} Max voltage to ensure the converter is disabled				0.8	V	
Enable Threshold	V _{ENABLE}	Min voltage to ensure the converter is enabled	1.8			V
Power OK Operatio			1		1	1
POK low voltage	V _{POK}	$I_{POK} = 1 mA$			0.4	V
Max POK Voltage	V _{POK}	Supply voltage applied to POK			5.5	V

NOTES:

4. Maximum output current may need to be de-rated, based on operating condition, to meet T_J requirements.



Comp

pent DISTRIBUTORS, Inc. Component Distributors, Inc. ~ www.cdiweb.com

 $\sim~sales@cdiweb.com \sim 1\text{--}800\text{--}777\text{--}7334$

PIN NAMIE FUNCTION 1 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network. 2 XFB External feedback voltage input. Option for programming the output voltage with a resistor divider on V _{0/T} . 3 VSENSE Remote voltage sense input. Connect this pin to the load voltage at the point to be regulated. 4 EAIN Input of the error amplifier for external modifications of the compensation network. 5 FAOUT Output of the error amplifier for external modifications of the compensation network. 6 ENABLE Enable input. An input high enables operation. An input low disables operation. 7 NC NO CONNECT - Do not electrically connect this pin to PCB. See Note 5. 8 XOV the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 10 PGND Power ground for the power stage circuits. 11 PGND Power ground for the power stage circuits. 12 22 PGND Power ground for the power stage circuits. 23 VORAIN Test point between the power stage circuits. 24 <	Pin [Descriptio	ns			
1 COMP Output of the buffer leading to the error amplifier. Used for external modifications of the compensation network. 2 XFB External feedback voltage input. Option for programming the output voltage with a resistor divider on V _{OUT} . 3 VSENSE Remote voltage sense input. Connect this pin to the load voltage at the point to be regulated. 4 EAN Input of the error amplifier for external modifications of the compensation network. 5 EAOUT Output of the error amplifier for external modifications of the compensation network. 6 FINABLF. Enable input. An input high enables operation. An input low disables operation. 7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 8 XOV VS0, VS1 and VS2 are left OPEN or pulled high, an additional voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 PGND Power ground for the power stage circuits. 11 VOUT Voltage and power output. 17 Its POND 18 Power ground for the power stage circuits. 23 PGND Power ground for the power stage circuits. 24	PIN	NAME	FUNCTION			
2 Arb resistor divider on V _{OUT} . 3 VSENSE Remote voltage sens input. Connect this pin to the load voltage at the point to be regulated. 4 EAIN Input of the error amplifier for external modifications of the compensation network. 5 EAOUT Output of the error amplifier for external modifications of the compensation network. 6 ENABLE Enable input. An input high enables operation. An input high enables operation. As input low disables operation. 7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 8 XOV VS0 (VS1 and VS2 are left OPEN or pulled high, an additional voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 PGND Power ground for the power stage circuits. 12 PGND Power ground for the power stage circuits. 13 14 PGND 14 PGND Power ground for the power stage circuits. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 22 PGND Power voltage input for the power stage circuits. 23 NC NO CONNECT	1	COMP	Output of the buffer leading to the error amplifier. Used for external modifications of			
3 VSENSE regulated. 4 EAIN Input of the error amplifier for external modifications of the compensation network. 5 EAOUT Output of the error amplifier for external modifications of the compensation network. 6 ENABLE Enable input. An input high enables operation. An input low disables operation. 7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 0 Over-Voltage set-point input. When using an external voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 PGND Power ground for the power stage circuits. 12 PGND Power ground for the power stage circuits. 13 14 PGND 14 PGND Power ground for the power FETs and Inductor. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 22 PGND Power ground for the power stage circuits. 23 Power voltage input for the power stage circuits. Power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 PVIN	2	XFB	resistor divider on V _{OUT} .			
5 EAOUT Output of the error amplifier for external modifications of the compensation network. 6 ENABLE Enable input. An input high enables operation. An input low disables operation. 7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 8 XOV Over-Voltage set-point input. When using an external voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 0 Power ground for the power stage circuits. 11 12 13 14 15 VOUT 16 VOUT 17 NC 18 VOUT 19 VDRAIN 19 VDRAIN 19 VDRAIN 21 PGND 22 PGND 23 Power ground for the power FETs and Inductor. 20 21 23 Power ground for the power stage circuits. 23 23 24 NC 27 Power voltage input for the power stage circuits. 28 29 29 VS2	3	VSENSE				
6 ENABLE Enable input. An input high enables operation. An input low disables operation. 7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 8 XOV VSO, VS1 and VS2 are left OPEN or pulled high, an additional voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 10 PGND Power ground for the power stage circuits. 11 12 Power ground for the power stage circuits. 13 14 Power ground for the power stage circuits. 17 18 Power ground for the power FETs and Inductor. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 22 PGND Power ground for the power stage circuits. 23 POND Power ground for the power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 26 27 29 VS2 Voltage select line 2 input. See Table 1. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS	4	EAIN	Input of the error amplifier for external modifications of the compensation network.			
7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 8 XOV Over-Voltage set-point input. When using an external voltage divider and the XFB pin. When using an external voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 10 PGND Power ground for the power stage circuits. 11 12 Power ground for the power stage circuits. 13 14 15 VOUT Voltage and power output. 17 Voltage and power output. 18 PGND Power ground for the power stage circuits. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 22 PGND Power ground for the power stage circuits. 23 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 26 27 PVIN Power voltage input for the power stage circuits. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AV	5	EAOUT	Output of the error amplifier for external modifications of the compensation network.			
7 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 8 XOV Over-Voltage set-point input. When using an external voltage divider and the XFB pin. When using an external voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 10 PGND Power ground for the power stage circuits. 11 12 Power ground for the power stage circuits. 13 14 15 VOUT Voltage and power output. 17 Voltage and power output. 18 PGND Power ground for the power stage circuits. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 22 PGND Power ground for the power stage circuits. 23 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 26 27 PVIN Power voltage input for the power stage circuits. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AV	6	ENABLE	*			
8 XOV VS0, VS1 and VS2 are left OPEN or pulled high, an additional voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if this voltage divider is not present. 9 10 PGND Power ground for the power stage circuits. 11 12 Power ground for the power stage circuits. 13 14 Power ground for the power output. 16 VOUT Voltage and power output. 17 VOUT Voltage and power output. 18 PGND Power ground for the power FETs and Inductor. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 22 PGND Power ground for the power stage circuits. 23 POND Power ground for the power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 PVIN Power voltage input for the power stage circuits. 29 VS2 Voltage select line 2 input. See Table 1. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Tab	7	NC				
10 PGND Power ground for the power stage circuits. 12 PGND Power ground for the power stage circuits. 13 VOUT Voltage and power output. 16 VOUT Voltage and power output. 17 PGND Power ground for the power FETs and Inductor. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 23 POWER year of the power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 PVIN Power voltage input for the power stage circuits. 29 VS2 Voltage select line 2 input. See Table 1. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AVIN Analog voltage input for the controller circuits. 33 AGND Analog ground for the controller circuits. 34 VS0 Voltage select line 0 input. See Table 1. 35 POK Power OK is an open drain transistor for power system state indication.	8	XOV	VS0, VS1 and VS2 are left OPEN or pulled high, an additional voltage divider separate from the XFB pin is required to set the OVP set-point. In this mode, the OVP function is disabled if			
11 PGND Power ground for the power stage circuits. 13 14 15 VOUT Voltage and power output. 16 17 18 19 VDRAIN 19 VDRAIN Test point between the power FETs and Inductor. 20 21 PGND 22 23 Power ground for the power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 26 27 28 Power voltage input for the power stage circuits. 29 VS2 Voltage select line 2 input. See Table 1. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AVIN Analog ground for the controller circuits. 33 AGND Analog ground for the controller circuits. 34 VS0 Voltage select line 0 input. See Table 1. 35 POK Power OK is an open drain transistor for power system state indication.	9					
11 11 11 11 12 12 12 13 14 15 15 VOUT Voltage and power output. 16 17 18 19 VDRAIN Test point between the power FETs and Inductor. 20 21 PGND 22 23 Power ground for the power stage circuits. 23 23 24 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 26 PVIN 28 Power voltage input for the power stage circuits. 29 VS2 Voltage select line 2 input. See Table 1. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AVIN Analog voltage input for the controller circuits. 33 AGND Analog ground for the controller circuits. 34 VS0 Voltage select line 0 input. See Table 1. 35 POK Power OK is an open drain transistor for power system state indication.	10	DCND	Deriver around for the nerver stage aircuits			
13 VOUT Voltage and power output. 16 VOUT Voltage and power output. 17 VORAIN Test point between the power FETs and Inductor. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 23 POND Power voltage input for the power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 PVIN Power voltage input for the power stage circuits. 28 PVIN Power voltage input for the power stage circuits. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AVIN Analog voltage input for the controller circuits. 33 AGND Analog ground for the controller circuits. 34 VS0 Voltage select line 0 input. See Table 1. 35 POK Power OK is an open drain transistor for power system state indication.	11	PGND	rower ground for the power stage circuits.			
14 15 VOUT Voltage and power output. 16 17 Voltage and power output. Voltage and power output. 19 VDRAIN Test point between the power FETs and Inductor. 20 PGND Power ground for the power stage circuits. 21 PGND Power ground for the power stage circuits. 23 POWER Power ground for the power stage circuits. 24 NC NO CONNECT – Do not electrically connect this pin to PCB. See Note 5. 25 PVIN Power voltage input for the power stage circuits. 27 PVIN Power voltage input for the power stage circuits. 29 VS2 Voltage select line 2 input. See Table 1. 30 ROCP Over-Current trip point adjust input. Used for adjusting the OCP trip point. 31 VS1 Voltage select line 1 input. See Table 1. 32 AVIN Analog voltage input for the controller circuits. 33 AGND Analog ground for the controller circuits. 34 VS0 Voltage select line 0 input. See Table 1. 35 POK Power OK is an open drain transistor for power system state indication.	12					
15 16VOUTVoltage and power output.171819VDRAIN19VDRAIN2021 2221 23PGND24NCNO CONNECT - Do not electrically connect this pin to PCB. See Note 5.25 26 2726 2829VS2Voltage select line 2 input. See Table 1.30ROCP30Over-Current trip point adjust input. Used for adjusting the OCP trip point.31VS132AVIN33AGND34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	13					
16VOU1Voltage and power output.171819VDRAIN19VDRAIN202121PGND22POwer ground for the power stage circuits.232424NC252626PVIN27Power voltage input for the power stage circuits.29VS229VS220Voltage select line 2 input. See Table 1.30ROCP31VS132AVIN33AGND34VS0Voltage select line 0 input. See Table 1.35POK36Power OK is an open drain transistor for power system state indication.	14					
16 17 17 18 19 VDRAIN 20 21 21 PGND 22 PGND 23 Power ground for the power stage circuits. 23 24 24 NC 25 PVIN 26 PVIN 27 PVIN 28 Power voltage input for the power stage circuits. 29 VS2 20 Voltage select line 2 input. See Table 1. 30 ROCP 29 VS1 Voltage select line 1 input. See Table 1. 31 VS1 33 AGND 34 VS0 Voltage select line 0 input. See Table 1. 35 POK	15	VOUT	Valtage and new on extract			
1819VDRAINTest point between the power FETs and Inductor.2021PGNDPower ground for the power stage circuits.2324NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.2526PVINPower voltage input for the power stage circuits.272829VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	16	VUUI	Voltage and power output.			
19VDRAINTest point between the power FETs and Inductor.2021PGNDPower ground for the power stage circuits.232324NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.2526PVINPower voltage input for the power stage circuits.272829VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	17					
2021PGNDPower ground for the power stage circuits.222324NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.252626PVIN28Power voltage input for the power stage circuits.29VS229VS220Voltage select line 2 input. See Table 1.30ROCP31VS132AVIN33AGND34VS035POKPOKPower OK is an open drain transistor for power system state indication.	18					
21 22PGNDPower ground for the power stage circuits.23NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.24NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.25PVINPower voltage input for the power stage circuits.2829VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	19	VDRAIN	Test point between the power FETs and Inductor.			
22PGNDPower ground for the power stage circuits.23NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.2526PVINPower voltage input for the power stage circuits.2829VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	20					
222312524NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.2526PVIN26PVINPower voltage input for the power stage circuits.27282929VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	21	DCND	Deres and for the marries of a simulation			
24NCNO CONNECT – Do not electrically connect this pin to PCB. See Note 5.2526PVINPower voltage input for the power stage circuits.2728PVINPower voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	22	PGND	Power ground for the power stage circuits.			
25PVINPower voltage input for the power stage circuits.2728PVINPower voltage input for the power stage circuits.29VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	23					
26 27PVINPower voltage input for the power stage circuits.2829VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	24	NC	NO CONNECT – Do not electrically connect this pin to PCB. See Note 5.			
27 28Power voltage input for the power stage circuits.29VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	25					
272829VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	26		Description of the second formation of the second states of the second s			
29VS2Voltage select line 2 input. See Table 1.30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	27	PVIN	Power voltage input for the power stage circuits.			
30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	28	1				
30ROCPOver-Current trip point adjust input. Used for adjusting the OCP trip point.31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	29	VS2	Voltage select line 2 input. See Table 1.			
31VS1Voltage select line 1 input. See Table 1.32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	30	ROCP				
32AVINAnalog voltage input for the controller circuits.33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	31	VS1				
33AGNDAnalog ground for the controller circuits.34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	32	AVIN	V 1			
34VS0Voltage select line 0 input. See Table 1.35POKPower OK is an open drain transistor for power system state indication.	33	AGND				
35 POK Power OK is an open drain transistor for power system state indication.	34	VS0				
	35	РОК				
	36	SS				

NOTES:

5. This pin is used for engineering test purposes and reserved for future use. Solder, but do not electrically connect this pin to the PCB.



Theory of Operation

Synchronous Buck Converter

The EN5330 is a synchronous, pin programmable power supply with integrated power MOSFET switches and inductor. The nominal input voltage range is 2.5V-5.0V. The output can be set to common voltages by connecting appropriate combinations of 3 voltage selection pins to ground. If different voltage levels are required, provision is also made to allow external programming. The feedback control loop is voltage-mode and the part uses a low-noise PWM topology. Up to 3A of output current can be drawn from this converter. The 5MHz operating frequency enables the use of small-size output capacitors.

The power supply also has protection features such as:

- Programmable over-current protection (to protect the IC from excessive load current)
- Thermal shutdown (to protect the converter from getting too hot)
- Over-voltage protection that stops the PWM switching and turns on the lower N-MOSFET at 120% of the programmed output voltage in order to protect the load from an OV condition.
- Under-voltage lockout circuit to disable the converter output when the input voltage is less than approximately 2.2V

Additional features include:

- Soft-start circuit, limiting the in-rush current when the converter is powered up.
- Power good circuit indicating whether the output voltage is within 90%-120% of the programmed voltage.

Output Voltage Programming

The EN5330 output voltage is programmed using one of two methods. Common output voltages are achieved by tying one or more of the three Voltage Select pins (VS0, VS1 & VS2) to ground (see Table 1). If all three are left floating, the output voltage and over voltage thresholds are determined by the voltages presented at the XFB and XOV pins respectively. These voltages should be set by way of resistor dividers between V_{OUT} to AGND with the midpoint going to XFB and XOV (See Figure 1).



It is recommended that Rb1 and Rb2 resistor values be $\sim 2k\Omega$. Use the following equation to set the resistor Ra1 for the desired output voltage:

$$Ra1 = \frac{(Vout - 0.8V) * Rb1}{0.8V}$$

If over-voltage protection is desired, use the following equation to set the resistor Ra2 for the desired OVP trip-point:

$$Ra2 = \frac{(OVPtrip - 0.96V) * Rb2}{0.96V}$$

By design, if both resistor dividers are the same, the OV trip-point will be 20% above the nominal output voltage.

Figure 1: External output voltage and OVP setting

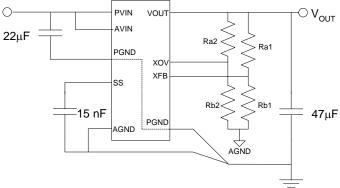


Table 1: Output Voltage Select Table

VS2*	VS1*	VS0*	Output Voltage
0	0	0	3.3V
0	0	1	2.5V
0	1	0	1.8V
0	1	1	1.5V
1	0	0	1.25V
1	0	1	1.2V
1	1	0	0.8V**
1	1	1	User Selectable

* The VS0, VS1 and VS2 pins are defaulted to a '1' with an internal pull-up resistor. Only connect these pins to AGND if a '0' is required. If a '1' is required, then leave the pin floating.

Capacitor Selection

The EN5330 needs about 20-40uF of input capacitance. Low-cost, low-ESR ceramic capacitors can be used as input capacitors for this converter and it is strongly recommended that they be rated X5R or X7R. In some applications, lower value capacitors are needed in parallel with the larger, lossy capacitors in order to provide high frequency decoupling.

The EN5330 has been optimized for use with about 50μ F of ceramic output capacitance. It is strongly recommended that these be low-cost, low-ESR, ceramic capacitors rated X5R or X7R. (See the Enpirion application note on ripple comparison for optimum selection of number and value of these capacitors based on ripple requirements.) In order to eliminate high-frequency switching spikes on the output ripple, usually a low-value, low-ESR ceramic capacitors right at the load.

Enable Operation

The ENABLE pin provides a means to shut down the power FET switching or enable normal operation. A logic low will disable the converter and cause it to shut down. A logic high will enable the converter into normal operation.

Soft-Start Operation

The SS pin in conjunction with a small capacitor between this pin and AGND provides the soft start function to limit the in-rush current during start-up. During start-up of the converter the reference voltage to the error amplifier is gradually increased to its final level by an internal current source of typically 10uA. The whole soft-start procedure is designed to take 1ms - 3ms with a 15-30nF soft start capacitor, but can be programmed by capacitor selection using the following equation:

Rise Time: $T_R = C_{ss}^* 80k$

During the soft-start cycle, when the soft-start capacitor reaches 0.8V, the output has reached its programmed regulation range. Note that the soft-start current source will continue to operate and during normal operation, the soft-start capacitor will charge up to a final value of 2.5V.

Power Up Sequencing

The sequencing of AVIN, PVIN and ENABLE should meet the following requirements:

- 1. ENABLE should not be asserted before PVIN.
- 2. PVIN should not be applied before AVIN.

Note that tying AVIN, PVIN and ENABLE together and brought up at the same time does meet these requirements.

POK Operation

The POK signal is an open drain signal from the converter indicating the output voltage is within the specified range. The POK signal will be a logic high when the output voltage is within 90% - 120% of the programmed output voltage. If the output voltage goes outside of this range, the POK signal will be a logic low until the output voltage has returned to within this range. In the event of an over-voltage condition the POK signal will go low and will remain in this condition until the output voltage has dropped to 95% of the programmed output voltage before returning to the high state (see also Over Voltage Protection)

Over-Current Protection

The cycle-by-cycle current limit function is achieved by sensing the current flowing through the sense P-MOSFET and a signal generated by a differential amplifier with a preset over-current threshold. During a particular cycle, if the over-current threshold is exceeded, the power P-MOSFET is turned off and the power N-MOSFET is turned on to protect the P-MOSFET. If the over-current condition is removed, the over-current protection circuit will enable the PWM operation. If the over-current condition persists, the converter will eventually go through a full softstart cycle. This circuit is designed to provide high noise immunity.

It is possible to raise the over-current set-point by \sim 50% by connecting a 4.99k Ω resistor between ROCP and GND.

Over-Voltage Protection

When the output voltage exceeds 120% of the programmed output voltage, the PWM operation stops, the lower N-MOSFET is turned on and the POK signal goes low. When the output voltage drops below 95% of the programmed output voltage, normal



EN5330

PWM operation resumes and POK returns to its high state.

Thermal Overload Protection

Thermal shutdown will disable operation once the Junction temperature exceeds approximately 160°C. Once the junction temperature drops by approx 25°C, the converter will re-start with a normal soft-start.

Low Input Voltage Operation

Circuitry is provided to ensure that when the input voltage is below the specified voltage range, the operation of the converter is controlled and predictable. Circuits for hysteresis, input de-glitch and output leading edge blanking are included to ensure high noise immunity and prevent false tripping.

Compensation

The EN5330 is internally compensated through the use of a type 3 compensation network and is optimized for use with about 50μ F of output capacitance and will provide excellent loop bandwidth and transient performance for most applications. (See the section on **Capacitor Selection** for details on recommended capacitor types.) In some cases modifications to the compensation may be required. For more information, contact Enpirion Applications Engineering support.

Layout Considerations

The EN5330 Layout Guidelines application note provides more details on specific layout recommendations for this part. The following are general layout guidelines to consider.

The CMOS chip inside the EN5330 has two grounds: AGND for the controller, and PGND for the power stage. These two grounds need to be connected outside the package at one point through a lowimpedance trace. The connection should be made such that the impedance between the connection point and the AGND pad on the package is minimized. Since the internal voltage sensing circuit is based on AGND, the connection of the two grounds should also be made such that the best voltage regulation can be achieved. The soft-start capacitor, the voltage programming resistors, and any other external control component should be tied to AGND.

The placement of the input decoupling capacitors between PVIN and PGND is very critical. These components should be placed such that they have the lowest inductance traces to PVIN and PGND.

There are two thermal pads underneath the device. The centrally located pad is PGND, and, depending on the number of layers of the PC board, it needs to be connected to a thermal plane in order to conduct heat away from the device. Note that if any of the thermal planes is also connected to AGND, the impedance between this point and the GND connection of the load needs to be minimized in order to get the best possible load regulation. The pad opposite the V_{OUT} pins is connected to V_{OUT} . This V_{OUT} pad should be connected to a top layer copper area as large as possible to conduct more heat away from the package. This will also help minimize the trace length to the output filter caps.


Pin 19 is a connected to a noisy internal node and is brought out for test purposes only. Keep all sensitive signal traces as far as possible from this pin. Ideally, on the top layer there should be no traces or vias underneath the package between this pin and the V_{OUT} thermal pad.



EN5330

Packaging Information

Mechanical Drawing and Nominal Dimensions

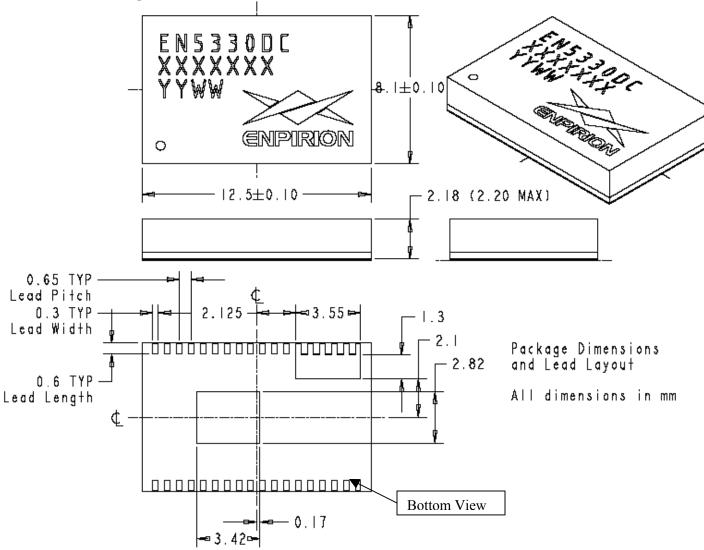


DISTRIBUTORS, INC.



Landing Pad Information

The Enpirion DFN package is footprint compatible with the JEDEC standard 36-pin TSSOP package code DD. The reference document and board layout diagram appear below.

JEDEC Solid State Technology Association TSSOP (Plastic Thin Shrink Small Outline Package) standardized package code DD. This TSSOP standard package is defined in the JEDEC document MO-153, Issue F, dated 05/01, which defines 57 variations on package size, lead pitch, and lead count.

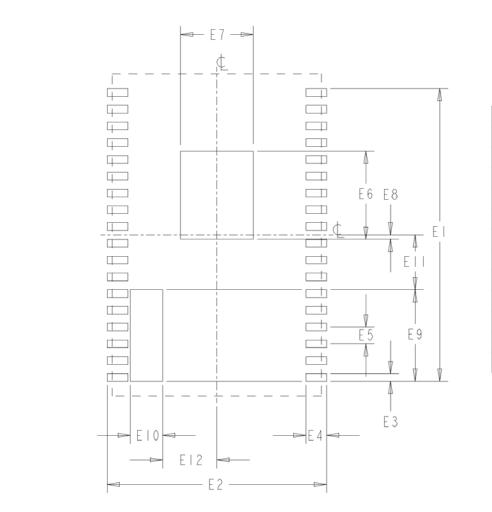

	Dimension	(mm)
ΕI	11.35 \pm	0.05
E 2	$8.50~\pm$	0.05
E 3	0.30 \pm	0.05
E 4	0.80 \pm	0.05
E 5	0.65 \pm	0.05
E6	$3.42 \pm$	0.05
Ε7	$2.82 \pm$	0.05
E8	0.17 ±	0.05
E 9	$3.55 \pm$	0.05
EIO	1.25 ±	0.05
EII	2.13 ±	0.05
EI2	2.10 ±	0.05

Contact Information

Enpirion, Inc. 685 Route 202/206 Suite 305 Bridgewater, NJ 08807 Phone: 908-575-7550 Fax: 908-575-0775

Enpirion reserves the right to make changes in circuit design and/or specifications at any time without notice. Information furnished by Enpirion is believed to be accurate and reliable. Enpirion assumes no responsibility for its use or for infringement of patents or other third party rights, which may result from its use. Enpirion products are not authorized for use in nuclear control systems, as critical components in life support systems or equipment used in hazardous environment without the express written authority from Enpirion.



DISTRIBUTORS, INC.