

## Contents

Page	Section	Title
5	1.	Introduction
6	1.1.	Features of the MSP 34x0G Family and Differences to MSPD
6	1.2.	MSP 34x0G Version List
7	1.3.	MSP 34x0G Versions and their Application Fields
8	2.	Functional Description
9	2.1.	Architecture of the MSP 34x0G Family
9	2.2.	Sound IF Processing
9	2.2.1.	Analog Sound IF Input
9	2.2.2.	Demodulator: Standards and Features
10	2.2.3.	Preprocessing of Demodulator Signals
10	2.2.4.	Automatic Sound Select
10	2.2.5.	Manual Mode
12	2.3.	Preprocessing for SCART and I <sup>2</sup> S Input Signals
12	2.4.	Source Selection and Output Channel Matrix
12	2.5.	Audio Baseband Processing
12	2.5.1.	Automatic Volume Correction (AVC)
12	2.5.2.	Loudspeaker and Headphone Outputs
12	2.5.3.	Subwoofer Output
12	2.5.4.	Quasi-Peak Detector
13	2.5.5.	Micronas Dynamic Bass (MDB)
13	2.5.5.1.	Dynamic Amplification
13	2.5.5.2.	Adding Harmonics
13	2.5.5.3.	MDB Parameters
13	2.6.	SCART Signal Routing
13	2.6.1.	SCART DSP In and SCART Out Select
13	2.6.2.	Stand-by Mode
14	2.7.	I <sup>2</sup> S Bus Interface
14	2.8.	ADR Bus Interface
14	2.9.	Digital Control I/O Pins and Status Change Indication
14	2.10.	Clock PLL Oscillator and Crystal Specifications
15	3.	Control Interface
15	3.1.	I <sup>2</sup> C Bus Interface
15	3.1.1.	Internal Hardware Error Handling
16	3.1.2.	Description of CONTROL Register
16	3.1.3.	Protocol Description
17	3.1.4.	Proposals for General MSP 34x0G I <sup>2</sup> C Telegrams
17	3.1.4.1.	Symbols
17	3.1.4.2.	Write Telegrams
17	3.1.4.3.	Read Telegrams
17	3.1.4.4.	Examples
17	3.2.	Start-Up Sequence: Power-Up and I <sup>2</sup> C-Controlling
17	3.3.	MSP 34x0G Programming Interface
17	3.3.1.	User Registers Overview
21	3.3.2.	Description of User Registers
22	3.3.2.1.	STANDARD SELECT Register

## Contents, continued

Page	Section	Title
22	3.3.2.2.	Refresh of STANDARD SELECT Register
22	3.3.2.3.	STANDARD RESULT Register
24	3.3.2.4.	Write Registers on I <sup>2</sup> C Subaddress 10 <sub>hex</sub>
26	3.3.2.5.	Read Registers on I <sup>2</sup> C Subaddress 11 <sub>hex</sub>
27	3.3.2.6.	Write Registers on I <sup>2</sup> C Subaddress 12 <sub>hex</sub>
40	3.3.2.7.	Read Registers on I <sup>2</sup> C Subaddress 13 <sub>hex</sub>
41	3.4.	Programming Tips
41	3.5.	Examples of Minimum Initialization Codes
41	3.5.1.	B/G-FM (A2 or NICAM)
41	3.5.2.	BTSC-Stereo
41	3.5.3.	BTSC-SAP with SAP at Loudspeaker Channel
42	3.5.4.	FM-Stereo Radio
42	3.5.5.	Automatic Standard Detection
42	3.5.6.	Software Flow for Interrupt driven STATUS Check
44	4.	Specifications
44	4.1.	Outline Dimensions
46	4.2.	Pin Connections and Short Descriptions
49	4.3.	Pin Descriptions
52	4.4.	Pin Configurations
56	4.5.	Pin Circuits
58	4.6.	Electrical Characteristics
58	4.6.1.	Absolute Maximum Ratings
59	4.6.2.	Recommended Operating Conditions
59	4.6.2.1.	General Recommended Operating Conditions
59	4.6.2.2.	Analog Input and Output Recommendations
60	4.6.2.3.	Recommendations for Analog Sound IF Input Signal
61	4.6.2.4.	Crystal Recommendations
62	4.6.3.	Characteristics
62	4.6.3.1.	General Characteristics
63	4.6.3.2.	Digital Inputs, Digital Outputs
64	4.6.3.3.	Reset Input and Power-Up
65	4.6.3.4.	I <sup>2</sup> C-Bus Characteristics
66	4.6.3.5.	I <sup>2</sup> S-Bus Characteristics
68	4.6.3.6.	Analog Baseband Inputs and Outputs, AGNDC
69	4.6.3.7.	Sound IF Inputs
69	4.6.3.8.	Power Supply Rejection
70	4.6.3.9.	Analog Performance
73	4.6.3.10.	Sound Standard Dependent Characteristics
77	5.	Appendix A: Overview of TV-Sound Standards
77	5.1.	NICAM 728
78	5.2.	A2-Systems
79	5.3.	BTSC-Sound System
79	5.4.	Japanese FM Stereo System (EIA-J)
80	5.5.	FM Satellite Sound
80	5.6.	FM-Stereo Radio

## Contents, continued

Page	Section	Title
81	6.	Appendix B: Manual/Compatibility Mode
81	6.1.	Demodulator Write and Read Registers for Manual/Compatibility Mode
82	6.2.	DSP Write and Read Registers for Manual/Compatibility Mode
83	6.3.	Manual/Compatibility Mode: Description of Demodulator Write Registers
83	6.3.1.	Automatic Switching between NICAM and Analog Sound
83	6.3.1.1.	Function in Automatic Sound Select Mode
83	6.3.1.2.	Function in Manual Mode
85	6.3.2.	A2 Threshold
85	6.3.3.	Carrier-Mute Threshold
86	6.3.4.	Register AD_CV
87	6.3.5.	Register MODE_REG
89	6.3.6.	FIR-Parameter, Registers FIR1 and FIR2
89	6.3.7.	DCO-Registers
91	6.4.	Manual/Compatibility Mode: Description of Demodulator Read Registers
91	6.4.1.	NICAM Mode Control/Additional Data Bits Register
91	6.4.2.	Additional Data Bits Register
91	6.4.3.	CIB Bits Register
92	6.4.4.	NICAM Error Rate Register
92	6.4.5.	PLL_CAPS Readback Register
92	6.4.6.	AGC_GAIN Readback Register
92	6.4.7.	Automatic Search Function for FM-Carrier Detection in Satellite Mode
93	6.5.	Manual/Compatibility Mode: Description of DSP Write Registers
93	6.5.1.	Additional Channel Matrix Modes
93	6.5.2.	Volume Modes of SCART1/2 Outputs
93	6.5.3.	FM Fixed Deemphasis
93	6.5.4.	FM Adaptive Deemphasis
94	6.5.5.	NICAM Deemphasis
94	6.5.6.	Identification Mode for A2 Stereo Systems
94	6.5.7.	FM DC Notch
94	6.6.	Manual/Compatibility Mode: Description of DSP Read Registers
94	6.6.1.	Stereo Detection Register for A2 Stereo Systems
94	6.6.2.	DC Level Register
95	6.7.	Demodulator Source Channels in Manual Mode
95	6.7.1.	Terrestric Sound Standards
95	6.7.2.	SAT Sound Standards
97	6.8.	Exclusions of Audio Baseband Features
97	6.9.	Phase Relationship of Analog Outputs
97	6.10.	Compatibility Restrictions to MSP 34x0D
98	7.	Appendix D: MSP 34x0G Version History
99	8.	Appendix E: Application Circuit
100	9.	Data Sheet History

License Notice:
"Dolby Pro Logic" is a trademark of Dolby Laboratories.
Supply of this implementation of Dolby Technology does not convey a license nor imply a right under any patent, or any other industrial or intellectual property right of Dolby Laboratories, to use this implementation in any finished end-user or ready-to-use final product. Companies planning to use this implementation in products must obtain a license from Dolby Laboratories Licensing Corporation before designing such products.

#### **Multistandard Sound Processor Family**

Release Note: Revision bars indicate significant changes to the previous edition. The hardware and software description in this document is valid for the MSP 34x0G version B8 and following versions.

#### 1. Introduction

The MSP 34x0G family of single-chip Multistandard Sound Processors covers the sound processing of all analog TV-Standards worldwide, as well as the NICAM digital sound standards. The full TV sound processing, starting with analog sound IF signal-in, down to processed analog AF-out, is performed on a single chip. Figure 1–1 shows a simplified functional block diagram of the MSP 34x0G.

This new generation of TV sound processing ICs now includes versions for processing the multichannel television sound (MTS) signal conforming to the standard recommended by the Broadcast Television Systems Committee (BTSC). The DBX noise reduction, or alternatively, Micronas Noise Reduction (MNR) is performed alignment free.

Other processed standards are the Japanese FM-FM multiplex standard (EIA-J) and the FM Stereo Radio standard.

Current ICs have to perform adjustment procedures in order to achieve good stereo separation for BTSC and EIA-J. The MSP 34x0G has optimum stereo performance without any adjustments.

All MSP 34xxG versions are pin compatible to the MSP 34xxD. Only minor modifications are necessary to adapt a MSP 34xxD controlling software to the MSP 34xxG. The MSP 34x0G further simplifies controlling software. Standard selection requires a single I<sup>2</sup>C transmission only.

The MSP 34x0G has built-in automatic functions: The IC is able to detect the actual sound standard automatically (Automatic Standard Detection). Furthermore, pilot levels and identification signals can be evaluated internally with subsequent switching between mono/stereo/bilingual; no I<sup>2</sup>C interaction is necessary (Automatic Sound Selection).

The MSP 34x0G can handle very high FM deviations even in conjunction with NICAM processing. This is especially important for the introduction of NICAM in China.

The ICs are produced in submicron CMOS technology. The MSP 34x0G is available in the following packages: PLCC68 (not intended for new design), PSDIP64, PSDIP52, PQFP80, and PLQFP64.

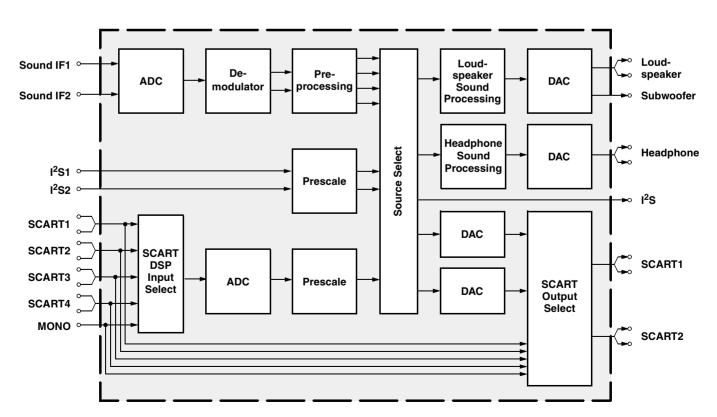


Fig. 1-1: Simplified functional block diagram of the MSP 34x0G

## 1.1. Features of the MSP 34x0G Family and Differences to MSPD

	Feature (New features not available for MSPD are shaded gray.)	3400	3410	3420	3440	3450	3460
	Standard Selection with single I <sup>2</sup> C transmission	Х	Х	Х	Х	Х	Х
I	Automatic Standard Detection of terrestrial TV standards/Automatic Carrier Mute function	Х	Х	Х	Х	Х	Х
	Automatic Sound Selection (mono/stereo/bilingual), new registers MODUS, STATUS	Х	Х	Х	Х	Х	
	Two selectable sound IF (SIF) inputs	Х	Х	Х	Х	Х	Х
	Automatic Carrier Mute function	Х	Х	Х	Х	Х	Х
	Interrupt output programmable (indicating status change)	Х	Х	Х	Х	Х	Х
	Loudspeaker / Headphone channel with volume, balance, bass, treble, loudness	Х	Х	Х	Х	Х	Х
I	Loudspeaker channel with MDB (Micronas Dynamic Bass)	Х	Х	Х	Х	Х	Х
	AVC: Automatic Volume Correction	Х	Х	Х	Х	Х	Х
	Subwoofer output with programmable low-pass and complementary high-pass filter	Х	Х	Х	Х	Х	Х
	5-band graphic equalizer for loudspeaker channel	Х	Х	Х	Х	Х	Х
	Spatial effect for loudspeaker channel	Х	Х	Х	Х	Х	Х
	Four Stereo SCART (line) inputs, one Mono input; two Stereo SCART outputs	Х	Х	Х	Х	Х	Х
	Complete SCART in/out switching matrix	Х	Х	Х	Х	Х	Х
	Two I <sup>2</sup> S inputs; one I <sup>2</sup> S output	Х	Х	Х	Х	Х	Х
I	All analog Mono sound carriers including AM-SECAM L	Х	Х	Х	Х	Х	Х
I	All analog FM-Stereo A2 and satellite standards	Х	Х			Х	
I	Simultaneous demodulation of (very) high-deviation FM-Mono and NICAM		Х			Х	
	Adaptive deemphasis for satellite (Wegener-Panda, acc. to ASTRA specification)	Х	Х			Х	Х
	ASTRA Digital Radio (ADR) together with DRP 3510A	Х	Х			Х	Х
	All NICAM standards		Х			Х	
	Demodulation of the BTSC multiplex signal and the SAP channel			Х	Х	Х	
	Alignment free digital DBX noise reduction for BTSC Stereo and SAP				Х	Х	
	Alignment free digital Micronas Noise Reduction (MNR) for BTSC Stereo and SAP			Х			
	BTSC stereo separation (MSP 3420/40G also EIA-J) significantly better than spec.			Х	Х	Х	
	SAP and stereo detection for BTSC system			Х	Х	Х	
	Korean FM-Stereo A2 standard	Х	Х	Х	Х	Х	
	Alignment-free Japanese standard EIA-J			Х	Х	Х	
	Demodulation of the FM-Radio multiplex signal			Х	Х	Х	

## 1.2. MSP 34x0G Version List

Version	Status	Description
MSP 3400G	available	FM Stereo (A2) Version
MSP 3410G	available	NICAM and FM Stereo (A2) Version
MSP 3420G	available	NTSC Version (A2 Korea, BTSC with Micronas Noise Reduction (MNR), Japanese EIA-J system)
MSP 3440G	available	NTSC Version (A2 Korea, BTSC with DBX noise reduction, Japanese EIA-J system)
MSP 3450G	available	Global Version (all sound standards)
MSP 3460G	not confirmed	Global Mono Version (all sound standards)

## 1.3. MSP 34x0G Versions and their Application Fields

Table 1–1 provides an overview of TV sound standards that can be processed by the MSP 34x0G family. In addition, the MSP 34x0G is able to handle the FM-Radio standard. With the MSP 34x0G, a complete

multimedia receiver covering all TV sound standards together with terrestrial/cable and satellite radio sound can be built; even ASTRA Digital Radio can be processed (with a DRP 3510A coprocessor).

Table 1-1: TV Stereo Sound Standards covered by the MSP 34x0G IC Family (details see Appendix A)

	MSP Version						TV- System	Position of Sound Carrier /MHz	Sound Modulation	Color System	Broadcast e.g. in:
3400				B/G	5.5/5.7421875	FM-Stereo (A2)	PAL	Germany			
,,				B/G	5.5/5.85	FM-Mono/NICAM	PAL	Scandinavia, Spain			
				L	6.5/5.85	AM-Mono/NICAM	SECAM-L	France			
				I	6.0/6.552	FM-Mono/NICAM	PAL	UK, Hong Kong			
					6.5/6.2578125	FM-Stereo (A2, D/K1)	SECAM-East	Slovak. Rep.			
3400		3410	0		D/K	6.5/6.7421875	FM-Stereo (A2, D/K2)	PAL	currently no broadcast		
,,		ř				6.5/5.7421875	FM-Stereo (A2, D/K3)	SECAM-East	Poland		
			3450		6.5/5.85	FM-Mono/NICAM (D/K, NICAM)	PAL	China, Hungary			
3400				Satellite	6.5 7.02/7.2 7.38/7.56 etc.	FM-Mono FM-Stereo ASTRA Digital Radio (ADR) with DRP 3510A	PAL	Europe Sat. ASTRA			
					4.5/4.724212	FM-Stereo (A2)	NTSC	Korea			
	3440					M/N	4.5	FM-FM (EIA-J)	NTSC	Japan	
	3420,				4.5	BTSC-Stereo + SAP	NTSC, PAL	USA, Argentina			
	C			FM-Radio	10.7	FM-Stereo Radio		USA, Europe			
	3460			all Standard	s as above but Mono demo	odulation only.		•			

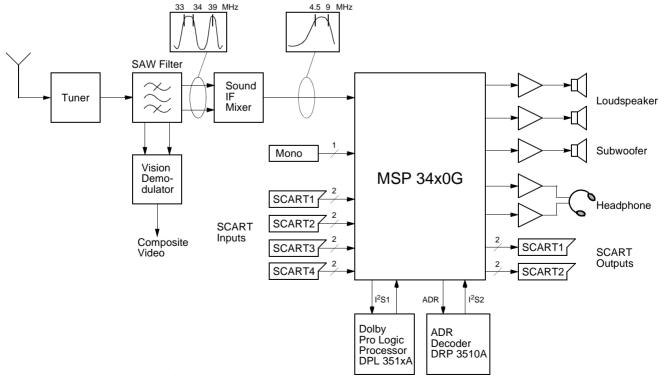


Fig. 1-2: Typical MSP 34x0G application

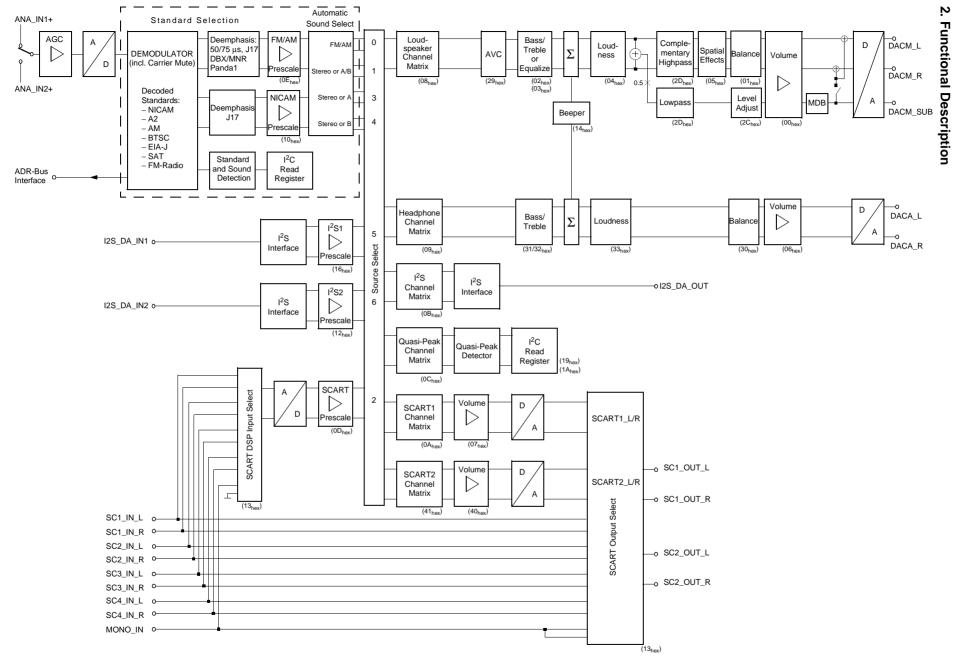


Fig. 2–1: Signal flow block diagram of the MSP 34x0G (input and output names correspond to pin names)

## 2.1. Architecture of the MSP 34x0G Family

Fig. 2–1 on page 8 shows a simplified block diagram of the IC. The block diagram contains all features of the MSP 3450G. Other members of the MSP 34x0G family do not have the complete set of features: The demodulator handles only a subset of the standards presented in the demodulator block; NICAM processing is only possible in the MSP 3410G and MSP 3450G.

#### 2.2. Sound IF Processing

## 2.2.1. Analog Sound IF Input

The input pins ANA\_IN1+, ANA\_IN2+, and ANA\_IN-offer the possibility to connect two different sound IF (SIF) sources to the MSP 34x0G. The analog-to-digital conversion of the preselected sound IF signal is done by an A/D-converter. An analog automatic gain circuit (AGC) allows a wide range of input levels. The high-pass filters formed by the coupling capacitors at pins ANA\_IN1+ and ANA\_IN2+ see Section 8. "Appendix E: Application Circuit" on page 99 are sufficient in most cases to suppress video components. Some combinations of SAW filters and sound IF mixer ICs, however, show large picture components on their outputs. In this case, further filtering is recommended.

## 2.2.2. Demodulator: Standards and Features

The MSP 34x0G is able to demodulate all TV-sound standards worldwide including the digital NICAM system. Depending on the MSP 34x0G version, the following demodulation modes can be performed:

**A2 Systems:** Detection and demodulation of two separate FM carriers (FM1 and FM2), demodulation and evaluation of the identification signal of carrier FM2.

**NICAM Systems:** Demodulation and decoding of the NICAM carrier, detection and demodulation of the analog (FM or AM) carrier. For D/K-NICAM, the FM carrier may have a maximum deviation of 384 kHz.

**Very high deviation FM-Mono:** Detection and robust demodulation of one FM carrier with a maximum deviation of 540 kHz.

**BTSC-Stereo:** Detection and FM demodulation of the aural carrier resulting in the MTS/MPX signal. Detection and evaluation of the pilot carrier, AM demodulation of the (L-R)-carrier and detection of the SAP subcarrier. Processing of DBX noise reduction or Micronas Noise Reduction (MNR).

**BTSC-Mono + SAP:** Detection and FM demodulation of the aural carrier resulting in the MTS/MPX signal. Detection and evaluation of the pilot carrier, detection and FM demodulation of the SAP subcarrier. Processing of DBX noise reduction or Micronas Noise Reduction (MNR).

**Japan Stereo:** Detection and FM demodulation of the aural carrier resulting in the MPX signal. Demodulation and evaluation of the identification signal and FM demodulation of the (L–R)-carrier.

**FM-Satellite Sound:** Demodulation of one or two FM carriers. Processing of high-deviation mono or narrow bandwidth mono, stereo, or bilingual satellite sound according to the ASTRA specification.

**FM-Stereo-Radio:** Detection and FM demodulation of the aural carrier resulting in the MPX signal. Detection and evaluation of the pilot carrier and AM demodulation of the (L-R)-carrier.

The demodulator blocks of all MSP 34x0G versions have identical user interfaces. Even completely different systems like the BTSC and NICAM systems are controlled the same way. Standards are selected by means of MSP Standard Codes. Automatic processes handle standard detection and identification without controller interaction. The key features of the MSP 34x0G demodulator blocks are:

**Standard Selection:** The controlling of the demodulator is minimized: All parameters, such as tuning frequencies or filter bandwidth, are adjusted automatically by transmitting one single value to the STANDARD SELECT register. For all standards, specific MSP standard codes are defined.

**Automatic Standard Detection:** If the TV sound standard is unknown, the MSP 34x0G can automatically detect the actual standard, switch to that standard, and respond the actual MSP standard code.

Automatic Carrier Mute: To prevent noise effects or FM identification problems in the absence of an FM carrier, the MSP 34x0G offers a configurable carrier mute feature, which is activated automatically if the TV sound standard is selected by means of the STAN-DARD SELECT register. If no FM carrier is detected at one of the two MSP demodulator channels, the corresponding demodulator output is muted. This is indicated in the STATUS register.

#### 2.2.3. Preprocessing of Demodulator Signals

The NICAM signals must be processed by a deemphasis filter and adjusted in level. The analog demodulated signals must be processed by a deemphasis filter, adjusted in level, and dematrixed. The correct deemphasis filters are already selected by setting the standard in the STANDARD SELECT register. The level adjustment has to be done by means of the FM/AM and NICAM prescale registers. The necessary dematrix function depends on the selected sound standard and the actual broadcasted sound mode (mono, stereo, or bilingual). It can be manually set by the FM Matrix Mode register or automatically by the Automatic Sound Selection.

#### 2.2.4. Automatic Sound Select

In the Automatic Sound Select mode, the dematrix function is automatically selected based on the identification information in the STATUS register. No I<sup>2</sup>C interaction is necessary when the broadcasted sound mode changes (e.g. from mono to stereo).

The demodulator supports the identification check by switching between mono-compatible standards (standards that have the same FM-Mono carrier) automatically and non-audible. If B/G-FM or B/G-NICAM is selected, the MSP will switch between these standards. The same action is performed for the standards: D/K1-FM, D/K2-FM, D/K3-FM and D/K-NICAM. Switching is only done in the absence of any stereo or bilingual identification. If identification is found, the MSP keeps the detected standard.

In case of high bit-error rates, the MSP 34x0G automatically falls back from digital NICAM sound to analog FM or AM mono.

Table 2–1 summarizes all actions that take place when Automatic Sound Select is switched on.

To provide more flexibility, the Automatic Sound Select block prepares four different source channels of demodulated sound (Fig. 2–2). By choosing one of the four demodulator channels, the preferred sound mode can be selected for each of the output channels (loudspeaker, headphone, etc.). This is done by means of the Source Select registers.

The following source channels of demodulated sound are defined:

- "FM/AM" channel: Analog mono sound, stereo if available. In case of NICAM, analog mono only (FM or AM mono).
- "Stereo or A/B" channel: Analog or digital mono sound, stereo if available. In case of bilingual broadcast, it contains both languages A (left) and B (right).

- "Stereo or A" channel: Analog or digital mono sound, stereo if available. In case of bilingual broadcast, it contains language A (on left and right).
- "Stereo or B" channel: Analog or digital mono sound, stereo if available. In case of bilingual broadcast, it contains language B (on left and right).

Fig. 2–2 and Table 2–2 show the source channel assignment of the demodulated signals in case of Automatic Sound Select mode for all sound standards.

**Note:** The analog primary input channel contains the signal of the mono FM/AM carrier or the L+R signal of the MPX carrier. The secondary input channel contains the signal of the 2nd FM carrier, the L-R signal of the MPX carrier, or the SAP signal.

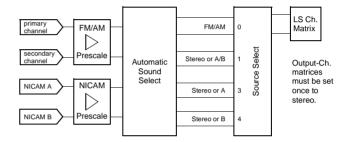
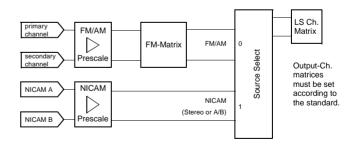


Fig. 2–2: Source channel assignment of demodulated signals in Automatic Sound Select Mode

#### 2.2.5. Manual Mode

Fig. 2–3 shows the source channel assignment of demodulated signals in case of manual mode. If manual mode is required, more information can be found in Section 6.7. "Demodulator Source Channels in Manual Mode" on page 95.



**Fig. 2–3:** Source channel assignment of demodulated signals in Manual Mode

## 2.3. Preprocessing for SCART and I<sup>2</sup>S Input Signals

The SCART and I<sup>2</sup>S inputs need only be adjusted in level by means of the SCART and I<sup>2</sup>S prescale registers.

Table 2–1: Performed actions of the Automatic Sound Selection

Selected TV Sound Standard	Performed Actions
B/G-FM, D/K-FM, M-Korea, and M-Japan	Evaluation of the identification signal and automatic switching to mono, stereo, or bilingual. Preparing four demodulator source channels according to Table 2–2.
B/G-NICAM, L-NICAM, I-NICAM, D/K-NICAM	Evaluation of NICAM-C-bits and automatic switching to mono, stereo, or bilingual. Preparing four demodulator source channels according to Table 2–2.
	In case of bad or no NICAM reception, the MSP switches automatically to FM/AM mono and switches back to NICAM if possible. A hysteresis prevents periodical switching.
B/G-FM, B/G-NICAM or D/K1-FM, D/K2-FM, D/K3-FM, and D/K-NICAM	Automatic searching for stereo/bilingual-identification in case of mono transmission. Automatic and non-audible changes between Dual-FM and FM-NICAM standards while listening to the basic FM-mono sound carrier.  Example: If starting with B/G-FM-Stereo, there will be a periodical alternation to B/G-NICAM in the absence of FM-Stereo/Bilingual or NICAM-identification. Once an identification is detected, the MSP keeps the corresponding standard.
BTSC-STEREO, FM Radio	Evaluation of the pilot signal and automatic switching to mono or stereo. Preparing four demodulator source channels according to Table 2–2. Detection of the SAP carrier.
M-BTSC-SAP	In the absence of SAP, the MSP switches to BTSC-stereo if available. If SAP is detected, the MSP switches automatically to SAP (see Table 2–2).

Table 2-2: Sound modes for the demodulator source channels with Automatic Sound Select

			Source Channels in Automatic Sound Select Mode					
Broadcasted Sound Standard	Selected MSP Standard Code <sup>3)</sup>	Broadcasted Sound Mode	FM/AM (source select: 0)	Stereo or A/B (source select: 1)	Stereo or A (source select: 3)	Stereo or B (source select: 4)		
M-Korea 02		MONO	Mono	Mono	Mono	Mono		
D/K-FM	-,, -,, -,	STEREO	Stereo	Stereo	Stereo	Stereo		
M-Japan 30	30	BILINGUAL: Languages A and B	Right = B	Left = A Right = B	А	В		
B/G-NICAM L-NICAM I-NICAM D/K-NICAM D/K-NICAM (with high deviation FM)	08, 03 <sup>2)</sup> 09	NICAM not available or error rate too high	analog Mono	analog Mono	analog Mono	analog Mono		
	0A 0B, 04 <sup>2)</sup> , 05 <sup>2)</sup> 0C, 0D	MONO	analog Mono	NICAM Mono	NICAM Mono	NICAM Mono		
		STEREO	analog Mono	NICAM Stereo	NICAM Stereo	NICAM Stereo		
		BILINGUAL: Languages A and B	analog Mono	Left = NICAM A Right = NICAM B	NICAM A	NICAM B		
	20, 21	MONO	Mono	Mono	Mono	Mono		
		STEREO	Stereo	Stereo	Stereo	Stereo		
	20	MONO + SAP	Mono	Mono	Mono	Mono		
BTSC		STEREO + SAP	Stereo	Stereo	Stereo	Stereo		
	21	MONO + SAP	Left = Mono Right = SAP	Left = Mono Right = SAP	Mono	SAP		
		STEREO + SAP	Left = Mono Right = SAP	Left = Mono Right = SAP	Mono	SAP		
FM Radio	40	MONO	Mono	Mono	Mono	Mono		
		STEREO	Stereo	Stereo	Stereo	Stereo		

<sup>1)</sup> The Automatic Sound Select process will automatically switch to the mono compatible analog standard.

 $<sup>^{2)}</sup>$  The Automatic Sound Select process will automatically switch to the mono compatible digital standard.

<sup>&</sup>lt;sup>3)</sup> The MSP Standard Codes are defined in (see Table 3–7 on page 21).

## 2.4. Source Selection and Output Channel Matrix

The Source Selector makes it possible to distribute all source signals (one of the demodulator source channels, SCART, or I<sup>2</sup>S input) to the desired output channels (loudspeaker, headphone, etc.). All input and output signals can be processed simultaneously. Each source channel is identified by a unique source address.

For each output channel, the sound mode can be set to sound A, sound B, stereo, or mono by means of the output channel matrix.

If Automatic Sound Select is on, the output channel matrix can stay fixed to stereo (transparent) for demodulated signals.

#### 2.5. Audio Baseband Processing

### 2.5.1. Automatic Volume Correction (AVC)

Different sound sources (e.g. terrestrial channels, SAT channels, or SCART) fairly often do not have the same volume level. Advertisements during movies usually have a higher volume level than the movie itself. This results in annoying volume changes. The Automatic Volume Correction (AVC) solves this problem by equalizing the volume level.

To prevent clipping, the AVC's gain decreases quickly in dynamic boost conditions. To suppress oscillation effects, the gain increases rather slowly for low level inputs. The decay time is programmable by means of the AVC register (see page 31).

For input signals ranging from -24 dBr to 0 dBr, the AVC maintains a fixed output level of -18 dBr. Fig. 2-4 shows the AVC output level versus its input level. For prescale and volume registers set to 0 dB, a level of 0 dBr corresponds to full scale input/output. This is

- SCART input/output 0 dBr = 2.0  $V_{rms}$
- Loudspeaker and Aux output 0 dBr = 1.4 V<sub>rms</sub>

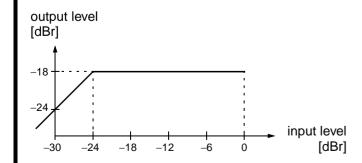


Fig. 2-4: Simplified AVC characteristics

#### 2.5.2. Loudspeaker and Headphone Outputs

The following baseband features are implemented in the loudspeaker and headphone output channels: bass/treble, loudness, balance, and volume. A square wave beeper can be added to the loudspeaker and headphone channel. The loudspeaker channel additionally performs: equalizer (not simultaneously with bass/treble), spatial effects, and a subwoofer crossover filter.

## 2.5.3. Subwoofer Output

The subwoofer signal is created by combining the left and right channels directly behind the loudness block using the formula (L+R)/2. Due to the division by 2, the D/A converter will not be overloaded, even with full scale input signals. The subwoofer signal is filtered by a third-order low-pass with programmable corner frequency followed by a level adjustment. At the loud-speaker channels, a complementary high-pass filter can be switched on. Subwoofer and loudspeaker output use the same volume (Loudspeaker Volume Register).

#### 2.5.4. Quasi-Peak Detector

The quasi-peak readout register can be used to read out the quasi-peak level of any input source. The feature is based on following filter time constants:

attack time: 1.3 ms decay time: 37 ms

#### 2.5.5. Micronas Dynamic Bass (MDB)

The **M**icronas **D**ynamic **B**ass system (MDB) extends the frequency range of loudspeakers or headphones.

After the adaption of MDB to the loudspeakers and the cabinet, further customizing of MDB allows individual fine tuning of the sound.

The MDB is placed in the subwoofer path. For applications without a subwoofer, the enhanced bass signal can be added back onto the Left/Right channels (see Fig. 2–1 on page 8). Micronas Dynamic Bass combines two effects: dynamic amplification and adding harmonics.

#### 2.5.5.1. Dynamic Amplification

Low frequency signals can be boosted while the output signal amplitude is measured. If the amplitude comes close to a definable limit, the gain is reduced automatically in dynamic Volume mode. Therefore, the system adapts to the signal amplitude which is really present at the output of the MSP device. Clipping effects are avoided.

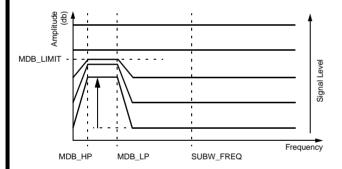


Fig. 2–5: Dynamic amplification

## 2.5.5.2. Adding Harmonics

MDB exploits the psychoacoustic phenomenon of the 'missing fundamental'. Adding harmonics of the frequency components below the cutoff frequency gives the impression of actually hearing the low frequency fundamental. In other words: The listener has the impression that a loudspeaker system seems to reproduce frequencies althoug physically not possible.

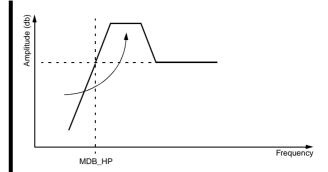


Fig. 2-6: Adding harmonics

#### 2.5.5.3. MDB Parameters

Several parameters allow tuning the characteristics of MDB according to the TV loudspeaker, the cabinet, and personal preferences (see Table 3–11). For more detailed information on how to set up MDB, please refer to the corresponding application note on the Micronas homepage.

## 2.6. SCART Signal Routing

## 2.6.1. SCART DSP In and SCART Out Select

The SCART DSP Input Select and SCART Output Select blocks include full matrix switching facilities. To design a TV set with four pairs of SCART-inputs and two pairs of SCART-outputs, no external switching hardware is required. The switches are controlled by the ACB user register (see page 39).

#### 2.6.2. Stand-by Mode

If the MSP 34x0G is switched off by first pulling STANDBYQ low and then (after >1  $\mu s$  delay) switching off DVSUP and AVSUP, but keeping AHVSUP ('Stand-by'-mode), the SCART switches maintain their position and function. This allows the copying from SCART-input to SCART-output in the TV set's stand-by mode.

In case of power on or starting from stand-by (switching on the DVSUP and AVSUP, RESETQ going high 2 ms later), all internal registers except the ACB register (see page 39) are reset to the default configuration (see Table 3–5 on page 18). The reset position of the ACB register becomes active after the first I<sup>2</sup>C transmission into the Baseband Processing part. By transmitting the ACB register first, the reset state can be redefined.

## 2.7. I<sup>2</sup>S Bus Interface

The MSP 34x0G has a synchronous master/slave input/output interface running on 32 kHz.

The interface accepts two formats:

- 1. I<sup>2</sup>S\_WS changes at the word boundary
- I<sup>2</sup>S\_WS changes one I<sup>2</sup>S-clock period before the word boundaries.

All I<sup>2</sup>S options are set by means of the MODUS and the I2S\_CONFIGURATION registers.

The I<sup>2</sup>S bus interface consists of five pins:

- I2S\_DA\_IN1,I2S\_DA\_IN2:
   I<sup>2</sup>S serial data input: 16, 18....32 bits per sample
- I2S\_DA\_OUT:
   I<sup>2</sup>S serial data output: 16, 18...32 bits per sample
- I2S\_CL:
   I<sup>2</sup>S serial clock
- I2S\_WS:
   I<sup>2</sup>S word strobe signal defines the left and right sample

If the MSP 34x0G serves as the master on the  $I^2S$  interface, the clock and word strobe lines are driven by the IC. In this mode, only 16 or 32 bits per sample can be selected. In slave mode, these lines are input to the IC and the MSP clock is synchronized to 576 times the I2S\_WS rate (32 kHz). NICAM operation is not possible in slave mode.

An  $I^2S$  timing diagram is shown in Fig. 4–28 on page 67.

#### 2.8. ADR Bus Interface

For the ASTRA Digital Radio System (ADR), the MSP 3400G, MSP 3410G, and MSP 3450G performs preprocessing such as carrier selection and filtering. Via the 3-line ADR-bus, the resulting signals are transferred to the DRP 3510A coprocessor, where the source decoding is performed. To be prepared for an upgrade to ADR with an additional DRP board, the following lines of MSP 34x0G should be provided on a feature connector:

- AUD CL OUT
- I2S DA IN1 or I2S DA IN2
- I2S DA OUT
- I2S\_WS
- I2S CL
- ADR\_CL, ADR\_WS, ADR\_DA

For more details, please refer to the DRP 3510A data sheet.

## 2.9. Digital Control I/O Pins and Status Change Indication

The static level of the digital input/output pins D\_CTR\_I/O\_0/1 is switchable between HIGH and LOW via the I<sup>2</sup>C-bus by means of the ACB register (see page 39). This enables the controlling of external hardware switches or other devices via I<sup>2</sup>C-bus.

The digital input/output pins can be set to high impedance by means of the MODUS register (see page 24). In this mode, the pins can be used as input. The current state can be read out of the STATUS register (see page 26).

Optionally, the pin D\_CTR\_I/O\_1 can be used as an interrupt request signal to the controller, indicating any changes in the read register STATUS. This makes polling unnecessary, I<sup>2</sup>C bus interactions are reduced to a minimum (see STATUS register on page 26 and MODUS register on page 24).

## 2.10. Clock PLL Oscillator and Crystal Specifications

The MSP 34x0G derives all internal system clocks from the 18.432 MHz oscillator. In NICAM or in  $I^2S$ -Slave mode, the clock is phase-locked to the corresponding source. Therefore, it is not possible to use NICAM and  $I^2S$ -Slave mode at the same time.

For proper performance, the MSP clock oscillator requires a 18.432 MHz crystal. Note that for the phase-locked modes (NICAM, I<sup>2</sup>S-Slave), crystals with tighter tolerance are required.

#### 3. Control Interface

## 3.1. I<sup>2</sup>C Bus Interface

The MSP 34x0G is controlled via the I<sup>2</sup>C bus slave interface.

The IC is selected by transmitting one of the MSP 34x0G device addresses. In order to allow up to three MSP ICs to be connected to a single bus, an address select pin (ADR\_SEL) has been implemented. With ADR\_SEL pulled to high, low, or left open, the MSP 34x0G responds to different device addresses. A device address pair is defined as a write address and a read address (see Table 3–1).

**Writing** is done by sending the write device address, followed by the subaddress byte, two address bytes, and two data bytes.

**Reading** is done by sending the write device address, followed by the subaddress byte and two address bytes. Without sending a stop condition, reading of the addressed data is completed by sending the device read address and reading two bytes of data.

Refer to Section 3.1.3. for the I<sup>2</sup>C bus protocol and to Section 3.4. "Programming Tips" on page 41 for proposals of MSP 34x0G I<sup>2</sup>C telegrams. See Table 3–2 for a list of available subaddresses.

Besides the possibility of hardware reset, the MSP can also be reset by means of the RESET bit in the CONTROL register by the controller via  $I^2C$  bus.

Due to the architecture of the MSP 34x0G, the IC cannot react immediately to an  $I^2C$  request. The typical

response time is about 0.3 ms. If the MSP cannot accept another byte of data (e.g. while servicing an internal interrupt), it holds the clock line I2C\_CL low to force the transmitter into a wait state. The I²C Bus Master must read back the clock line to detect when the MSP is ready to receive the next I²C transmission. The positions within a transmission where this may happen are indicated by 'Wait' in Section 3.1.3. The maximum wait period of the MSP during normal operation mode is less than 1 ms.

#### 3.1.1. Internal Hardware Error Handling

In case of any hardware problems (e.g. interruption of the power supply of the MSP), the MSP's wait period is extended to 1.8 ms. After this time period elapses, the MSP releases data and clock lines.

#### Indication and solving the error status:

To indicate the error status, the remaining acknowledge bits of the actual I<sup>2</sup>C-protocol will be left high. Additionally, bit[14] of CONTROL is set to one. The MSP can then be reset via the I<sup>2</sup>C bus by transmitting the RESET condition to CONTROL.

#### Indication of reset:

Any reset, even caused by an unstable reset line etc., is indicated in bit[15] of CONTROL.

A general timing diagram of the  $I^2C$  bus is shown in Fig. 4–27 on page 65.

Table 3-1: I<sup>2</sup>C Bus Device Addresses

ADR_SEL	Low (connected to DVSS)		High (connected to DVSUP)		Left Open	
Mode	Write	Read	Write	Read	Write	Read
MSP device address	80 <sub>hex</sub>	81 <sub>hex</sub>	84 <sub>hex</sub>	85 <sub>hex</sub>	88 <sub>hex</sub>	89 <sub>hex</sub>

Table 3-2: I<sup>2</sup>C Bus Subaddresses

Name	Binary Value	Hex Value	Mode	Function
CONTROL	0000 0000	00	Read/Write	Write: Software reset of MSP (see Table 3–3) Read: Hardware error status of MSP
WR_DEM	0001 0000	10	Write	write address demodulator
RD_DEM	0001 0001	11	Write	read address demodulator
WR_DSP	0001 0010	12	Write	write address DSP
RD_DSP	0001 0011	13	Write	read address DSP

## 3.1.2. Description of CONTROL Register

## Table 3-3: CONTROL as a Write Register

Name	Subaddress	Bit[15] (MSB)	Bits[14:0]
CONTROL	00 <sub>hex</sub>	1 : RESET 0 : normal	0

## Table 3-4: CONTROL as a Read Register

Name	Subaddress	Bit[15] (MSB)	Bit[14]	Bits[13:0]
CONTROL	00 <sub>hex</sub>	RESET status after last reading of CONTROL:  0 : no reset occured 1 : reset occured	Internal hardware status: 0 : no error occured 1 : internal error occured	not of interest

Reading of CONTROL will reset the bits[15,14] of CONTROL. After Power-on, bit[15] of CONTROL will be set; it must be read once to be reset.

## 3.1.3. Protocol Description

#### Write to DSP or Demodulator

Ī	S	write	Wait	ACK	sub-addr	ACK	addr-byte	ACK	addr-byte	ACK	data-byte	ACK	data-byte	ACK	Р
		device address					high		low		high		low		

## Read from DSP or Demodulator

s	write	Wait	ACK	sub-addr	ACK	,	ACK	addr-byte	ACK	S	read	Wait	ACK	,	ACK	data-byte	NAK	Р
	device					high		low			device			high		low		
	address										address							

#### Write to Control Register

Ī	S	write	Wait	ACK	sub-addr	ACK	data-byte	ACK	data-byte	ACK	Р
ı		device					high		low		
		address									

## Read from Control Register

S	write	Wait	ACK	00hex	ACK	S	read	Wait	ACK	data-byte-	ACK	data-byte	NAK	Р
	device address						device address			high		low		

**Note:**  $S = I^2C$ -Bus Start Condition from master

 $P = I^2C$ -Bus Stop Condition from master

ACK = Acknowledge-Bit: LOW on I2C\_DA from slave (= MSP, light gray) or master (= controller, dark gray)

NAK = Not Acknowledge-Bit: HIGH on I2C\_DA from master (dark gray) to indicate 'End of Read'

or from MSP indicating internal error state

Wait =  $I^2C$ -Clock line is held low, while the MSP is processing the  $I^2C$  command.

This waiting time is max. 1 ms

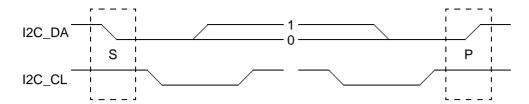


Fig. 3–1: I<sup>2</sup>C bus protocol (MSB first; data must be stable while clock is high)

## 3.1.4. Proposals for General MSP 34x0G I<sup>2</sup>C Telegrams

## 3.1.4.1. Symbols

daw	write device address (80 <sub>hex</sub> , 84 <sub>hex</sub> or 88 <sub>hex</sub> )
dar	read device address (81 <sub>hex</sub> , 85 <sub>hex</sub> or 89 <sub>hex</sub> )
<	Start Condition
>	Stop Condition
aa	Address Byte
dd	Data Byte

### 3.1.4.2. Write Telegrams

<daw 00="" d0=""></daw>	write to CONTROL register
<daw 10="" aa="" dd=""></daw>	write data into demodulator
<daw 12="" aa="" dd=""></daw>	write data into DSP

## 3.1.4.3. Read Telegrams

<daw 00="" <dar="" dd=""></daw>	read data from
	CONTROL register
<daw 11="" <dar="" aa="" dd=""></daw>	read data from demodulator
<daw 13="" <dar="" aa="" dd=""></daw>	read data from DSP

#### 3.1.4.4. Examples

<80	00	80	00>	>			RESET MSP statically
<80	00	00	00>	>			Clear RESET
<80	10	00	20	00	03>		Set demodulator to stand. $03_{\text{hex}}$
<80	11	02	00	<81	L dd	dd>	Read STATUS
<80	12	00	80	01	20>		Set loudspeaker channel
							source to NICAM and
							Matrix to STEREO

More examples of typical application protocols are listed in Section 3.4. "Programming Tips" on page 41.

# 3.2. Start-Up Sequence: Power-Up and I<sup>2</sup>C-Controlling

After POWER-ON or RESET (see Fig. 4–26), the IC is in an inactive state. All registers are in the Reset position (see Table 3–5 and Table 3–6), the analog outputs are muted. The controller has to initialize all registers for which a non-default setting is necessary.

### 3.3. MSP 34x0G Programming Interface

## 3.3.1. User Registers Overview

The MSP 34x0G is controlled by means of user registers. The complete list of all user registers are given in Table 3–5 and Table 3–6. The registers are partitioned into the Demodulator section (Subaddress  $10_{hex}$  for writing,  $11_{hex}$  for reading) and the Baseband Processing sections (Subaddress  $12_{hex}$  for writing,  $13_{hex}$  for reading).

Write and read registers are 16 bit wide, whereby the MSB is denoted bit[15]. Transmissions via I<sup>2</sup>C bus have to take place in 16-bit words (two byte transfers, with the most significant byte transferred first). All write registers, except the demodulator write registers are readable.

Unused parts of the 16-bit write registers must be zero. Addresses not given in this table must not be accessed.

For reasons of software compatibility to the MSP 34xxD, a Manual/Compatibility Mode is available. More read and write registers together with a detailed description can be found in "Appendix B: Manual/Compatibility Mode" on page 81.

Table 3–5: List of MSP 34x0G Write Registers

Write Register	Address (hex)	Bits	Description and Adjustable Range	Reset	See Page
I <sup>2</sup> C Subaddress = 10 <sub>hex</sub> ; Registers are	not readal	ole			
STANDARD SELECT	00 20	[15:0]	Initial Programming of the Demodulator	00 00	22
MODUS	00 30	[15:0]	Demodulator, Automatic and I <sup>2</sup> S options	00 00	24
I <sup>2</sup> S CONFIGURATION	00 40	[15:0]	Configuration of I <sup>2</sup> S options	00 00	25
I <sup>2</sup> C Subaddress = 12 <sub>hex</sub> ; Registers are	e all readabl	e by usin	g I <sup>2</sup> C Subaddress = 13 <sub>hex</sub>		'
Volume loudspeaker channel	00 00	[15:8]	[+12 dB –114 dB, MUTE]	MUTE	30
Volume / Mode loudspeaker channel		[7:0]	1/8 dB Steps, Reduce Volume / Tone Control / Compromise/ Dynamic	00 <sub>hex</sub>	
Balance loudspeaker channel [L/R]	00 01	[15:8]	[0100 / 100% and 100 / 0100%] [-1270 / 0 and 0 / -1270 dB]	100%/100%	31
Balance mode loudspeaker		[7:0]	[Linear / logarithmic mode]	linear mode	
Bass loudspeaker channel	00 02	[15:8]	[+20 dB –12 dB]	0 dB	32
Treble loudspeaker channel	00 03	[15:8]	[+15 dB –12 dB]	0 dB	33
Loudness loudspeaker channel	00 04	[15:8]	[0 dB +17 dB]	0 dB	34
Loudness filter characteristic		[7:0]	[NORMAL, SUPER_BASS]	NORMAL	
Spatial effect strength loudspeaker ch.	00 05	[15:8]	[-100%OFF+100%]	OFF	35
Spatial effect mode/customize		[7:0]	[SBE, SBE+PSE]	SBE+PSE	
Volume headphone channel	00 06	[15:8]	[+12 dB –114 dB, MUTE]	MUTE	30
Volume / Mode headphone channel		[7:0]	1/8 dB Steps, Reduce Volume / Tone Control	00 <sub>hex</sub>	
Volume SCART1 output channel	00 07	[15:8]	[+12 dB –114 dB, MUTE]	MUTE	38
Loudspeaker source select	00 08	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	29
Loudspeaker channel matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	29
Headphone source select	00 09	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	29
Headphone channel matrix	-	[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	29
SCART1 source select	00 0A	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	29
SCART1 channel matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	29
I <sup>2</sup> S source select	00 0B	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	29
I <sup>2</sup> S channel matrix	-	[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	29
Quasi-peak detector source select	00 0C	[15:8]	[FM/AM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM/AM	29
Quasi-peak detector matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	29
Prescale SCART input	00 0D	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>	28
Prescale FM/AM	00 0E	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00 <sub>hex</sub>	27
FM matrix	1	[7:0]	[NO_MAT, GSTEREO, KSTEREO]	NO_MAT	28
Prescale NICAM	00 10	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ] (MSP 3410G, MSP 3450G only)	00 <sub>hex</sub>	28
Prescale I <sup>2</sup> S2	00 12	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	10 <sub>hex</sub>	28
ACB : SCART Switches a. D_CTR_I/O	00 13	[15:0]	Bits [150]	00 <sub>hex</sub>	39
Beeper	00 14	[15:0]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]/[00 <sub>hex</sub> 7F <sub>hex</sub> ]	00/00 <sub>hex</sub>	39
Prescale I <sup>2</sup> S1	00 16	[15:8]	[00 <sub>hex</sub> 7F <sub>hex</sub> ]	10 <sub>hex</sub>	28

Table 3–5: List of MSP 34x0G Write Registers, continued

Write Register	Address (hex)	Bits	Description and Adjustable Range	Reset	See Page
Mode tone control	00 20	[15:8]	[BASS/TREBLE, EQUALIZER]	BASS/TREB	32
Equalizer loudspeaker ch. band 1	00 21	[15:8]	[+12 dB –12 dB]	0 dB	33
Equalizer loudspeaker ch. band 2	00 22	[15:8]	[+12 dB –12 dB]	0 dB	33
Equalizer loudspeaker ch. band 3	00 23 [15:8] [+12 dB12 dB]		0 dB	33	
Equalizer loudspeaker ch. band 4	00 24	[15:8]	[+12 dB –12 dB]	0 dB	33
Equalizer loudspeaker ch. band 5	00 25	[15:8]	[+12 dB –12 dB]	0 dB	33
Automatic Volume Correction	00 29	[15:8]	[off, on, decay time]	off	31
Subwoofer level adjust	00 2C	[15:8]	[+12 dB30 dB, mute]	0 dB	36
Subwoofer corner frequency	00 2D	[15:8]	[50 Hz 400 Hz]	00 <sub>hex</sub>	36
Subwoofer complementary high-pass	_	[7:0]	[off, on, MDB to Main]	off	36
Balance headphone channel [L/R]	00 30	[15:8]	[0100 / 100% and 100 / 0100%] [-1270 / 0 and 0 / -1270 dB]	100 %/100 %	31
Balance mode headphone		[7:0]	[Linear mode / logarithmic mode]	linear mode	
Bass headphone channel	00 31	[15:8]	[+20 dB –12 dB]	0 dB	32
Treble headphone channel	00 32	[15:8]	[+15 dB –12 dB]	0 dB	33
Loudness headphone channel	00 33	[15:8]	[0 dB +17 dB]	0 dB	34
Loudness filter characteristic		[7:0]	[NORMAL, SUPER_BASS]	NORMAL	
Volume SCART2 output channel	00 40	[15:8]	[+12 dB –114 dB, MUTE]	00 <sub>hex</sub>	38
SCART2 source select	00 41	[15:8]	[FM, NICAM, SCART, I <sup>2</sup> S1, I <sup>2</sup> S2]	FM	29
SCART2 channel matrix		[7:0]	[SOUNDA, SOUNDB, STEREO, MONO]	SOUNDA	29
MDB Effect Strength	00 68	[15:8]	[0 dB 127 dB, off]	off	36
MDB Amplitude Limit	00 69	[15:8]	[0 dBFS32 dBFS]	0 dBFS	36
MDB Harmonic Content	00 6A	[15:8]	[0% 100%]	0%	37
MDB Low Pass Corner Frequency	00 6B	[15:8]	[50 Hz 300 Hz]	0 Hz	37
MDB High Pass Corner Frequency	00 6C	[15:8]	[20 Hz 300 Hz]	0 Hz	37

Table 3–6: List of MSP 34x0G Read Registers

Read Register	Address (hex)	Bits	Description and Adjustable Range	See Page
I <sup>2</sup> C Subaddress = 11 <sub>hex</sub> ; Registers a	are not writab	le		
STANDARD RESULT	00 7E	[15:0]	Result of Automatic Standard Detection (see Table 3–8 on page 23)	26
STATUS	02 00	[15:0]	Monitoring of internal settings e.g. Stereo, Mono, Mute etc	26
I <sup>2</sup> C Subaddress = 13 <sub>hex</sub> ; Registers a	are <i>not</i> writabl	е		
Quasi peak readout left	00 19	[15:0]	[00 <sub>hex</sub> 7FFF <sub>hex</sub> ]16 bit two's complement	40
Quasi peak readout right	00 1A	[15:0]	[00 <sub>hex</sub> 7FFF <sub>hex</sub> ]16 bit two's complement	40
MSP hardware version code	00 1E	[15:8]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	40
MSP major revision code		[7:0]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	40
MSP product code	00 1F	[15:8]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	40
MSP ROM version code		[7:0]	[00 <sub>hex</sub> FF <sub>hex</sub> ]	40

## 3.3.2. Description of User Registers

Table 3-7: Standard Codes for STANDARD SELECT register

MSP Standard Code (Data in hex)	TV Sound Standard	Sound Carrier Frequencies in MHz	MSP 34x0G Version
	Automatic Standard Detection	า	
00 01	Start Automatic Standard Detection and sets detected standards		all
	Standard Selection		
00 02	M-Dual FM-Stereo	4.5/4.724212	3400, -10, -20, -40, -50
00 03	B/G -Dual FM-Stereo <sup>1)</sup>	5.5/5.7421875	3400, -10, -50
00 04	D/K1-Dual FM-Stereo <sup>2)</sup>	6.5/6.2578125	
00 05	D/K2-Dual FM-Stereo <sup>2)</sup>	6.5/6.7421875	
00 06	D/K -FM-Mono with HDEV3 <sup>3)</sup> , not detectable by Automatic Standard Detection, HDEV3 <sup>3)</sup> SAT-Mono (i.e. Eutelsat, s. Table 6–18)	6.5	
00 07	D/K3-Dual FM-Stereo	6.5/5.7421875	
00 08	B/G -NICAM-FM <sup>1)</sup>	5.5/5.85	3410, -50
00 09	L -NICAM-AM	6.5/5.85	
00 0A	I -NICAM-FM	6.0/6.552	
00 0B	D/K -NICAM-FM <sup>2)</sup>	6.5/5.85	
00 0C	D/K -NICAM-FM with HDEV2 <sup>4)</sup> , not detectable by Automatic Standard Detection, for China	6.5/5.85	
00 0D	D/K -NICAM-FM with HDEV3 <sup>3)</sup> , not detectable by Automatic Standard Detection, for China	6.5/5.85	
00 20	BTSC-Stereo	4.5	3420, -40, -50
00 21	BTSC-Mono + SAP	_	
00 30	M-EIA-J Japan Stereo	4.5	
00 40	FM-Stereo Radio with 75 μs Deemphasis	10.7	
00 50	SAT-Mono (s. Table 6–18)	6.5	3400, -10, -50
00 51	SAT-Stereo (s. Table 6–18)	7.02/7.20	
00 60	SAT ADR (Astra Digital Radio)	6.12	

 $<sup>^{1)}</sup>$  In case of Automatic Sound Select, the B/G-codes  $3_{\rm hex}$  and  $8_{\rm hex}$  are equivalent.  $^{2)}$  In case of Automatic Sound Select, the D/K-codes  $4_{\rm hex}$ ,  $5_{\rm hex}$ ,  $7_{\rm hex}$  and  $B_{\rm hex}$  are equivalent.  $^{3)}$  HDEV3: Max. FM deviation must not exceed 540 kHz  $^{4)}$  HDEV2: Max. FM deviation must not exceed 360 kHz

#### 3.3.2.1. STANDARD SELECT Register

The TV sound standard of the MSP 34x0G demodulator is determined by the STANDARD SELECT register. There are two ways to use the STANDARD SELECT register:

- Setting up the demodulator for a TV sound standard by sending the corresponding standard code with a single I<sup>2</sup>C bus transmission.
- Starting the Automatic Standard Detection for terrestrial TV standards. This is the most comfortable way to set up the demodulator. Within 0.5 s, the detection and setup of the actual TV sound standard is performed. The detected standard can be read out of the STANDARD RESULT register by the control processor. This feature is recommended for the primary setup of a TV set. Outputs should be muted during Automatic Standard Detection.

The Standard Codes are listed in Table 3-7.

Selecting a TV sound standard via the STANDARD SELECT register initializes the demodulator. This includes: AGC-settings and carrier mute, tuning frequencies, FIR-filter settings, demodulation mode (FM, AM, NICAM), deemphasis and identification mode.

TV stereo sound standards that are unavailable for a specific MSP version are processed in analog mono sound of the standard. In that case, stereo or bilingual processing will not be possible.

For a complete setup of the TV sound processing from analog IF input to the source selection, the transmissions as shown in Section 3.5. are necessary.

For reasons of software compatibility to the MSP 34xxD, a Manual/Compatibility mode is available. A detailed description of this mode can be found on page 81.

#### 3.3.2.2. Refresh of STANDARD SELECT Register

A general refresh of the STANDARD SELECT register is not allowed. However, the following method enables watching the MSP 34x0G "alive" status and detection of accidental resets (only versions B6 and later):

- After Power-on, bit[15] of CONTROL will be set; it must be read once to enable the reset-detection feature.
- Reading of the CONTROL register and checking the reset indicator bit[15].
- If bit[15] is "0", any refresh of the STANDARD SELECT register is not allowed.
- If bit[15] is "1", indicating a reset, a refresh of the STANDARD SELECT register and all other MSPG registers is required.

## 3.3.2.3. STANDARD RESULT Register

If Automatic Standard Detection is selected in the STANDARD SELECT register, status and result of the Automatic Standard Detection process can be read out of the STANDARD RESULT register. The possible results are based on the mentioned Standard Code and are listed in Table 3–8.

In cases where no sound standard has been detected (no standard present, too much noise, strong interferers, etc.) the STANDARD RESULT register contains  $00~00_{\rm hex}$ . In that case, the controller has to start further actions (for example set the standard according to a preference list or by manual input).

As long as the STANDARD RESULT register contains a value greater than 07 FF $_{\rm hex}$ , the Automatic Standard Detection is still active. During this period, the MODUS and STANDARD SELECT register must not be written. The STATUS register will be updated when the Automatic Standard Detection has finished.

If a present sound standard is unavailable for a specific MSP-version, it detects and switches to the analog mono sound of this standard.

#### Example:

The MSPs 3420G and 3440G will detect a B/G-NICAM signal as standard 3 and will switch to the analog FM-Mono sound.

**Table 3–8:** Results of the Automatic Standard Detection

Broadcasted Sound Standard	STANDARD RESULT Register Read 007E <sub>hex</sub>
Automatic Standard Detection could not find a sound standard	0000 <sub>hex</sub>
B/G-FM	0003 <sub>hex</sub>
B/G-NICAM	0008 <sub>hex</sub>
I	000A <sub>hex</sub>
FM-Radio	0040 <sub>hex</sub>
M-Korea M-Japan	0002 <sub>hex</sub> (if MODUS[14,13]=00)
M-BTSC	0020 <sub>hex</sub> (if MODUS[14,13]=01)
	0030 <sub>hex</sub> (if MODUS[14,13]=10)
L-AM D/K1	0009 <sub>hex</sub> (if MODUS[12]=0)
D/K1 D/K2 D/K3	0004 <sub>hex</sub> (if MODUS[12]=1)
L-NICAM D/K-NICAM	0009 <sub>hex</sub> (if MODUS[12]=0)
D/K-INICAIVI	000B <sub>hex</sub> (if MODUS[12]=1)
Automatic Standard Detection still active	>07FF <sub>hex</sub>

## 3.3.2.4. Write Registers on I<sup>2</sup>C Subaddress 10<sub>hex</sub>

Table 3–9: Write registers on I<sup>2</sup>C subaddress 10<sub>hex</sub>

Register Address	Function			Name	
00 20 <sub>hex</sub>	STANDAF	STANDARD SELECTION Register			
	Defines T	V-Sound o	r FM-Radio Standard		
	bit[15:0]	00 01 <sub>hex</sub> 00 02 <sub>hex</sub>	start Automatic Standard Detection MSP Standard Codes (see Table 3–7)		
		00 60 <sub>hex</sub>			
00 30 <sub>hex</sub>	MODUS F	Register		MODUS	
	Preference	e in Autom	atic Standard Detection:		
	bit[15]	0	undefined, must be 0		
	bit[14:13]	0 1 2 3	detected 4.5 MHz carrier is interpreted as: <sup>1)</sup> standard M (Korea) standard M (BTSC) standard M (Japan) chroma carrier (M/N standards are ignored)		
	bit[12]	0 1	detected 6.5 MHz carrier is interpreted as: <sup>1)</sup> standard L (SECAM) standard D/K1, D/K2, D/K3, or D/K NICAM		
	General M	1SP 34x0G	Options		
	bit[11:9]	0	undefined, must be 0		
	bit[8]	0/1	ANA_IN1+/ANA_IN2+; select analog sound IF input pin		
	bit[7]	0/1	active/tristate state of audio clock output pin AUD_CL_OUT		
	bit[6]	0	I <sup>2</sup> S word strobe alignment WS changes at data word boundary WS changes one clock cycle in advance		
	bit[5]	0/1	master/slave mode of I <sup>2</sup> S interface (must be set to 0 (= Master) in case of NICAM mode)		
	bit[4]	0/1	active/tristate state of I <sup>2</sup> S output pins		
	bit[3]	0	state of digital output pins D_CTR_I/O_0 and _1 active: D_CTR_I/O_0 and _1 are output pins (can be set by means of the ACB register. see also: MODUS[1]) tristate: D_CTR_I/O_0 and _1 are input pins		
			(level can be read out of STATUS[4,3])		
	bit[2]	0	undefined, must be 0		
	bit[1]	0/1	disable/enable STATUS change indication by means of the digital I/O pin D_CTR_I/O_1 Necessary condition: MODUS[3] = 0 (active)		
	bit[0]	0/1	off/on: Automatic Sound Select		

Table 3–9: Write registers on I<sup>2</sup>C subaddress 10<sub>hex</sub>, continued

Register Address	Function			Name
00 40 <sub>hex</sub>	I <sup>2</sup> S CONF	IGURA	TION Register	I2S_CONFIG
	bit[15:1]	0	not used, must be set to "0"	
	bit[0]	0	I2S_CL frequency and I <sup>2</sup> S data sample length for master mode 2 x 16 bit (1.024 MHz) 2 x 32 bit (2.048 MHz)	

## 3.3.2.5. Read Registers on I<sup>2</sup>C Subaddress 11<sub>hex</sub>

Table 3–10: Read Registers on I<sup>2</sup>C Subaddress 11<sub>hex</sub>

Register Address	Function	n		Name
00 7E <sub>hex</sub>	STANDA	ARD RESUL	T Register	STANDARD_RES
	Readbac			
	bit[15:0]	00 00 <sub>hex</sub>	Automatic Standard Detection could not find a sound standard	
		00 02 <sub>hex</sub>	MSP Standard Codes (see Table 3–8 on page 23)	
		00 40 <sub>hex</sub> >07 FF <sub>hex</sub>	Automatic Standard Detection still active	
02 00 <sub>hex</sub>	STATUS	Register		STATUS
	Contains	all user rel	evant internal information about the status of the MSP	
	bit[15:10	]	undefined	
	bit[8]	0/1	"1" indicates bilingual sound mode or SAP present (internally evaluated from received analog or digital identification signals)	
	bit[7]	0/1	"1" indicates independent mono sound (only for NICAM)	
	bit[6]	0/1	mono/stereo indication (internally evaluated from received analog or digital identification signals)	
	bit[5,9]	00 01 10 11	analog sound standard (FM or AM) active this pattern will not occur digital sound (NICAM) available bad reception condition of digital sound (NICAM) due to: a. high error rate b. unimplemented sound code c. data transmission only	
	bit[4]	0/1	low/high level of digital I/O pin D_CTR_I/O_1	
	bit[3]	0/1	low/high level of digital I/O pin D_CTR_I/O_0	
	bit[2]	0 1	detected secondary carrier (2nd A2 or SAP sub-carrier) no secondary carrier detected	
	bit[1]	0 1	detected primary carrier (Mono or MPX carrier) no primary carrier detected	
	bit[0]		undefined	
	change i	in the STATI	indication is activated by means of MODUS[1]: Each US register sets the digital I/O pin D_CTR_I/O_1 to high TATUS register resets D_CTR_I/O_1.	

## 3.3.2.6. Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>

Register Address	Function	1		Name		
PREPROC	PREPROCESSING					
00 0E <sub>hex</sub>	FM/AM P	rescale		PRE_FM		
	bit[15:8]	00 <sub>hex</sub>	Defines the input prescale gain for the demodulated FM or AM signal			
		7F <sub>hex</sub> 00 <sub>hex</sub>	off (RESET condition)			
			xcept satellite FM and AM-mode, the combinations of pres- deviation listed below lead to internal full scale.			
	FM mode	<b>)</b>				
	bit[15:8]	7F <sub>hex</sub> 48 <sub>hex</sub> 30 <sub>hex</sub> 24 <sub>hex</sub> 18 <sub>hex</sub>	28 kHz FM deviation 50 kHz FM deviation 75 kHz FM deviation 100 kHz FM deviation 150 kHz FM deviation 180 kHz FM deviation			
	FM high o	deviation m	node (HDEV2, MSP Standard Code = C <sub>hex</sub> )			
	bit[15:8]	30 <sub>hex</sub> 14 <sub>hex</sub>	150 kHz FM deviation 360 kHz FM deviation (limit)			
	FM very h	nigh deviat	ion mode (HDEV3, MSP Standard Code = 6 and D <sub>hex</sub> )			
	bit[15:8]	20 <sub>hex</sub> 1A <sub>hex</sub>	450 kHz FM deviation 540 kHz FM deviation (limit)			
	Satellite F	FM with ad	aptive deemphasis			
	bit[15:8]	10 <sub>hex</sub>	recommendation			
	AM mode	e (MSP Sta	andard Code = 9)			
	bit[15:8]	7C <sub>hex</sub>	recommendation for SIF input levels from 0.1 $\rm V_{pp}$ to 0.8 $\rm V_{pp}$			
			(Due to the AGC being switched on, the AM-output level remains stable and independent of the actual SIF-level in the mentioned input range)			

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function	Name
(continued)	FM Matrix Modes	FM_MATRIX
00 0E <sub>hex</sub>	Defines the dematrix function for the demodulated FM signal	
	bit[7:0] 00 <sub>hex</sub> no matrix (used for bilingual and unmatrixed stereo sound) 01 <sub>hex</sub> German stereo (Standard B/G) 02 <sub>hex</sub> Korean stereo (also used for BTSC, EIA-J and FM Radio) sound A mono (left and right channel contain the mono sound of the FM/AM mono carrier) 04 <sub>hex</sub> sound B mono	
	In case of <b>Automatic Sound Select = on</b> , the FM Matrix Mode is set automatically. Writing to the FM/AM prescale register (00 0E <sub>hex</sub> high part) is still allowed. In order not to disturb the automatic process, the low part of any I <sup>2</sup> C transmission to this register is ignored. Therefore, any FM-Matrix readback values may differ from data written previously.	
	In case of <b>Automatic Sound Select = off</b> , the FM Matrix Mode must be set as shown in Table 6–17 of Appendix B.	
	To enable a <b>Forced Mono Mode</b> set A2 THRESHOLD as described in Section 6.3.2.on page 85	
00 10 <sub>hex</sub>	NICAM Prescale	PRE_NICAM
	Defines the input prescale value for the digital NICAM signal	
	bit[15:8] 00 <sub>hex</sub> 7F <sub>hex</sub> prescale gain	
	examples:  00 <sub>hex</sub> off  20 <sub>hex</sub> 0 dB gain  5A <sub>hex</sub> 9 dB gain (recommendation)  7F <sub>hex</sub> +12 dB gain (maximum gain)	
00 16 <sub>hex</sub> 00 12 <sub>hex</sub>	I2S1 Prescale I2S2 Prescale	PRE_I2S1 PRE_I2S2
	Defines the input prescale value for digital I <sup>2</sup> S input signals	
	bit[15:8] 00 <sub>hex</sub> 7F <sub>hex</sub> prescale gain	
	examples: 00 <sub>hex</sub> off 10 <sub>hex</sub> 0 dB gain (recommendation) 7F <sub>hex</sub> +18 dB gain (maximum gain)	
00 0D <sub>hex</sub>	SCART Input Prescale	PRE_SCART
	Defines the input prescale value for the analog SCART input signal	
	bit[15:8] 00 <sub>hex</sub> 7F <sub>hex</sub> prescale gain	
	examples:  00 <sub>hex</sub> off  19 <sub>hex</sub> 0 dB gain (2 V <sub>RMS</sub> input leads to digital full scale)  7F <sub>hex</sub> +14 dB gain (400 mV <sub>RMS</sub> input leads to digital full scale)	

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function		Name		
SOURCE	OURCE SELECT AND OUTPUT CHANNEL MATRIX				
00 08 <sub>hex</sub> 00 09 <sub>hex</sub> 00 0A <sub>hex</sub> 00 41 <sub>hex</sub> 00 0B <sub>hex</sub> 00 0C <sub>hex</sub>	Source fo	burce for:  Loudspeaker Output  Headphone Output  SCART1 DA Output  SCART2 DA Output  I <sup>2</sup> S Output  Quasi-Peak Detector			
	bit[15:8]	0 "FM/AM": demodulated FM or AM mono signal			
		1 "Stereo or A/B": demodulator Stereo or A/B signal (in manual mode, this source is identical to the NICAM source in the MSP 3410D)			
		3 "Stereo or A": demodulator Stereo Sound or Language A (only defined for Automatic Sound Select)			
		4 "Stereo or B": demodulator Stereo Sound or Language B (only defined for Automatic Sound Select)			
		2 SCART input			
		5 I <sup>2</sup> S1 input			
		6 I <sup>2</sup> S2 input			
	For demo	dulator sources, see Table 2–2.			
00 08 <sub>hex</sub> 00 09 <sub>hex</sub> 00 0A <sub>hex</sub> 00 41 <sub>hex</sub> 00 0B <sub>hex</sub> 00 0C <sub>hex</sub>	Matrix Mo	ode for: Loudspeaker Output Headphone Output SCART1 DA Output SCART2 DA Output I <sup>2</sup> S Output Quasi-Peak Detector	MAT_MAIN MAT_AUX MAT_SCART1 MAT_SCART2 MAT_I2S MAT_QPEAK		
	bit[7:0]	00 <sub>hex</sub> Sound A Mono (or Left Mono) 10 <sub>hex</sub> Sound B Mono (or Right Mono) 20 <sub>hex</sub> Stereo (transparent mode) 30 <sub>hex</sub> Mono (sum of left and right inputs divided by 2) special modes are available (see Section 6.5.1. on page 93)			
	according	atic Sound Select mode, the demodulator source channels are set to Table 2–2. Therefore, the matrix modes of the corresponding outnels should be set to "Stereo" (transparent).			

Table 3-11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function	า		Name		
LOUDSPE	AKER ANI	D HEADPH	ONE PROCESSING			
00 00 <sub>hex</sub> 00 06 <sub>hex</sub>	Volume I	VOL_MAIN VOL_AUX				
	bit[15:8]	volume ta 7F <sub>hex</sub> 7E <sub>hex</sub>	able with 1 dB step size +12 dB (maximum volume) +11 dB			
		1107	+1 dB 0 dB -1 dB			
		02 <sub>hex</sub> 01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	–114 dB			
	bit[7:5]	higher re 0 1	solution volume table +0 dB +0.125 dB increase in addition to the volume table			
		 7	+0.875 dB increase in addition to the volume table			
	bit[4]	0	must be set to 0			
	bit[3:0]	clipping r 0 1 2 3	node reduce volume reduce tone control compromise dynamic			
	With large scale input signals, positive volume settings may lead to signal clipping.					
	digital an tion by d audible D	nd an analo ligital volum DC plops. To	udspeaker and headphone volume function is divided into a g section. With Fast Mute, volume is reduced to mute posine only. Analog volume is not changed. This reduces any o turn volume on again, the volume step that has been used as activated must be transmitted.			
	If the clip vent seve volume is treble, or					
	If the clipping mode is " <b>reduce tone control</b> ", the bass or treble value is reduced if amplification exceeds 12 dB. If the equalizer is switched on, the gain of those bands is reduced, where amplification together with volume exceeds 12 dB.					
	reduced on, the	half and ha gain of the	is "compromise", the bass or treble value and volume are If if amplification exceeds 12 dB. If the equalizer is switched use bands is reduced half and half, where amplification exceeds 12 dB.			
	amplitude	es would ex	is "dynamic", volume is reduced automatically if the signal ceed –2 dBFS within the IC. For operation of MDB, dynaswitched on.			

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function			Name
00 29 <sub>hex</sub>	Automatic Volume Correction (AVC) Loudspeaker Channel			AVC
	bit[15:12]	00 <sub>hex</sub> 08 <sub>hex</sub>	AVC off (and reset internal variables) AVC on	
	bit[11:8]	08 <sub>hex</sub> 04 <sub>hex</sub> 02 <sub>hex</sub> 01 <sub>hex</sub>	8 sec decay time 4 sec decay time 2 sec decay time 20 ms decay time (should be used for approx. 100 ms after channel change)	
		PANORAI	not be used in any Dolby Prologic mode (with DPL 35xx), MA or 3D-PANORAMA mode, when only the loudspeaker	
00 01 <sub>hex</sub> 00 30 <sub>hex</sub>			ker Channel e Channel	BAL_MAIN BAL_AUX
	bit[15:8]	Linear Mo 7F <sub>hex</sub> 7E <sub>hex</sub>	ode Left muted, Right 100% Left 0.8%, Right 100%	
		01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	Left 99.2%, Right 100% Left 100%, Right 100% Left 100%, Right 99.2%	
		82 <sub>hex</sub> 81 <sub>hex</sub>	Left 100%, Right 0.8% Left 100%, Right muted	
	bit[15:8]	Logarithn 7F <sub>hex</sub> 7E <sub>hex</sub>	nic Mode Left –127 dB, Right 0 dB Left –126 dB, Right 0 dB	
		01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	Left –1 dB, Right 0 dB Left 0 dB, Right 0 dB Left 0 dB, Right –1 dB	
		81 <sub>hex</sub> 80 <sub>hex</sub>	Left 0 dB, Right –127 dB Left 0 dB, Right –128 dB	
	bit[7:0]	Balance I 00 <sub>hex</sub> 01 <sub>hex</sub>	Mode linear logarithmic	
		negative s	ettings reduce the left channel without affecting the right settings reduce the right channel leaving the left channel	

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function	Name
00 20 <sub>hex</sub>	Tone Control Mode Loudspeaker Channel bit[15:8] 00 <sub>hex</sub> bass and treble is active	TONE_MODE
	FF <sub>hex</sub> equalizer is active  Defines whether Bass/Treble or Equalizer is activated for the loudspeaker channel. Bass and Equalizer cannot work simultaneously. If Equalizer is used, Bass, and Treble coefficients must be set to zero and vice versa.	
00 02 <sub>hex</sub> 00 31 <sub>hex</sub>	Bass Loudspeaker Channel Bass Headphone Channel	BASS_MAIN BASS_AUX
	bit[15:8] extended range 7F <sub>hex</sub> +20 dB 78 <sub>hex</sub> +18 dB 70 <sub>hex</sub> +16 dB 68 <sub>hex</sub> +14 dB	
	normal range 60 <sub>hex</sub> +12 dB 58 <sub>hex</sub> +11 dB 	
	08 <sub>hex</sub> +1 dB 00 <sub>hex</sub> 0 dB F8 <sub>hex</sub> -1 dB	
	 A8 <sub>hex</sub> -11 dB A0 <sub>hex</sub> -12 dB	
	Higher resolution is possible: an LSB step in the normal range results in a gain step of about 1/8 dB, in the extended range about 1/4 dB.	
	With positive bass settings, internal clipping may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set bass to a value that, in conjunction with volume, would result in an overall positive gain.	

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function	Name
00 03 <sub>hex</sub> 00 32 <sub>hex</sub>	Treble Loudspeaker Channel Treble Headphone Channel	TREB_MAIN TREB_AUX
	bit[15:8] 78 <sub>hex</sub> +15 dB 70 <sub>hex</sub> +14 dB	
	08 <sub>hex</sub> +1 dB 00 <sub>hex</sub> 0 dB F8 <sub>hex</sub> -1 dB	
	A8 <sub>hex</sub> -11 dB A0 <sub>hex</sub> -12 dB	
	Higher resolution is possible: an LSB step results in a gain step of about 1/8 dB.	
	With positive treble settings, internal clipping may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set treble to a value that, in conjunction with volume, would result in an overall positive gain.	
00 21 <sub>hex</sub> 00 22 <sub>hex</sub> 00 23 <sub>hex</sub> 00 24 <sub>hex</sub> 00 25 <sub>hex</sub>	Equalizer Loudspeaker Channel Band 1 (below 120 Hz) Equalizer Loudspeaker Channel Band 2 (center: 500 Hz) Equalizer Loudspeaker Channel Band 3 (center: 1.5 kHz) Equalizer Loudspeaker Channel Band 4 (center: 5 kHz) Equalizer Loudspeaker Channel Band 5 (above: 10 kHz)	EQUAL_BAND1 EQUAL_BAND2 EQUAL_BAND3 EQUAL_BAND4 EQUAL_BAND5
	bit[15:8] 60 <sub>hex</sub> +12 dB 58 <sub>hex</sub> +11 dB	
	08 <sub>hex</sub> +1 dB 00 <sub>hex</sub> 0 dB F8 <sub>hex</sub> -1 dB	
	 A8 <sub>hex</sub> -11 dB A0 <sub>hex</sub> -12 dB	
	Higher resolution is possible: an LSB step results in a gain step of about 1/8 dB.	
	With positive equalizer settings, internal clipping may occur even with overall volume less than 0 dB. This will lead to a clipped output signal. Therefore, it is not recommended to set equalizer bands to a value that, in conjunction with volume, would result in an overall positive gain.	

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function	ı	Name	
00 04 <sub>hex</sub> 00 33 <sub>hex</sub>		Loudness Loudspeaker Channel Loudness Headphone Channel		
	bit[15:8]	bit[15:8] Loudness Gain 44 <sub>hex</sub> +17 dB 40 <sub>hex</sub> +16 dB		
		04 <sub>hex</sub> +1 dB 03 <sub>hex</sub> +0.75 dB 02 <sub>hex</sub> +0.5 dB 01 <sub>hex</sub> +0.25 dB 00 <sub>hex</sub> 0 dB		
	bit[7:0]	Loudness Mode 00 <sub>hex</sub> normal (constant volume at 1 kHz) 04 <sub>hex</sub> Super Bass (constant volume at 2 kHz)		
		esolution of Loudness Gain is possible: An LSB step results in a gain pout 1/4 dB.		
	Loudness ing the a has to be duces ga with volur			
	Super Ba	er frequency for bass amplification can be set to two different values. In ass mode, the corner frequency is shifted up. The point of constant vol- nifted from 1 kHz to 2 kHz.		

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function	Name			
00 05 <sub>hex</sub>	Spatial E	SPAT_MAIN			
	bit[15:8]	Effect Stre 7F <sub>hex</sub> 3F <sub>hex</sub>	ength Enlargement 100% Enlargement 50%		
		01 <sub>hex</sub> 00 <sub>hex</sub> FF <sub>hex</sub>	Enlargement 1.5% Effect off reduction 1.5%		
		C0 <sub>hex</sub> 80 <sub>hex</sub>	reduction 50% reduction 100%		
	bit[7:4]	Spatial Efformation  Ohex  2hex	Sect Mode Stereo Basewidth Enlargement (SBE) and Pseudo Stereo Effect (PSE). (Mode A) Stereo Basewidth Enlargement (SBE) only. (Mode B)		
	bit[3:0]		ect High-Pass Gain max. high-pass gain 2/3 high-pass gain 1/3 high-pass gain min. high-pass gain automatic		
	There are				
	In mode A (low byte = 00 <sub>hex</sub> ), the spatial effect depends on the source mode. If the incoming signal is mono, Pseudo Stereo Effect is active; for stereo signals, Pseudo Stereo Effect and Stereo Basewidth Enlargement is effective. The strength of the effect is controllable by the upper byte. A negative value reduces the stereo image. A strong spatial effect is recommended for small TV sets where loudspeaker spacing is rather close. For large screen TV sets, a more moderate spatial effect is recommended.				
	In mode B, only Stereo Basewidth Enlargement is effective. For mono input signals, the Pseudo Stereo Effect has to be switched on.				
	It is work response, value of 0 function for only signal quency re optimal hi				

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

	Register Address	Function			Name				
	SUBWOOF	FER OUTPUT CHANNEL							
1	00 2C <sub>hex</sub>	Subwoofer	SUBW_LEVEL						
		bit[15:8] 0	C <sub>hex</sub>	+12 dB					
		0	00 <sub>hex</sub>	+1 dB 0 dB (default) –1 dB					
		E	III CX	–29 dB –30 dB					
		8	30 <sub>hex</sub>	Mute					
		bit[7:0] 0	00 <sub>hex</sub>	must be zero					
		If MDB is ad							
	00 2D <sub>hex</sub>	Subwoofer	SUBW_FREQ						
		bit[15:8] 5		corner frequency in 10 Hz steps (range: 50400 Hz)					
		If MDB is act Frequency (MDB_LP res 1.5×MDB_LP							
		Subwoofer	SUBW_HP						
		0	)1 <sub>hex</sub>	loudspeaker channel unfiltered a complementary high-pass is processed in the loud- speaker output channel  MDB added onto main channel					
	MDB CON			med added onto main channel					
ľ	00 68 <sub>hex</sub>	TROL REGISTERS  MDB Effect Strength  MDB_STR							
	oo oo <sub>hex</sub>	bit[15:8] 0	00 <sub>hex</sub>	MDB OFF (default) maximum MDB	WIDD_STR				
		bit[7:0] 0	00 <sub>hex</sub>	must be zero					
		The MDB eff	oth can be adjusted in 1dB steps. A value of 44 <sub>hex</sub> will yield .						
	00 69 <sub>hex</sub>	MDB Ampli	MDB_LIM						
			00 <sub>hex</sub> FF <sub>hex</sub>	0 dBFS (default limitation) -1 dBFS					
		 E	 E0 <sub>hex</sub>	-32 dBFS					
		bit[7:0] 0	00 <sub>hex</sub>	must be zero					
		of the MDB	relative to automatica	imit defines the maximum allowed amplitude at the output of 0 dbFS. If the amplitude exceeds MDB_LIM, the gain of ally reduced. Note that the Volume Clipping Mode must be page 30).					

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function			Name	
00 6A <sub>hex</sub>	MDB Harr	nonic Cor	ntent	MDB_HMC	
	bit[15:8]	00 <sub>hex</sub> 64 <sub>hex</sub> 7F <sub>hex</sub>	no harmonics are added (default) 50% fundamentals + 50% harmonics 100% harmonics		
	bit[7:0]	00 <sub>hex</sub>	must be zero		
	MDB creates harmonics of the frequencies below the MDB highpass frequency (MDB_HP). The variable MDB_HMC describes the ratio of the harmonics towards the original signal.				
00 6B <sub>hex</sub>	MDB Low	MDB_LP			
	bit[15:8]	5 6	50 Hz 60 Hz		
		30	300 Hz		
	bit[7:0]	00 <sub>hex</sub>	must be zero		
	ner freque	ncy of the	orner frequency (range 50300 Hz) defines the upper cor- MDB bandpass filter. Recommended values are the same bass corner frequency (MDB_HP).		
00 6C <sub>hex</sub>	MDB High	n Pass Coi	ner Frequency	MDB_HP	
	bit[15:8]	2 3	20 Hz 30 Hz		
		30	300 Hz		
	bit[7:0]	00 <sub>hex</sub>	must be zero		
	MDB band low freque ommended	dpass filter	corner frequency defines the lower corner frequency of the . The highpass filter avoids loading the loudspeakers with onents that are below the speakers' cut off frequency. Recor subwoofer systems are around 5 (=50 Hz), for regular TV D Hz).		

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function			Name					
SCART O	SCART OUTPUT CHANNEL								
00 07 <sub>hex</sub> 00 40 <sub>hex</sub>			tput Channel tput Channel	VOL_SCART1 VOL_SCART2					
	bit[15:8]	7F <sub>hex</sub> 7E <sub>hex</sub> 74 <sub>hex</sub> 73 <sub>hex</sub> 72 <sub>hex</sub> 02 <sub>hex</sub> 01 <sub>hex</sub>	+11 dB						
	bit[7:5]	higher reso 0 1	olution volume table +0 dB +0.125 dB increase in addition to the volume table						
	bit[4:0]	7 01 <sub>hex</sub>	+0.875 dB increase in addition to the volume table this must be 01 <sub>hex</sub>						

Table 3–11: Write Registers on I<sup>2</sup>C Subaddress 12<sub>hex</sub>, continued

Register Address	Function			Name
SCART SV	WITCHES A	ND DIGITA	L I/O PINS	
00 13 <sub>hex</sub>	ACB Reg	jister		ACB_REG
	Defines t	the level of	the digital output pins and the position of the SCART	
	bit[15]	0/1	low/high of digital output pin D_CTR_I/O_1 (MODUS[3]=0)	
	bit[14]	0/1	low/high of digital output pin D_CTR_I/O_0 (MODUS[3]=0)	
	bit[13:5]	xxxx00xx0 xxxx01xx0 xxxx10xx0	SP Input Select SCART1 to DSP input (RESET position) MONO to DSP input (Sound A Mono must be selected in the channel matrix mode for the corresponding output channels) SCART2 to DSP input SCART3 to DSP input SCART4 to DSP input mute DSP input	
	bit[13:5]	xx00xxx0x xx01xxx0x xx10xxx0x xx11xxx0x xx00xxx1x xx01xxx1x xx10xxx1x	Output Select  SCART3 input to SCART1 output (RESET position)  SCART2 input to SCART1 output  MONO input to SCART1 output  SCART1 DA to SCART1 output  SCART2 DA to SCART1 output  SCART1 input to SCART1 output  SCART1 input to SCART1 output  SCART4 input to SCART1 output  mute SCART1 output	
	bit[13:5]			
	on the co	ontrol bus to	becomes active at the time of the first write transmission the audio processing part. By writing to the ACB register can be redefined.	
BEEPER				
00 14 <sub>hex</sub>	Beeper V	olume and	Frequency	BEEPER
	bit[15:8]	Beeper Vo 00 <sub>hex</sub> 7F <sub>hex</sub>	lume off maximum volume	
	bit[7:0]	Beeper Fre 01 <sub>hex</sub> 40 <sub>hex</sub> FF <sub>hex</sub>	equency 16 Hz (lowest) 1 kHz 4 kHz	

# 3.3.2.7. Read Registers on I<sup>2</sup>C Subaddress 13<sub>hex</sub>

**Table 3–12:** Read Registers on I<sup>2</sup>C Subaddress 13<sub>hex</sub>

Register Address	Function	Name
QUASI-PE	AK DETECTOR READOUT	
00 19 <sub>hex</sub> 00 1A <sub>hex</sub>	Quasi-Peak Detector Readout Left Quasi-Peak Detector Readout Right	QPEAK_L QPEAK_R
	bit[15:0] 0 <sub>hex</sub> 7FFF <sub>hex</sub> values are 16 bit two's complement (only po	ositive)
MSP 34x0	G VERSION READOUT Registers	
00 1E <sub>hex</sub>	MSP Hardware Version Code	MSP_HARD
	bit[15:8] 02 <sub>hex</sub> MSP 34x0G - <u>B</u> 8	
	A change in the hardware version code defines hardware optimizati may have influence on the chip's behavior. The readout of this register tical to the hardware version code in the chip's imprint.	
	MSP Major Revision Code	MSP_REVISION
	bit[7:0] 07 <sub>hex</sub> MSP 34x0 <u>G</u> - B8	_
	The major revision code of the MSP 34x0G is 7.	
00 1F <sub>hex</sub>	MSP Product Code	MSP_PRODUCT
	bit[15:8] 00 <sub>hex</sub> MSP 34 <u>00</u> G - B8 0A <sub>hex</sub> MSP 34 <u>10</u> G - B8 14 <sub>hex</sub> MSP 34 <u>20</u> G - B8 28 <sub>hex</sub> MSP 34 <u>40</u> G - B8 32 <sub>hex</sub> MSP 34 <u>50</u> G - B8 3C <sub>hex</sub> MSP 34 <u>60</u> G - B8	
	By means of the MSP-Product Code, the control processor is able to which TV sound standards have to be considered.	o decide
	MSP ROM Version Code	MSP_ROM
	bit[7:0] 45 <sub>hex</sub> MSP 34x0G - B <u>5</u> 46 <sub>hex</sub> MSP 34x0G - B <u>6</u> 48 <sub>hex</sub> MSP 34x0G - B <u>8</u>	
	A change in the ROM version code defines internal software optim that may have influence on the chip's behavior, e.g. new features m been included. While a software change is intended to create no com problems, customers that want to use the new functions can iden MSP 34x0G versions according to this number.	nay have patibility
	To avoid compatibility problems with MSP 3410B and MSP 34x0D, an $40_{\rm hex}$ is added to the ROM version code of the chip's imprint.	offset of

#### 3.4. Programming Tips

This section describes the preferred method for initializing the MSP 34x0G. The initialization is grouped into four sections:

- SCART Signal Path (analog signal path)
- Demodulator
- SCART and I<sup>2</sup>S Inputs
- Output Channels

See Fig. 2-1 on page 8 for a complete signal flow.

### **SCART Signal Path**

- Select analog input for the SCART baseband processing (SCART DSP Input Select) by means of the ACB register.
- Select the source for each analog SCART output (SCART Output Select) by means of the ACB register

#### Demodulator

For a complete setup of the TV sound processing from analog IF input to the source selection, the following steps must be performed:

- Set MODUS register to the preferred mode and Sound IF input.
- 2. Choose preferred prescale (FM and NICAM) values.
- 3. Write STANDARD SELECT register.
- If Automatic Sound Select is not active: Choose FM matrix repeatedly according to the sound mode indicated in the STATUS register.

# SCART and I<sup>2</sup>S Inputs

- 1. Select preferred prescale for SCART.
- 2. Select preferred prescale for I<sup>2</sup>S inputs (set to 0 dB after RESET).

### **Output Channels**

- Select the source channel and matrix for each output channel.
- 2. Set audio baseband processing.
- 3. Select volume for each output channel.

#### 3.5. Examples of Minimum Initialization Codes

Initialization of the MSP 34x0G according to these listings reproduces sound of the selected standard on the loudspeaker output. All numbers are hexadecimal. The examples have the following structure:

- 1. Perform an I<sup>2</sup>C controlled reset of the IC.
- Write MODUS register (with Automatic Sound Select).
- Set Source Selection for loudspeaker channel (with matrix set to STEREO).
- 4. Set Prescale (FM and/or NICAM and dummy FM matrix).
- 5. Write STANDARD SELECT register.
- 6. Set Volume loudspeaker channel to 0 dB.

### 3.5.1. B/G-FM (A2 or NICAM)

```
<80 00 80 00>  // Softreset
<80 00 00 00>  // MODUS-Register: Automatic = on
<80 10 00 30 20 03>  // MODUS-Register: Automatic = on
<80 12 00 08 03 20>  // Source Sel. = (St or A) & Ch. Matr. = St
<80 12 00 0E 24 03>  // FM/AM-Prescale = 24<sub>hex</sub>, FM-Matrix = MONO/SOUNDA
| <80 12 00 10 5A 00>  // NICAM-Prescale = 5A<sub>hex</sub>
<80 10 00 20 00 03>  // Standard Select: A2 B/G or NICAM B/G
or
<80 10 00 20 00 08>
<80 12 00 00 73 00>  // Loudspeaker Volume 0 dB
```

#### 3.5.2. BTSC-Stereo

```
<80 00 80 00> // Softreset
<80 00 00 00>
<80 10 00 30 20 03> // MODUS-Register: Automatic = on
<80 12 00 08 03 20> // Source Sel. = (St or A) & Ch. Matr. = St
<80 12 00 0E 24 03> // FM/AM-Prescale = 24<sub>hex</sub>, FM-Matrix = Sound A Mono
<80 10 00 20 00 20> // Standard Select: BTSC-STEREO
<80 12 00 00 73 00> // Loudspeaker Volume 0 dB
```

# 3.5.3. BTSC-SAP with SAP at Loudspeaker Channel

#### 3.5.4. FM-Stereo Radio

```
<80 00 80 00> // Softreset
<80 00 00 00>
<80 10 00 30 20 03> // MODUS-Register: Automatic = on
<80 12 00 08 03 20> // Source Sel. = (St or A) & Ch. Matr. = St
<80 12 00 0E 24 03> // FM/AM-Prescale = 24<sub>hex</sub>, FM-Matrix = Sound A Mono
<80 10 00 20 00 40> // Standard Select: FM-STEREO-RADIO
<80 12 00 00 73 00> // Loudspeaker Volume 0 dB
```

#### 3.5.5. Automatic Standard Detection

A detailed software flow diagram is shown in Fig. 3–2 on page 43.

# 3.5.6. Software Flow for Interrupt driven STATUS Check

A detailed software flow diagram is shown in Fig. 3–2 on page 43.

If the D\_CTR\_I/O\_1 pin of the MSP 34x0G is connected to an interrupt input pin of the controller, the following interrupt handler can be applied to be automatically called with each status change of the MSP 34x0G. The interrupt handler may adjust the TV display according to the new status information.

Interrupt Handler:

```
<80 11 02 00 <81 dd dd> // Read STATUS
// adjust TV display with given status information
// Return from Interrupt
```

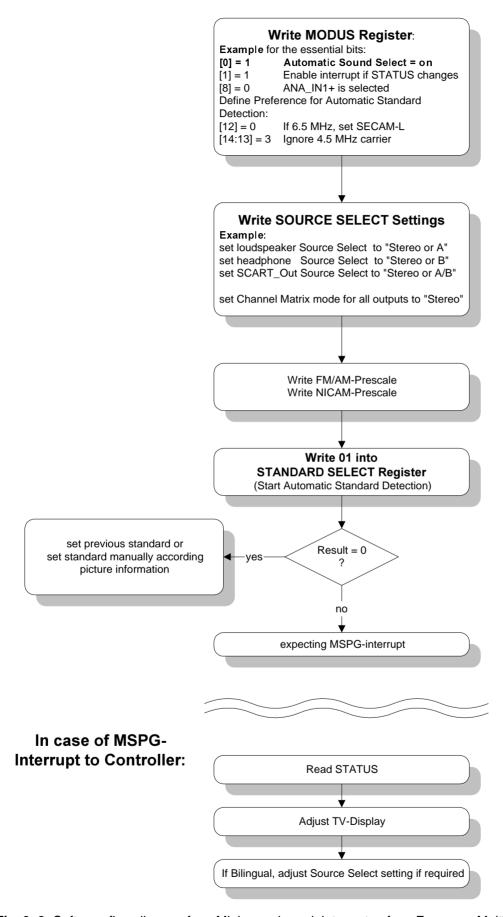


Fig. 3–2: Software flow diagram for a Minimum demodulator setup for a European Multistandard TV set applying the Automatic Sound Select feature

### 4. Specifications

# 4.1. Outline Dimensions

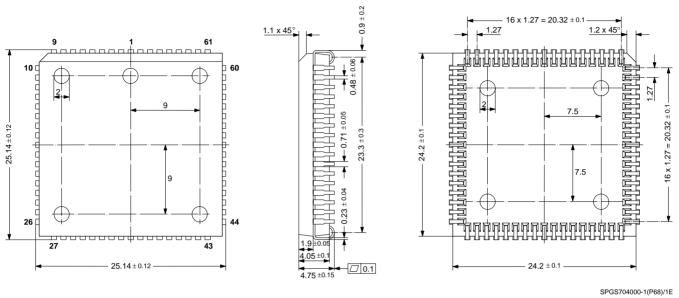


Fig. 4-1: 68-Pin Plastic Leaded Chip Carrier Package (not intended for new designs) (PLCC68)

Weight approximately 4.8 g Dimensions in mm


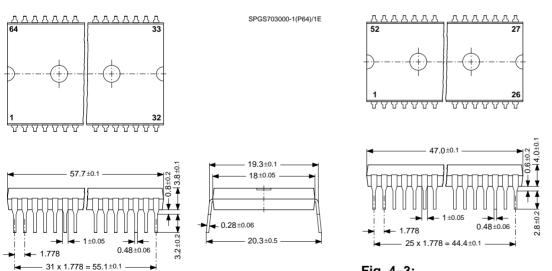


Fig. 4-2: 64-Pin Plastic Shrink Dual-Inline Package (PSDIP64) Weight approximately 9.0 g Dimensions in mm

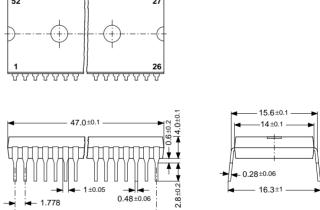

SPGS703000-1(P52)/1E

Fig. 4-3: 52-Pin Plastic Shrink Dual-Inline Package (PSDIP52) Weight approximately 5.5 g Dimensions in mm

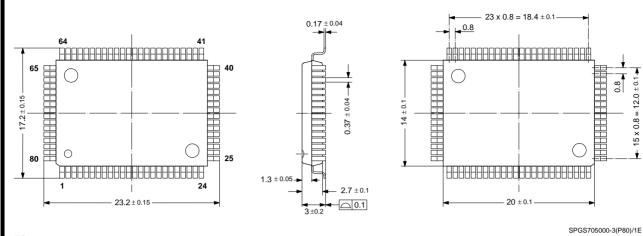


Fig. 4–4: 80-Pin Plastic Quad Flat Pack (PQFP80) Weight approximately 1.61 g Dimensions in mm

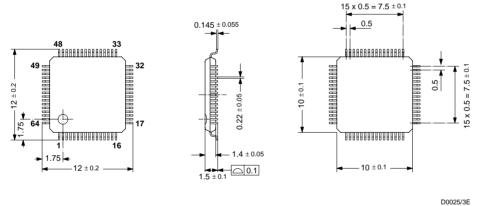


Fig. 4–5: 64-Pin Plastic Low-Profile Quad Flat Pack (PLQFP64) Weight approximately 0.35 g Dimensions in mm

# 4.2. Pin Connections and Short Descriptions

NC = not connected; leave vacant LV = if not used, leave vacant

X = obligatory; connect as described in circuit diagram DVSS: if not used, connect to DVSS

AHVSS: connect to AHVSS

		Pin No.			Pin Name	Туре	Connection	Short Description
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin	PLQFP 64-pin			(if not used)	
1	16	14	9	8	ADR_WS	OUT	LV	ADR word strobe
2	_	_	_	_	NC		LV	Not connected
3	15	13	8	7	ADR_DA	OUT	LV	ADR data output
4	14	12	7	6	I2S_DA_IN1	IN	LV	I <sup>2</sup> S1 data input
5	13	11	6	5	I2S_DA_OUT	OUT	LV	I <sup>2</sup> S data output
6	12	10	5	4	I2S_WS	IN/OUT	LV	I <sup>2</sup> S word strobe
7	11	9	4	3	I2S_CL	IN/OUT	LV	I <sup>2</sup> S clock
8	10	8	3	2	I2C_DA	IN/OUT	Х	I <sup>2</sup> C data
9	9	7	2	1	I2C_CL	IN/OUT	Х	I <sup>2</sup> C clock
10	8	_	1	64	NC		LV	Not connected
11	7	6	80	63	STANDBYQ	IN	Х	Stand-by (low-active)
12	6	5	79	62	ADR_SEL	IN	Х	I <sup>2</sup> C Bus address select
13	5	4	78	61	D_CTR_I/O_0	IN/OUT	LV	D_CTR_I/O_0
14	4	3	77	60	D_CTR_I/O_1	IN/OUT	LV	D_CTR_I/O_1
15	3	_	76	59	NC		LV	Not connected
16	2	_	75	58	NC		LV	Not connected
17	-	_	_	_	NC		LV	Not connected
18	1	2	74	57	AUD_CL_OUT	OUT	LV	Audio clock output (18.432 MHz)
19	64	1	73	56	TP		LV	Test pin
20	63	52	72	55	XTAL_OUT	OUT	Х	Crystal oscillator
21	62	51	71	54	XTAL_IN	IN	Х	Crystal oscillator
22	61	50	70	53	TESTEN	IN	Х	Test pin
23	60	49	69	52	ANA_IN2+	IN	AVSS via 56 pF / LV	IF input 2 (can be left vacant, only if IF input 1 is also not in use)
24	59	48	68	51	ANA_IN-	IN	AVSS via 56 pF / LV	IF common (can be left vacant, only if IF input 1 is also not in use)

		Pin No.	•		Pin Name	Туре	Connection	Short Description
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin	PLQFP 64-pin			(if not used)	
25	58	47	67	50	ANA_IN1+	IN	LV	IF input 1
26	57	46	66	49	AVSUP		Х	Analog power supply 5 V
_	_	_	65	_	AVSUP		Х	Analog power supply 5 V
_	_	_	64	_	NC		LV	Not connected
_	_	_	63	_	NC		LV	Not connected
27	56	45	62	48	AVSS		Х	Analog ground
_	_	_	61	_	AVSS		Х	Analog ground
28	55	44	60	47	MONO_IN	IN	LV	Mono input
_	_	_	59	_	NC		LV	Not connected
29	54	43	58	46	VREFTOP		Х	Reference voltage IF A/D converter
30	53	42	57	45	SC1_IN_R	IN	LV	SCART 1 input, right
31	52	41	56	44	SC1_IN_L	IN	LV	SCART 1 input, left
32	51	_	55	43	ASG		AHVSS	Analog Shield Ground
33	50	40	54	42	SC2_IN_R	IN	LV	SCART 2 input, right
34	49	39	53	41	SC2_IN_L	IN	LV	SCART 2 input, left
35	48	_	52	40	ASG		AHVSS	Analog Shield Ground
36	47	38	51	39	SC3_IN_R	IN	LV	SCART 3 input, right
37	46	37	50	38	SC3_IN_L	IN	LV	SCART 3 input, left
38	45	_	49	37	ASG		AHVSS	Analog Shield Ground
39	44	_	48	36	SC4_IN_R	IN	LV	SCART 4 input, right
40	43	_	47	35	SC4_IN_L	IN	LV	SCART 4 input, left
41	_	_	46	_	NC		LV or AHVSS	Not connected
42	42	36	45	34	AGNDC		Х	Analog reference voltage
43	41	35	44	33	AHVSS		Х	Analog ground
_	_	_	43	_	AHVSS		Х	Analog ground
_	_	_	42	_	NC		LV	Not connected
_	_	_	41	_	NC		LV	Not connected
44	40	34	40	32	CAPL_M		Х	Volume capacitor MAIN
45	39	33	39	31	AHVSUP		Х	Analog power supply 8 V
46	38	32	38	30	CAPL_A		Х	Volume capacitor AUX
47	37	31	37	29	SC1_OUT_L	OUT	LV	SCART output 1, left

	Pin No.			Pin Name	Туре	Connection	Short Description	
PLCC 68-pin	PSDIP 64-pin	PSDIP 52-pin	PQFP 80-pin	PLQFP 64-pin			(if not used)	
48	36	30	36	28	SC1_OUT_R	OUT	LV	SCART output 1, right
49	35	29	35	27	VREF1		Х	Reference ground 1
50	34	28	34	26	SC2_OUT_L	OUT	LV	SCART output 2, left
51	33	27	33	25	SC2_OUT_R	OUT	LV	SCART output 2, right
52	_	_	32	_	NC		LV	Not connected
53	32	_	31	24	NC		LV	Not connected
54	31	26	30	23	DACM_SUB	OUT	LV	Subwoofer output
55	30	_	29	22	NC		LV	Not connected
56	29	25	28	21	DACM_L	OUT	LV	Loudspeaker out, left
57	28	24	27	20	DACM_R	OUT	LV	Loudspeaker out, right
58	27	23	26	19	VREF2		Х	Reference ground 2
59	26	22	25	18	DACA_L	OUT	LV	Headphone out, left
60	25	21	24	17	DACA_R	OUT	LV	Headphone out, right
_	_	_	23	_	NC		LV	Not connected
_	_	_	22	_	NC		LV	Not connected
61	24	20	21	16	RESETQ	IN	Х	Power-on-reset
62	23	_	20	15	NC		LV	Not connected
63	22	_	19	14	NC		LV	Not connected
64	21	19	18	13	NC		LV	Not connected
65	20	18	17	12	I2S_DA_IN2	IN	LV	I <sup>2</sup> S2-data input
66	19	17	16	11	DVSS		Х	Digital ground
_	_	_	15	_	DVSS		Х	Digital ground
_	_	-	14	-	DVSS		Х	Digital ground
67	18	16	13	10	DVSUP		Х	Digital power supply 5 V
-	_	-	12	_	DVSUP		Х	Digital power supply 5 V
_	_	-	11	-	DVSUP		Х	Digital power supply 5 V
68	17	15	10	9	ADR_CL	OUT	LV	ADR clock

#### 4.3. Pin Descriptions

Pin numbers refer to the PQFP80 package.

Pin 1, **NC** – Pin not connected.

Pin 2,  $I2C\_CL - I^2C$  Clock Input/Output (Fig. 4–18) Via this pin, the  $I^2C$ -bus clock signal has to be supplied. The signal can be pulled down by the MSP in case of wait conditions.

Pin 3,  $I2C_DA - I^2C$  Data Input/Output (Fig. 4–18) Via this pin, the  $I^2C$ -bus data is written to or read from the MSP.

Pin 4,  $I2S\_CL - I^2S$  Clock Input/Output (Fig. 4–19) Clock line for the  $I^2S$  bus. In master mode, this line is driven by the MSP; in slave mode, an external  $I^2S$  clock has to be supplied.

Pin 5, **I2S\_WS** – I<sup>2</sup>S Word Strobe Input/Output (Fig. 4–19)

Word strobe line for the  $I^2S$  bus. In master mode, this line is driven by the MSP; in slave mode, an external  $I^2S$  word strobe has to be supplied.

Pin 6, I2S\_DA\_OUT –  $I^2$ S Data Output (Fig. 4–23) Output of digital serial sound data of the MSP on the  $I^2$ S bus.

Pin 7,  $I2S_DA_IN1 - I^2S$  Data Input 1 (Fig. 4–15) First input of digital serial sound data to the MSP via the  $I^2S$  bus.

Pin 8, **ADR\_DA** – ADR Bus Data Output (Fig. 4–23) Output of digital serial data to the DRP 3510A via the ADR bus.

Pin 9, **ADR\_WS** – ADR Bus Word Strobe Output (Fig. 4–23)

Word strobe output for the ADR bus.

Pin 10, **ADR\_CL** – ADR Bus Clock Output (Fig. 4–23) Clock line for the ADR bus.

Pins 11, 12, 13, **DVSUP\*** – Digital Supply Voltage Power supply for the digital circuitry of the MSP. Must be connected to a +5 V power supply.

Pins 14, 15, 16, **DVSS\*** – Digital Ground Ground connection for the digital circuitry of the MSP.

Pin 17, **I2S\_DA\_IN2** – I<sup>2</sup>S Data Input 2 (Fig. 4–15) Second input of digital serial sound data to the MSP via the I<sup>2</sup>S bus.

Pins 18, 19, 20, NC - Pins not connected.

Pin 21, **RESETQ** – Reset Input (Fig. 4–11) In the steady state, high level is required. A low level resets the MSP 34x0G. Pins 22, 23, NC - Pins not connected.

Pins 24, 25, **DACA\_R/L** – Headphone Outputs (Fig. 4–21)

Output of the headphone signal. A 1-nF capacitor to AHVSS must be connected to these pins. The DC offset on these pins depends on the selected headphone volume.

### Pin 26, VREF2 - Reference Ground 2

Reference analog ground. This pin must be connected separately to ground (AHVSS). VREF2 serves as a clean ground and should be used as the reference for analog connections to the loudspeaker and headphone outputs.

Pins 27, 28, **DACM\_R/L** – Loudspeaker Outputs (Fig. 4–21)

Output of the loudspeaker signal. A 1-nF capacitor to AHVSS must be connected to these pins. The DC offset on these pins depends on the selected loudspeaker volume.

Pin 29, NC - Pin not connected.

Pin 30, **DACM\_SUB** – Subwoofer Output (Fig. 4–21) Output of the subwoofer signal. A 1-nF capacitor to AHVSS must be connected to this pin. Due to the low frequency content of the subwoofer output, the value of the capacitor may be increased for better suppression of high-frequency noise. The DC offset on this pin depends on the selected loudspeaker volume.

Pins 31, 32, NC - Pin not connected.

Pins 33, 34, **SC2\_OUT\_R/L** – SCART2 Outputs (Fig. 4–22)

Output of the SCART2 signal. Connections to these pins must use a 100- $\Omega$  series resistor and are intended to be AC-coupled.

Pin 35, VREF1 - Reference Ground 1

Reference analog ground. This pin must be connected separately to ground (AHVSS). VREF1 serves as a clean ground and should be used as the reference for analog connections to the SCART outputs.

Pins 36, 37, **SC1\_OUT\_R/L** – SCART1 Outputs (Fig. 4–22)

Output of the SCART1 signal. Connections to these pins must use a  $100-\Omega$  series resistor and are intended to be AC-coupled.

Pin 38, **CAPL\_A** – Volume Capacitor Headphone (Fig. 4–24)

A 10- $\mu$ F capacitor to AHVSUP must be connected to this pin. It serves as a smoothing filter for headphone volume changes in order to suppress audible plops. The value of the capacitor can be lowered to 1- $\mu$ F if faster response is required. The area encircled by the trace lines should be minimized; keep traces as short as possible. This input is sensitive for magnetic induction.

Pin 39, AHVSUP\* - Analog Power Supply High Voltage

Power is supplied via this pin for the analog circuitry of the MSP (except IF input). This pin must be connected to the +8 V supply.

Pin 40, **CAPL\_M** – Volume Capacitor Loudspeaker (Fig. 4–24)

À 10- $\mu$ F capacitor to AHVSUP must be connected to this pin. It serves as a smoothing filter for loudspeaker volume changes in order to suppress audible plops. The value of the capacitor can be lowered to 1  $\mu$ F if faster response is required. The area encircled by the trace lines should be minimized; keep traces as short as possible. This input is sensitive for magnetic induction.

Pins 41, 42, NC - Pins not connected.

Pins 43, 44, **AHVSS\*** – Ground for Analog Power Supply High Voltage

Ground connection for the analog circuitry of the MSP (except IF input).

Pin 45, **AGNDC** – Internal Analog Reference Voltage This pin serves as the internal ground connection for the analog circuitry (except IF input). It must be connected to the VREF pins with a 3.3- $\mu$ F and a 100-nF capacitor in parallel. This pins shows a DC level of typically 3.73 V.

Pin 46, NC - Pin not connected.

Pins 47, 48, **SC4\_IN\_L/R** – SCART4 Inputs (Fig. 4–14)

The analog input signal for SCART4 is fed to this pin. Analog input connection must be AC-coupled.

Pin 49, ASG - Analog Shield Ground

Analog ground (AHVSS) should be connected to this pin to reduce cross-coupling between SCART inputs.

Pins 50, 51, **SC3\_IN\_L/R** – SCART3 Inputs (Fig. 4–14)

The analog input signal for SCART3 is fed to this pin. Analog input connection must be AC-coupled.

Pin 52, ASG - Analog Shield Ground

Analog ground (AHVSS) should be connected to this pin to reduce cross-coupling between SCART inputs.

Pins 53, 54, **SC2\_IN\_L/R** – SCART2 Inputs (Fig. 4–14)

The analog input signal for SCART2 is fed to this pin. Analog input connection must be AC-coupled.

Pin 55, ASG - Analog Shield Ground

Analog ground (AHVSS) should be connected to this pin to reduce cross-coupling between SCART inputs.

Pins 56, 57, **SC1\_IN\_L/R** – SCART1 Inputs (Fig. 4–14)

The analog input signal for SCART1 is fed to this pin. Analog input connection must be AC-coupled.

Pin 58, **VREFTOP** – Reference Voltage IF A/D Converter (Fig. 4–16)

Via this pin, the reference voltage for the IF A/D converter is decoupled. It must be connected to AVSS pins with a 10- $\mu$ F and a 100-nF capacitor in parallel. Traces must be kept short.

Pin 59, **NC** – Pin not connected.

Pin 60, MONO\_IN – Mono Input (Fig. 4–14)

The analog mono input signal is fed to this pin. Analog input connection must be AC-coupled.

Pins 61, 62, **AVSS**\* – Ground for Analog Power Supply Voltage

Ground connection for the analog IF input circuitry of the MSP.

Pins 63, 64, NC - Pins not connected.

Pins 65, 66, **AVSUP\*** – Analog Power Supply Voltage Power is supplied via this pin for the analog IF input circuitry of the MSP. This pin must be connected to the +5 V supply.

Pin 67, **ANA IN1**+ – IF Input 1 (Fig. 4–16)

The analog sound IF signal is supplied to this pin. Inputs must be AC-coupled. This pin is designed as symmetrical input: ANA\_IN1+ is internally connected to one input of a symmetrical op amp, ANA\_IN- to the other.

Pin 68, **ANA\_IN**- – IF Common (Fig. 4–16)

This pins serves as a common reference for ANA\_IN1/2+ inputs.

Pin 69, **ANA\_IN2**+ - IF Input 2 (Fig. 4-16)

The analog sound if signal is supplied to this pin. Inputs must be AC-coupled. This pin is designed as symmetrical input: ANA\_IN2+ is internally connected to one input of a symmetrical op amp, ANA\_IN- to the other.

Pin 70, **TESTEN** – Test Enable Pin (Fig. 4–12)

This pin enables factory test modes. For normal operation, it must be connected to ground.

50

Pins 71, 72, **XTAL\_IN, XTAL\_OUT** – Crystal Input and Output Pins (Fig. 4–20)

These pins are connected to an 18.432 MHz crystal oscillator which is digitally tuned by integrated shunt capacitances. An external clock can be fed into XTAL\_IN. The audio clock output signal AUD\_CL\_OUT is derived from the oscillator. External capacitors at each crystal pin to ground (AVSS) are required. It should be verified by layout, that no supply current for the digital circuitry is flowing through the ground connection point.

Pin 73, **TP** – This pin enables factory test modes. For normal operation, it must be left vacant.

Pin 74, **AUD\_CL\_OUT** – Audio Clock Output (Fig. 4–20)

This is the 18.432 MHz main clock output.

Pins 75, 76, NC - Pins not connected.

Pins 77, 78, **D\_CTR\_I/O\_1/0** – Digital Control Input/ Output Pins (Fig. 4–19)

General purpose input/output pins. Pin D\_CTR\_I/O\_1 can be used as an interrupt request pin to the controller.

Pin 79, **ADR\_SEL** – I<sup>2</sup>C Bus Address Select (Fig. 4–17)

By means of this pin, one of three device addresses for the MSP can be selected. The pin can be connected to ground ( $^{12}$ C device addresses  $80/81_{hex}$ ), to +5 V supply ( $84/85_{hex}$ ), or left open ( $88/89_{hex}$ ).

### Pin 80, STANDBYQ - Stand-by

In normal operation, this pin must be high. If the MSP 34x0G is switched off by first pulling STANDBYQ low and then (after >1 $\mu$ s delay) switching off DVSUP and AVSUP, but keeping AHVSUP ('Standby'-mode), the SCART switches maintain their position and function.

### \* Application Note:

All ground pins should be connected to one low-resistive ground plane. All supply pins should be connected separately with short and low-resistive lines to the power supply. Decoupling capacitors from DVSUP to DVSS, AVSUP to AVSS, and AHVSUP to AHVSS are recommended as closely as possible to these pins. Decoupling of DVSUP and DVSS is most important. We recommend using more than one capacitor. By choosing different values, the frequency range of active decoupling can be extended. In our application boards we use: 220 pF, 470 pF, 1.5 nF, and 10  $\mu\text{F}$ . The capacitor with the lowest value should be placed nearest to the DVSUP and DVSS pins.

The ASG pins should be connected as closely as possible to the MSP ground. If they are lead with the SCART-inputs as shielding lines, they should not be connected to ground at the SCART connector.

### 4.4. Pin Configurations

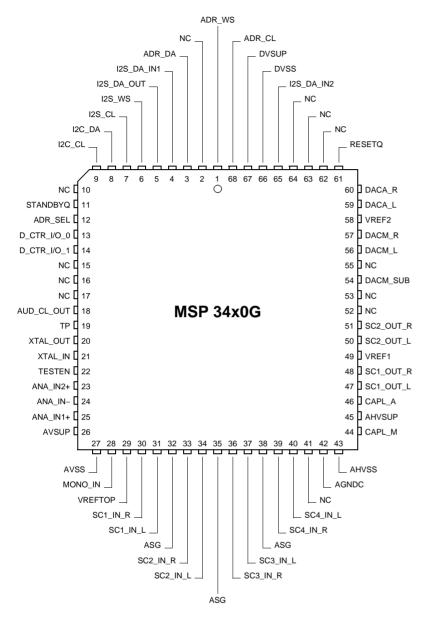


Fig. 4-6: PLCC68 package (not intended for new designs)

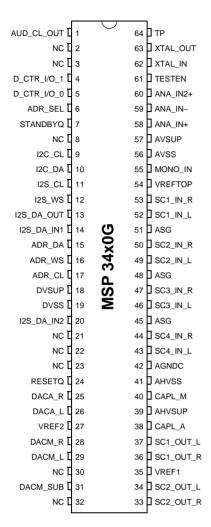


Fig. 4-7: PSDIP64 package

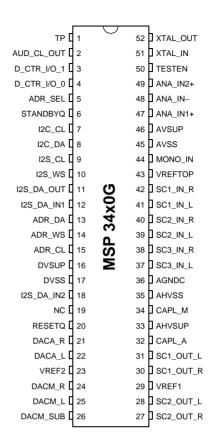


Fig. 4-8: PSDIP52 package

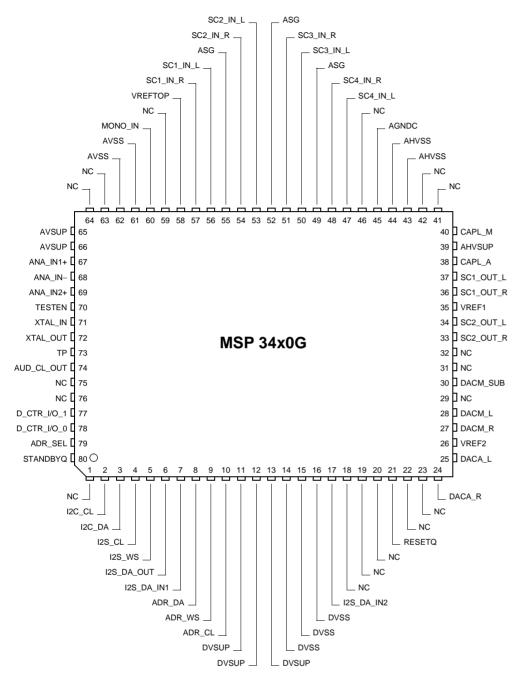


Fig. 4-9: PQFP80 package

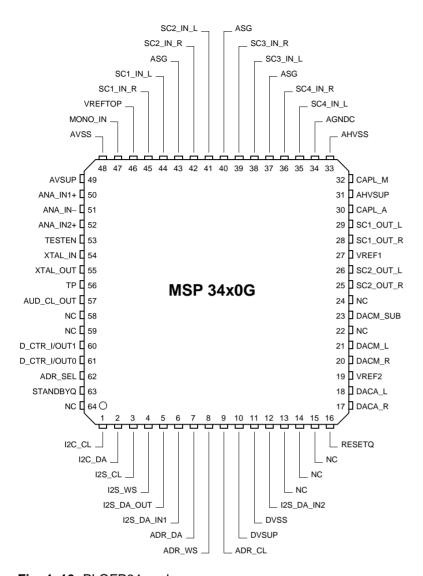


Fig. 4-10: PLQFP64 package

#### 4.5. Pin Circuits

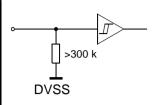


Fig. 4-11: Input Pin: RESETQ

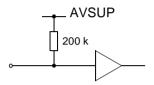


Fig. 4-12: Input Pin TESTEN

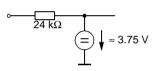


Fig. 4-13: Input Pin: MONO\_IN

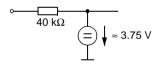


Fig. 4-14: Input Pins: SC4-1\_IN\_L/R



Fig. 4–15: Input Pins: I2S\_DA\_IN1, I2S\_DA\_IN2, STANDBYQ

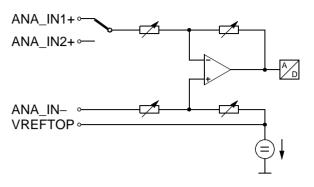


Fig. 4–16: Input Pins: VREFTOP, ANA\_IN1+, ANA\_IN-, ANA\_IN2+

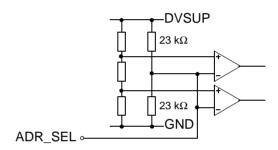


Fig. 4-17: Input Pin: ADR\_SEL

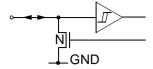


Fig. 4-18: Input/Output Pins: I2C\_CL, I2C\_DA

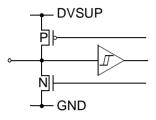


Fig. 4–19: Input/Output Pins: I2S\_CL, I2S\_WS, D\_CTR\_I/O\_1, D\_CTR\_I/O\_0

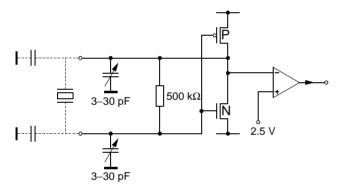


Fig. 4–20: Input/Output Pins: XTAL\_IN, XTAL\_OUT, AUD\_CL\_OUT

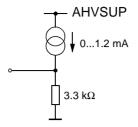


Fig. 4–21: Output Pins: DACA\_R/L, DACM\_R/L, DACM\_SUB

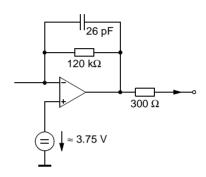


Fig. 4–22: Output Pins: SC\_2\_OUT\_R/L, SC\_1\_OUT\_R/L

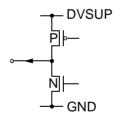


Fig. 4–23: Output Pins: I2S\_DA\_OUT, ADR\_DA, ADR\_WS, ADR\_CL

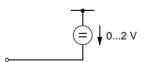


Fig. 4-24: Capacitor Pins: CAPL\_A, CAPL\_M

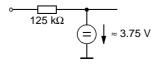


Fig. 4-25: Pin: AGNDC

#### 4.6. Electrical Characteristics

### 4.6.1. Absolute Maximum Ratings

Symbol	Parameter	Pin Name	Min.	Max.	Unit
T <sub>A</sub>	Ambient Operating Temperature	_	0	70	°C
T <sub>S</sub>	Storage Temperature	_	-40	125	°C
V <sub>SUP1</sub>	First Supply Voltage	AHVSUP	-0.3	9.0	V
V <sub>SUP2</sub>	Second Supply Voltage	DVSUP	-0.3	6.0	V
V <sub>SUP3</sub>	Third Supply Voltage	AVSUP	-0.3	6.0	V
dV <sub>SUP23</sub>	Voltage between AVSUP and DVSUP	AVSUP, DVSUP	-0.5	0.5	V
P <sub>TOT</sub>	Power Dissipation PLCC68 PSDIP64 PSDIP52 PQFP80 PLQFP64	AHVSUP, DVSUP, AVSUP		1200 1300 1200 1000 960	mW mW mW mW
V <sub>Idig</sub>	Input Voltage, all Digital Inputs		-0.3	V <sub>SUP2</sub> +0.3	V
I <sub>Idig</sub>	Input Current, all Digital Pins	_	-20	+20	mA <sup>1)</sup>
V <sub>lana</sub>	Input Voltage, all Analog Inputs	SCn_IN_s, <sup>2)</sup> MONO_IN	-0.3	V <sub>SUP1</sub> +0.3	V
I <sub>lana</sub>	Input Current, all Analog Inputs	SCn_IN_s, <sup>2)</sup> MONO_IN	-5	+5	mA <sup>1)</sup>
I <sub>Oana</sub>	Output Current, all SCART Outputs	SCn_OUT_s <sup>2)</sup>	3), 4)	3), 4)	
I <sub>Oana</sub>	Output Current, all Analog Outputs except SCART Outputs	DACp_s <sup>2)</sup>	3)	3)	
I <sub>Cana</sub>	Output Current, other pins connected to capacitors	CAPL_p, <sup>2)</sup> AGNDC	3)	3)	

<sup>1)</sup> positive value means current flowing into the circuit

Stresses beyond those listed in the "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only. Functional operation of the device at these or any other conditions beyond those indicated in the "Recommended Operating Conditions/Characteristics" of this specification is not implied. Exposure to absolute maximum ratings conditions for extended periods may affect device reliability.

<sup>2) &</sup>quot;n" means "1", "2", "3", or "4", "s" means "L" or "R", "p" means "M" or "A"

<sup>3)</sup> The analog outputs are short-circuit proof with respect to First Supply Voltage and ground.

<sup>4)</sup> Total chip power dissipation must not exceed absolute maximum rating.

# 4.6.2. Recommended Operating Conditions (T<sub>A</sub> = 0 to 70 $^{\circ}$ C)

# 4.6.2.1. General Recommended Operating Conditions

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
V <sub>SUP1</sub>	First Supply Voltage (AHVSUP = 8 V)	AHVSUP	7.6	8.0	8.7	٧
	First Supply Voltage (AHVSUP = 5 V)		4.75	5.0	5.25	V
V <sub>SUP2</sub>	Second Supply Voltage	DVSUP	4.75	5.0	5.25	V
V <sub>SUP3</sub>	Third Supply Voltage	AVSUP	4.75	5.0	5.25	V
t <sub>STBYQ1</sub>	STANDBYQ Setup Time before Turn-off of Second Supply Voltage	STANDBYQ, DVSUP	1			μs

# 4.6.2.2. Analog Input and Output Recommendations

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
C <sub>AGNDC</sub>	AGNDC-Filter-Capacitor	AGNDC	-20%	3.3		μF
	Ceramic Capacitor in Parallel		-20%	100		nF
C <sub>inSC</sub>	DC-Decoupling Capacitor in front of SCART Inputs	SCn_IN_s <sup>1)</sup>	-20%	330		nF
V <sub>inSC</sub>	SCART Input Level				2.0	V <sub>RMS</sub>
V <sub>inMONO</sub>	Input Level, Mono Input	MONO_IN			2.0	V <sub>RMS</sub>
R <sub>LSC</sub>	SCART Load Resistance	SCn_OUT_s <sup>1)</sup>	10			kΩ
C <sub>LSC</sub>	SCART Load Capacitance				6.0	nF
C <sub>VMA</sub>	Main/AUX Volume Capacitor	CAPL_p		10		μF
C <sub>FMA</sub>	Main/AUX Filter Capacitor	DACp_s <sup>1)</sup>	-10%	1	+10%	nF
1) "n" means	s "1", "2", "3", or "4", "s" means "L" or "R",	"p" means "M" or "A	"			

# 4.6.2.3. Recommendations for Analog Sound IF Input Signal

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
C <sub>VREFTOP</sub>	VREFTOP-Filter-Capacitor	VREFTOP	-20%	10		μF
	Ceramic Capacitor in Parallel		-20%	100		nF
F <sub>IF_FMTV</sub>	Analog Input Frequency Range for TV Applications	ANA_IN1+, ANA_IN2+,	0		9	MHz
F <sub>IF_FMRADIO</sub>	Analog Input Frequency for FM-Radio Applications	ANA_IN-		10.7		MHz
V <sub>IF_FM</sub>	Analog Input Range FM/NICAM		0.1	0.8	3	V <sub>pp</sub>
V <sub>IF_AM</sub>	Analog Input Range AM/NICAM		0.1	0.45	0.8	V <sub>pp</sub>
R <sub>FMNI</sub>	Ratio: NICAM Carrier/FM Carrier (unmodulated carriers) BG: I:		-20 -23	-7 -10	0 0	dB dB
R <sub>AMNI</sub>	Ratio: NICAM Carrier/AM Carrier (unmodulated carriers)		-25	-11	0	dB
R <sub>FM</sub>	Ratio: FM-Main/FM-Sub Satellite			7		dB
R <sub>FM1/FM2</sub>	Ratio: FM1/FM2 German FM-System			7		dB
R <sub>FC</sub>	Ratio: Main FM Carrier/ Color Carrier		15	_	-	dB
R <sub>FV</sub>	Ratio: Main FM Carrier/ Luma Components		15	_	_	dB
PR <sub>IF</sub>	Passband Ripple		_	_	±2	dB
SUP <sub>HF</sub>	Suppression of Spectrum above 9.0 MHz (not for FM Radio)		15		_	dB
FM <sub>MAX</sub>	Maximum FM-Deviation (approx.) normal mode HDEV2: high deviation mode HDEV3: very high deviation mode				±180 ±360 ±540	kHz kHz kHz

### 4.6.2.4. Crystal Recommendations

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit
General Cry	stal Recommendations					
f <sub>P</sub>	Crystal Parallel Resonance Frequency at 12 pF Load Capacitance			18.432		MHz
R <sub>R</sub>	Crystal Series Resistance			8	25	Ω
C <sub>0</sub>	Crystal Shunt (Parallel) Capacitance			6.2	7.0	pF
C <sub>L</sub>	External Load Capacitance <sup>1)</sup>	XTAL_IN, XTAL_OUT	PSDIP P(L)QF	approx. P approx.		pF pF
Crystal Reco	ommendations for Master-Slave Appl	ications (MSP-clock	must perfor	m synchro	nization to	I <sup>2</sup> S clock)
f <sub>TOL</sub>	Accuracy of Adjustment		-20		+20	ppm
D <sub>TEM</sub>	Frequency Variation versus Temperature		-20		+20	ppm
C <sub>1</sub>	Motional (Dynamic) Capacitance		19	24		fF
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)	AUD_CL_OUT	18.431		18.433	MHz
Crystal Reco	ommendations for FM / NICAM Applic	cations (No MSP-cloc	k synchron	ization to I <sup>2</sup>	S clock po	ssible)
$f_{TOL}$	Accuracy of Adjustment		-30		+30	ppm
$D_TEM$	Frequency Variation versus Temperature		-30		+30	ppm
C <sub>1</sub>	Motional (Dynamic) Capacitance		15			fF
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)	AUD_CL_OUT	18.4305		18.4335	MHz
Crystal Reco	ommendations for all analog FM/AM A	pplications (No MSP	-clock sync	hronization	to I <sup>2</sup> S cloc	k possible)
f <sub>TOL</sub>	Accuracy of Adjustment		-100		+100	ppm
$D_TEM$	Frequency Variation versus Temperature		-50		+50	ppm
f <sub>CL</sub>	Required Open Loop Clock Frequency (T <sub>amb</sub> = 25 °C)	AUD_CL_OUT	18.429		18.435	MHz
Amplitude R	ecommendation for Operation with E	xternal Clock Input	t (C <sub>load</sub> aft	er reset ty	/p. 22 pF)	
V <sub>XCA</sub>	External Clock Amplitude	XTAL_IN	0.7			V <sub>pp</sub>

<sup>1)</sup> External capacitors at each crystal pin to ground are required. They are necessary to tune the open-loop frequency of the internal PLL and to stabilize the frequency in closed-loop operation. Due to different layouts, the accurate capacitor value should be determined with the customer PCB. The suggested values (1.5...3.3 pF) are figures based on experience and should serve as "start value".

To adjust the capacitor value, reset the MSP. After the reset, no I<sup>2</sup>C telegrams should be transmitted. Measure the frequency at AUD\_CL\_OUT-pin. Change the capacitor value until the free running frequency matches 18.432 MHz as closely as possible. The higher the capacity, the lower the resulting clock frequency.

**Note:** To minimize adjustment tolerances for all MSP-generations, it is strongly recommended to use the so-called MSP-XTAL-REF ICs (available in all packages) for the capacitor adjustment.

# 4.6.3. Characteristics

at  $T_A$  = 0 to 70 °C,  $f_{CLOCK}$  = 18.432 MHz,  $V_{SUP1}$  = 7.6 to 8.7 V,  $V_{SUP2}$  = 4.75 to 5.25 V for min./max. values at  $T_A$  = 60 °C,  $f_{CLOCK}$  = 18.432 MHz,  $V_{SUP1}$  = 8 V,  $V_{SUP2}$  = 5 V for typical values,  $T_J$  = Junction Temperature MAIN (M) = Loudspeaker Channel, AUX (A) = Headphone Channel

#### 4.6.3.1. General Characteristics


Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Supply							
I <sub>SUP1A</sub>	First Supply Current (active) (AHVSUP = 8 V)	AHVSUP		17 11	25 16	mA mA	Vol. Main and Aux = 0 dB Vol. Main and Aux = -30dB
	First Supply Current (active) (AHVSUP = 5 V)			11 8	17 11	mA mA	Vol. Main and Aux = 0 dB Vol. Main and Aux = -30 dB
I <sub>SUP2A</sub>	Second Supply Current (active)	DVSUP		55	70	mA	
I <sub>SUP3A</sub>	Third Supply Current (active)	AVSUP		30	38	mA	
I <sub>SUP1S</sub>	First Supply Current (AHVSUP = 8 V)	AHVSUP		5.6	7.7	mA	STANDBYQ = low
	First Supply Current (AHVSUP = 5 V)			3.7	5.1	mA	
Clock							
f <sub>CLOCK</sub>	Clock Input Frequency	XTAL_IN		18.432		MHz	
D <sub>CLOCK</sub>	Clock High to Low Ratio		45		55	%	
t <sub>JITTER</sub>	Clock Jitter (Verification not provided in Production Test)				50	ps	
V <sub>xtalDC</sub>	DC-Voltage Oscillator			2.5		V	
t <sub>Startup</sub>	Oscillator Startup Time at VDD Slew-rate of 1 V/1 μs	XTAL_IN, XTAL_OUT		0.4	2	ms	
V <sub>ACLKAC</sub>	Audio Clock Output AC Voltage	AUD_CL_OUT	1.2	1.8		V <sub>pp</sub>	load = 40 pF
V <sub>ACLKDC</sub>	Audio Clock Output DC Voltage		0.4		0.6	V <sub>SUP3</sub>	I <sub>max</sub> = 0.2 mA
r <sub>outHF_ACL</sub>	HF Output Resistance			140		Ω	

# 4.6.3.2. Digital Inputs, Digital Outputs

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions				
Digital Input	Digital Input Levels										
V <sub>DIGIL</sub>	Digital Input Low Voltage	STANDBYQ D_CTR_I/O_0/1			0.2	V <sub>SUP2</sub>					
V <sub>DIGIH</sub>	Digital Input High Voltage	- D_CTK_I/O_0/1	0.5			V <sub>SUP2</sub>					
Z <sub>DIGI</sub>	Input Impedance				5	pF					
I <sub>DLEAK</sub>	Digital Input Leakage Current		-1		1	μΑ	0 V < U <sub>INPUT</sub> < DVSUP D_CTR_I/O_0/1: tri-state				
V <sub>DIGIL</sub>	Digital Input Low Voltage	ADR_SEL			0.2	V <sub>SUP2</sub>					
V <sub>DIGIH</sub>	Digital Input High Voltage		0.8			V <sub>SUP2</sub>					
I <sub>ADRSEL</sub>	Input Current Address Select Pin		-500	-220		μΑ	U <sub>ADR_SEL</sub> = DVSS				
				220	500	μΑ	U <sub>ADR_SEL</sub> = DVSUP				
Digital Outpu	ıt Levels										
V <sub>DCTROL</sub>	Digital Output Low Voltage	D_CTR_I/O_0			0.4	V	IDDCTR = 1 mA				
V <sub>DCTROH</sub>	Digital Output High Voltage	- D_CTR_I/O_1	V <sub>SUP2</sub> -0.3			V	IDDCTR = -1 mA				

### 4.6.3.3. Reset Input and Power-Up

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
RESETQ Inpu	it Levels						
$V_{RHL}$	Reset High-Low Transition Voltage	RESETQ	0.3		0.4	V <sub>SUP2</sub>	
$V_{RLH}$	Reset Low-High Transition Voltage		0.45		0.55	V <sub>SUP2</sub>	
Z <sub>RES</sub>	Input Capacitance				5	pF	
I <sub>RES</sub>	Input High Current				20	μΑ	U <sub>RESETQ</sub> = DVSUP

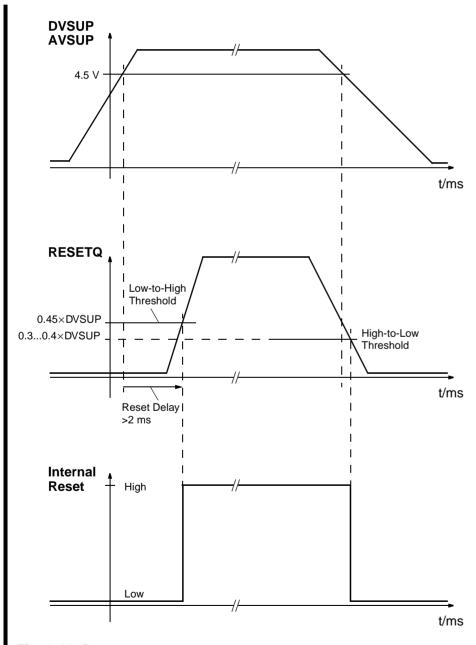

**Note:** The reset should not reach high level before the oscillator has started. This requires a reset delay of >2 ms

0.45 x DVSUP means 2.25 Volt with DVSUP = 5.0 V

Fig. 4-26: Power-up sequence

Micronas Micronas

# 4.6.3.4. I<sup>2</sup>C-Bus Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
V <sub>I2CIL</sub>	I <sup>2</sup> C-Bus Input Low Voltage	I2C_CL,			0.3	V <sub>SUP2</sub>	
V <sub>I2CIH</sub>	I <sup>2</sup> C-Bus Input High Voltage	I2C_DA	0.6			V <sub>SUP2</sub>	
t <sub>I2C1</sub>	I <sup>2</sup> C Start Condition Setup Time		120			ns	
t <sub>I2C2</sub>	I <sup>2</sup> C Stop Condition Setup Time		120			ns	
t <sub>I2C5</sub>	I <sup>2</sup> C-Data Setup Time before Rising Edge of Clock		55			ns	
t <sub>I2C6</sub>	I <sup>2</sup> C-Data Hold Time after Falling Edge of Clock		55			ns	
t <sub>I2C3</sub>	I <sup>2</sup> C-Clock Low Pulse Time	I2C_CL	500			ns	
t <sub>I2C4</sub>	I <sup>2</sup> C-Clock High Pulse Time		500			ns	
f <sub>I2C</sub>	I <sup>2</sup> C-BUS Frequency				1.0	MHz	
V <sub>I2COL</sub>	I <sup>2</sup> C-Data Output Low Voltage	I2C_CL, I2C_DA			0.4	V	I <sub>I2COL</sub> = 3 mA
I <sub>I2COH</sub>	I <sup>2</sup> C-Data Output High Leakage Current	- 12C_DA			1.0	μА	V <sub>I2COH</sub> = 5 V
t <sub>I2COL1</sub>	I <sup>2</sup> C-Data Output Hold Time after Falling Edge of Clock		15			ns	
t <sub>I2COL2</sub>	I <sup>2</sup> C-Data Output Setup Time before Rising Edge of Clock		100			ns	f <sub>I2C</sub> = 1 MHz


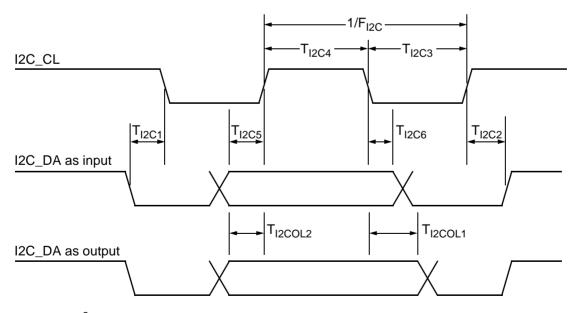


Fig. 4–27: I<sup>2</sup>C bus timing diagram

# 4.6.3.5. I<sup>2</sup>S-Bus Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
V <sub>I2SIL</sub>	Input Low Voltage	I2S_DA_IN1/2 I2S_CL			0.2	V <sub>SUP2</sub>	
V <sub>I2SIH</sub>	Input High Voltage	12S_WS	0.5			V <sub>SUP2</sub>	
Z <sub>I2SI</sub>	Input Impedance				5	pF	
I <sub>LEAKI2S</sub>	Input Leakage Current		-1		1	μΑ	0 V < U <sub>INPUT</sub> < DVSUP
V <sub>I2SOL</sub>	I <sup>2</sup> S Output Low Voltage	12S_CL 12S_WS			0.4	V	I <sub>I2SOL</sub> = 1 mA
V <sub>I2SOH</sub>	I <sup>2</sup> S Output High Voltage	I2S_DA_OUT	V <sub>SUP2</sub> - 0.3			V	I <sub>12SOH</sub> = -1 mA
f <sub>I2SOWS</sub>	I <sup>2</sup> S-Word Strobe Output Frequency	I2S_WS		32.0		kHz	
f <sub>I2SOCL</sub>	I <sup>2</sup> S-Clock Output Frequency	I2S_CL		1.024 2.048		MHz MHz	I2S_CONFIG[0] = 0 I2S_CONFIG[0] = 1
R <sub>I2S10/I2S20</sub>	I <sup>2</sup> S-Clock Output High/Low-Ratio		0.9	1.0	1.1		
t <sub>s_l2S</sub>	I <sup>2</sup> S Input Setup Time before Rising Edge of Clock	I2S_CL I2S_DA_IN1/2	12			ns	for details see Fig. 4–28 "I2S bus timing diagram"
t <sub>h_I2S</sub>	I <sup>2</sup> S Input Hold Time after Rising Edge of Clock		40			ns	
t <sub>d_I2S</sub>	I <sup>2</sup> S Output Delay Time after Falling Edge of Clock	I2S_CL I2S_WS I2S_DA_OUT			28	ns	C <sub>L</sub> = 30 pF
f <sub>I2SWS</sub>	I <sup>2</sup> S-Word Strobe Input Frequency	I2S_WS		32.0		kHz	
f <sub>I2SCL</sub>	I <sup>2</sup> S-Clock Input Frequency	I2S_CL		1.024		MHz	
R <sub>I2SCL</sub>	I <sup>2</sup> S-Clock Input High/Low Ratio		0.9		1.1		

Micronas Micronas

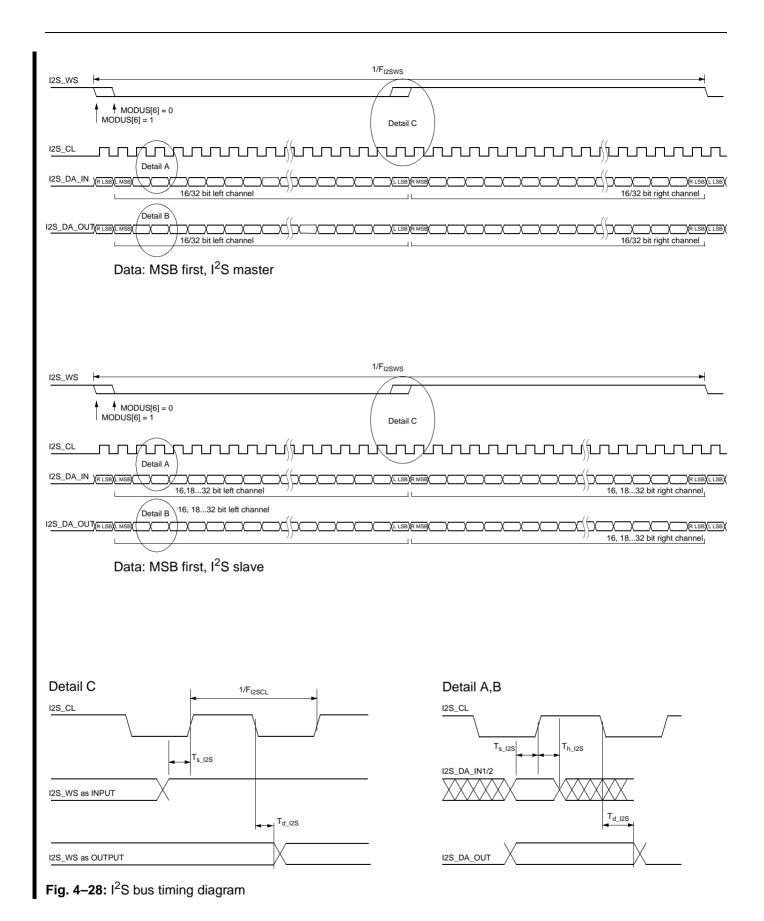

# 4.6.3.6. Analog Baseband Inputs and Outputs, AGNDC

eter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
C Open Circuit Voltage JP =8 V)	AGNDC		3.77		V	R <sub>load</sub> ≥10 MΩ
C Open Circuit Voltage JP = 5 V)			2.51		V	
C Output Resistance JP = 8 V)		70	125	180	kΩ	3 V ≤ V <sub>AGNDC</sub> ≤ 4 V
C Output Resistance JP = 5 V)		47	83	120	kΩ	
ice						
Input Resistance = 0 to 70 °C	SCn_IN_s <sup>1)</sup>	25	40	58	kΩ	$f_{signal} = 1 \text{ kHz}, I = 0.05 \text{ mA}$
Input Resistance = 0 to 70 °C	MONO_IN	15	24	35	kΩ	$f_{signal} = 1 \text{ kHz}, I = 0.1 \text{ mA}$
al-Converter						
Input Clipping Level for to-Digitalsion JP = 8 V)	SCn_IN_s, <sup>1)</sup> MONO_IN	2.00		2.25	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz
Input Clipping Level for to-Digital-sion JP = 5 V)		1.13		1.51	V <sub>RMS</sub>	
					•	
Output Resistance	SCn_OUT_s <sup>1)</sup>	200 200	330	460 500	$\Omega$	$f_{signal} = 1 \text{ kHz}, I = 0.1 \text{ mA}$ $T_{j} = 27 \text{ °C}$ $T_{A} = 0 \text{ to } 70 \text{ °C}$
on of DC-Level at SCART from AGNDC Voltage		-70		+70	mV	
om Analog Input RT Output	SCn_IN_s, <sup>1)</sup> MONO_IN	-1.0		+0.5	dB	f <sub>signal</sub> = 1 kHz
ncy Response from Analog SCART Output	→ SCn_OUT_s <sup>1)</sup>	-0.5		+0.5	dB	with resp. to 1 kHz Bandwidth: 0 to 20000 Hz
Level at SCART Output JP = 8 V)	SCn_OUT_s <sup>1)</sup>	1.8	1.9	2.0	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz Volume 0 dB
Level at SCART Output JP = 5V)		1.17	1.27	1.37	V <sub>RMS</sub>	Full Scale input from I <sup>2</sup> S
_evel JP = _evel	at SCART Output 8 V) at SCART Output 5V)	at SCART Output SCn_OUT_s <sup>1)</sup> at SCART Output 5V)	at SCART Output SCn_OUT_s <sup>1)</sup> 1.8  at SCART Output 1.17	at SCART Output SCn_OUT_s <sup>1)</sup> 1.8 1.9 at SCART Output 5V) 1.17 1.27	at SCART Output SCn_OUT_s <sup>1)</sup> 1.8 1.9 2.0 at SCART Output 5V) 1.17 1.27 1.37	at SCART Output 8 V)  at SCART Output 5V)  1.8 1.9 2.0 V <sub>RMS</sub> 1.17 1.27 1.37 V <sub>RMS</sub>

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions				
Main and AU	Main and AUX Outputs										
R <sub>outMA</sub>	Main/AUX Output Resistance	DACp_s <sup>1)</sup>	2.1 2.1	3.3	4.6 5.0	kΩ kΩ	$ f_{signal} = 1 \text{ kHz, I} = 0.1 \text{ mA} $ $ T_j = 27 \text{ °C} $ $ T_A = 0 \text{ to } 70 \text{ °C} $				
V <sub>outDCMA</sub>	DC-Level at Main/AUX-Output (AHVSUP = 8 V)		1.80	2.04 61	2.28	V mV	Volume 0 dB Volume –30 dB				
	DC-Level at Main/AUX-Output (AHVSUP = 5 V)		1.12	1.36 40	1.60	V mV	Volume 0 dB Volume –30 dB				
V <sub>outMA</sub>	Signal Level at Main/AUX-Output (AHVSUP = 8 V)		1.23	1.37	1.51	V <sub>RMS</sub>	f <sub>signal</sub> = 1 kHz Volume 0 dB Full scale input from I <sup>2</sup> S				
	Signal Level at Main/AUX-Output (AHVSUP = 5 V)		0.76	0.90	1.04	V <sub>RMS</sub>	1 Full Scale Iliput Ifom 1-5				
1) "s" means	"L" or "R"; "p" means "M" or "A"										

# 4.6.3.7. Sound IF Inputs

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
R <sub>IFIN</sub>	Input Impedance	ANA_IN1+, ANA_IN2+, ANA_IN-	1.5 6.8	2 9.1	2.5 11.4	kΩ kΩ	Gain AGC = 20 dB Gain AGC = 3 dB
DC <sub>VREFTOP</sub>	DC Voltage at VREFTOP	VREFTOP	2.45	2.65	2.75	V	
DC <sub>ANA_IN</sub>	DC Voltage on IF Inputs	ANA_IN1+, ANA_IN2+, ANA_IN-	1.3	1.5	1.7	V	
XTALK <sub>IF</sub>	Crosstalk Attenuation	ANA_IN1+,	40			dB	f <sub>signal</sub> = 1 MHz Input Level = -2 dBr
BW <sub>IF</sub>	3 dB Bandwidth	ANA_IN2+, ANA_IN–	10			MHz	iliput Level = -2 dBl
AGC	AGC Step Width			0.85		dB	

# 4.6.3.8. Power Supply Rejection

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions				
PSRR: Reje	PSRR: Rejection of Noise on AHVSUP at 1 kHz										
PSRR	AGNDC	AGNDC		80		dB					
	From Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>		70		dB					
	From Analog Input to SCART Output	MONO_IN, SCn_IN_s <sup>1)</sup> SCn_OUT_s <sup>1)</sup>		70		dB					
	From I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>		60		dB					
	From I <sup>2</sup> S Input to MAIN or AUX Output	DACp_s <sup>1)</sup>		80		dB					
1) "n" mean	Output										

# 4.6.3.9. Analog Performance

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Specification	ons for AHVSUP = 8 V		•		•		
SNR	Signal-to-Noise Ratio						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>	85	88		dB	Input Level = -20 dB with resp. to V <sub>AICL</sub> , f <sub>Sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	MONO_IN, SCn_IN_s <sup>1</sup> ) → SCn_OUT_s <sup>1)</sup>	93	96		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>	85	88		dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main/AUX-Output for Analog Volume at 0 dB for Analog Volume at –30 dB	DACp_s <sup>1)</sup>	85 78	88 83		dB dB	Input Level = -20 dB, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
THD	Total Harmonic Distortion						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>		0.01	0.03	%	Input Level = $-3$ dBr with resp. to $V_{AICL}$ , $f_{sig} = 1$ kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	MONO_IN, SCn_IN_s → SCn_OUT_s <sup>1)</sup>		0.01	0.03	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>		0.01	0.03	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main or AUX Output	DACp_s <sup>1)</sup>		0.01	0.03	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
Specification	ons for AHVSUP = 5 V						
SNR	Signal-to-Noise Ratio						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1</sup> )	82	85		dB	Input Level = -20 dB with resp. to V <sub>AICL</sub> , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	MONO_IN, SCn_IN_s <sup>1</sup> ) → SCn_OUT_s <sup>1</sup> )	90	93		dB	Input Level = $-20$ dB, $f_{sig} = 1$ kHz, unweighted 20 Hz $20$ kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>	82	85		dB	Input Level = $-20$ dB, $f_{sig} = 1$ kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main/AUX-Output for Analog Volume at 0 dB for Analog Volume at –30 dB	DACp_s <sup>1)</sup>	82 75	85 80		dB dB	Input Level = $-20$ dB, $f_{sig} = 1$ kHz, unweighted 20 Hz16 kHz
THD	Total Harmonic Distortion						
	from Analog Input to I <sup>2</sup> S Output	MONO_IN, SCn_IN_s <sup>1)</sup>		0.03	0.1	%	Input Level = -3 dBr with resp. to V <sub>AICL</sub> , f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz
	from Analog Input to SCART Output	MONO_IN, SCn_IN_s → SCn_OUT_s <sup>1)</sup>			0.1	%	Input Level = $-3$ dBr, $f_{sig} = 1$ kHz, unweighted 20 Hz20 kHz
	from I <sup>2</sup> S Input to SCART Output	SCn_OUT_s <sup>1)</sup>			0.1	%	Input Level = $-3$ dBr, $f_{sig} = 1$ kHz, unweighted 20 Hz16 kHz
	from I <sup>2</sup> S Input to Main or AUX Output	DACp_s <sup>1)</sup>			0.1	%	Input Level = -3 dBr, f <sub>sig</sub> = 1 kHz, unweighted 20 Hz16 kHz

Micronas 71

Symbol	Parameter Pi	n Name	Min.	Тур.	Max.	Unit	Test Conditions
CROSSTAL	K Specifications for AHVSUP = 8 V and 5	ν					
XTALK	Crosstalk Attenuation - PLCC68 - PSDIP64						Input Level = $-3$ dB, $f_{sig}$ = 1 kHz, unused analog inputs connected to ground by Z < 1 k $\Omega$
	between left and right channel within SCART Input/Output pair (L→R, R→L)						unweighted 20 Hz20 kHz
	$SCn_IN \rightarrow SCn_OUT^{1)}$	PLCC68 PSDIP64	80 80			dB dB	
	SC1_IN or SC2_IN $\rightarrow$ I <sup>2</sup> S Output	PLCC68 PSDIP64	80 80			dB dB	
	SC3_IN → I <sup>2</sup> S Output	PLCC68 PSDIP64	80 80			dB dB	
	I <sup>2</sup> S Input → SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	80 80			dB dB	
	between left and right channel within Main or AUX Output pair						unweighted 20 Hz16 kHz
	$I^2S Input \rightarrow DACp^{1)}$	PLCC68 PSDIP64	80 75			dB dB	
	between SCART Input/Output pairs						(unweighted 20 Hz20 kHz
	D = disturbing program O = observed program						same signal source on left and right disturbing chan-
	D: MONO/SCn_IN $\rightarrow$ SCn_OUT O: MONO/SCn_IN $\rightarrow$ SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 100			dB dB	nel, effect on each observed output channel
	D: MONO/SCn_IN $\rightarrow$ SCn_OUT or unset O: MONO/SCn_IN $\rightarrow$ I <sup>2</sup> S Output	el. PLCC68 PSDIP64	100 95			dB dB	
	D: MONO/SCn_IN $\rightarrow$ SCn_OUT O: I <sup>2</sup> S Input $\rightarrow$ SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 100			dB dB	
	D: MONO/SCn_IN $\rightarrow$ unselected O: I <sup>2</sup> S Input $\rightarrow$ SC1_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 100			dB dB	
	Crosstalk between Main and AUX Outpu	ıt pairs					(unweighted 20 Hz16 kHz)
	$I^2S$ Input $\rightarrow$ DACp <sup>1)</sup>	PLCC68 PSDIP64	95 90			dB dB	same signal source on left and right disturbing chan- nel, effect on each observed output channel
XTALK	Crosstalk from Main or AUX Output to S and vice versa	CART Output					(unweighted 20 Hz20 kHz) same signal source on left
	D = disturbing program O = observed program						and right disturbing chan- nel, effect on each observed output channel
	D: MONO/SCn_IN/DSP $\rightarrow$ SCn_OUT O: I <sup>2</sup> S Input $\rightarrow$ DACp <sup>1)</sup>	PLCC68 PSDIP64	85 80			dB dB	SCART output load resistance 10 kΩ
	D: MONO/SCn_IN/DSP $\rightarrow$ SCn_OUT O: $I^2S$ Input $\rightarrow$ DACp <sup>1)</sup>	PLCC68 PSDIP64	90 85			dB dB	SCART output load resistance 30 $k\Omega$
	D: $I^2S$ Input $\rightarrow$ DACp O: MONO/SCn_IN $\rightarrow$ SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 95			dB dB	
	D: $I^2S$ Input $\rightarrow$ DACM O: $I^2S$ Input $\rightarrow$ SCn_OUT <sup>1)</sup>	PLCC68 PSDIP64	100 95			dB dB	
1) "n" means	s "1", "2", "3", or "4"; "s" means "L" or "R"	; "p" means "l	M" or "A"				

## 4.6.3.10. Sound Standard Dependent Characteristics

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
NICAM Chara	acteristics (MSP Standard Code = 8)						•
dV <sub>NICAMOUT</sub>	Tolerance of Output Voltage of NICAM Baseband Signal	DACp_s SCn_OUT_s <sup>1</sup>	-1.5		+1.5	dB	2.12 kHz, Modulator input level = 0 dBref
S/N <sub>NICAM</sub>	S/N of NICAM Baseband Signal		72			dB	NICAM: -6 dB, 1 kHz, RMS unweighted 0 to 15 kHz, Vol = 9 dB NIC_Presc = 7F <sub>hex</sub> Output level 1 V <sub>RMS</sub> at DACp_s
THD <sub>NICAM</sub>	Total Harmonic Distortion + Noise of NICAM Baseband Signal				0.1	%	2.12 kHz, Modulator input level = 0 dBref
BER <sub>NICAM</sub>	NICAM: Bit Error Rate				1	10 <sup>-7</sup>	FM+NICAM, norm conditions
fR <sub>NICAM</sub>	NICAM Frequency Response , 2015000 Hz		-1.0		+1.0	dB	Modulator input level = -12 dB dBref; RMS
XTALK <sub>NICAM</sub>	NICAM Crosstalk Attenuation (Dual)		80			dB	
SEP <sub>NICAM</sub>	NICAM Channel Separation (Stereo)		80			dB	
FM Character	ristics (MSP Standard Code = 3)						
dV <sub>FMOUT</sub>	Tolerance of Output Voltage of FM Demodulated Signal	DACp_s, SCn_OUT_s <sup>1</sup>	-1.5		+1.5	dB	1 FM-carrier, 50 μs, 1 kHz, 40 kHz deviation; RMS
S/N <sub>FM</sub>	S/N of FM Demodulated Signal		73			dB	1 FM-carrier 5.5 MHz, 50 μs,
THD <sub>FM</sub>	Total Harmonic Distortion + Noise of FM Demodulated Signal				0.1	%	1 kHz, 40 kHz deviation; RMS, unweighted 0 to 15 kHz (for S/N); full input range, FM-Pres- cale = 46 <sub>hex</sub> , Vol = 0 dB → Output Level 1 V <sub>RMS</sub> at DACp_s
fR <sub>FM</sub>	FM Frequency Responses, 2015000 Hz		-1.0		+1.0	dB	1 FM-carrier 5.5 MHz, 50 μs, Modulator input level = –14.6 dBref; RMS
XTALK <sub>FM</sub>	FM Crosstalk Attenuation (Dual)		80			dB	2 FM-carriers 5.5/5.74 MHz, 50 μs, 1 kHz, 40 kHz devia- tion; Bandpass 1 kHz
SEP <sub>FM</sub>	FM Channel Separation (Stereo)		50			dB	2 FM-carriers 5.5/5.74 MHz, 50 μs, 1 kHz, 40 kHz devia- tion; RMS
AM Characte	ristics (MSP Standard Code = 9)						
S/N <sub>AM(1)</sub>	S/N of AM Demodulated Signal measurement condition: RMS/Flat	DACp_s, SCn_OUT_s <sup>1</sup>	55			dB	SIF level: 0.1–0.8 V <sub>pp</sub> AM-carrier 54% at 6.5 MHz
S/N <sub>AM(2)</sub>	S/N of AM Demodulated Signal measurement condition: QP/CCIR		45			dB	Vol = 0 dB, FM/AM prescaler set for output = 0.5 V <sub>RMS</sub> at Loudspeaker out;
THD <sub>AM</sub>	Total Harmonic Distortion + Noise of AM Demodulated Signal				0.6	%	Standard Code = 09 <sub>hex</sub> no video/chroma components
fR <sub>AM</sub>	AM Frequency Response		-2.5		+1.0	dB	

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
BTSC Charac	cteristics (MSP Standard Code = 20 <sub>l</sub>	<sub>hex</sub> , 21 <sub>hex</sub> )					
S/N <sub>BTSC</sub>	S/N of BTSC Stereo Signal S/N of BTSC-SAP Signal	DACp_s, SCn_OUT_s <sup>1)</sup>	68 57			dB dB	1 kHz L or R or SAP, 100% modulation, 75 µs deempha- sis, RMS unweighted 0 to 15 kHz
THD <sub>BTSC</sub>	THD+N of BTSC Stereo Signal THD+N of BTSC SAP Signal				0.1 0.5	% %	1 kHz L or R or SAP, 100% 75 µs EIM <sup>2)</sup> , DBX NR or MNR, RMS unweighted 0 to 15 kHz
fR <sub>DBX</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz Frequency Response of BTSC-		-1.0 -1.0		1.0	dB dB	L or R or SAP, 1%66% EIM <sup>2)</sup> , DBX NR
	SAP, 50 Hz9 kHz		-1.0		1.0	uБ	
fR <sub>MNR</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-2.0		2.0	dB	L or R 5%66% EIM <sup>2)</sup> , MNR
	Frequency Response of BTSC- SAP, 50 Hz9 kHz		-2.0		2.0	dB	SAP, white noise, 10% Modulation, MNR
XTALK <sub>BTSC</sub>	$\begin{array}{c} Stereo \to SAP \\ SAP \to Stereo \end{array}$		76 80			dB dB	1 kHz L or R or SAP, 100% modulation, 75 μs deempha- sis, Bandpass 1 kHz
SEP <sub>DBX</sub>	Stereo Separation DBX NR 50 Hz10 kHz 50 Hz12 kHz		35 30			dB dB	L or R 1%66% EIM <sup>2)</sup> , DBX NR
SEP <sub>MNR</sub>	Stereo Separation MNR		30			dB	L = 300 Hz, R = 3.1 kHz 14% Modulation, MNR
FM <sub>pil</sub>	Pilot deviation threshold	ANA_IN1+, ANA_IN2+	3.2 1.2		3.5 1.5	kHz kHz	4.5 MHz carrier modulated with $f_h$ = 15.734 kHz SIF level = 100 mV <sub>pp</sub> indication: STATUS Bit[6]
f <sub>Pilot</sub>	Pilot Frequency Range		15.563		15.843	kHz	standard BTSC stereo signal, sound carrier only

<sup>1) &</sup>quot;n" means "1" or "2"; "s" means "L" or "R"; "p" means "M" or "A"
2) EIM refers to 75-μs Equivalent Input Modulation. It is defined as the audio-signal level which results in a stated percentage modulation, when the DBX encoding process is replaced by a 75-μs preemphasis network.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
BTSC Charac	cteristics (MSP Standard Code = 20 <sub>1</sub> um IF input signal level of 70 mVpp	<sub>nex</sub> , 21 <sub>hex</sub> ) (measured withou	t any vide	eo/chroma	a signal c	ompone	nts)
S/N <sub>BTSC</sub>	S/N of BTSC Stereo Signal S/N of BTSC-SAP Signal	DACp_s, SCn_OUT_s <sup>1</sup>	64 55			dB dB	1 kHz L or R or SAP, 100% modulation, 75 µs deempha- sis, RMS unweighted 0 to 15 kHz
THD <sub>BTSC</sub>	THD+N of BTSC Stereo Signal THD+N of BTSC SAP Signal				0.15 0.8	% %	1 kHz L or R or SAP, 100% 75 μs EIM <sup>2)</sup> , DBX NR or MNR, RMS unweighted 0 to 15 kHz
fR <sub>DBX</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-1.0		1.0	dB	L or R or SAP, 1%66% EIM <sup>2)</sup> , DBX NR
	Frequency Response of BTSC- SAP, 50 Hz9 kHz		-1.0		1.0	dB	
fR <sub>MNR</sub>	Frequency Response of BTSC Stereo, 50 Hz12 kHz		-2.0		2.0	dB	L or R 5%66% EIM <sup>2)</sup> , MNR
	Frequency Response of BTSC- SAP, 50 Hz9 kHz		-2.0		2.0	dB	SAP, white noise, 10% Modulation, MNR
XTALK <sub>BTSC</sub>	$\begin{array}{c} Stereo \to SAP \\ SAP \to Stereo \end{array}$		75 75			dB dB	1 kHz L or R or SAP, 100% modulation, 75 μs deempha- sis, Bandpass 1 kHz
SEP <sub>DBX</sub>	Stereo Separation DBX NR 50 Hz10 kHz 50 Hz12 kHz		35 30			dB dB	L or R 1%66% EIM <sup>2)</sup> , DBX NR
SEP <sub>MNR</sub>	Stereo Separation MNR		30			dB	L = 300 Hz, R = 3.1 kHz 14% Modulation, MNR

<sup>1) &</sup>quot;n" means "1" or "2"; "s" means "L" or "R"; "p" means "M" or "A"
2) EIM refers to 75-μs Equivalent Input Modulation. It is defined as the audio-signal level which results in a stated percentage modulation, when the DBX encoding process is replaced by a 75-μs preemphasis network.

Symbol	Parameter	Pin Name	Min.	Тур.	Max.	Unit	Test Conditions
EIA-J Chara	cteristics (MSP Standard Code = 30 <sub>h</sub>	<sub>ex</sub> )					
S/N <sub>EIAJ</sub>	S/N of EIA-J Stereo Signal S/N of EIA-J Sub-Channel	DACp_s, SCn_OUT_s <sup>1)</sup>	60 60			dB dB	1 kHz L or R, 100% modulation, 75 µs deemphasis,
THD <sub>EIAJ</sub>	THD+N of EIA-J Stereo Signal THD+N of EIA-J Sub-Channel				0.2 0.3	% %	RMS unweighted 0 to 15 kHz
fR <sub>EIAJ</sub>	Frequency Response of EIA-J Stereo, 50 Hz12 kHz		-0.5		1.0	dB	100% modulation, 75 μs deemphasis
	Frequency Response of EIA-J Sub-Channel, 50 Hz12 kHz		-1.0		1.0	dB	
XTALK <sub>EIAJ</sub>	$\begin{array}{l} Main \to SUB \\ Sub \to MAIN \end{array}$	-	66 80			dB dB	1 kHz L or R, 100% modulation, 75 μs deemphasis, Bandpass 1 kHz
SEP <sub>EIAJ</sub>	Stereo Separation 50 Hz5 kHz 50 Hz10 kHz		35 28			dB dB	EIA-J Stereo Signal, L or R 100% modulation
FM-Radio CI	naracteristics (MSP Standard Code =	: 40 <sub>hex</sub> )					
S/N <sub>UKW</sub>	S/N of FM-Radio Stereo Signal	DACp_s, SCn_OUT_s <sup>1)</sup>	68			dB	1 kHz L or R, 100% modula- tion, 75 μs deemphasis, RMS
THD <sub>UKW</sub>	THD+N of FM-Radio Stereo Signal	3011_001_3			0.1	%	unweighted 0 to 15 kHz
fR <sub>UKW</sub>	Frequency Response of FM-Radio Stereo 50 Hz15 kHz		-1.0		+0.5	dB	L or R, 1%100% modulation, 75 μs deemphasis
SEP <sub>UKW</sub>	Stereo Separation 50 Hz15 kHz		45			dB	
f <sub>Pilot</sub>	Pilot Frequency Range	ANA_IN1+ ANA_IN2+	18.844		19.125	kHz	standard FM radio stereo signal

PRELIMINARY DATA SHEET MSP 34x0G

## 5. Appendix A: Overview of TV-Sound Standards

### 5.1. NICAM 728

Table 5–1: Summary of NICAM 728 sound modulation parameters

Specification	1	B/G	L		D/K	
Carrier frequency of digital sound	6.552 MHz	5.85 MHz	5.85 MHz		5.85 MHz	
Transmission rate			728 kbit/s			
Type of modulation	Di	fferentially encoded	quadrature ph	ase shift keyin	g (DQPSK)	
Spectrum shaping Roll-off factor	by means of Roll-off filters					
Koll-off factor	1.0	0.4	0.4		0.4	
Carrier frequency of analog sound component	6.0 MHz FM mono	5.5 MHz FM mono	6.5 MHz	AM mono	6.5 MHz FM mono	
analog sound component	FIVI IIIOIIO	FIVI IIIOIIO	terrestrial	cable	FIVI IIIOIIO	
Power ratio between vision carrier and analog sound carrier	10 dB	13 dB	10 dB	16 dB	13 dB	
Power ratio between analog and modulated	10 dB	7 dB	17 dB	11 dB	China/ Hungary	Poland
digital sound carrier					12 dB	7 dB

Table 5–2: Summary of NICAM 728 sound coding characteristics

Characteristics	Values
Audio sampling frequency	32 kHz
Number of channels	2
Initial resolution	14 bit/sample
Companding characteristics	near instantaneous, with compression to 10 bits/sample in 32-samples (1 ms) blocks
Coding for compressed samples	2's complement
Preemphasis	CCITT Recommendation J.17 (6.5 dB attenuation at 800 Hz)
Audio overload level	+12 dBm measured at the unity gain frequency of the preemphasis network (2 kHz)

## 5.2. A2-Systems

Table 5–3: Key parameters for A2 Systems of Standards B/G, D/K, and M

Characteristics	Sc	ound Carrier	FM1	50 μs 75 μs			
TV-Sound Standard	B/G	D/K	М	B/G	D/K	М	
Carrier frequency in MHz	5.5	6.5	4.5	5.7421875	6.7421875	4.724212	
Vision/sound power difference		13 dB		20 dB			
Sound bandwidth			40 Hz to	15 kHz			
Preemphasis	50	μs	75 μs	50	μs	75 μs	
Frequency deviation (nom/max)	±27/±	±27/±50 kHz ±17/±		±27/±50 kHz		±15/±25 kHz	
Transmission Modes							
Mono transmission		mono		mono			
Stereo transmission	(L+	R)/2	(L+R)/2	R		(L-R)/2	
Dual sound transmission		language A		language B			
Identification of Transmission Mode							
Pilot carrier frequency				54.68	75 kHz	55.0699 kHz	
Max. deviation portion					±2.5 kHz		
Type of modulation / modulation depth					AM / 50%		
Modulation frequency				stereo: 11	nmodulated 17.5 Hz 74.1 Hz	149.9 Hz 276.0 Hz	

## 5.3. BTSC-Sound System

Table 5-4: Key parameters for BTSC-Sound Systems

	Aural		втѕо	C-MPX-Compo	onents	
	4.5 MHz	(L+R)	Pilot	(L–R)	SAP	Prof. Ch.
Carrier frequency (f <sub>hNTSC</sub> = 15.734 kHz) (f <sub>hPAL</sub> = 15.625 kHz)	4.5 MHz	Baseband	f <sub>h</sub>	2 f <sub>h</sub>	5 f <sub>h</sub>	6.5 f <sub>h</sub>
Sound bandwidth in kHz		0.05 - 15		0.05 - 15	0.05 - 12	0.05 - 3.4
Preemphasis		75 μs		DBX	DBX	150 μs
Max. deviation to Aural Carrier		25 kHz <sup>1)</sup>	5 kHz	50 kHz <sup>1)</sup>	15 kHz	3 kHz
Max. Freq. Deviation of Subcarrier Modulation Type				AM	10 kHz FM	3 kHz FM
1) Sum does not exceed 50 kHz due to	interleaving effe	ects	•	•	•	•

## 5.4. Japanese FM Stereo System (EIA-J)

Table 5–5: Key parameters for Japanese FM-Stereo Sound System EIA-J

	Aural Carrier	i	EIA-J-MPX-Component	s
	FM	(L+R)	(L-R)	Identification
Carrier frequency (f <sub>h</sub> = 15.734 kHz)	4.5 MHz	Baseband	2 f <sub>h</sub>	3.5 f <sub>h</sub>
Sound bandwidth		0.05 - 15 kHz	0.05 - 15 kHz	_
Preemphasis		75 μs	75 μs	none
Max. deviation portion to Aural Carrier	47 kHz	25 kHz	20 kHz	2 kHz
Max. Freq. Deviation of Subcarrier Modulation Type			10 kHz FM	60% AM
Transmitter-sided delay		20 μs	0 μs	0 μs
Mono transmission		L+R	_	unmodulated
Stereo transmission		L+R	L-R	982.5 Hz
Bilingual transmission		Language A	Language B	922.5 Hz

### 5.5. FM Satellite Sound

Table 5–6: Key parameters for FM Satellite Sound

Carrier Frequency	Maximum FM Deviation	Sound Mode	Bandwidth	Deemphasis
6.5 MHz	85 kHz	Mono	15 kHz	50 μs
7.02/7.20 MHz	50 kHz	Mono/Stereo/Bilingual	15 kHz	adaptive
7.38/7.56 MHz	50 kHz	Mono/Stereo/Bilingual	15 kHz	adaptive
7.74/7.92 MHz	50 kHz	Mono/Stereo/Bilingual	15 kHz	adaptive

### 5.6. FM-Stereo Radio

Table 5–7: Key parameters for FM-Stereo Radio Systems

	10.7 MHz Ba		FM-Radio-MPX-Components				
	Carrier	(L+R)	Pilot	(L–R)	RDS/ARI		
Carrier frequency (f <sub>p</sub> = 19 kHz)	10.7 MHz	Baseband	fp	2 f <sub>p</sub>	3 f <sub>h</sub>		
Sound bandwidth in kHz		0.05 - 15		0.05 - 15			
Preemphasis:  – USA  – Europe		75 μs 50 μs		75 μs 50 μs			
Max. deviation to Aural Carrier	75 kHz (100%)	90%	10%	90%	5%		

#### 6. Appendix B: Manual/Compatibility Mode

To adapt the modes of the STANDARD SELECT register to individual requirements and for reasons of **compatibility to the MSP 34x0D**, the MSP 34x0G offers an Manual/Compatibility Mode, which provides sophisticated programming of the MSP 34x0G.

Using the STANDARD SELECT register generally provides a more economic way to program the MSP 34x0G and will result in optimal behavior. Therefore, it is not recommend to use the Manual/Compatibility mode. In those cases, where the MSP 34x0D is to be substituted by the MSP 34x0G, the tips given in Section 6.10. on page 97 have to be obeyed by the controller software.

#### 6.1. Demodulator Write and Read Registers for Manual/Compatibility Mode

**Table 6–1:** Demodulator Write Registers; Subaddress:  $10_{hex}$ ; these registers are not readable!

Demodulator Write Registers	Address (hex)	MSP- Version	Description	Reset Mode	Page
AUTO_FM/AM	00 21	3410, 3450	MODUS[0]=1 (Automatic Sound Select): Switching Level threshold of Automatic Switching between NICAM and FM/AM in case of bad NICAM reception	00 00	83
			2. MODUS[0]=0 (Manual Mode): Activation and configuration of Automatic Switching between NICAM and FM/AM in case of bad NICAM reception		
A2_Threshold	00 22	all	A2 Stereo Identification Threshold	00 19 <sub>hex</sub>	85
CM_Threshold	00 24	all	Carrier-Mute Threshold	00 2A <sub>hex</sub>	85
AD_CV	00 BB	all	SIF-input selection, configuration of AGC, and Carrier-Mute Function	00 00	86
MODE_REG	00 83	3410, 3450	Controlling of MSP-Demodulator and Interface options. As soon as this register is applied, the MSP 34x0G works in the MSP 34x0D compatibility mode.	00 00	87
			Warning: In this mode, BTSC, EIA-J, and FM-Radio are disabled. Only MSP 34x0D features are available; the use of MODUS and STATUS register is not allowed.		
			The MSP 34x0G is reset to the normal mode by first programming the MODUS register followed by transmitting a valid standard code to the STANDARD SELECTION register.		
FIR1 FIR2	00 01 00 05		FIR1-filter coefficients channel 1 (6 · 8 bit) FIR2-filter coefficients channel 2 (6 · 8 bit), + 3 · 8 bit offset (total 72 bit)	00 00	89
DCO1_LO DCO1_HI	00 93 00 9B		Increment channel 1 Low Part Increment channel 1 High Part	00 00	89
DCO2_LO DCO2_HI	00 A3 00 AB		Increment channel 2 Low Part Increment channel 2 High Part		
PLL_CAPS	00 1F		Not of interest for the customer Switchable PLL capacitors to tune open-loop frequency	00 56	92

Note: All registers except AUTO\_FM/AM, A2\_Threshold, and CM\_Threshold are initialized during STANDARD SELECTION and are automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

**Table 6–2:** Demodulator Read Registers; Subaddress: 11<sub>hex</sub>; these registers are not writable!

Demodulator Read Registers	Address (hex)	MSP- Version	Description	Page
C_AD_BITS	00 23	3410, 3450	NICAM-Sync bit, NICAM-C-Bits, and three LSBs of additional data bits	91
ADD_BITS	00 38	3450	NICAM: bit [10:3] of additional data bits	91
CIB_BITS	00 3E		NICAM: CIB1 and CIB2 control bits	91
ERROR_RATE	00 57		NICAM error rate, updated with 182 ms	92
PLL_CAPS	02 1F		Not for customer use	92
AGC_GAIN	02 1E		Not for customer use	92

### 6.2. DSP Write and Read Registers for Manual/Compatibility Mode

Table 6–3: DSP-Write Registers; Subaddress: 12<sub>hex</sub>, all registers are readable as well

Write Register	Address (hex)	Bits	Operational Modes and Adjustable Range	Reset Mode	Page
Volume SCART1 channel: Ctrl. mode	00 07	[7:0]	[Linear mode / logarithmic mode]	00 <sub>hex</sub>	93
FM Fixed Deemphasis	00 0F	[15:8]	[50 μs, 75 μs, J17, OFF]	50 μs	93
FM Adaptive Deemphasis		[7:0]	[OFF, WP1]	OFF	93
Identification Mode	00 15	[7:0]	[B/G, M]	B/G	94
FM DC Notch	00 17	[7:0]	[ON, OFF]	ON	94
Volume SCART2 channel: Ctrl. mode	00 40	[7:0]	[Linear mode / logarithmic mode]	00 <sub>hex</sub>	93

Table 6-4: DSP Read Registers; Subaddress: 13<sub>hex</sub>, all registers are not writable

Additional Read Registers	Address (hex)	Bits	Output Range		Page
Stereo detection register for A2 Stereo Systems	00 18	[15:8]	[80 <sub>hex</sub> 7F <sub>hex</sub> ]	8 bit two's complement	94
DC level readout FM1/Ch2-L	00 1B	[15:0]	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ]	16 bit two's complement	94
DC level readout FM2/Ch1-R	00 1C	[15:0]	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ]	16 bit two's complement	94

PRELIMINARY DATA SHEET MSP 34x0G

## 6.3. Manual/Compatibility Mode: Description of Demodulator Write Registers

## 6.3.1. Automatic Switching between NICAM and Analog Sound

In case of bad NICAM reception or loss of the NICAM-carrier, the MSP 34x0G offers an Automatic Switching (fall back) to the analog sound (FM/AMmono), without the necessity for the controller of reading and evaluating any parameters. If a proper NICAM signal returns, switching back to this source is performed automatically as well. The feature evaluates the NICAM ERROR\_RATE and switches, if necessary, all output channels which are assigned to the NICAM-source, to the analog source, and vice versa.

An appropriate hysteresis algorithm avoids oscillating effects (see Fig. 6–1). STATUS[9] and C\_AD\_BITS[11] (Address: 0023<sub>hex</sub>) provide information about the actual NICAM-FM/AM-status.

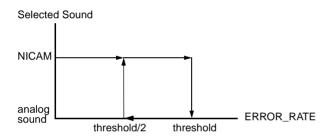


Fig. 6–1: Hysteresis for Automatic Switching

#### 6.3.1.1. Function in Automatic Sound Select Mode

The Automatic Sound Select feature (MODUS[0]=1) includes the procedure mentioned above. By default, the internal ERROR\_RATE threshold is set to 700<sub>dec</sub>; i.e.:

- NICAM → analog Sound if ERROR\_RATE > 700
- analog Sound → NICAM if ERROR\_RATE < 700/2</li>

The ERROR\_RATE value of 700 corresponds to a BER of approximately  $5.46*10^{-3}$  /s.

Individual configuration of the threshold can be done using Table 6–5. However, the internal setting used by the standard selection is recommended.

The optimum NICAM sound can be assigned to the MSP output channels by selecting one of the "Stereo or A/B", "Stereo or A", or "Stereo or B" source channels

#### 6.3.1.2. Function in Manual Mode

If the manual mode (MODUS[0]=0) is required, the activation and configuration of the Automatic Switching feature has to be done as described in Table 6–6. Note that the channel matrix of the corresponding output-channels must be set according to the NICAM-mode and need not to be changed in the FM/AM-fallback case.

#### **Example:**

Required threshold = 500: bits[10:1] = 00 1111 1010

Table 6–5: Coding of Automatic NICAM/Analog Sound Switching;
Automatic Sound Select is on (MODUS[0] = 1)

Mode	Description	AUTO_FM [11:0] Addr. = 00 21 <sub>hex</sub>	ERROR_RATE- Threshold/dec	Source Select: Input at NICAM Path <sup>1)</sup>
1 Default	Automatic Switching with internal threshold	bit[11:0] = 0	700	NICAM or FM/AM, depending on
2	Automatic Switching with external threshold (Customizing of Automatic Sound Select)	bit[11] = 0 bit[10:1] = 251000 = threshold/2 bit[0] = 1	set by customer; recommended range: 502000	ERROR_RATE
3	Forced Analog Mono	bit[11] = 1 bit[10:1] = ignored bit[0] = 1		always FM/AM

The NICAM path may be assigned to "Stereo or A/B", "Stereo or A", or "Stereo or B" source channels (see Table 2–2 on page 11).

Table 6–6: Coding of Automatic NICAM/Analog Sound Switching;
Automatic Sound Select is off (MODUS[0] = 0)

Mode	Description	AUTO_FM [11:0] Addr. = 00 21 <sub>hex</sub>	ERROR_RATE- Threshold/dec	Source Select: Input at NICAM Path
0 reset status	Forced NICAM (Automatic Switching disabled)	bit[11] = 0 bit[10:1] = 0 bit[0] = 0	none	always NICAM; Mute in case of no NICAM available
1	Automatic Switching with internal threshold (Default, if Automatic Sound Select is on)	bit[11] = 0 bit[10:1] = 0 bit[0] = 1	700	NICAM or FM/AM, depending on ERROR_RATE
2	Automatic Switching with external threshold (Customizing of Automatic Sound Select)	bit[11] = 0 bit[10:1] = 251000 = threshold/2 bit[0] = 1	set by customer; recommended range: 502000	
3	Forced Analog Mono (Automatic Switching disabled)	bit[11] = 1 bit[10:1] = 0 bit[0] = 1	none	always FM/AM

#### 6.3.2. A2 Threshold

The threshold between Stereo/Bilingual and Mono Identification for the A2 Standard has been made programmable according to the user's preferences. An internal hysteresis ensures robustness and stability

Table 6–7: Write Register on I<sup>2</sup>C Subaddress 10<sub>hex</sub>: A2 Threshold

Register Address	Function	Name
THRESHOLDS		
00 22 <sub>hex</sub> (write)	A2 THRESHOLD Register	A2_THRESH
	Defines threshold of all A2 and EIA_J standards for Stereo and Bilingual detection	
	bit[15:0] 07F0 <sub>hex</sub> force Mono Identification	
	0190 <sub>hex</sub> default setting after reset	
	00A0 <sub>hex</sub> minimum Threshold for stable detection	
	recommended range : 00A0 <sub>hex</sub> 03C0 <sub>hex</sub>	

#### 6.3.3. Carrier-Mute Threshold

The Carrier-Mute threshold has been made programmable according to the user's preferences. An internal hysteresis ensures stable behavior.

Table 6–8: Write Register on I<sup>2</sup>C Subaddress 10<sub>hex</sub>: Carrier-Mute Threshold

Register Address	Function	Name
THRESHOLDS		
00 24 <sub>hex</sub> (write)	Carrier-Mute THRESHOLD Register  Defines threshold for the carrier mute feature  bit[15:0] 0000 <sub>hex</sub> Carrier-Mute always ON (both channels muted) 002A <sub>hex</sub> default setting after reset 07FF <sub>hex</sub> Carrier-Mute always OFF (both channels forced on)  recommended range: 0014 <sub>hex</sub> 0050 <sub>hex</sub>	CM_THRESH

### 6.3.4. Register AD\_CV

The use of this register is no longer recommended. Use it only in cases where compatibility to the MSP 34x0D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x0G.

Table 6-9: AD\_CV Register; reset status: all bits are "0"

	<b>AD_CV</b> (00 BB <sub>hex</sub> )		Automatic setting by STANDARD SELECT Register	
Bit	Function	Settings	2-8, 0A-60 <sub>hex</sub>	9
[0]	not used	must be set to 0	0	0
[1:6]	Reference level in case of Automatic Gain Control = on (see Table 6–10). Constant gain factor when Automatic Gain Control = off (see Table 6–11).		101000	100011
[7]	Determination of Automatic Gain or Constant Gain	0 = constant gain 1 = automatic gain	1	1
[8]	Selection of Sound IF source (identical to MODUS[8])	0 = ANA_IN1+ 1 = ANA_IN2+	Х	Х
[9]	MSP-Carrier-Mute Feature	0 = off: no mute 1 = on: mute as de- scribed in section 2.2.2.	1	0
[10:15]	not used	must be set to 0	0	0
X : not affe	ected while choosing the TV sound standard by m	eans of the STANDARD SEL	ECT Register	1

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

**Table 6–10:** Reference Values for Active AGC (AD\_CV[7] = 1)

Application	Input Signal Contains	AD_CV [6:1] Ref. Value	AD_CV [6:1] in integer	Range of Input Signal at pin ANA_IN1+ and ANA_IN2+	
Terrestrial TV					
<ul> <li>FM Standards</li> </ul>	1 or 2 FM Carriers	101000	40	0.10 – 3 V <sub>pp</sub> <sup>1)</sup>	
- NICAM/FM	1 FM and 1 NICAM Carrier	101000	40	$0.10 - 3 V_{pp}^{1)}$	
- NICAM/AM	1 AM and 1 NICAM Carrier	100011	35	0.10 – 1.4 V <sub>pp</sub> (recommended: 0.10 – 0.8 V <sub>pp</sub> )	
<ul> <li>NICAM only</li> </ul>	1 NICAM Carrier only	010100	20	0.05 – 1.0 V <sub>pp</sub>	
SAT	1 or more FM Carriers	100011	35	0.10 – 3 V <sub>pp</sub> <sup>1)</sup>	
ADR	FM and ADR carriers	see DRP 3510A data sheet			

 $<sup>^{1)}</sup>$  For signals above 1.4  $V_{pp}$ , the minimum gain of 3 dB is switched, and overflow of the A/D converter may result. Due to the robustness of the internal processing, the IC works up to and even more than 3  $V_{pp}$ , if norm conditions of FM/NICAM or FM1/FM2 ratio are supposed. In this overflow case, a loss of FM-S/N ratio of about 10 dB may appear.

Table 6-11: AD CV parameters for Constant Input Gain (AD CV[7]=0)

Step	AD_CV [6:1] Constant Gain	Gain	Input Level at pin ANA_IN1+ and ANA_IN2+
0	000000	3.00 dB	maximum input level: 3 V <sub>pp</sub> (FM) or 1 V <sub>pp</sub> (NICAM) <sup>1)</sup>
1	000001	3.85 dB	
2	000010	4.70 dB	
3	000011	5.55 dB	
4	000100	6.40 dB	
5 6	000101	7.25 dB	
6	000110	8.10 dB	
7	000111	8.95 dB	
8	001000	9.80 dB	
9	001001	10.65 dB	
10	001010	11.50 dB	
11	001011	12.35 dB	
12	001100	13.20 dB	
13	001101	14.05 dB	
14	001110	14.90 dB	
15	001111	15.75 dB	
16	010000	16.60 dB	
17	010001	17.45 dB	
18	010010	18.30 dB	
19	010011	19.15 dB	
20	010100	20.00 dB	maximum input level: 0.14 V <sub>pp</sub>

For signals above 1.4 V<sub>pp</sub>, the minimum gain of 3 dB is switched and overflow of the A/D converter may result. Due to the robustness of the internal processing, the IC works up to and even more than 3 V<sub>pp</sub>, if norm conditions of FM/NICAM or FM1/FM2 ratio are supposed. In this overflow case, a loss of FM-S/N ratio of about 10 dB may appear.

#### 6.3.5. Register MODE REG

**Note:** The use of this register is no longer recommended. It should be used only in cases where software compatibility to the MSP 34x0D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x0G.

As soon as this register is applied, the MSP 34x0G works in the MSP 34x0D Manual/Compatibility Mode. In this mode, BTSC, EIA-J, and FM-Radio are disabled. Only MSP 34x0D features are available; the use of MODUS and STATUS register is not allowed. The MSP 34x0G is reset to the normal mode by first programming the MODUS register, followed by transmitting a valid standard code to the STANDARD SELECTION register.

The register 'MODE\_REG' contains the control bits determining the operation mode of the MSP 34x0G in the MSP 34x0D Manual/Compatibility Mode; Table 6–12 explains all bit positions.

Table 6-12: Control word 'MODE\_REG'; reset status: all bits are "0"

	MODE_REG 00 83 <sub>hex</sub>					y 「Register
Bit	Function	Comment	Definition	2 - 5	8, A, B	9
[0]	not used		0 : must be used	0	0	0
[1]	DCTR_TRI	Digital control out 0/1 tri-state	0 : active 1 : tri-state	Х	Х	Х
[2]	I <sup>2</sup> S_TRI	I <sup>2</sup> S outputs tri-state (I2S_CL, I2S_WS, I2S_DA_OUT)	0 : active 1 : tri-state	Х	Х	Х
[3]	I <sup>2</sup> S Mode <sup>1)</sup>	Master/Slave mode of the I <sup>2</sup> S bus	0 : Master 1 : Slave	Х	Х	Х
[4]	I <sup>2</sup> S_WS Mode	WS due to the Sony or Philips-Format	0 : Sony 1 : Philips	Х	Х	Х
[5]	Audio_CL_OUT	Switch Audio_Clock_Output to tri-state	0 : on 1 : tri-state	Х	Х	Х
[6]	NICAM <sup>1)</sup>	Mode of MSP-Ch1	0 : FM 1 : Nicam	0	1	1
[7]	not used		0 : must be used	0	0	0
[8]	FM AM	Mode of MSP-Ch2	0 : FM 1 : AM	0	0	1
[9]	HDEV	High Deviation Mode (channel matrix must be sound A)	0 : normal 1 : high deviation mode	0	0	0
[11:10]	not used		0 : must be used	0	0	0
[12]	MSP-Ch1 Gain	see also Table 6–14	0 : Gain = 6 dB 1 : Gain = 0 dB	0	0	0
[13]	FIR1-Filter Coeff. Set	see also Table 6–14	0 : use FIR1 1 : use FIR2	1	0	0
[14]	ADR	Mode of MSP Ch1/ ADR-Interface	0 : normal mode/tri-state 1 : ADR-mode/active	0	0	0
[15]	AM-Gain	Gain for AM Demodulation	0:0 dB (default. of MSPB) 1:12 dB (recommended)	1	1	1
1) NICAN	/I and I <sup>2</sup> S-Master mo	ode are not allowed simultan	eously	X: not at	fected by ARD SELECT	register

Table 6-13: Loading sequence for FIR-coefficients

FIR1	FIR1 00 01 <sub>hex</sub> (MSP-Ch1: NICAM/FM2)						
No.	Symbol Name	Bits	Value				
1	NICAM/FM2_Coeff. (5)	8					
2	NICAM/FM2_Coeff. (4)	8					
3	NICAM/FM2_Coeff. (3)	8	see Table 6–14				
4	NICAM/FM2_Coeff. (2)	8	See Table 6-14				
5	NICAM/FM2_Coeff. (1)	8					
6	NICAM/FM2_Coeff. (0)	8					
FIR2	00 05 <sub>hex</sub> (MSP-Ch2: F	M1/AM)					
No.	Symbol Name	Bits	Value				
1	IMREG1	8	04 <sub>hex</sub>				
2	IMREG1/IMREG2	8	40 <sub>hex</sub>				
3	IMREG2	8	00 <sub>hex</sub>				
4	FM/AM_Coef (5)	8					
5	FM/AM_Coef (4)	8					
6	FM/AM_Coef (3)	8	see Table 6–14				
7	FM/AM_Coef (2)	8	See Table 0-14				
8	FM/AM_Coef (1)	8					
9	FM/AM_Coef (0)	8					

#### 6.3.6. FIR-Parameter, Registers FIR1 and FIR2

**Note:** The use of this register is no longer recommended. It should be used only in cases where software compatibility to the MSP 34x0D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x0G.

Data-shaping and/or FM/AM bandwidth limitation is performed by a pair of linear phase Finite Impulse Response filters (FIR-filter). The filter coefficients are programmable and are either configured automatically by the STANDARD SELECT register or written manually by the control processor via the control bus. Two not necessarily different sets of coefficients are required: one for MSP-Ch1 (NICAM or FM2) and one for MSP-Ch2 (FM1 = FM-mono). In Table 6–14 several coefficient sets are proposed.

To load the FIR-filters, the following data values are to be transferred **8 bits at a time embedded LSB-bound in a 16-bit word**.

The loading sequences must be obeyed. To change a coefficient set, the complete block FIR1 or FIR2 must be transmitted

**Note:** For compatibility with MSP 3410B, IMREG1 and IMREG2 have to be transmitted. The value for IMREG1 and IMREG2 is 004. Due to the partitioning to 8-bit units, the values  $04_{\text{hex}}$ ,  $40_{\text{hex}}$ , and  $00_{\text{hex}}$  arise.

#### 6.3.7. DCO-Registers

**Note:** The use of this register is no longer recommended. It should be used only in cases where software-compatibility to the MSP 34x0D is required. Using the STANDARD SELECTION register together with the MODUS register provides a more economic way to program the MSP 34x0G.

When selecting a TV-sound standard by means of the STANDARD SELECT register, all frequency tuning is performed automatically.

If manual setting of the tuning frequency is required, a set of 24-bit registers determining the mixing frequencies of the quadrature mixers can be written manually into the IC. In Table 6–15, some examples of DCO registers are listed. It is necessary to divide them up into low part and high part. The formula for the calculation of the registers for any chosen IF frequency is as follows:

 $INCR_{dec} = int(f/fs \cdot 2^{24})$ 

with: int = integer function

f = IF frequency in MHz

 $f_S$  = sampling frequency (18.432 MHz)

Conversion of INCR into hex-format and separation of the 12-bit low and high parts lead to the required register values (DCO1\_HI or \_LO for MSP-Ch1, DCO2\_HI or LO for MSP-Ch2).

Table 6-14: 8-bit FIR-coefficients (decimal integer) for MSP 34x0D; reset status: all coefficients are "0"

Terrestria				estrial T	V Stand	andards			FM - Satellite FIR filter corresponds to a band-pass with a band- width of B = 130 to 500 kHz			f <sub>c</sub> frequency		
		, D/K- M-FM		- M-FM	L NICA	 M-AM	B/G-, D/K-, M-Dual FM	130 kHz	180 kHz	200 kHz	280 kHz	380 kHz	500 kHz	Auto- search
Coef(i)	FIR1	FIR2	FIR1	FIR2	FIR1	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2	FIR2
0	-2	3	2	3	-2	-4	3	73	9	3	-8	-1	-1	-1
1	-8	18	4	18	-8	-12	18	53	18	18	-8	-9	-1	-1
2	-10	27	-6	27	-10	-9	27	64	28	27	4	-16	-8	-8
3	10	48	-4	48	10	23	48	119	47	48	36	5	2	2
4	50	66	40	66	50	79	66	101	55	66	78	65	59	59
5	86	72	94	72	86	126	72	127	64	72	107	123	126	126
Mode- REG[12]	(	0	(	)	(	)	0	1	1	1	1	1	1	0
Mode- REG[13]	(	0	(	)	(	)	1	1	1	1	1	1	1	0

ADR coefficients are listed in the DRP data sheet.

Table 6-15: DCO registers for the MSP 34x0G; reset status: DCO\_HI/LO = "0000"

	DCO1_LO 00 93 <sub>hex</sub> , DCO1_HI 00 9B <sub>hex</sub> ; DCO2_LO 00 A3 <sub>hex</sub> , DCO2_HI 00 AB <sub>hex</sub>							
Freq. MHz	DCO_HI/hex	DCO_LO/hex	Freq. MHz	DCO_HI/hex	DCO_LO/hex			
4.5	03E8	000						
5.04 5.5 5.58 5.7421875	0460 04C6 04D8 04FC	0000 038E 0000 00AA	5.76 5.85 5.94	0500 0514 0528	0000 0000 0000			
6.0 6.2 6.5 6.552	0535 0561 05A4 05B0	0555 0C71 071C 0000	6.6 6.65 6.8	05BA 05C5 05E7	0AAA 0C71 01C7			
7.02	0618	0000	7.2	0640	0000			
7.38	0668	0000	7.56	0690	0000			

## 6.4. Manual/Compatibility Mode: Description of Demodulator Read Registers

**Note:** The use of these register is no longer recommended. It should be used only in cases where software compatibility to the MSP 34x0D is required. Using the STANDARD SELECTION register together with the STATUS register provides a more economic way to program the MSP 34x0G and to retrieve information from the IC.

All registers except C\_AD\_BITs are 8 bits wide. They can be read out of the RAM of the MSP 34x0G if the MSP 34x0D Manual/Compatibility Mode is required.

All transmissions take place in 16-bit words. The valid 8-bit data are the 8 LSBs of the received data word.

If the Automatic Sound Select feature is not used, the NICAM or FM-identification parameters must be read and evaluated by the controller in order to enable appropriate switching of the channel select matrix of the baseband processing part. The FM-identification registers are described in section 6.6.1. To handle the NICAM-sound and to observe the NICAM-quality, at least the registers C\_AD\_BITS and ERROR\_RATE must be read and evaluated by the controller. Additional data bits and CIB bits, if supplied by the NICAM transmitter, can be obtained by reading the registers ADD\_BITS and CIB\_BITS.

# 6.4.1. NICAM Mode Control/Additional Data Bits Register

NICAM operation mode control bits and A[2:0] of the additional data bits.

Format:

MSB C_AD_BITS 00 23 <sub>hex</sub>								LSB	
11		7	6	5	4	3	2	1	0
Auto _FM		A[2]	A[1]	A[0]	C4	C3	C2	C1	S

**Important:** "S" = Bit[0] indicates correct NICAM-synchronization (S = 1). If S = 0, the MSP 3410/3450G has not yet synchronized correctly to frame and sequence, or has lost synchronization. The remaining read registers are therefore not valid. The MSP mutes the NICAM output automatically and tries to synchronize again as long as MODE REG[6] is set.

The operation mode is coded by C4-C1 as shown in Table 6–16.

**Table 6–16:** NICAM operation modes as defined by the EBU NICAM 728 specification

C4	СЗ	C2	C1	Operation Mode
0	0	0	0	Stereo sound (NICAMA/B), independent mono sound (FM1)
0	0	0	1	Two independent mono signals (NICAMA, FM1)
0	0	1	0	Three independent mono channels (NICAMA, NICAMB, FM1)
0	0	1	1	Data transmission only; no audio
1	0	0	0	Stereo sound (NICAMA/B), FM1 carries same channel
1	0	0	1	One mono signal (NICAMA). FM1 carries same channel as NICAMA
1	0	1	0	Two independent mono channels (NICAMA, NICAMB). FM1 carries same channel as NICAMA
1	0	1	1	Data transmission only; no audio
Х	1	х	х	Unimplemented sound coding option (not yet defined by EBU NICAM 728 specification)

AUTO\_FM: monitor bit for the AUTO\_FM Status:

0: NICAM source is NICAM

1: NICAM source is FM

**Note:** It is no longer necessary to read out and evaluate the C\_AD\_BITS. All evaluation is performed in the MSP and indicated in the STATUS register.

#### 6.4.2. Additional Data Bits Register

Contains the remaining 8 of the 11 additional data bits. The additional data bits are not yet defined by the NICAM 728 system.

#### Format:

MSB	MSB ADD_BITS 00 38 <sub>hex</sub> LSE							
7	6	5	4	3	2	1	0	
A[10]	A[9]	A[8]	A[7]	A[6]	A[5]	A[4]	A[3]	

#### 6.4.3. CIB Bits Register

CIB bits 1 and 2 (see NICAM 728 specifications).

#### Format:

MSB	MSB CIB_BITS 00 3E <sub>hex</sub> LSE						
7	6	5	4	3	2	1	0
х	х	х	х	х	х	CIB1	CIB2

#### 6.4.4. NICAM Error Rate Register

ERROR_RATE	00 57 <sub>hex</sub>
Error free	0000 <sub>hex</sub>
maximum error rate	07FF <sub>hex</sub>

Average error rate of the NICAM reception in a time interval of 182 ms, which should be close to 0. The initial and maximum value of ERROR\_RATE is 2047. This value is also active if the NICAM bit of MODE\_REG is not set. Since the value is achieved by filtering, a certain transition time (approx. 0.5 sec) is unavoidable. Acceptable audio may have error rates up to a value of 700 int. Individual evaluation of this value by the controller and an appropriate threshold may define the fallback mode from NICAM to FM/AM-Mono in case of poor NICAM reception.

The bit error rate per second (BER) can be calculated by means of the following formula:

BER = ERROR RATE \*  $12.3*10^{-6}$  /s

#### 6.4.5. PLL\_CAPS Readback Register

It is possible to read out the actual setting of the PLL\_CAPS. In standard applications, this register is not of interest for the customer.

PLL_CAPS	02 1F <sub>hex</sub> L
minimum frequency	1111 1111 FF <sub>hex</sub>
nominal frequency	0101 0110 56 <sub>hex</sub> RESET
maximum frequency	0000 0000 00 <sub>hex</sub>
PLL_CAPS	02 1F <sub>hex</sub> H
PLL open	xxxx xxx0
PLL closed	xxxx xxx1

#### 6.4.6. AGC\_GAIN Readback Register

It is possible to read out the actual setting of AGC\_GAIN in Automatic Gain Mode. In standard applications, this register is not of interest for the customer.

AGC_GAIN	02 1E <sub>hex</sub>
max. amplification (20 dB)	0001 0100 14 <sub>hex</sub>
min. amplification (3 dB)	0000 0000 00 <sub>hex</sub>

## 6.4.7. Automatic Search Function for FM-Carrier Detection in Satellite Mode

The AM demodulation ability of the MSP 3410G and MSP 3450G offers the possibility to calculate the "field strength" of the momentarily selected FM carrier, which can be read out by the controller. In SAT receivers, this feature can be used to make automatic FM carrier search possible.

For this, the MSP has to be switched to AM-mode (MODE\_REG[8]), FM-Prescale must be set to 7F<sub>hex</sub> = +127<sub>dec</sub>, and the FM DC notch (see section 6.5.7.) must be switched off. The sound-IF frequency range must now be "scanned" in the MSP-channel 2 by means of the programmable quadrature mixer with an appropriate incremental frequency (i.e. 10 kHz). After each incrementation, a field strength value is available at the quasi-peak detector output (quasi-peak detector source must be set to FM), which must be examined for relative maxima by the controller. This results in either continuing search or switching the MSP back to FM demodulation mode.

During the search process, the FIR2 must be loaded with the coefficient set "AUTOSEARCH", which enables small bandwidth, resulting in appropriate field strength characteristics. The absolute field strength value (can be read out of "quasi-peak detector output FM1") also gives information on whether a main FM carrier or a subcarrier was detected; and as a practical consequence, the FM bandwidth (FIR1/2) and the deemphasis (50  $\mu s$  or adaptive) can be switched accordingly.

Due to the fact that a constant demodulation frequency offset of a few kHz leads to a DC level in the demodulated signal, further fine tuning of the found carrier can be achieved by evaluating the "DC Level Readout FM1". Therefore, the FM DC Notch must be switched on, and the demodulator part must be switched back to FM-demodulation mode.

For a detailed description of the automatic search function, please refer to the corresponding MSP Windows software.

## 6.5. Manual/Compatibility Mode: Description of DSP Write Registers

#### 6.5.1. Additional Channel Matrix Modes

Loudspeaker Matrix	00 08 <sub>hex</sub>	L
Headphone Matrix	00 09 <sub>hex</sub>	L
SCART1 Matrix	00 0A <sub>hex</sub>	L
SCART2 Matrix	00 41 <sub>hex</sub>	L
I <sup>2</sup> S Matrix	00 0B <sub>hex</sub>	L
Quasi-Peak Detector Matrix	00 0C <sub>hex</sub>	L
SUM/DIFF	0100 0000	40 <sub>hex</sub>
AB_XCHANGE	0101 0000	50 <sub>hex</sub>
PHASE_CHANGE_B	0110 0000	60 <sub>hex</sub>
PHASE_CHANGE_A	0111 0000	70 <sub>hex</sub>
A_ONLY	1000 0000	80 <sub>hex</sub>
B_ONLY	1001 0000	90 <sub>hex</sub>

This table shows additional modes for the channel matrix registers.

The sum/difference mode can be used together with the quasi-peak detector to determine the sound material mode. If the difference signal on channel B (right) is near to zero, and the sum signal on channel A (left) is high, the incoming audio signal is mono. If there is a significant level on the difference signal, the incoming audio is stereo.

#### 6.5.2. Volume Modes of SCART1/2 Outputs

Volume Mode SCART1	00 07 <sub>hex</sub>	[3:0]
Volume Mode SCART2	00 40 <sub>hex</sub>	[3:0]
linear	0000 RESET	0 <sub>hex</sub>
logarithmic	0001	1 <sub>hex</sub>

Linear Mode					
Volume SCART1	00 07 <sub>hex</sub>	Н			
Volume SCART2	00 40 <sub>hex</sub>	н			
OFF	0000 0000 RESET	00 <sub>hex</sub>			
0 dB gain (digital full scale (FS) to 2 V <sub>RMS</sub> output)	0100 0000	40 <sub>hex</sub>			
+6 dB gain (–6 dBFS to 2 V <sub>RMS</sub> output)	0111 1111	7F <sub>hex</sub>			

**Note:** SCART Volume linear mode will not be supported in the future (documented for compatibility reasons only).

#### 6.5.3. FM Fixed Deemphasis

FM Deemphasis	00 0F <sub>hex</sub>	Н
50 μs	0000 0000 RESET	00 <sub>hex</sub>
75 μs	0000 0001	01 <sub>hex</sub>
J17	0000 0100	04 <sub>hex</sub>
OFF	0011 1111	3F <sub>hex</sub>

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

### 6.5.4. FM Adaptive Deemphasis

FM Adaptive Deemphasis WP1	00 0F <sub>hex</sub>	L		
OFF	0000 0000 RESET	00 <sub>hex</sub>		
WP1	0011 1111	3F <sub>hex</sub>		

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

#### 6.5.5. NICAM Deemphasis

A J17 Deemphasis is always applied to the NICAM signal. It is not switchable.

#### 6.5.6. Identification Mode for A2 Stereo Systems

Identification Mode	00 15 <sub>hex</sub>	L
Standard B/G (German Stereo)	0000 0000 RESET	00 <sub>hex</sub>
Standard M (Korean Stereo)	0000 0001	01 <sub>hex</sub>
Reset of Ident-Filter	0011 1111	3F <sub>hex</sub>

To shorten the response time of the identification algorithm after a program change between two FM-Stereo capable programs, the reset of the ident-filter can be applied.

#### Sequence:

- 1. Program change
- 2. Reset ident-filter
- 3. Set identification mode back to standard B/G or M
- 4. Wait approx. 500 ms
  - 5. Read stereo detection register

**Note:** This register is initialized during STANDARD SELECTION and is automatically updated when Automatic Sound Select (MODUS[0]=1) is on.

#### 6.5.7. FM DC Notch

The DC compensation filter (FM DC Notch) for FM input can be switched off. This is used to speed up the automatic search function (see Section 6.4.7.). In normal FM-mode, the FM DC Notch should be switched on.

FM DC Notch	00 17 <sub>hex</sub>	L		
ON	0000 0000 Reset	00 <sub>hex</sub>		
OFF	0011 1111	3F <sub>hex</sub>		

## 6.6. Manual/Compatibility Mode: Description of DSP Read Registers

All readable registers are 16-bit wide. Transmissions via I<sup>2</sup>C bus have to take place in 16-bit words. Some of the defined 16-bit words are divided into low and high byte, thus holding two different control entities.

These registers are not writable.

# 6.6.1. Stereo Detection Register for A2 Stereo Systems

Stereo Detection Register	00 18 <sub>hex</sub> H		
Stereo Mode	Reading (two's complement)		
MONO	near zero		
STEREO	positive value (ideal reception: 7F <sub>hex</sub> )		
BILINGUAL	negative value (ideal reception: 80 <sub>hex)</sub>		

**Note:** It is no longer necessary to read out and evaluate the A2 identification level. All evaluation is performed in the MSP and indicated in the STATUS register.

#### 6.6.2. DC Level Register

DC Level Readout FM1 (MSP-Ch2)	00 1B <sub>hex</sub> H+L
DC Level Readout FM2 (MSP-Ch1)	00 1C <sub>hex</sub> H+L
DC Level	[8000 <sub>hex</sub> 7FFF <sub>hex</sub> ] values are 16 bit two's complement

The DC level register measures the DC component of the incoming FM signals (FM1 and FM2). This can be used for seek functions in satellite receivers and for IF FM frequencies fine tuning. A too low demodulation frequency (DCO) results in a positive DC-level and vice versa. For further processing, the DC content of the demodulated FM signals is suppressed. The time constant  $\tau$ , defining the transition time of the DC Level Register, is approximately 28 ms.

#### 6.7. Demodulator Source Channels in Manual Mode

#### 6.7.1. Terrestric Sound Standards

Table 6–17 shows the source channel assignment of the demodulated signals in case of manual mode for all terrestric sound standards. See Table 2–2 for the assignment in the Automatic Sound Select mode. In manual mode for terrestric sound standards, only two demodulator sources are defined.

#### 6.7.2. SAT Sound Standards

Table 6–18 shows the source channel assignment of the demodulated signals for SAT sound standards.

Table 6-17: Manual Sound Select Mode for Terrestric Sound Standards

Source Channel					s of Sound Select Block		
Broadcasted Sound Standard	Standard Sound Mode		FM Matrix	FM/AM (use 0 for channel select)	Stereo or A/B (use 1 for channel select		
B/G-FM	03	MONO	Sound A Mono	Mono	Mono		
D/K-FM M-Korea M-Japan	04, 05 02 30	STEREO	German Stereo Korean Stereo	Stereo	Stereo		
		BILINGUAL, Languages A and B	No Matrix	Left = A Right = B	Left = A Right = B		
B/G-NICAM L-NICAM I-NICAM D/K-NICAM	M 09 or NICAM error rate too high		Sound A Mono <sup>1)</sup>	analog Mono	no sound with AUTO_FM: analog Mono		
D/K-NICAM (with high	0C, 0D	MONO	Sound A Mono <sup>1)</sup>	analog Mono	NICAM Mono		
deviation FM)		STEREO	Sound A Mono <sup>1)</sup>	analog Mono	NICAM Stereo		
		BILINGUAL, Languages A and B	Sound A Mono <sup>1)</sup>	analog Mono	Left = NICAM A Right = NICAM B		
		MONO	Sound A Mono	Mono	Mono		
	20	STEREO	Korean Stereo	Stereo	Stereo		
	20	MONO + SAP	Sound A Mono	Mono	Mono		
BTSC		STEREO + SAP	Korean Stereo	Stereo	Stereo		
D100		MONO	Sound A Mono	Mono	Mono		
	21	STEREO	Ocuria A Micrio	WOTO			
21		MONO + SAP	No Matrix	Left = Mono	Left = Mono		
		STEREO + SAP	INO WALLIA	Right = SAP	Right = SAP		
FM-Radio	40	MONO	Sound A Mono	Mono	Mono		
i ivi-ixaulu	STEREO		Korean Stereo	Stereo	Stereo		

Table 6–18: Manual Sound Select Modes for SAT-Standards

			Source Channels of Sound Select Block for SAT-Modes			
Broadcasted Sound Standard	Selected MSP Standard Code	Broadcasted Sound Mode	FM Matrix	FM/AM (source select: 0)	Stereo or A/B (source select: 1)	Stereo or A (source select: 3)
	6, 50 <sub>hex</sub>	MONO	Sound A Mono	Mono	Mono	Mono
FM SAT	51 <sub>hex</sub>	STEREO	No Matrix	Stereo	Stereo	Stereo
		BILINGUAL	No Matrix	Left = A (FM1) Right = B (FM2)	Left = A (FM1) Right = B (FM2)	A (FM1)

#### 6.8. Exclusions of Audio Baseband Features

In general, all functions can be switched independently. Two exceptions exist:

- NICAM cannot be processed simultaneously with the FM2 channel.
- 2. FM adaptive deemphasis cannot be processed simultaneously with FM-identification.

#### 6.9. Phase Relationship of Analog Outputs

The analog output signals: Loudspeaker, headphone, and SCART2 all have the same phases. The user does not need to correct output phases when using these analog outputs directly. The SCART1 output has opposite phase.

Using the I<sup>2</sup>S-outputs for other DSPs or D/A converters, care must be taken to adjust for the correct phase. If the attached coprocessor is one of the MSP family, the following schematics help to determine the phase relationship.

#### 6.10. Compatibility Restrictions to MSP 34x0D

The MSP 34x0G is fully hardware compatible to the MSP 34x0D. However, to substitute a MSP 34x0D by the corresponding MSP 34x0G, the controller software has to be adapted slightly:

- 1. The register FM-Matrix (00 0E<sub>hex</sub> low part) must be changed from "no matrix (00<sub>hex</sub>)" to "sound A mono (03<sub>hex</sub>)" during mono transmission of all TV-sound standards (see also Table 6–17).
- 2. With the MSP 34x0G, the STANDARD SELECTION initializes the FM-deemphasis, which is not the case for the MSP 34x0D. So, if STANDARD SELECTION is applied, this I<sup>2</sup>C instruction can be omitted.

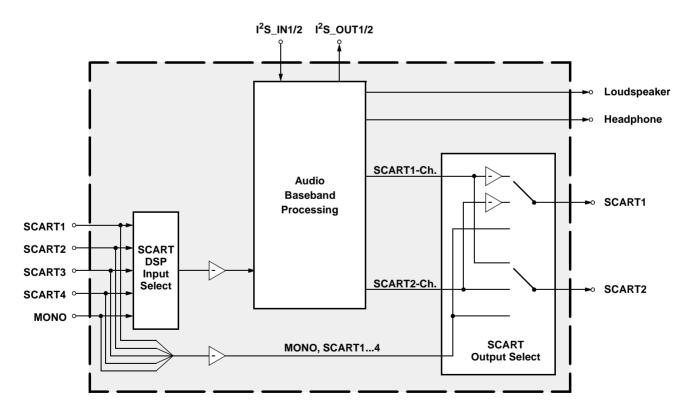


Fig. 6–2: Phase diagram of the MSP 34x0G

#### 7. Appendix D: MSP 34x0G Version History

#### MSP 3430G-A1

First release for BTSC-Stereo/SAP and FM-Radio.

#### MSP 3440G-A2

Extended Automatic Sound Select feature (incompatible to Version A1).

#### Known restrictions:

- SAP detection unstable

#### MSP 34x0G-B5

- additional package PLQFP64
- digital input specification changed as of version B5 and later (see Section 4.6. on page 58)
- max. analog high supply voltage AHVSUP 8.7 V.
- supply currents changed as of version B5 and later (see Section 4.6.3. on page 62)
- programmable A2 and carrier mute thresholds
- new D/K standard 0Dhex: HDEV3 and NICAM
- additional preference in Automatic Standard Detection


#### MSP 34x0G-B6

- improved AM-performance
- new D/K standard for Poland
- improved I<sup>2</sup>C hardware problem handling
- faster system-D/K for stereo detection
- extended features in the CONTROL register

#### MSP 34x0G-B8

- fine-tuning of A2-identification and carrier mute
- EIA-J identification: faster transition time stereo/ bilingual to mono
- J17 FM-deemphasis implemented
- input specification for RESETQ and TESTEN changed
- MDB implemented

### 8. Appendix E: Application Circuit

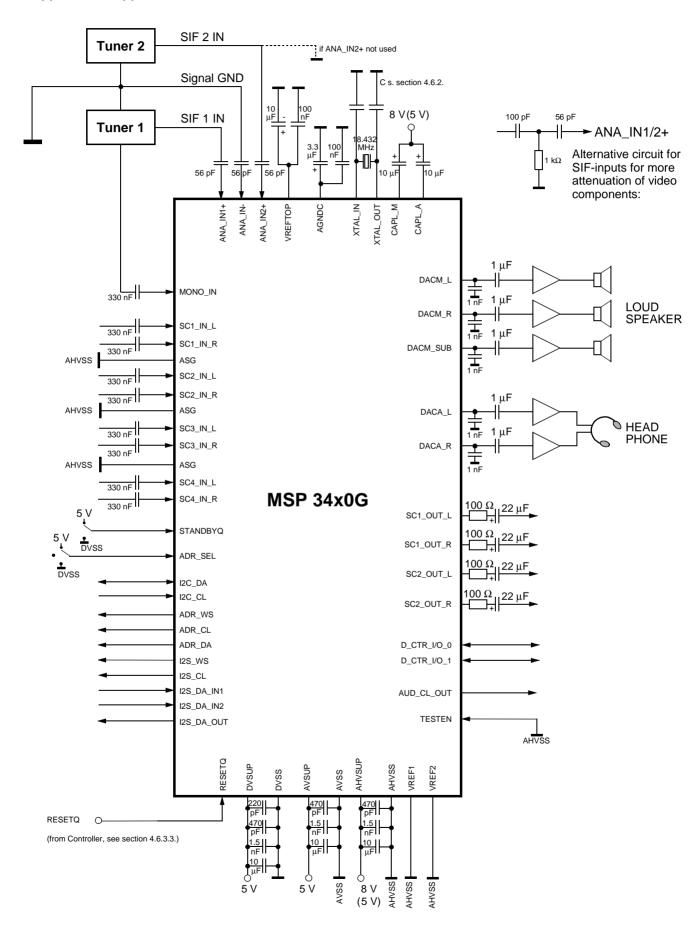

MSP 34x0G PRELIMINARY DATA SHEET

#### 9. Data Sheet History

- 1. Preliminary data sheet: "MSP 34x0G Multistandard Sound Processor Family, Edition Sept. 30, 1998, 6251-476-1PD. First release of the preliminary data sheet.
- 2. Preliminary data sheet: "MSP 34x0G Multistandard Sound Processor Family, Edition Oct. 9, 1998, 6251-476-2PD. Second release of the preliminary data sheet. Major changes:
- Table 3–9 on page 24: MODUS Register bit [0] function changed
- Table 3–11 on page 30: Treble Headphone Channel register address changed, bit[15:8] hex and dB values changed
- Table 3–11 on page 33: Volume SCART1/2 Output Channel register address changed
- Table 6–17 on page 95: M-BTSC and RM-Radio description changed
- pin ASG3 changed to "not connected"
- 3. Preliminary data sheet: "MSP 34x0G Multistandard Sound Processor Family, Edition Oct. 6, 1999, 6251-476-3PD. Third release of the preliminary data sheet. Major changes:
- specification for version B5 and B6 added (see Appendix D: Version History)
- section 4.: specification for PLQFP64 package added
- reset description modified

4. Preliminary data sheet: "MSP 34x0G Multistandard Sound Processor Family, Edition March 5, 2001, 6251-476-4PD. Fourth release of the preliminary data sheet.

Major changes:

- specification for version B8 added (see Appendix D: Version History)
- MSP 3460 added, MSP 3430 removed
- description for MDB added
- specification for MNR added
- I<sup>2</sup>C-bus description changed
- ACB register: documentation for bit allocation D\_CTR\_I/O changed

Micronas GmbH
Hans-Bunte-Strasse 19
D-79108 Freiburg (Germany)
P.O. Box 840
D-79008 Freiburg (Germany)
Tel. +49-761-517-0
Fax +49-761-517-2174
E-mail: docservice@micronas.com
Internet: www.micronas.com

Printed in Germany Order No. 6251-476-4PD All information and data contained in this data sheet are without any commitment, are not to be considered as an offer for conclusion of a contract, nor shall they be construed as to create any liability. Any new issue of this data sheet invalidates previous issues. Product availability and delivery are exclusively subject to our respective order confirmation form; the same applies to orders based on development samples delivered. By this publication, Micronas GmbH does not assume responsibility for patent infringements or other rights of third parties which may result from its use.

Further, Micronas GmbH reserves the right to revise this publication and to make changes to its content, at any time, without obligation to notify any person or entity of such revisions or changes.

No part of this publication may be reproduced, photocopied, stored on a retrieval system, or transmitted without the express written consent of Micronas GmbH.

## **Preliminary Data Sheet Supplement**

Subject:	MSP 34xxG Version History
Data Sheet Concerned:	All MSP 34xxG Data Sheets
Supplement:	No. 2/ 6251-525-2PDS
Edition:	Oct. 11, 2000

## **Version Changes within the MSP 34xxG Family:**

For a detailed description of the below-mentioned items, see the corresponding data sheets. For quick reference, check the version history in the data sheet appendices.

MS	P 34x0G	A4	B4	B5	В6	B8
MS	P 34x1G		<b>A</b> 1		A2	B8
MS	P 34x2G				<b>A</b> 1	
MS	P 34x5G	A4		B5	В6	B8
MS	P 34x7G				В6	B8
technology		0.8 µ	0.5 µ	0.5 μ	0.5 µ	0.45 μ
power dissipation (typical) at 8 V operation MSP 34x0	/x1/x5/x7 ISP 34x2	740 mW	640 mW	640 mW	640 mW 690 mW	600 mW
digital input specification change				х	х	х
specification of max. analog high voltage (AHVSUP)		8.4 V	8.4 V	8.7 V	8.7 V	8.7 V
programmable A2 and carrier mute thresholds				х	х	х
new Standard Select Mode 0D <sub>hex</sub> : D/K-NICAM together with HDEV3 F	M mode			х	х	х
additional preference "color" for 4.5 MHz carrier in Automatic Standard Detection				х	х	х
improved AM-performance (better SNR and THD)					х	х
new Standard Select Mode 07 <sub>hex</sub> : D/K3 for Poland					х	х
faster system D/K loop for stereo detection (standards 4, 5, 7, B with A	SS = on)				х	х
improved I <sup>2</sup> C hardware problem handling					х	х
extended features in the CONTROL register (readout hardware / reset	status)				х	х
Micronas Dynamic Bass (MDB) MSP 3	4x0/x1/x2				х	х
Micronas Dynamic Bass (improved MDB) MSP 3	4x0/x1/x2					х
faster identification for all standards, major speedup of identification for EIA-J standard						Х
faster carrier mute			_			х
J17 deemphasis						х

Micronas page 1 of 1