

Distributor: Electro-Stock www.electrostock.com Tel: 630-682-1542 Fax: 630-682-1562

FEATURES:

- Switching capacity up to 20A
- PC pins and quick connect terminals
- Uses include household appliances
- High inrush capability
- Strong resistance to shock and vibration





28.9 x 12.6 x 24.3(34.3) mm

CONTACT DATA

1A = SPST N.O.
16A @ 250VAC/28VDC general purpose
20A @ 125VAC general purpose
< 50 milliohms initial
AgSnO ₂
448W, 4000 VA
300VAC
20A

DC COIL DATA

	oltage	Coil Resistance	Pick Up Voltage	Release Voltage	Coil Power	Operate Time	Release Time
VDC		$\Omega\pm10\%$	VDC (max)	VDC (min)	W	ms	ms
			75%	10%			
Rated	Max.	.54W	of rated voltage	of rated voltage			
5	6.5	46	3.75	.50			
6	7.8	67	4.50	.60			
9	11.7	150	6.75	.90	.90 .54 20 1.2 2.4	20	10
12	15.6	270	9.00	1.2			
24	31.2	1100	18.00	2.4			
48	62.3	4267	36.00	4.8			

CAUTION:

- 1. The use of any coil voltage less than the rated coil voltage may compromise the operation of the relay.
- 2. Pickup and release voltages are for test purposes only and are not to be used as design criteria.

GENERAL DATA

Electrical Life @ rated load	100K cycles, typical
Mechanical Life	10M cycles, typical
Insulation Resistance	100MΩ min @ 500VDC
Dielectric Strength, Coil to Contact	1000V rms min. @ sea level
Contact to Contact	1000V rms min. @ sea level
Shock Resistance	100m/s ² for 11ms
Vibration Resistance	1.5mm double amplitude 10-40Hz
Terminal (Copper Alloy) Strength	10N
Operating Temperature	-30 °C to + 55 °C
Storage Temperature	-40 °C to + 85 °C
Solderability	230 °C ± 2 °C for 10 ± 0.5s
Weight	15g




Distributor: Electro-Stock www.electrostock.com Tel: 630-682-1542 Fax: 630-682-1562


ORDERING INFORMATION

1. Series:	WJ121	1A	S	12VDC
WJ121				
2.Contact Arrangement:				
1A = SPST N.O.				
3. Sealing Options:				
S = Sealed (standard)				
C = Dust Cover				
4. Coil Voltage:				
5VDC				
6VDC				
9VDC				
12VDC				
24VDC				
48VDC				


DIMENSIONS (Units = mm)

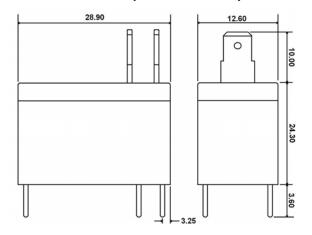

SCHEMATICS & PC LAYOUTS (BOTTOM VIEWS)

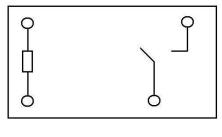

1A

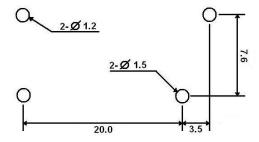

** The contacts are connected to the quick connect terminals on top of the relay as well as the PC terminals.