


# M58WR064HT M58WR064HB

### 64 Mbit (4 Mb x16, multiple bank, burst) 1.8 V supply Flash memories

### Features

- Supply voltage
  - $V_{DD}$  = 1.7 V to 2 V for program, erase and read
  - V<sub>DDQ</sub> = 1.7 V to 2.24 V for I/O buffers
  - $V_{PP} = 12 V$  for fast program (optional)
- Synchronous/asynchronous read
  - Synchronous burst read mode: 66 MHz
  - Asynchronous/synchronous page read mode
  - Random access: 60 ns, 70 ns
- Synchronous burst read suspend
- Programming time
  - 8 µs by word typical for fast factory program
  - Double/quadruple word program option
  - Enhanced factory program options
- Memory blocks
  - Multiple bank memory array: 4 Mbit banks
  - Parameter blocks (top or bottom location)
- Dual operations
  - Program erase in one bank while read in others
  - No delay between read and write operations
- Block locking
  - All blocks locked at power-up
  - Any combination of blocks can be locked
  - WP for block lock-down
- Security
  - 128 bit user programmable OTP cells
- 64 bit unique device number
- Common Flash interface (CFI)
- 100 000 program/erase cycles per block

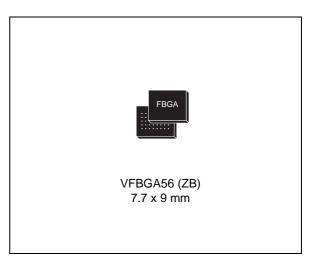

- Electronic signature
  - Manufacturer code: 20h
  - Device codes: M58WR064HT (top): 8810h M58WR064HB (bottom): 8811h
- Package
  - ECOPACK®

# Contents

1	Desci	ription
2	Signa	Il descriptions
	2.1	Address inputs (A0-A21) 13
	2.2	Data input/output (DQ0-DQ15) 13
	2.3	Chip Enable (Ē) 13
	2.4	Output Enable (G) 13
	2.5	Write Enable ( $\overline{W}$ )
	2.6	Write Protect (WP) 13
	2.7	Reset (RP) 14
	2.8	Latch Enable ( $\overline{L}$ )
	2.9	Clock (K)
	2.10	Wait (WAIT)
	2.11	V <sub>DD</sub> supply voltage
	2.12	V <sub>DDQ</sub> supply voltage
	2.13	V <sub>PP</sub> program supply voltage
	2.14	$V_{\mbox{\scriptsize SS}}$ ground $\ldots\ldots\ldots$ 15
	2.15	V <sub>SSQ</sub> ground
3	Bus c	operations
	3.1	Bus read
	3.2	Bus write
	3.3	Address latch
	3.4	Output disable
	3.5	Standby 17
	3.6	Reset 17
4	Comr	nand interface
5	Comr	nand interface - standard commands
	5.1	Read Array command 19
	5.2	Read Status Register command 19

57

	5.3	Read Ele	ectronic Signature command	19				
	5.4	Read CF	I Query command	20				
	5.5	Clear Sta	atus Register command	20				
	5.6	Block Er	ase command	20				
	5.7	Program	command	21				
	5.8	Program	/Erase Suspend command	21				
	5.9	Program	ogram/Erase Resume command 22					
	5.10	Protectio	n Register Program command	22				
	5.11	Set Cont	iguration Register command	23				
	5.12	Block Lo	ck command	23				
	5.13	Block Ur	lock command	23				
	5.14	Block Lo	ck-Down command	24				
6	Comn	nand int	erface - factory program commands	26				
	6.1	Bank Era	ase command	26				
	6.2	Double \	Vord Program command	27				
	6.3	Quadrup	le Word Program command	28				
	6.4	Enhance	d Factory Program command	28				
		6.4.1	Setup phase	29				
			Program phase					
			Verify phase					
	6.5	•	le Enhanced Factory Program command					
			Setup phase					
		6.5.2 6.5.3	Load phase					
		6.5.4						
				0.				
7	Status	s Regist	er	33				
	7.1	Program	/Erase Controller status bit (SR7)	33				
	7.2	Erase su	spend status bit (SR6)	34				
	7.3	Erase sta	atus bit (SR5)	34				
	7.4	Program	status bit (SR4)	34				
	7.5	V <sub>PP</sub> stat	us bit (SR3)	35				
	7.6	Program	suspend status bit (SR2)	35				

Contents

	7.7	Block protection status bit (SR1)
	7.8	Bank write/multiple word program status bit (SR0)
8	Confi	guration Register
	8.1	Read select bit (CR15)
	8.2	X latency bits (CR13-CR11)
	8.3	Wait polarity bit (CR10)
	8.4	Data output configuration bit (CR9) 39
	8.5	Wait configuration bit (CR8) 39
	8.6	Burst type bit (CR7) 39
	8.7	Valid Clock edge bit (CR6) 39
	8.8	Wrap burst bit (CR3) 39
	8.9	Burst length bits (CR2-CR0) 40
9	Read	modes
•	9.1	Asynchronous read mode
	9.2	Synchronous burst read mode
	9.3	Synchronous burst read suspend
	9.4	Single synchronous read mode
	011	
10	Dual	operations and multiple bank architecture
11	Block	locking
	11.1	Reading the block lock status
	11.2	Locked state
	11.3	Unlocked state
	11.4	Lock-down state
	11.5	Locking operations during erase suspend
12	Progr	am and erase times and endurance cycles
13	Maxin	num ratings
14	DC ar	nd AC parameters 55
15	Packa	age mechanical
4/110		

16	Par	t numbering	73
Appendix	Α	Block address tables	74
Appendix	в	Common Flash interface	83
Appendix	С	Flowcharts and pseudo codes	93
	Enh	anced factory program pseudo code	102
	Qua	adruple enhanced factory program pseudo code	104
Appendix	D	Command interface state tables1	05
17	Rev	vision history1	09

# List of tables

	Signal names
Table 2.	M58WR064HT/B bank architecture11
Table 3.	Bus operations
Table 4.	Command codes
Table 5.	Standard commands
Table 6.	Electronic signature codes
Table 7.	Factory program commands
Table 8.	Status Register bits
Table 9.	Latency settings
Table 10.	Configuration Register
Table 11.	Burst type definition
Table 12.	Dual operations allowed in other banks
Table 13.	Dual operations allowed in same bank
Table 14.	Dual operation limitations
Table 15.	Lock status
Table 16.	Program/erase times and endurance cycles
Table 17.	Absolute maximum ratings
Table 18.	Operating and AC measurement conditions
Table 19.	Capacitance
Table 20.	DC characteristics - currents
Table 21.	DC characteristics - voltages
Table 22.	Asynchronous read AC characteristics
Table 23.	Synchronous read AC characteristics
Table 24.	Write AC abaracteristics Write Enable controlled
	Write AC characteristics, Write Enable controlled
Table 24.	Write AC characteristics, Chip Enable controlled
	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70
Table 25.	Write AC characteristics, Chip Enable controlled
Table 25. Table 26.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70
Table 25. Table 26.	Write AC characteristics, Chip Enable controlled
Table 25. Table 26. Table 27.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72
Table 25. Table 26. Table 27. Table 28.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73
Table 25. Table 26. Table 27. Table 28. Table 31.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34. Table 35.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34. Table 35. Table 36.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34. Table 35. Table 36. Table 37.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88Burst read information88Bank and erase block region information88
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 33. Table 34. Table 35. Table 36. Table 37. Table 38.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88Burst read information88Bank and erase block region information89
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34. Table 35. Table 36. Table 37. Table 38. Table 39.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88Burst read information88Bank and erase block region information88
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34. Table 35. Table 36. Table 37. Table 38. Table 39. Table 40.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72mechanical data72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88Burst read information88Bank and erase block region 1 information89Bank and erase block region 2 information90
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 34. Table 35. Table 36. Table 37. Table 38. Table 39. Table 40. Table 41.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88Burst read information88Bank and erase block region 1 information89Bank and erase block region 2 information90Command interface states - modify table, next state105
Table 25. Table 26. Table 27. Table 28. Table 31. Table 32. Table 33. Table 33. Table 34. Table 35. Table 36. Table 37. Table 38. Table 39. Table 40. Table 41. Table 42.	Write AC characteristics, Chip Enable controlled69Reset and power-up AC characteristics70VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package72Ordering information scheme73Query structure overview83CFI query identification string84CFI query system interface information85Device geometry definition86Primary algorithm-specific extended query table87Protection Register information88Bank and erase block region information88Bank and erase block region 1 information89Bank and erase block region 2 information90Command interface states - modify table, next output106



57

# List of figures

Figure 1.	Logic diagram
Figure 2.	VFBGA package connections (top view through package)11
Figure 3.	M58WR064HT/B memory map12
Figure 4.	Protection Register memory map
Figure 5.	X latency and data output configuration example
Figure 6.	Wait configuration example
Figure 7.	AC measurement I/O waveform
Figure 8.	AC measurement load circuit
Figure 9.	Asynchronous random access read AC waveforms
Figure 10.	Asynchronous page read AC waveforms
Figure 11.	Synchronous burst read AC waveforms
Figure 12.	Single synchronous read AC waveforms
Figure 13.	Synchronous burst read suspend AC waveforms
Figure 14.	Clock input AC waveform
Figure 15.	Write AC waveforms, Write Enable controlled
Figure 16.	Write AC waveforms, Chip Enable controlled
Figure 17.	Reset and power-up AC waveforms
Figure 18.	VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, bottom view
	package outline
Figure 19.	Program flowchart and pseudo code
Figure 20.	Double word program flowchart and pseudo code
Figure 21.	Quadruple word program flowchart and pseudo code
Figure 22.	Program suspend and resume flowchart and pseudo code
Figure 23.	Block erase flowchart and pseudo code
Figure 24.	Erase suspend and resume flowchart and pseudo code
Figure 25.	Locking operations flowchart and pseudo code
Figure 26.	Protection Register program flowchart and pseudo code
Figure 27.	Enhanced factory program flowchart
Figure 28.	Quadruple enhanced factory program flowchart

### 1 Description

The M58WR064HT and M58WR064HB are 64 Mbit (4 Mbit x16) non-volatile Flash memories, and are collectively referred to in this document as the M58WR064HT/B. It can be erased electrically at block level and programmed in-system on a word-by-word basis using a 1.7 V to 2 V V<sub>DD</sub> supply for the circuitry and a 1.7 V to 2.24 V V<sub>DDQ</sub> supply for the Input/output pins. An optional 12 V V<sub>PP</sub> power supply is provided to speed up customer programming.

The device features an asymmetrical block architecture.

The M58WR064HT/B has an array of 135 blocks, and is divided into 4 Mbit banks. There are 15 banks each containing 8 main blocks of 32 KWords, and one parameter bank containing 8 parameter blocks of 4 KWords and 7 main blocks of 32 KWords.

The multiple bank architecture allows dual operations. While programming or erasing in one bank, read operations are possible in other banks. Only one bank at a time is allowed to be in program or erase mode. It is possible to perform burst reads that cross bank boundaries. The bank architecture is summarized in *Table 2* and the memory map is shown in *Figure 3*. The parameter blocks are located at the top of the memory address space for the M58WR064HT, and at the bottom for the M58WR064HB.

Each block can be erased separately. Erase can be suspended to program in any other block, and then resumed. Program can be suspended to read data in any other block, and then resumed. Each block can be programmed and erased over 100 000 cycles using the supply voltage  $V_{DD}$ . There are two enhanced factory programming commands available to speed up programming.

Program and erase commands are written to the command interface of the memory. An internal Program/Erase Controller manages the timings necessary for program and erase operations. The end of a program or erase operation can be detected and any error conditions are identified in the Status Register. The command set required to control the memory is consistent with JEDEC standards.

The device supports synchronous burst read and asynchronous read from all blocks of the memory array. At power-up the device is configured for asynchronous read. In synchronous burst mode, data is output on each clock cycle at frequencies of up to 66 MHz. The synchronous burst read operation can be suspended and resumed.

The device features an automatic standby mode. When the bus is inactive during asynchronous read operations, the device automatically switches to the automatic standby mode. In this condition the power consumption is reduced to the standby value  $I_{DD4}$  and the outputs are still driven.

The M58WR064HT/B features an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency, enabling instant code and data protection. All blocks have three levels of protection. They can be locked and locked-down individually preventing any accidental programming or erasure. There is additional hardware protection against program and erase. When  $V_{PP} \leq V_{PPLK}$  all blocks are protected against program or erase. All blocks are locked at power- up.




The device includes a Protection Register to increase the protection of a system's design. The Protection Register is divided into two segments: a 64 bit segment containing a unique device number written by ST, and a 128 bit segment one-time-programmable (OTP) by the user. The user programmable segment can be permanently protected. *Figure 4* shows the Protection Register memory map.

The memory is offered in a VFBGA56, 7.7 x 9 mm, 8 x 7 active ball array, 0.75 mm pitch package. It is supplied with all the bits erased (set to '1').



Description

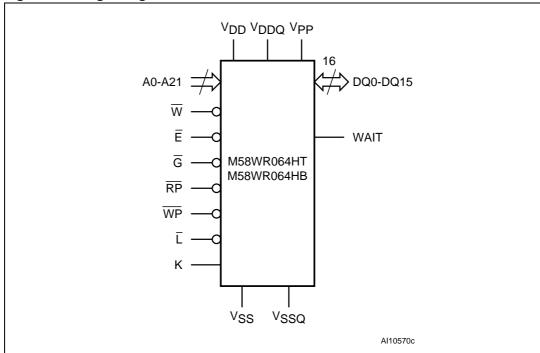

#### Figure 1. Logic diagram

Name	Function
A0-A21	Address inputs
DQ0-DQ15	Data input/outputs, command inputs
Ē	Chip Enable
G	Output Enable
W	Write Enable
RP	Reset
WP	Write Protect
К	Clock
Ē	Latch Enable
WAIT	Wait
V <sub>DD</sub>	Supply voltage
V <sub>DDQ</sub>	Supply voltage for input/output buffers
V <sub>PP</sub>	Optional supply voltage for fast program and erase
V <sub>SS</sub>	Ground
V <sub>SSQ</sub>	Ground input/output supply
NC	Not connected internally

www.DataSheet4U.com

57

M58WR064HT,	M58WR064HB
-------------	------------

Figure 2	2. VFBGA package connections (top view through package)							
	1	2	3	4	5	6	7	8
A	(A11)	A8	V <sub>SS</sub>	V <sub>DD</sub>	V <sub>PP</sub>	A18	A6	( A4 )
В	( A12 )	A9	A20	(к)	RP	A17	A5	A3
с	( A13 )	A10	A21	$\left(\begin{array}{c} \hline \\ \hline \\ \end{array}\right)$	$\overline{W}$	A19	A7	A2
D	A15	A14	WAIT	A16	DQ12	WP	NC	A1
E	VDDQ;	DQ15	DQ6	DQ4	DQ2	(DQ1)		AO
F	V <sub>SS</sub> ;	DQ14	(DQ13)	(DQ11)	(DQ10	DQ9	DQ0	(Ē)
G	( DQ7 )	V <sub>SSQ</sub> ,	DQ5	V <sub>DD</sub>	DQ3	V <sub>DDQ</sub> ;	DQ8	Vssq;
								AI105


Figure 2. VFBGA package connections (top view through package)

Table 2. M58WR064HT/B bank architecture

Number	Bank size	Parameter blocks	Main blocks
Parameter bank	4 Mbits	8 blocks of 4 KWords	7 blocks of 32 KWords
Bank 1	4 Mbits	-	8 blocks of 32 KWords
Bank 2	4 Mbits	-	8 blocks of 32 KWords
Bank 3	4 Mbits	-	8 blocks of 32 KWords
Bank 14	4 Mbits	-	8 blocks of 32 KWords
Bank 15	4 Mbits	-	8 blocks of 32 KWords



57

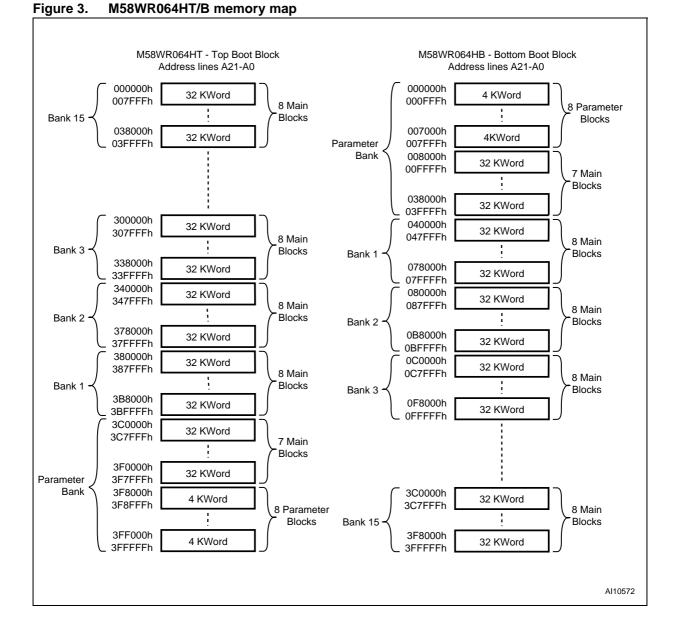

Description

## 2 Signal descriptions

See *Figure 1: Logic diagram* and *Table 1: Signal names* for a brief overview of the signals connected to this device.

### 2.1 Address inputs (A0-A21)

The address inputs select the cells in the memory array to access during bus read operations. During bus write operations they control the commands sent to the command interface of the Program/Erase Controller.

### 2.2 Data input/output (DQ0-DQ15)

The data I/O output the data stored at the selected address during a bus read operation or input a command or the data to be programmed during a bus write operation.

### 2.3 Chip Enable (E)

The Chip Enable input activates the memory control logic, input buffers, decoders and sense amplifiers. When Chip Enable is at  $V_{IL}$  and Reset is at  $V_{IH}$ , the device is in active mode. When Chip Enable is at  $V_{IH}$  the memory is deselected, the outputs are high impedance, and the power consumption is reduced to the standby level.

### 2.4 Output Enable (G)

The Output Enable input controls data outputs during the bus read operation of the memory.

### 2.5 Write Enable ( $\overline{W}$ )

The Write Enable input controls the bus write operation of the memory's command interface. The data and address inputs are latched on the rising edge of Chip Enable or Write Enable, whichever occurs first.

### 2.6 Write Protect (WP)

Write Protect is an input that provides additional hardware protection for each block. When Write Protect is at  $V_{IL}$ , the lock-down is enabled and the protection status of the locked-down blocks cannot be changed. When Write Protect is at  $V_{IH}$ , the lock-down is disabled and the locked-down blocks can be locked or unlocked (refer to *Table 15: Lock status*).



### 2.7 Reset ( $\overline{RP}$ )

The Reset input provides a hardware reset of the memory. When Reset is at  $V_{IL}$ , the memory is in reset mode: the outputs are high impedance and the current consumption is reduced to the Reset supply current  $I_{DD2}$ . Refer to *Table 20: DC characteristics - currents* for the value of  $I_{DD2}$ . After Reset all blocks are in the locked state and the Configuration Register is reset. When Reset is at  $V_{IH}$ , the device is in normal operation. Upon exiting reset mode the device enters asynchronous read mode, but a negative transition of Chip Enable or Latch Enable is required to ensure valid data outputs.

The Reset pin can be interfaced with 3 V logic without any additional circuitry, and can be tied to V<sub>RPH</sub> (refer to *Table 21: DC characteristics - voltages*).

### 2.8 Latch Enable (L)

Latch Enable latches the address bits on its rising edge. The address latch is transparent when Latch Enable is at  $V_{IL}$  and it is inhibited when Latch Enable is at  $V_{IH}$ . Latch Enable can be kept Low (also at board level) when the Latch Enable function is not required or supported.

### 2.9 Clock (K)

The clock input synchronizes the memory to the microcontroller during synchronous read operations; the address is latched on a Clock edge (rising or falling, according to the configuration settings) when Latch Enable is at  $V_{IL}$ . Clock is 'don't care' during asynchronous read and in write operations.

### 2.10 Wait (WAIT)

Wait is an output signal used during synchronous read to indicate whether the data on the output bus is valid. This output is high impedance when Chip Enable is at  $V_{IH}$  or Reset is at  $V_{IL}$ . It can be configured to be active during the wait cycle or one clock cycle in advance. The WAIT signal is not gated by Output Enable.

### 2.11 V<sub>DD</sub> supply voltage

V<sub>DD</sub> provides the power supply to the internal core of the memory device. It is the main power supply for all operations (read, program and erase).

### 2.12 V<sub>DDQ</sub> supply voltage

 $V_{DDQ}$  provides the power supply to the I/O pins and enables all outputs to be powered independently of  $V_{DD}$ .  $V_{DDQ}$  can be tied to  $V_{DD}$  or can use a separate supply.



### 2.13 V<sub>PP</sub> program supply voltage

 $V_{\text{PP}}$  is both a control input and a power supply pin. The two functions are selected by the voltage range applied to the pin.

If  $V_{PP}$  is kept in a low voltage range (0 V to  $V_{DDQ}$ )  $V_{PP}$  is seen as a control input. In this case a voltage lower than  $V_{PPLK}$  provides absolute protection against program or erase, while  $V_{PP}$  in the  $V_{PP1}$  range enables these functions (see Tables 20 and 21, DC characteristics for the relevant values).  $V_{PP}$  is only sampled at the beginning of a program or erase; a change in its value after the operation has started does not have any effect and program or erase operations continue.

If  $V_{PP}$  is in the range of  $V_{PPH}$  it acts as a power supply pin. In this condition  $V_{PP}$  must be stable until the program/erase algorithm is completed.

#### 2.14 V<sub>SS</sub> ground

V<sub>SS</sub> ground is the reference for the core supply. It must be connected to the system ground.

### 2.15 V<sub>SSQ</sub> ground

 $V_{SSQ}$  ground is the reference for the input/output circuitry driven by  $V_{DDQ}.$   $V_{SSQ}$  must be connected to  $V_{SS}$ 

Note: Each device in a system should have  $V_{DD}$ ,  $V_{DDQ}$  and  $V_{PP}$  decoupled with a 0.1  $\mu$ F ceramic capacitor close to the pin (high-frequency, inherently-low inductance capacitors should be as close as possible to the package). See Figure 8: AC measurement load circuit. The PCB track widths should be sufficient to carry the required  $V_{PP}$  program and erase currents.

### 3 Bus operations

There are six standard bus operations that control the device. These are bus read, bus write, address latch, output disable, standby and reset. See *Table 3: Bus operations* for a summary.

Typically glitches of less than 5 ns on Chip Enable or Write Enable are ignored by the memory and do not affect bus write operations.

#### 3.1 Bus read

Bus read operations output the contents of the memory array, the electronic signature, the Status Register and the common Flash interface. Both Chip Enable and Output Enable must be at  $V_{IL}$  to perform a read operation. The Chip Enable input should be used to enable the device. Output Enable should be used to gate data onto the output. The data read depends on the previous command written to the memory (see command interface section). See Figures 9, 10, 11 and 12 Read AC Waveforms, and Tables 22 and 23 Read AC Characteristics for details of when the output becomes valid.

#### 3.2 Bus write

Bus write operations write commands to the memory or latch input data to be programmed. A bus write operation is initiated when Chip Enable and Write Enable are at  $V_{IL}$  with Output Enable at  $V_{IH}$ . Commands, input data and addresses are latched on the rising edge of Write Enable or Chip Enable, whichever occurs first. The addresses can also be latched prior to the write operation by toggling Latch Enable. In this case the Latch Enable should be tied to  $V_{IH}$  during the bus write operation.

See Figures 15 and 16, Write AC Waveforms, and Tables 24 and 25, Write AC Characteristics for details of the timing requirements.

#### 3.3 Address latch

Address latch operations input valid addresses. Both Chip Enable and Latch Enable must be at  $V_{IL}$  during address latch operations. The addresses are latched on the rising edge of Latch Enable.

#### 3.4 Output disable

The outputs are high impedance when the Output Enable is at  $V_{IH}$ .



#### 3.5 Standby

Standby disables most of the internal circuitry allowing a substantial reduction of the current consumption. The memory is in stand-by when Chip Enable and Reset are at  $V_{IH}$ . The power consumption is reduced to the stand-by level and the outputs are set to high impedance, independently from the Output Enable or Write Enable inputs. If Chip Enable switches to  $V_{IH}$  during a program or erase operation, the device enters standby mode when finished.

#### 3.6 Reset

During reset mode the memory is deselected and the outputs are high impedance. The memory is in reset mode when Reset is at  $V_{IL}$ . The power consumption is reduced to the standby level, independently from the Chip Enable, Output Enable, or Write Enable inputs. If Reset is pulled to  $V_{SS}$  during a program or erase, this operation is aborted and the memory content is no longer valid.

Operation	Ē	G	W	Ē	RP	WAIT <sup>(2)</sup>	DQ15-DQ0
Bus read	V <sub>IL</sub>	V <sub>IL</sub>	V <sub>IH</sub>	V <sub>IL</sub> <sup>(3)</sup>	V <sub>IH</sub>		Data output
Bus write	V <sub>IL</sub>	V <sub>IH</sub>	VIL	V <sub>IL</sub> <sup>(3)</sup>	V <sub>IH</sub>		Data input
Address latch	V <sub>IL</sub>	Х	V <sub>IH</sub>	V <sub>IL</sub>	V <sub>IH</sub>		Data output or Hi-Z <sup>(4)</sup>
Output disable	V <sub>IL</sub>	$V_{\text{IH}}$	V <sub>IH</sub>	Х	V <sub>IH</sub>		Hi-Z
Standby	V <sub>IH</sub>	Х	Х	Х	V <sub>IH</sub>	Hi-Z	Hi-Z
Reset	Х	Х	Х	Х	V <sub>IL</sub>	Hi-Z	Hi-Z

Table 3. Bus operations <sup>(1</sup>
---------------------------------------

1. X = 'don't care'

2. WAIT signal polarity is configured using the Set Configuration Register command.

3.  $\overline{L}$  can be tied to V\_{IH} if the valid address has been previously latched.

4. Depends on  $\overline{G}$ .

### 4 Command interface

All bus write operations to the memory are interpreted by the command interface. Commands consist of one or more sequential bus write operations. An internal Program/Erase Controller manages all timings and verifies the correct execution of the program and erase commands. The Program/Erase Controller provides a Status Register whose output may be read at any time to monitor the progress or the result of the operation.

The command interface is reset to read mode when power is first applied, when exiting from Reset or whenever  $V_{DD}$  is lower than  $V_{LKO}$ . Command sequences must be followed exactly. Any invalid combination of commands is ignored.

Refer to *Table 4: Command codes* and *Appendix D*, Tables *41*, *42*, *43* and *44*, command interface States - Modify and Lock Tables for a summary of the command interface.

The command interface is split into two types of commands: standard commands and factory program commands. The following sections explain in detail how to perform each command.

Hex Code	Command					
01h	Block Lock Confirm					
03h	Set Configuration Register Confirm					
10h	Alternative Program Setup					
20h	Block Erase Setup					
2Fh	Block Lock-Down Confirm					
30h	Enhanced Factory Program Setup					
35h	Double Word Program Setup					
40h	Program Setup					
50h	Clear Status Register					
56h	Quadruple Word Program Setup					
60h	Block Lock Setup, Block Unlock Setup, Block Lock Down Setup and Set Configuration Register Setup					
70h	Read Status Register					
75h	Quadruple Enhanced Factory Program Setup					
80h	Bank Erase Setup					
90h	Read Electronic Signature					
98h	Read CFI Query					
B0h	Program/Erase Suspend					
C0h	Protection Register Program					
D0h	Program/Erase Resume, Block Erase Confirm, Bank Erase Confirm, Block Unlock Confirm or Enhanced Factory Program Confirm					
FFh	Read Array					

Table 4. Command codes



### 5 Command interface - standard commands

The following commands are the basic commands used to read, write to and configure the device. Refer to *Table 5: Standard commands* in conjunction with the descriptions in the following sections.

### 5.1 Read Array command

The Read Array command returns the addressed bank to read array mode. One bus write cycle is required to issue the Read Array command and return the addressed bank to read array mode. Subsequent read operations read the addressed location and output the data. A Read Array command can be issued in one bank while programming or erasing in another bank. However, if a Read Array command is issued to a bank currently executing a program or erase operation, the command executes but the output data is not guaranteed.

### 5.2 Read Status Register command

The Status Register indicates when a program or erase operation is complete and the success or failure of operation itself. Issue a Read Status Register command to read the Status Register content. The Read Status Register command can be issued at any time, even during program or erase operations.

The following read operations output the content of the Status Register of the addressed bank. The Status Register is latched on the falling edge of  $\overline{E}$  or  $\overline{G}$  signals, and can be read until  $\overline{E}$  or  $\overline{G}$  returns to V<sub>IH</sub>. Either  $\overline{E}$  or  $\overline{G}$  must be toggled to update the latched data. See *Table 8* for the description of the Status Register bits. This mode supports asynchronous or single synchronous reads only.

### 5.3 Read Electronic Signature command

The Read Electronic Signature command reads the manufacturer and device codes, the block locking status, the Protection Register, and the Configuration Register.

The Read Electronic Signature command consists of one write cycle to an address within one of the banks. A subsequent read operation in the same bank outputs the manufacturer code, the device code, the protection status of the blocks in the targeted bank, the Protection Register, or the Configuration Register (see *Table 6*).

Dual operations between the parameter bank and the electronic signature locations are not allowed (see *Table 14: Dual operation limitations*).

If a Read Electronic Signature command is issued in a bank that is executing a program or erase operation, the bank goes into read electronic signature mode, subsequent bus read cycles output the electronic signature data, and the Program/Erase Controller continues to program or erase in the background. This mode supports asynchronous or single synchronous reads only; it does not support page mode or synchronous burst reads.



### 5.4 Read CFI Query command

The Read CFI Query command reads data from the common Flash interface (CFI). The Read CFI Query command consists of one bus write cycle, to an address within one of the banks. Once the command is issued subsequent bus read operations in the same bank read from the common Flash interface.

If a Read CFI Query command is issued in a bank that is executing a program or erase operation, the bank goes into read CFI query mode, subsequent bus read cycles output the CFI data, and the Program/Erase Controller continues to program or erase in the background. This mode supports asynchronous or single synchronous reads only; it does not support page mode or synchronous burst reads.

The status of the other banks is not affected by the command (see *Table 12*). After issuing a Read CFI Query command, a Read Array command should be issued to the addressed bank to return the bank to read array mode.

Dual operations between the parameter bank and the CFI memory space are not allowed (see *Table 14: Dual operation limitations* for details).

See Appendix B: Common Flash interface, Tables 31, 32, 33, 34, 35, 36, 37, 38, 39 and 40 for details on the information contained in the common Flash interface memory area.

#### 5.5 Clear Status Register command

The Clear Status Register command resets (set to '0') error bits SR1, SR3, SR4 and SR5 in the Status Register. One bus write cycle is required to issue the Clear Status Register command. The Clear Status Register command does not change the read mode of the bank.

The error bits in the Status Register do not automatically return to '0' when a new command is issued. The error bits in the Status Register should be cleared before attempting a new program or erase command.

#### 5.6 Block Erase command

The Block Erase command erases a block. It sets all the bits within the selected block to '1'. All previous data in the block is lost. If the block is protected then the erase operation aborts, the data in the block does not change, and the Status Register outputs the error. The Block Erase command can be issued at any moment, regardless of whether the block has been programmed or not.

Two bus write cycles are required to issue the command:

- The first bus cycle sets up the erase command.
- The second latches the block address in the Program/Erase Controller and starts it.

If the second bus cycle is not Write Erase Confirm (D0h), Status Register bits SR4 and SR5 are set, and the command aborts. The erase aborts if Reset turns to  $V_{IL}$ . As data integrity cannot be guaranteed when the erase operation is aborted, the block must be erased again.

Once the command is issued the device outputs the Status Register data when any address within the bank is read. At the end of the operation the bank remains in read Status Register mode until a Read Array, Read CFI Query or Read Electronic Signature command is issued.



During erase operations the bank containing the block being erased only accepts the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend commands; all other commands are ignored. Refer to Section 10 for detailed information about simultaneous operations allowed in banks not being erased. Typical erase times are given in Table 16: Program/erase times and endurance cycles.

See *Appendix C*, *Figure 23: Block erase flowchart and pseudo code* for a suggested flowchart for using the Block Erase command.

#### 5.7 Program command

The memory array can be programmed word-by-word. Only one word in one bank can be programmed at any one time. If the block is protected, the program operation aborts, the data in the block does not change, and the Status Register outputs the error.

Two bus write cycles are required to issue the Program command.

- The first bus cycle sets up the Program command.
- The second latches the address and the data to be written and starts the Program/Erase Controller.

After programming has started, read operations in the bank being programmed output the Status Register content.

During program operations the bank being programmed only accepts the Read Array, Read Status Register, Read Electronic Signature, Read CFI Query and the Program/Erase Suspend commands. Refer to *Section 10* for detailed information about simultaneous operations allowed in banks not being programmed. Typical program times are given in *Table 16: Program/erase times and endurance cycles*. Programming aborts if Reset goes to V<sub>IL</sub>. As data integrity cannot be guaranteed when the program operation is aborted, the memory location must be reprogrammed.

See Appendix C, Figure 19: Program flowchart and pseudo code for the flowchart for using the program command.

#### 5.8 Program/Erase Suspend command

The Program/Erase Suspend command pauses a program or block erase operation. A bank erase operation cannot be suspended.

One bus write cycle is required to issue the Program/Erase command. Once the Program/Erase Controller has paused, bits SR7, SR6 and/ or SR2 of the Status Register are set to '1'. The command can be addressed to any bank.

During program/erase suspend the command interface accepts the Program/Erase Resume, Read Array (cannot read the erase-suspended block or the program-suspended word), Read Status Register, Read Electronic Signature and Read CFI Query commands. In addition, if the suspend operation is erase then the Clear Status Register, Program, Block Lock, Block Lock-Down or Block Unlock commands are also accepted.

The block being erased may be protected by issuing the Block Lock, Block Lock-Down or Protection Register Program commands. Only the blocks not being erased may be read or programmed correctly. When the Program/Erase Resume command is issued the operation completes. Refer to *Section 10* for detailed information about simultaneous operations allowed during program/erase suspend.



During a program/erase suspend, the device can be placed in standby mode by taking Chip Enable to  $V_{IH}$ . Program/erase is aborted if Reset turns to  $V_{IL}$ .

See Appendix C, Figure 22: Program suspend and resume flowchart and pseudo code, and Figure 24: Erase suspend and resume flowchart and pseudo code for flowcharts for using the Program/Erase Suspend command.

### 5.9 **Program/Erase Resume command**

The Program/Erase Resume command restarts the Program/Erase Controller after a Program/Erase Suspend command has paused it. One bus write cycle is required to issue the command. The command can be written to any address.

The Program/Erase Resume command does not change the read mode of the banks. If the suspended bank was in Read Status Register, Read Electronic signature or Read CFI Query mode, the bank remains in that mode and outputs the corresponding data. If the bank was in read array mode, subsequent read operations output invalid data.

If a program command is issued during a block erase suspend, then the erase cannot be resumed until the programming operation has completed. It is possible to accumulate suspend operations. For example, it is possible to suspend an erase operation, start a programming operation, suspend the programming operation, and then read the array. See *Appendix C, Figure 22: Program suspend and resume flowchart and pseudo code* and *Figure 24: Erase suspend and resume flowchart and pseudo code* for flowcharts for using the Program/Erase Resume command.

#### 5.10 Protection Register Program command

The Protection Register Program command programs the 128 bit user OTP segment of the Protection Register and the Protection Register lock. The segment is programmed 16 bits at a time. When shipped, all bits in the segment are set to '1'. The user can only program the bits to '0'.

Two write cycles are required to issue the Protection Register Program command:

- The first bus cycle sets up the Protection Register Program command.
- The second latches the address and the data to be written to the Protection Register and starts the Program/Erase Controller.

Read operations output the Status Register content after the programming has started.

The segment can be protected by programming bit 1 of the Protection Lock Register (see *Figure 4: Protection Register memory map*). Attempting to program a previously protected Protection Register results in a Status Register error. The protection of the Protection Register is not reversible. The Protection Register program cannot be suspended. Dual operations between the parameter bank and the Protection Register memory space are not allowed (see *Table 14: Dual operation limitations*)



#### 5.11 Set Configuration Register command

The Set Configuration Register command is used to write a new value to the Configuration Register, which defines the burst length, type, X latency, synchronous/asynchronous read mode, and the valid Clock edge configuration.

Two bus write cycles are required to issue the Set Configuration Register command.

- The first cycle writes the setup command and the address corresponding to the Configuration Register content.
- The second cycle writes the Configuration Register data and the confirm command.

Read operations output the memory array content after the Set Configuration Register command is issued.

The value for the Configuration Register is always presented on A0-A15. CR0 is on A0, CR1 on A1, and so on. The other address bits are ignored.

#### 5.12 Block Lock command

The Block Lock command locks a block and prevent program or erase operations from changing the data in it. All blocks are locked at power-up or reset.

Two bus write cycles are required to issue the Block Lock command.

- The first bus cycle sets up the Block Lock command.
- The second bus write cycle latches the block address.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 15* shows the lock status after issuing a Block Lock command.

The block lock bits are volatile; once set they remain set until a hardware reset or powerdown/power-up. They are cleared by a Block Unlock command. Refer to Section 11: Block locking for a detailed explanation. See Appendix C, Figure 25: Locking operations flowchart and pseudo code for a flowchart for using the Lock command.

#### 5.13 Block Unlock command

The Block Unlock command unlocks a block, allowing the block to be programmed or erased. Two bus write cycles are required to issue the Block Unlock command:

- The first bus cycle sets up the Block Unlock command.
- The second bus write cycle latches the block address.

The lock status can be monitored for each block using the Read Electronic Signature command. *Table 15* shows the protection status after issuing a Block Unlock command. Refer to *Section 11: Block locking* for a detailed explanation and *Appendix C*, *Figure 25: Locking operations flowchart and pseudo code* for a flowchart for using the Unlock command.

#### 5.14 Block Lock-Down command

A locked or unlocked block can be locked down by issuing the Block Lock-Down command. A locked-down block cannot be programmed or erased, or have its protection status changed when  $\overline{WP}$  is low,  $V_{IL}$ . When  $\overline{WP}$  is high,  $V_{IH}$ , the lock-down function is disabled and the locked blocks can be individually unlocked by the Block Unlock command.

Two bus write cycles are required to issue the Block Lock-Down command.

- The first bus cycle sets up the Block Lock command.
- The second bus write cycle latches the block address.

The lock status can be monitored for each block using the Read Electronic Signature command. Locked-down blocks revert to the locked (and not locked-down) state when the device is reset on power-down. *Table 15* shows the lock status after issuing a Block Lock-Down command. Refer to *Section 11: Block locking* for a detailed explanation and *Appendix C, Figure 25: Locking operations flowchart and pseudo code* for a flowchart for using the Lock-Down command.

		Bus operations <sup>(1)</sup>								
Commands	Cycles		1st cycle	2nd cycle						
Commands		Operati on	Address	Data	Op.	Add	Data			
Read Array	1+	Write	BKA	FFh	Read	WA	RD			
Read Status Register	1+	Write	BKA	70h	Read	BKA <sup>(2)</sup>	SRD			
Read Electronic Signature	1+	Write	BKA	90h	Read	BKA <sup>(2)</sup>	ESD			
Read CFI Query	1+	Write	BKA	98h	Read	BKA <sup>(2)</sup>	QD			
Clear Status Register	1	Write	Х	50h						
Block Erase	2	Write	BKA or BA <sup>(3)</sup>	20h	Write	BA	D0h			
Program	2	Write	BKA or WA <sup>(3)</sup>	40h or 10h	Write	WA	PD			
Program/Erase Suspend	1	Write	Х	B0h						
Program/Erase Resume	1	Write	Х	D0h						
Protection Register Program	2	Write	PRA	C0h	Write	PRA	PRD			
Set Configuration Register	2	Write	CRD	60h	Write	CRD	03h			
Block Lock	2	Write	BKA or BA <sup>(3)</sup>	60h	Write	BA	01h			
Block Unlock	2	Write	BKA or BA <sup>(3)</sup>	60h	Write	BA	D0h			
Block Lock-Down	2	Write	BKA or BA <sup>(3)</sup>	60h	Write	BA	2Fh			

#### Table 5. Standard commands

 X = Don't Care, WA = Word Address in targeted bank, RD = Read Data, SRD = Status Register Data, ESD = Electronic Signature Data, QD = Query Data, BA = Block Address, BKA = Bank Address, PD = Program Data, PRA = Protection Register Address, PRD = Protection Register Data, CRD = Configuration Register Data.

2. Must be same bank as in the first cycle. The signature addresses are listed in Table 6.

3. Any address within the bank can be used.



57


M58WR064HT, M58WR064HB

	Code	Address (h)	Data (h)		
Manufacturer code	Bank address + 00	0020			
Device code	Top (M58WR064HT)	Bank address + 01	8810		
Device code	Bottom (M58WR064HB)	Bank address + 01	8811		
	Locked		0001		
Block protection	Unlocked	Block address + 02	0000		
	Locked and locked-down	BIOCK address + 02	0003		
	Unlocked and locked-down		0002		
Reserved		Bank address + 03	Reserved		
Configuration Register		Bank address + 05	CR <sup>(1)</sup>		
Protection Register look	ST factory default	Bank address + 80	0002		
Protection Register lock	OTP area permanently locked	Dank address + 60	0000		
Drotaction Pagister		Bank address + 81 Bank address + 84	Unique Device Number		
Protection Register		Bank address + 85 Bank address + 8C	OTP Area		

#### Table 6. Electronic signature codes

1. CR = Configuration Register.

#### Figure 4. Protection Register memory map

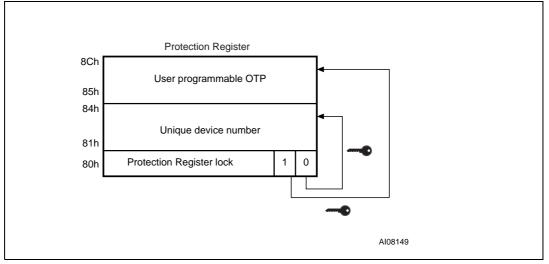

### 6 Command interface - factory program commands

The factory program commands are used to speed up programming. They require  $V_{PP}$  to be at  $V_{PPH}$  except for the Bank Erase command, which also operates at  $V_{PP} = V_{DD}$ . Refer to *Table 7: Factory program commands* in conjunction with the descriptions in the following subsections.

The use of factory program commands requires certain operating conditions.

- V<sub>PP</sub> must be set to V<sub>PPH</sub> (except for Bank Erase command).
- V<sub>DD</sub> must be within operating range.
- Ambient temperature,  $T_A$  must be 25°C ± 5°C.
- The targeted block must be unlocked.

#### 6.1 Bank Erase command

The Bank Erase command erases a bank. It sets all the bits within the selected bank to '1'. All previous data in the bank is lost. The Bank Erase command ignores any protected blocks within the bank. If all blocks in the bank are protected then the Bank Erase operation aborts and the data in the bank does not change. The Status Register does not output any error.

Bank erase operations can be performed at both  $V_{PP} = V_{PPH}$  and  $V_{PP} = V_{DD}$ .

Two bus write cycles are required to issue the command.

- The first bus cycle sets up the Bank Erase command.
- The second latches the bank address in the Program/Erase Controller and starts it.

If the second bus cycle is not Write Bank Erase Confirm (D0h), Status Register bits SR4 and SR5 are set, and the command aborts. Erase aborts if Reset turns to  $V_{IL}$ . As data integrity cannot be guaranteed when the erase operation is aborted, the bank must be erased again.

Once the command is issued, the device outputs the Status Register data when any address within the bank is read. At the end of the operation the bank remains in Read Status Register mode until a Read Array, Read CFI Query or Read Electronic Signature command is issued.

During bank erase operations the bank being erased only accepts the Read Array, Read Status Register, Read Electronic Signature and Read CFI Query commands; all other commands are ignored.

For optimum performance, Bank Erase commands should be limited to a maximum of 100 program/erase cycles per block. After 100 program/erase cycles the internal algorithm still operates properly but some degradation in performance may occur.

Dual operations are not supported during bank erase operations and the command cannot be suspended.

Typical erase times are given in Table 16: Program/erase times and endurance cycles.



#### 6.2 Double Word Program command

The Double Word Program command improves the programming throughput by writing a page of two adjacent words in parallel. The two words must differ only for the address A0.

If the block is protected, then the Double Word Program operation aborts, the data in the block does not be change, and the Status Register outputs the error.

 $V_{PP}$  must be set to  $V_{PPH}$  during Double Word Program, otherwise the command is ignored, and the Status Register does not output any error.

Three bus write cycles are necessary to issue the Double Word Program command.

- The first bus cycle sets up the Double Word Program command.
- The second bus cycle latches the address and the data of the first word to be written.
- The third bus cycle latches the address and the data of the second word to be written and starts the Program/Erase Controller.

Read operations in the bank being programmed output the Status Register content after the programming has started.

During Double Word Program operations the bank being programmed only accepts the Read Array, Read Status Register, Read Electronic Signature and Read CFI Query commands; all other commands are ignored. Dual operations are not supported during Double word program operations and the command cannot be suspended. Typical program times are given in *Table 16: Program/erase times and endurance cycles*.

Programming aborts if Reset goes to  $V_{IL}$ . As data integrity cannot be guaranteed when the program operation is aborted, the memory locations must be reprogrammed.

See Appendix C, Figure 20: Double word program flowchart and pseudo code for the flowchart for using the Double Word Program command.





### 6.3 Quadruple Word Program command

The Quadruple Word Program command improves the programming throughput by writing a page of four adjacent words in parallel. The four words must only differ for the addresses A0 and A1.

 $V_{PP}$  must be set to  $V_{PPH}$  during Quadruple Word Program, otherwise the command is ignored and the Status Register does not output any error.

If the block is protected, then the Quadruple Word Program operation aborts, the data in the block does not change, and the Status Register outputs the error.

Five bus write cycles are necessary to issue the Quadruple Word Program command.

- The first bus cycle sets up the Double Word Program command.
- The second bus cycle latches the address and the data of the first word to be written.
- The third bus cycle latches the address and the data of the second word to be written.
- The fourth bus cycle latches the address and the data of the third word to be written.
- The fifth bus cycle latches the address and the data of the fourth word to be written and starts the Program/Erase Controller (P/EC).

Read operations to the bank being programmed output the Status Register content after the programming has started.

Programming aborts if Reset goes to  $V_{IL}$ . As data integrity cannot be guaranteed when the program operation is aborted, the memory locations must be reprogrammed.

During quadruple word program operations the bank being programmed only accepts the Read Array, Read Status Register, Read Electronic Signature and Read CFI Query commands; all other commands are ignored.

Dual operations are not supported during quadruple word program operations and the command cannot be suspended. Typical program times are given in *Table 16: Program/erase times and endurance cycles*.

See Appendix C, Figure 21: Quadruple word program flowchart and pseudo code for the flowchart for using the Quadruple Word Program command.

#### 6.4 Enhanced Factory Program command

The Enhanced Factory Program command programs large streams of data within any one block. It greatly reduces the total programming time when a large number of words are written to a block at any one time.

Dual operations are not supported during the enhanced factory program operation and the command cannot be suspended.

For optimum performance the Enhanced Factory Program commands should be limited to a maximum of 10 program/erase cycles per block. If this limit is exceeded the internal algorithm continues to work properly but some degradation in performance is possible. Typical program times are given in *Table 16* 

If the block is protected then the Enhanced Factory Program operation aborts, the data in the block does note change, and the Status Register outputs the error.



The Enhanced Factory Program command has four phases: the setup phase, the program phase to program the data to the memory, the verify phase to check that the data has been correctly programmed and reprogram if necessary and the exit phase. Refer to *Table 7: Factory program commands*, and *Figure 27: Enhanced factory program flowchart*.

#### 6.4.1 Setup phase

The Enhanced Factory Program command requires two bus write operations to initiate the command.

- The first bus cycle sets up the Enhanced Factory Program command.
- The second bus cycle confirms the command.

The Status Register P/EC bit SR7 should be read to check that the P/EC is ready. After the confirm command is issued, read operations output the Status Register data. The read Status Register command must not be issued, otherwise it is interpreted as data to program.

If the second bus cycle is not EFP confirm (D0h), Status Register bits SR4 and SR5 are set and the command aborts.

 $V_{\text{PP}}$  value must be in the  $V_{\text{PPH}}$  range during the confirm command, otherwise SR4 and SR3 are set and command is aborted.

#### 6.4.2 Program phase

The program phase requires n+1 cycles, where n is the number of words (refer to *Table 7: Factory program commands*, and *Figure 27: Enhanced factory program flowchart*).

Three successive steps are required to issue and execute the program phase of the command:

- 1. Use one bus write operation to latch the start address and the first word to be programmed, where the start address is the location of the first data to be programmed. The Status Register bank write status bit SR0 should be read to check that the P/EC is ready for the next word.
- 2. Each subsequent word to be programmed is latched with a new bus write operation. The address can either remain the start address, in which case the P/EC increments the address location, or the address can be incremented, in which case the P/EC jumps to the new address. If any address is given with data FFFFh that is not in the same block as the start address, the program phase terminates and the verify phase begins. The Status Register bit SR0 should be read between each bus write cycle to check that the P/EC is ready for the next word.
- 3. Finally, after all words have been programmed, write one bus write operation with data FFFFh to any address outside the block containing the start address, to terminate the programming phase. If the data is not FFFFh, the command is ignored.

The memory is now set to enter the verify phase.



#### 6.4.3 Verify phase

The verify phase is similar to the program phase in that all words must be resent to the memory for them to be checked against the programmed data. The Program/Erase Controller checks the stream of data with the data that was programmed in the program phase and reprograms the memory location, if necessary.

Three successive steps are required to execute the verify phase of the command.

- 1. Use one bus write operation to latch the start address and the first word, to be verified. The Status Register bit SR0 should be read to check that the Program/Erase Controller is ready for the next word.
- 2. Each subsequent word to be verified is latched with a new bus write operation. The words must be written in the same order as in the program phase. The address can remain the start address or be incremented. If any address is given with data FFFFh that is not in the same block as the start address, the verify phase terminates. Status Register bit SR0 should be read to check that the P/EC is ready for the next word.
- 3. Finally, after all words have been verified, write one bus write operation with data FFFFh to any address outside the block containing the start address, to terminate the verify phase.

If the verify phase is successfully completed the memory remains in Read Status Register mode. If the Program/Erase Controller fails to reprogram a given location, the error is signaled in the Status Register.

#### 6.4.4 Exit phase

Status Register P/EC bit SR7 set to '1' indicates that the device has returned to read mode. A full Status Register check should be done to ensure that the block has been successfully programmed. See *Section 7: Status Register* for more details.

#### 6.5 Quadruple Enhanced Factory Program command

The Quadruple Enhanced Factory Program command programs one or more pages of four adjacent words in parallel. The four words must only differ for the addresses A0 and A1.

 $V_{PP}$  must be set to  $V_{PPH}$  during the Quadruple Enhanced Factory Program, otherwise the command is ignored and the Status Register does not output any error.

Dual operations are not supported during Quadruple Enhanced Factory Program operations and the command cannot be suspended.

If the block is protected then the Quadruple Enhanced Factory Program operation aborts, the data in the block does not change and the Status Register outputs the error.

The Quadruple Enhanced Factory Program command has four phases: the setup phase, the load phase where the data is loaded into the buffer, the combined program and verify phase where the loaded data is programmed to the memory and then automatically checked and reprogrammed if necessary, and the Exit Phase. Unlike the Enhanced Factory Program it is not necessary to resubmit the data for the verify phase. The load phase and the program and verify phase can be repeated to program any number of pages within the block.



#### 6.5.1 Setup phase

The Quadruple Enhanced Factory Program command requires one bus write operation to initiate the load phase. After the setup command is issued, read operations output the Status Register data. The Read Status Register command must not be issued, otherwise is is interpreted as data to program.

#### 6.5.2 Load phase

The load phase requires 4 cycles to load the data (refer to *Table 7: Factory program commands* and *Figure 28: Quadruple enhanced factory program flowchart*). Once the first word of each page is written it is impossible to exit the load phase until all four words have been written.

Two successive steps are required to issue and execute the load phase of the Quadruple Enhanced Factory Program command:

- 1. Use one bus write operation to latch the start address and the first word of the first page to be programmed, where the start address is the location of the first data to be programmed. For subsequent pages the first word address can remain the start address (in which case the next page is programmed) or can be any address in the same block. If any address with data FFFFh is given that is not in the same block as the start address, the device enters the exit phase. For the first load phase Status Register bit SR7 should be read after the first word has been issued to check that the command has been accepted (bit SR7 set to '0'). This check is not required for subsequent load phases.
- 2. Each subsequent word to be programmed is latched with a new bus write operation. The address is only checked for the first word of each page as the order of the words to be programmed is fixed.

The memory is now set to enter the program and verify phase.

#### 6.5.3 Program and verify phase

In the program and verify phase the four words that were loaded in the load phase are programmed in the memory array and then verified by the Program/Erase Controller. If any errors are found the Program/Erase Controller reprograms the location. During this phase the Status Register shows that the Program/Erase Controller is busy, Status Register bit SR7 is set to '0', and that the device is not waiting for new data, Status Register bit SR0 set to '1'. When Status Register bit SR0 is set to '0' the program and verify phase has terminated.

Once the verify phase has successfully completed, subsequent pages in the same block can be loaded and programmed. The device returns to the beginning of the load phase by issuing one bus write operation to latch the address and the first of the four new words to be programmed.

#### 6.5.4 Exit phase

Finally, after all the pages have been programmed, write one bus write operation with data FFFFh to any address outside the block containing the start address, to terminate the load and program and verify phases.



Status Register bit SR7 set to '1' and bit SR0 set to '0' indicate that the Quadruple Enhanced Factory Program command has terminated. A full Status Register check should be done to ensure that the block has been successfully programmed. See *Section 7: Status Register* for more details.

If the program and verify phase has successfully completed, the memory returns to read mode. If the P/EC fails to program and reprogram a given location, the error is signaled in the Status Register.

	Phase	Cycles	Bus write operations <sup>(1)</sup>										
Command			1st		2nd		3rd			Final -1		Final	
		0	Add	Data	Add	Data	Add	Data		Add	Data	Add	Data
Bank Erase		2	BKA	80h	BKA	D0h							
Double Word Program <sup>(2)</sup>		3	BKA or WA1 <sup>(3)</sup>	35h	WA1	PD1	WA2	PD2					
Quadruple Word Program <sup>(4)</sup>		5	BKA or WA1 <sup>(3)</sup>	56h	WA1	PD1	WA2	PD2		WA3	PD3	WA4	PD4
Enhanced Factory Program <sup>(5)</sup>	Setup, program	2+ n+1	BKA or WA1 <sup>(3)</sup>	30h	BA or WA1 <sup>(6)</sup>	D0h	WA1 <sup>(7)</sup>	PD1		WAn <sup>(8)</sup>	PAn	NOT WA1 <sup>(7)</sup>	FFFFh
	Verify, exit	n+1	WA1 <sup>(7)</sup>	PD1	WA2 <sup>(8)</sup>	PD2	WA3 <sup>(8)</sup>	PD3		WAn <sup>(8)</sup>	PAn	NOT WA1 <sup>(7)</sup>	FFFFh
Quadruple Enhanced Factory Program (4),(5)	Setup, first load	5	BKA or WA1 <sup>(3)</sup>	75h	WA1 <sup>(7)</sup>	PD1	WA2 <sup>(9)</sup>	PD2		WA3 <sup>(9)</sup>	PD3	WA4 <sup>(9)</sup>	PD4
	First program & verify		Automatic										
	Subsequent loads	4	WA1i (7)	PD1i	WA2i <sup>(9)</sup>	PD2i	WA3i <sup>(9)</sup>	PD3i				WA4i <sup>(9)</sup>	PD4i
	Subsequent program & verify		Automatic										
	Exit	1	NOT WA1 <sup>(7)</sup>	FFFFh									

#### Table 7. Factory program commands

1. WA = Word Address in targeted bank, BKA = Bank Address, PD = Program Data, BA = Block Address.

2. Word addresses 1 and 2 must be consecutive addresses differing only for A0.

3. Any address within the bank can be used.

4. Word addresses 1,2,3 and 4 must be consecutive addresses differing only for A0 and A1.

5. A bus read must be done between each write cycle where the data is programmed or verified to read the Status Register and check that the memory is ready to accept the next data. n = number of words, i = number of pages to be programmed.

6. Any address within the block can be used.

7. WA1 is the start address. NOT WA1 is any address that is not in the same block as WA1.

8. Address can remain starting address WA1 or be incremented.

9. Address is only checked for the first word of each page as the order to program the words in each page is fixed so subsequent words in each page can be written to any address.



### 7 Status Register

The Status Register provides information on the current or previous program or erase operations. Issue a Read Status Register command to read the contents of the Status Register (refer to Section 5.2: Read Status Register command for more details). To output the contents, the Status Register is latched and updated on the falling edge of the Chip Enable or Output Enable signals and can be read until Chip Enable or Output Enable returns to  $V_{IH}$ . The Status Register can only be read using single asynchronous or single synchronous reads. Bus read operations from any address within the bank always read the Status Register during program and erase operations as long as no Read Array command has been issued.

The various bits convey information about the status and any errors of the operation. Bits SR7, SR6, SR2 and SR0 provide information on the status of the device and are set and reset by the device. Bits SR5, SR4, SR3 and SR1 give information on errors. They are set by the device but must be reset by issuing a Clear Status Register command or a hardware reset. If an error bit is set to '1' the Status Register should be reset before issuing another command. SR7 to SR1 refer to the status of the device, while SR0 refers to the status of the addressed bank.

The bits in the Status Register are summarized in *Table 8: Status Register bits*. Refer to *Table 8* in conjunction with the following sections.

### 7.1 Program/Erase Controller status bit (SR7)

The Program/Erase Controller status bit indicates whether the Program/Erase Controller is active or inactive in any bank. When the Program/Erase Controller status bit is Low (set to '0'), the Program/Erase Controller is active. When the bit is High (set to '1'), the Program/Erase Controller is inactive, and the device is ready to process a new command.

The Program/Erase Controller status bit is Low immediately after a Program/Erase Suspend command is issued until the Program/Erase Controller pauses. After the Program/Erase Controller pauses, the bit is High.

During program and erase operations the Program/Erase Controller status bit can be polled to find the end of the operation. Other bits in the Status Register should not be tested until the Program/Erase Controller completes the operation and the bit is High.

After the Program/Erase Controller completes its operation the erase status, program status,  $V_{PP}$  status and block lock status bits should be tested for errors.

57

### 7.2 Erase suspend status bit (SR6)

The erase suspend status bit indicates that an erase operation has been suspended or is going to be suspended in the addressed block. When the erase suspend status bit is High (set to '1'), a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command.

The erase suspend status should only be considered valid when the Program/Erase Controller status bit is High (Program/Erase Controller inactive). SR7 is set within the erase suspend latency time of the Program/Erase Suspend command being issued, therefore, the memory may still complete the operation instead of entering the suspend mode.

When a Program/Erase Resume command is issued, the erase suspend status bit returns Low.

### 7.3 Erase status bit (SR5)

The erase status bit identifies if the memory has failed to verify that the block has erased correctly. When the erase status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the block and still failed to verify that it has erased correctly. The erase status bit should be read once the Program/Erase Controller status bit is High (Program/Erase Controller inactive).

Once set High, the erase status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new program or erase command is issued, otherwise the new command appears to fail.

### 7.4 Program status bit (SR4)

The program status bit is used to identify a program failure, or an attempt to program a '1' to an already programmed bit when  $V_{PP} = V_{PPH}$ .

When the program status bit is High (set to '1'), the Program/Erase Controller has applied the maximum number of pulses to the byte and still failed to verify that it has programmed correctly.

After an attempt to program a '1' to an already-programmed bit, the program status bit SR4 only goes High (set to '1') if  $V_{PP} = V_{PPH}$  (if  $V_{PP}$  is different from  $V_{PPH}$ , SR4 remains Low (set to '0'), and the attempt is not shown).

The program status bit should be read once the Program/Erase Controller status bit is High (Program/Erase Controller inactive).

Once set High, the program status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High, it should be reset before a new command is issued, otherwise the new command appears to fail.



#### 7.5 V<sub>PP</sub> status bit (SR3)

The V<sub>PP</sub> status bit identifies an invalid voltage on the V<sub>PP</sub> pin during program and erase operations. The V<sub>PP</sub> pin is only sampled at the beginning of a program or erase operation. Indeterminate results can occur if V<sub>PP</sub> becomes invalid during an operation.

When the V<sub>PP</sub> status bit is Low (set to '0'), the voltage on the V<sub>PP</sub> pin was sampled at a valid voltage. When the V<sub>PP</sub> status bit is High (set to '1'), the V<sub>PP</sub> pin has a voltage that is below the V<sub>PP</sub> lockout voltage, V<sub>PPLK</sub>, the memory is protected, and Program and Erase operations cannot be performed.

Once set High, the  $V_{PP}$  status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new program or erase command is issued, otherwise the new command appears to fail.

#### 7.6 Program suspend status bit (SR2)

The program suspend status bit indicates that a program operation has been suspended in the addressed block. When the program suspend status bit is High (set to '1'), a Program/Erase Suspend command has been issued and the memory is waiting for a Program/Erase Resume command. The program suspend status should only be considered valid when the Program/Erase Controller status bit is High (Program/Erase Controller inactive). SR2 is set within the program suspend latency time of the Program/Erase Suspend command being issued, therefore, the memory may still complete the operation rather than entering the suspend mode.

When a Program/Erase Resume command is issued the program suspend status bit returns Low.

#### 7.7 Block protection status bit (SR1)

The block protection status bit identifies if a program or block erase operation has tried to modify the contents of a locked or locked-down block.

When the block protection status bit is High (set to '1'), a program or erase operation has been attempted on a locked or locked-down block.

Once set High, the block protection status bit can only be reset Low by a Clear Status Register command or a hardware reset. If set High it should be reset before a new command is issued, otherwise the new command appears to fail.

57

### 7.8 Bank write/multiple word program status bit (SR0)

The bank write status bit indicates whether the addressed bank is programming or erasing. In enhanced factory program mode the multiple word program bit shows if a word has finished programming or verifying depending on the phase. The bank write status bit should only be considered valid when the Program/Erase Controller status bit SR7 is Low (set to '0').

When both the Program/Erase Controller status bit and the bank write status bit are Low (set to '0'), the addressed bank is executing a program or erase operation. When the Program/Erase Controller status bit is Low (set to '0') and the bank write status bit is High (set to '1'), a program or erase operation is being executed in a bank other than the one being addressed.

In enhanced factory program mode if multiple word program status bit is Low (set to '0'), the device is ready for the next word. If the multiple word program status bit is High (set to '1'), the device is not ready for the next word.

Refer to Appendix C: Flowcharts and pseudo codes for using the Status Register.



lable	8. Status Register	DILƏ				
Bit	Name	Туре	Logic Level <sup>(1)</sup>		Definition	
SR7	P/EC status	Status	'1'	Ready		
367	F/EC Status	Sialus	'0'	Busy	eady usy ase suspended ase in progress or completed ase error ase success ogram error ogram success ogram success $p_p$ invalid, abort $p_p$ OK ogram suspended ogram in progress or completed ogram/erase on protected block, abort o operation to protected blocks R7 = '1' Not allowed R7 = '1' Not allowed R7 = '1' No program or erase operation in a bank other than the addressed bank R7 = '1' No program or erase operation in the device R7 = '1' Not allowed R7 = '1' The device is not ready for the next word R7 = '1' The device is exiting EFP	
SR6	Erase suspend status	Status	'1'	Erase sus	ase in progress or completed	
310	Liase suspend status	Sialus	'0'	Erase in p	progress or completed	
SR5	Erase status			or		
363		EIIOI	'0'	Erase suc	ccess	
SR4	Bragram status	Error	'1'	Erase success Program error Program success V <sub>PP</sub> invalid, abort V <sub>PP</sub> OK Program suspended Program in progress or completed		
584	Program status	EIIOI	'0'	Program s	success	
SR3		Free	'1'	V <sub>PP</sub> invali	d, abort	
583	V <sub>PP</sub> status	Error	'0'	V <sub>PP</sub> OK		
SR2	Program suspend status	Status	'1'	Program suspended		
SK2			'0'	Program in progress or completed		
SR1	Block protection status	Error	'1'	Program/erase on protected block, abort		
SKI	Block protection status	EIIOI	'0'	Program/erase on protected block, abort No operation to protected blocks		
				SR7 = '1'	Not allowed	
			'1'	SR7 = '0'		
	Bank write status	Status	'0'	SR7 = '1'		
SR0			0	SR7 = '0'		
				SR7 = '1'	Not allowed	
	Multiple word program status (enhanced factory	Status	'1'	SR7 = '0'	-	
	program mode)		'0'	SR7 = '1'	The device is exiting EFP	
			U	SR7 = '0'	The device is ready for the next word	

 Table 8.
 Status Register bits

1. Logic level '1' is High, '0' is Low.

57

# 8 Configuration Register

The Configuration Register configures the type of bus access that the memory performs. Refer to *Section 9* for details on read operations.

The Configuration Register is set through the command interface. After a reset or power-up the device is configured for asynchronous page read (CR15 = 1). The Configuration Register bits are described in *Table 10*. They specify the selection of the burst length, burst type, burst X latency, and the read operation. Refer to Figures 5 and 6 for examples of synchronous burst configurations.

# 8.1 Read select bit (CR15)

The read select bit, CR15, switches between asynchronous and synchronous bus read operations. When the read select bit is set to '1', read operations are asynchronous, and when it is set to '0', read operations are synchronous. Synchronous burst read is supported in both parameter and main blocks and can be performed across banks.

On reset or power-up the read select bit is set to'1' for asynchronous access.

# 8.2 X latency bits (CR13-CR11)

The X latency bits are used during Synchronous read operations to set the number of clock cycles between the address being latched and the first data becoming available. For correct operation the X latency bits can only assume the values in *Table 10: Configuration Register*.

*Table 9* shows how to set the X latency parameter, taking into account the speed class of the device and the frequency used to read the Flash memory in synchronous mode.

fmax	tKmin	X latency (Min)					
IIIIdX	trainin	Speed 60 ns	Speed 70 ns				
30 MHz	33 ns	2	2				
40 MHz	25 ns	2	3				
54 MHz	19 ns	3	3				
66 MHz	15 ns	4	4				

 Table 9.
 Latency settings

# 8.3 Wait polarity bit (CR10)

In synchronous burst mode the Wait signal indicates whether the output data is valid or a WAIT state must be inserted. The Wait polarity bit is used to set the polarity of the Wait signal. When the Wait polarity bit is set to '0' the Wait signal is active Low. When the Wait polarity bit is set to '1' the Wait signal is active High.

51

## 8.4 Data output configuration bit (CR9)

The data output configuration bit determines whether the output remains valid for one or two clock cycles. When the data output configuration bit is '0' the output data is valid for one clock cycle, and when it is '1' the output data is valid for two clock cycles.

The data output configuration depends on the condition:

•  $t_{K} > t_{KQV} + t_{QVK_CPU}$ 

where  $t_K$  is the clock period,  $t_{QVK\_CPU}$  is the data setup time required by the system CPU and  $t_{KQV}$  is the clock to data valid time. If this condition is not satisfied, the data output configuration bit should be set to '1' (two clock cycles). Refer to *Figure 5: X latency and data output configuration example*.

## 8.5 Wait configuration bit (CR8)

In burst mode the Wait bit controls the timing of the Wait output pin, WAIT. When WAIT is asserted, data is not valid and when WAIT is de-asserted, data is valid. When the Wait bit is '0' the Wait output pin is asserted during the wait state. When the Wait bit is '1' the Wait output pin is asserted one clock cycle before the wait state.

## 8.6 Burst type bit (CR7)

The burst type bit configures the sequence of addresses read as sequential or interleaved. When the burst type bit is '0' the memory outputs from interleaved addresses. When the burst type bit is '1' the memory outputs from sequential addresses. See *Table 11: Burst type definition* for the sequence of addresses output from a given starting address in each mode.

### 8.7 Valid Clock edge bit (CR6)

The valid Clock edge bit, CR6, configures the active edge of the Clock, K, during synchronous burst read operations. When the valid Clock edge bit is '0' the falling edge of the Clock is the active edge, and when the valid Clock edge bit is '1' the rising edge of the Clock is active.

### 8.8 Wrap burst bit (CR3)

The burst reads can be confined inside the 4 or 8 word boundary (wrap) or can overcome the boundary (no wrap). The wrap burst bit selects either wrap and no wrap. When the wrap burst bit is set to '0' the burst read wraps, and when it is set to '1' the burst read does not wrap.

57

# 8.9 Burst length bits (CR2-CR0)

The burst length bits set the number of words to be output during a synchronous burst read operation as result of a single address latch cycle. They can be set for 4 words, 8 words, 16 words, or continuous burst, where all the words are read sequentially.

In continuous burst mode the burst sequence can cross bank boundaries.

In continuous burst mode or in 4, 8, 16 words no-wrap, depending on the starting address, the device asserts the WAIT output to indicate that a delay is necessary before the data is output.

If the starting address is aligned to a 4 word boundary no wait states are needed and the WAIT output is not asserted.

If the starting address is shifted by 1, 2 or 3 positions from the four word boundary, WAIT is asserted for 1, 2 or 3 clock cycles when the burst sequence crosses the first 16 word boundary. This indicates that the device needs an internal delay to read the successive words in the array. WAIT is only asserted once during a continuous burst access. See also *Table 11: Burst type definition*.

CR14, CR5 and CR4 are reserved for future use.



Table 10.	Configuration	Register	
Bit	Description	Value	Description
CR15	Pood soloct	0	Synchronous read
CK 15	Description         Read select         Reserved         11         X latency         11         X latency         Wait polarity         Data output configuration         Wait configuration         Burst type         Valid Clock edge         4         Reserved	1	Asynchronous read (default at power-on)
CR14	Reserved		·
	$ \begin{array}{c} \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \ \$	010	2 clock latency
		011	3 clock latency
CR13-CR11	X latanav	100	4 clock latency
CK13-CK11	Allatericy	101	5 clock latency
		111	Reserved (default)
		Other con	figurations reserved
0010	Moit polority	0	WAIT is active Low
CR10	wait polarity	1	WAIT is active High (default)
CR9	Data output	0	Data held for one clock cycle
CR9	configuration	1	Data held for two clock cycles (default)
	Wait	0	WAIT is active during wait state
CR8	configuration	1	WAIT is active one data cycle before wait state (default)
007	Durat tura	0	Interleaved
CR7	Burst type	1	Sequential (default)
CR6	Valid Clock	0	Falling Clock edge
CRO	edge	1	Rising Clock edge (default)
CR5-CR4	Reserved		
CR3	Wrop burgt	0	Wrap
CR3	wrap burst	1	No wrap (default)
		001	4 words
CR2-CR0	Durat longth	010	8 words
	Burstiength	011	16 words
		111	Continuous (CR7 must be set to '1') (default)

 Table 10.
 Configuration Register



Mode	Start	4 w	ords	8 words		16 wc	Continuous	
Mo	addr	Sequential	Interleaved	Sequential	Interleaved	Sequential	Interleaved	burst
	0	0-1-2-3	0-1-2-3	0-1-2-3-4- 5-6-7	0-1-2-3-4-5- 6-7	0-1-2-3-4-5-6- 7-8-9-10-11-12- 13-14-15	0-1-2-3-4-5-6- 7-8-9-10-11- 12-13-14-15	0-1-2-3-4-5-6
	1	1-2-3-0	1-0-3-2	1-2-3-4-5- 6-7-0	1-0-3-2-5-4- 7-6	8-9-10-11-12-		1-2-3-4-5-6-7- 15-WAIT-16- 17-18
	2	2-3-0-1	2-3-0-1	2-3-4-5-6- 7-0-1	2-3-0-1-6-7- 4-5	2-3-4-5-6-7-8- 9-10-11-12-13- 14-15-0-1	2-3-0-1-6-7-4- 5-10-11-8-9- 14-15-12-13	2-3-4-5-6- 715-WAIT- WAIT-16-17- 18
	3	3-0-1-2	3-2-1-0	3-4-5-6-7- 0-1-2	3-2-1-0-7-6- 5-4	3-4-5-6-7-8-9- 10-11-12-13- 14-15-0-1-2	3-2-1-0-7-6-5- 4-11-10-9-8- 15-14-13-12	3-4-5-6-715- WAIT-WAIT- WAIT-16-17- 18
ap								
Wrap	7	7-4-5-6	7-6-5-4	7-0-1-2-3- 4-5-6	7-6-5-4-3-2- 1-0	7-8-9-10-11-12- 13-14-15-0-1-2- 3-4-5-6	7-6-5-4-3-2-1- 0-15-14-13- 12-11-10-9-8	7-8-9-10-11-12- 13-14-15-WAIT- WAIT-WAIT-16- 17
	12							12-13-14-15- 16-17-18
	13							13-14-15-WAIT- 16-17-18
	14							14-15-WAIT- WAIT-16-17- 18
	15							15-WAIT-WAIT- WAIT-16-17- 18

### Table 11. Burst type definition

**Configuration Register** 



de	Start	4 w	ords	8 w	ords	16 wc	ords	Continuous
Mode	addr	Sequential	Interleaved	Sequential	Interleaved	Sequential	Interleaved	burst
	0	0-1-2-3		0-1-2-3-4- 5-6-7		0-1-2-3-4-5-6- 7-8-9-10-11-12- 13-14-15		
	1	1-2-3-4		1-2-3-4-5- 6-7-8		1-2-3-4-5-6-7- 8-9-10-11-12- 13-14-15-WAIT- 16		
	2	2-3-4-5		2-3-4-5-6- 7-8-9		2-3-4-5-6-7-8- 9-10-11-12-13- 14-15-WAIT- WAIT-16-17		
	3	3-4-5-6		3-4-5-6-7- 8-9-10		3-4-5-6-7-8-9- 10-11-12-13- 14-15-WAIT- WAIT-WAIT-16- 17-18		
No-wrap	7	7-8-9-10		7-8-9-10- 11-12-13- 14		7-8-9-10-11-12- 13-14-15-WAIT- WAIT-WAIT-16- 17-18-19-20- 21-22		Same as for Wrap (Wrap /No Wrap has no effect on
		L	1					Continuous Burst)
	12	12-13-14- 15		12-13-14- 15-16-17- 18-19		12-13-14-15- 16-17-18-19- 20-21-22-23- 24-25-26-27		
	13	13-14-15- WAIT-16		13-14-15- WAIT-16- 17-18-19- 20		13-14-15-WAIT- 16-17-18-19- 20-21-22-23- 24-25-26-27-28		
	14	14-15- WAIT- WAIT-16-17		14-15- WAIT- WAIT-16- 17-18-19- 20-21		14-15-WAIT- WAIT-16-17-18- 19-20-21-22- 23-24-25-26- 27-28-29		
	15	15-WAIT- WAIT- WAIT-16- 17-18		15-WAIT- WAIT- WAIT-16- 17-18-19- 20-21-22		15-WAIT-WAIT- WAIT-16-17-18- 19-20-21-22- 23-24-25-26- 27-28-29-30		

### Table 11. Burst type definition (continued)



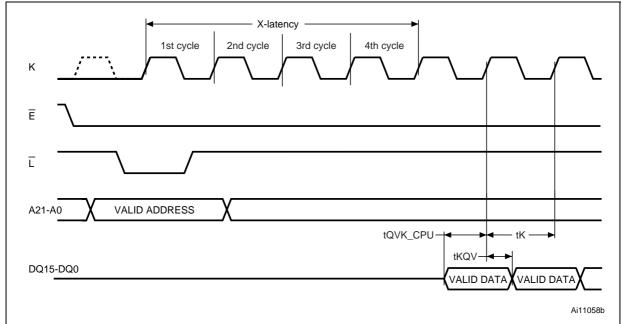


Figure 5. X latency and data output configuration example

1. Settings shown: X-latency = 4, Data Output held for one clock cycle.

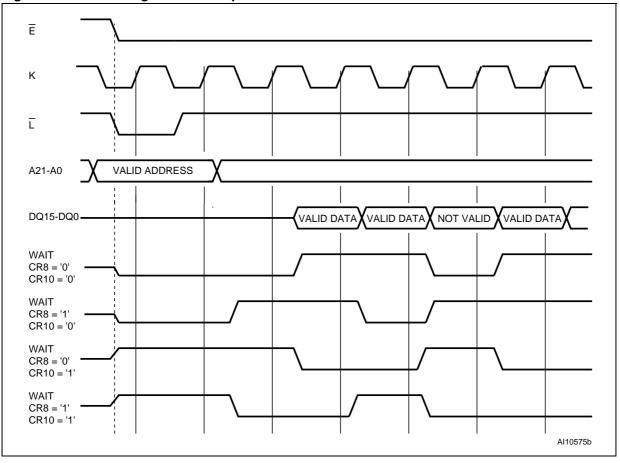


Figure 6. Wait configuration example

5

# 9 Read modes

Read operations can be performed in two different ways depending on the settings in the Configuration Register. If the Clock signal is 'don't care' for the data output, the read operation is asynchronous. If the data output is synchronized with Clock, the read operation is synchronous.

The read mode and data output format are determined by the Configuration Register (see Section 8: Configuration Register for details). All banks supports both asynchronous and synchronous read operations. The multiple bank architecture allows read operations in one bank, while write operations are being executed in another (see Tables 12 and 13).

### 9.1 Asynchronous read mode

In asynchronous read operations the Clock signal is 'don't care'. The device outputs the data corresponding to the address latched, which is the memory array, Status Register, common Flash interface or the Electronic Signature, depending on the command issued. CR15 in the Configuration Register must be set to '1' for asynchronous operations.

In asynchronous read mode a page of data is internally read and stored in a page buffer. The page has a size of 4 words and is addressed by A0 and A1 address inputs. The address inputs A0 and A1 are not gated by Latch Enable in asynchronous read mode.

The first read operation within the page has a longer access time ( $T_{acc}$ , random access time), while subsequent reads within the same page have much shorter access times. If the page changes then the normal, longer timings apply again.

Asynchronous read operations can be performed in two different ways: asynchronous random access read and asynchronous page read. Only asynchronous page read takes full advantage of the internal page storage so different timings are applied.

During asynchronous read operations, after a bus inactivity of 150 ns, the device automatically switches to automatic standby mode. In this condition the power consumption is reduced to the standby value and the outputs are still driven.

In asynchronous read mode, the WAIT signal is always asserted.

See Table 22: Asynchronous read AC characteristics, Figure 9: Asynchronous random access read AC waveforms and Figure 10: Asynchronous page read AC waveforms for details.



# 9.2 Synchronous burst read mode

In synchronous burst read mode the data is output in bursts synchronized with the clock. It is possible to perform burst reads across bank boundaries.

Synchronous burst read mode can only be used to read the memory array. For other read operations, such as read Status Register, read CFI and read electronic signature, single synchronous read, or asynchronous random access read must be used.

In synchronous burst read mode the flow of the data output depends on parameters that are configured in the Configuration Register.

A burst sequence is started at the first clock edge (rising or falling depending on valid Clock edge bit CR6 in the Configuration Register) after the falling edge of Latch Enable or Chip Enable, whichever occurs last. Addresses are internally incremented and after a delay of 2 to 5 clock cycles (X latency bits CR13-CR11) the corresponding data is output on each clock cycle.

The number of words to be output during a synchronous burst read operation can be configured as 4, 8, 16 words, or continuous (burst length bits CR2-CR0). The data can be configured to remain valid for one or two clock cycles (data output configuration bit CR9).

The order of the data output can be modified through the burst type and the wrap burst bits in the Configuration Register. The burst sequence may be configured to be sequential or interleaved (CR7). The burst reads can be confined inside the 4, 8 or 16 word boundary (wrap) or overcome the boundary (no wrap). If the starting address is aligned to the burst length (4, 8 or 16 words) the wrapped configuration has no impact on the output sequence. Interleaved mode is not allowed in continuous burst read mode or with no wrap sequences.

A WAIT signal may be asserted to indicate to the system that an output delay will occur. This delay depends on the starting address of the burst sequence. The worst case delay occurs when the sequence is crossing a 16 word boundary and the starting address was at the end of a 4 word boundary.

WAIT is asserted during X latency, the Wait state and at the end of 4-, 8- or 16-word burst. It is only de-asserted when output data is valid. In continuous burst read mode a Wait state occurs when crossing the first 16 word boundary. If the burst starting address is aligned to a 4 word page, the Wait state does not occur.

The WAIT signal can be configured to be active Low or active High by setting CR10 in the Configuration Register. The WAIT signal is meaningful only in synchronous burst read mode. In other modes, WAIT is always asserted (except for read array mode).

See Table 23: Synchronous read AC characteristics and Figure 11: Synchronous burst read AC waveforms for details.



## 9.3 Synchronous burst read suspend

A synchronous burst read operation can be suspended, freeing the data bus for other higher priority devices. It can be suspended during the initial access latency time (before data is output), or after the device has output data. When the synchronous burst read operation is suspended, internal array sensing continues and any previously latched internal data is retained. A burst sequence can be suspended and resumed as often as required as long as the operating conditions of the device are met.

A synchronous burst read operation is suspended when  $\overline{E}$  is low and the current address has been latched (on a Latch Enable rising edge or on a valid clock edge). The clock signal is then halted at V<sub>IH</sub> or at V<sub>IL</sub>, and  $\overline{G}$  goes high.

When  $\overline{G}$  becomes low again and the clock signal restarts, the synchronous burst read operation is resumed exactly where it stopped.

WAIT being gated by  $\overline{E}$  remains active and does not revert to high-impedance when  $\overline{G}$  goes high. Therefore, if two or more devices are connected to the system's READY signal, to prevent bus contention the WAIT signal of the Flash memory should not be directly connected to the system's READY signal.

See Table 23: Synchronous read AC characteristics and Figure 13: Synchronous burst read suspend AC waveforms for details.

### 9.4 Single synchronous read mode

Single synchronous read operations are similar to synchronous burst read operations, except that only the first data output after the X latency is valid. Synchronous single reads are used to read the electronic signature, Status Register, CFI, block protection status, Configuration Register status or Protection Register. When the addressed bank is in read CFI, read Status Register or read electronic signature mode, the WAIT signal is always asserted.

See Table 23: Synchronous read AC characteristics and Figure 12: Single synchronous read AC waveforms for details.

57

# **10** Dual operations and multiple bank architecture

The multiple bank architecture of the M58WR064HT/B provides flexibility for software developers by allowing code and data to be split with 4 Mbit granularity. The dual operations feature simplifies the software management of the device and allows code to be executed from one bank while another bank is being programmed or erased.

The dual operations feature means that while programming or erasing in one bank, read operations are possible in another bank with zero latency (only one bank at a time is allowed to be in program or erase mode). If a read operation is required in a bank, which is programming or erasing, the program or erase operation can be suspended. Also, if the suspended operation was erase then a program command can be issued to another block. Therefore, the device can have one block in erase suspend mode, one programming, and other banks in read mode. Bus read operations are allowed in another bank between setup and confirm cycles of program or erase operations. The combination of these features means that read operations are possible at any moment.

Dual operations between the parameter bank and either the CFI, OTP or the electronic signature memory space are not allowed. *Table 14*, however, shows dual operations, which are allowed between the CFI, OTP, electronic signature locations, and the memory array.

Tables 12 and 13 show the dual operations possible in other banks and in the same bank. For a complete list of possible commands refer to *Appendix D: Command interface state tables*.

	Commands allowed in another bank									
Status of bank	Read Array	Read Status Register	Read CFI Query	Read Electronic Signature	Program	Block Erase	Program/ Erase Suspend	Program/ Erase Resume		
Idle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Programming	Yes	Yes	Yes	Yes	-	-	Yes	—		
Erasing	Yes	Yes	Yes	Yes	-	-	Yes	-		
Program suspended	Yes	Yes	Yes	Yes	-	-	-	Yes		
Erase Suspended	Yes	Yes	Yes	Yes	Yes	_	_	Yes		

 Table 12.
 Dual operations allowed in other banks



57

	Commands allowed in same bank									
Status of bank	Read Array	Read Status Register	Read CFI Query	Read Electronic Signature	Program	Block Erase	Program/ Erase Suspend	Program/ Erase Resume		
Idle	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes		
Programming	_(2)	Yes	Yes	Yes	-	-	Yes	-		
Erasing	_(2)	Yes	Yes	Yes	-	-	Yes	-		
Program suspended	Yes <sup>(1)</sup>	Yes	Yes	Yes	-	-	-	Yes		
Erase suspended	Yes <sup>(1)</sup>	Yes	Yes	Yes	Yes <sup>(1)</sup>	_	-	Yes		

#### Table 13. Dual operations allowed in same bank

1. Not allowed in the block or word that is being erased or programmed.

2. The Read Array command is accepted but the data output is no guaranteed until the program or erase has completed.

Table 14.Dual operation limitations

		Commands allowed						
Current status		Read CFI/OTP/	Read	Read main blocks				
Currer	it status	Electronic Signature	Parameter Blocks	Located in parameter bank	Not located in parameter bank			
•	ning/erasing ter blocks	No	No	No	Yes			
Programming/	Located in parameter bank	Yes	No	No	Yes			
erasing main blocks	Not located in parameter bank	Yes	Yes	Yes	In different bank only			
Program	iming OTP	No	No	No	No			

# 11 Block locking

The M58WR064HT/B features an instant, individual block locking scheme that allows any block to be locked or unlocked with no latency. This locking scheme has three levels of protection:

- Lock/unlock this first level allows software-only control of block locking.
- Lock-down this second level requires hardware interaction before locking can be changed.
- V<sub>PP</sub> ≤V<sub>PPLK</sub> the third level offers a complete hardware protection against program and erase on all blocks.

The protection status of each block can be set to locked, unlocked, and lock-down. *Table 15* defines all of the possible protection states ( $\overline{WP}$ , DQ1, DQ0), and *Appendix C*, *Figure 25*, shows a flowchart for the locking operations.

# 11.1 Reading the block lock status

The lock status of every block can be read in the read electronic signature mode of the device. To enter this mode write 90 h to the device. Subsequent reads at the address specified in *Table 6* output the protection status of that block. The lock status is represented by DQ0 and DQ1. DQ0 indicates the block lock/unlock status and is set by the lock command and cleared by the unlock command. It is also automatically set when entering lock-down. DQ1 indicates the lock-down status and is set by the lock-down command. It cannot be cleared by software, only by a hardware reset or power-down.

The following sections explain the operation of the locking system.

## 11.2 Locked state

The default status of all blocks on power-up or after a hardware reset is locked (states (0,0,1) or (1,0,1)). Locked blocks are fully protected from any program or erase. Any program or erase operations attempted on a locked block returns an error in the Status Register. The status of a locked block can be changed to unlocked or lock-down using the appropriate software commands. An unlocked block can be locked by issuing the lock command.

# 11.3 Unlocked state

Unlocked blocks (states (0,0,0), (1,0,0) (1,1,0)) can be programmed or erased. All unlocked blocks return to the locked state after a hardware reset or when the device is powered-down. The status of an unlocked block can be changed to locked or locked-down using the appropriate software commands. A locked block can be unlocked by issuing the Unlock command.

#### M58WR064HT, M58WR064HB

### 11.4 Lock-down state

Blocks that are locked-down (state (0,1,x)) are protected from program and erase operations (as for locked blocks) but their protection status cannot be changed using software commands alone. A locked or unlocked block can be locked down by issuing the Lock-Down command. Locked-down blocks revert to the locked state when the device is reset or powered-down.

The lock-down function is dependent on the  $\overline{WP}$  input pin. When  $\overline{WP}=0$  (V<sub>IL</sub>), the blocks in the lock-down state (0,1,x) are protected from program, erase, and protection status changes. When  $\overline{WP}=1$  (V<sub>IH</sub>) the lock-down function is disabled (1,1,x) and locked-down blocks can be individually unlocked to the (1,1,0) state by issuing the software command, where they can be erased and programmed. These blocks can then be re-locked (1,1,1) and unlocked (1,1,0) as desired while  $\overline{WP}$  remains high. When  $\overline{WP}$  is Low, blocks that were previously locked-down return to the lock-down state (0,1,x) regardless of any changes made while  $\overline{WP}$  was High. Device reset or power-down resets all blocks, including those in lock-down, to the locked state.

## 11.5 Locking operations during erase suspend

Changes to block lock status can be performed during an erase suspend by using the standard locking command sequences to unlock, lock or lock-down a block. This is useful in the case when another block needs to be updated while an erase operation is in progress.

To change block locking during an erase operation, first write the Erase Suspend command, then check the status register until it indicates that the erase operation has been suspended. Next, write the desired lock command sequence to a block and the lock status changes. After completing any desired lock, read, or program operations, resume the erase operation with the Erase Resume command.

If a block is locked or locked-down during an erase suspend of the same block, the locking status bits change immediately, but when the erase is resumed, the erase operation completes. Locking operations cannot be performed during a program suspend. Refer to *Appendix D: Command interface state tables* for detailed information on which commands are valid during erase suspend.

\_\_\_\_



#### **Block locking**

	ection status <sup>(1)</sup> Q1, DQ0)	Next protection status <sup>(1)</sup> (WP, DQ1, DQ0)					
Current state Program/erase allowed		After Block Lock command	After Block Unlock command	After Block Lock-Down Command	After WP transition		
1,0,0	yes	1,0,1	1,0,0	1,1,1	0,0,0		
1,0,1 <sup>(2)</sup>	no	1,0,1	1,0,0	1,1,1	0,0,1		
1,1,0	yes	1,1,1	1,1,0	1,1,1	0,1,1		
1,1,1	no	1,1,1	1,1,0	1,1,1	0,1,1		
0,0,0	yes	0,0,1	0,0,0	0,1,1	1,0,0		
0,0,1 <sup>(2)</sup>	no	0,0,1	0,0,0	0,1,1	1,0,1		
0,1,1	no	0,1,1	0,1,1	0,1,1	1,1,1 or 1,1,0 <sup>(3)</sup>		

#### Table 15. Lock status

1. The lock status is defined by the write protect pin and by DQ1 ('1' for a locked-down block) and DQ0 ('1' for a locked block) as read in the Read Electronic Signature command with  $A1 = V_{IH}$  and  $A0 = V_{IL}$ .

2. All blocks are locked at power-up, so the default configuration is 001 or 101 according to  $\overline{\text{WP}}$  status.

3. A  $\overline{\text{WP}}$  transition to  $\text{V}_{\text{IH}}$  on a locked block will restore the previous DQ0 value, giving a 111 or 110.



# 12 **Program and erase times and endurance cycles**

The program and erase times and the number of program/erase cycles per block are shown in *Table 16*. Exact erase times may change depending on the memory array condition. The best case is when all the bits in the block or bank are at '0' (preprogrammed). The worst case is when all the bits in the block or bank are at '1' (not preprogrammed). Usually, the system overhead is negligible with respect to the erase time.

In the M58WR064HT/B the maximum number of program/ erase cycles depends on the  $\rm V_{PP}$  voltage supply used.

	Param	eter	Condition <sup>(1)</sup>	Min	Тур	Typical after 100k W/E cycles	Мах	Unit
		Parameter block (4	KWord) <sup>(2)</sup>		0.3	1	2.5	S
		Main block	Preprogrammed		0.8	3	4	S
	Erase	(32 KWord)	Not preprogrammed		1		4	S
		neterCondition <sup>(1)</sup> MinTyp100k W/E cyclesIParameter block (4 KWord) <sup>(2)</sup> 0.311Main block (32 KWord)Preprogrammed0.831Bank (4Mbit)Preprogrammed4.511Bank (4Mbit)Preprogrammed611Word program10101010Parameter block (4 KWord)32110Parameter block (32 KWord)25611Program5111Erase511Main blocks100 00011Parameter blocks100 00011Parameter blocks100 00011Parameter block (4 KWord)0.2511Main block (32 KWord)0.811Parameter blocks100 00011Parameter blocks100 00011Parameter blocks100 00011Parameter blocks100 00011Parameter block (4 KWord)0.2511Main block (32 KWord)0.811Parameter block (4 KWord)0.2511Main block (32 KWord)1641Quadruple word <sup>(4)</sup> 6411Main blockQuadruple word <sup>(4)</sup> 0.71Bank (4 Mbit)Quad-enhanced factory program <sup>(4)</sup> 0.51Main blocks111Main		S				
Δ		Balik (4101011)	Not preprogrammed		6		E Max 2.5 4	S
= V <sub>DD</sub>		Word program			10	10	100	μs
Vpp =	Program <sup>(3)</sup>	Parameter block (4	KWord)		32			ms
>		Main block (32 KW	/ord)		256			ms
	Suspend latency	Program			5		10	μs
	Erase				5		20	μs
	Program/erase	Main blocks		100 000				cycles
	cycles (per block)	Parameter blocks	100 000				cycles	
		Parameter block (4		0.25		2.5	S	
	Erase	Main block (32 KW		0.8		4	S	
		Bank (4Mbit)			6			S
		Word/ double word	l/ quadruple word <sup>(4)</sup>		8		100	μs
_		Parameter block	Quadruple word <sup>(4)</sup>		8			ms
Vррн		(4 KWord)	Word		32			ms
11	<b>D</b> (3)		Quadruple word <sup>(4)</sup>		64			ms
Vpp		(32 KWord)	Word		256			ms
		Bank (4 Mbit)			0.7			s
			Quadruple word <sup>(4)</sup>		0.5			S
	Program/erase	Main blocks					1000	cycles
	cycles (per block)	Parameter blocks					2500	cycles

#### Table 16. Program/erase times and endurance cycles

1.  $T_A = -40$  to 85°C;  $V_{DD} = 1.7$ V to 2V;  $V_{DDQ} = 1.7$  V to 2.24 V.

2. The difference between preprogrammed and not preprogrammed is not significant (<30 ms).

3. Excludes the time needed to execute the command sequence.

4. Measurements performed at 25°C.  $T_A = 25^{\circ}C \pm 5^{\circ}C$  for quadruple word, double word and quadruple enhanced factory program.



# 13 Maximum ratings

Stressing the device above the rating listed in *Table 17: Absolute maximum ratings* may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the operating sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability. Refer also to the STMicroelectronics SURE Program and other relevant quality documents.

Symbol	Parameter	Va	Unit	
Symbol	Faranieter	Min	Max	Onit
T <sub>A</sub>	Ambient operating temperature	-40	85	°C
T <sub>BIAS</sub>	Temperature under bias	-40	125	°C
T <sub>STG</sub>	Storage temperature	-65	155	°C
V <sub>IO</sub>	Input or output voltage	-0.5	V <sub>DDQ</sub> +0.6	V
V <sub>DD</sub>	Supply voltage	-0.2	2.45	V
V <sub>DDQ</sub>	Input/output supply voltage	-0.2	2.45	V
V <sub>PP</sub>	Program voltage	-0.2	14	V
۱ <sub>0</sub>	Output short circuit current		100	mA
t <sub>VPPH</sub>	Time for $V_{PP}$ at $V_{PPH}$		100	hours

Table 17. Absol	ute maximum ratings
-----------------	---------------------



51


# 14 DC and AC parameters

This section summarizes the operating measurement conditions, and the DC and AC characteristics of the device. The parameters in the DC and AC characteristics tables in this section are derived from tests performed under the measurement conditions summarized in *Table 18: Operating and AC measurement conditions*. Designers should check that the operating conditions in their circuit match the operating conditions when relying on the guoted parameters.


	M58WR064HT/B						
Parameter	60		70				
	Min	Мах	Min	Max	Unit		
V <sub>DD</sub> supply voltage	1.7	2	1.7	2	V		
V <sub>DDQ</sub> supply voltage	1.7	2.24	1.7	2.24	V		
V <sub>PP</sub> supply voltage (factory environment)	11.4	12.6	11.4	12.6	V		
V <sub>PP</sub> supply voltage (application environment)	-0.4	V <sub>DDQ</sub> +0.4	-0.4	V <sub>DDQ</sub> +0.4	V		
Ambient operating temperature	-40	85	-40	85	°C		
Load capacitance (C <sub>L</sub> )	30		30		pF		
Input rise and fall times	5		5		ns		
Input pulse voltages	0 to V <sub>DDQ</sub>		0 to V <sub>DDQ</sub>		V		
Input and output timing ref. voltages	V <sub>DDQ</sub> /2		V <sub>DDQ</sub> /2		V		

Table 18.	Operating and AC measurement conditions
-----------	---

#### Figure 7. AC measurement I/O waveform

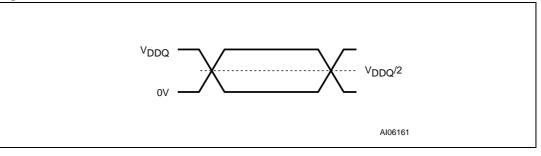

#### DC and AC parameters

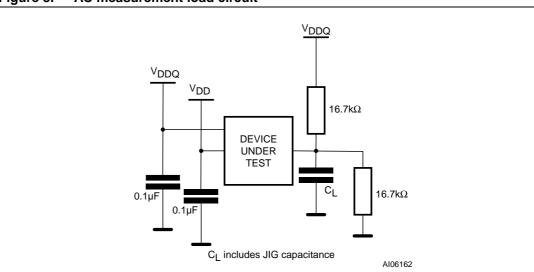

#### Figure 8. AC measurement load circuit

## Table 19. Capacitance<sup>(1)</sup>

Symbol	Parameter Test condition		Min	Max	Unit
C <sub>IN</sub>	Input capacitance	V <sub>IN</sub> = 0 V	6	8	pF
C <sub>OUT</sub>	Output capacitance	V <sub>OUT</sub> = 0 V	8	12	pF

1. Sampled only, not 100% tested.



M58WR064HT, M58WR064HB

Symbol	Parameter	Test condition	Min	Тур	Max	Unit
ILI	Input leakage current	0 V ≤V <sub>IN</sub> ≤V <sub>DDQ</sub>			±1	μA
I <sub>LO</sub>	Output leakage current	0 V ≤V <sub>OUT</sub> ≤V <sub>DDQ</sub>			±1	μA
	Supply current Asynchronous read (f=6 MHz)	$\overline{E} = V_{IL},  \overline{G} = V_{IH}$		3	6	mA
		4 word		7	16	mA
	Supply current	8 word		10	18	mA
	Synchronous read (f=54 MHz)	16 word		12	22	mA
I <sub>DD1</sub>		Continuous		13	25	mA
		4 word		8	17	mA
	Supply current	8 word		11	20	mA
	Synchronous read (f=66MHz)	16 word		14	25	mA
		Continuous		16	30	mA
I <sub>DD2</sub>	Supply current (reset)	$\overline{\text{RP}} = \text{V}_{\text{SS}} \pm 0.2 \text{ V}$		10	50	μΑ
I <sub>DD3</sub>	Supply current (standby)	$\overline{E} = V_{DDQ} \pm 0.2 V$ K=V <sub>SS</sub>		10	50	μA
I <sub>DD4</sub>	Supply current (automatic standby)	$\overline{E} = V_{IL},  \overline{G} = V_{IH}$		10	50	μA
	Current (and another)	V <sub>PP</sub> = V <sub>PPH</sub>		8	20	mA
ı (1)	Supply current (program)	$V_{PP} = V_{DD}$		10	25	mA
I <sub>DD5</sub> <sup>(1)</sup>	Cumhi current (creac)	$V_{PP} = V_{PPH}$		8	20	mA
	Supply current (erase)	$V_{PP} = V_{DD}$		10	25	mA
I <sub>DD6</sub> <sup>(1),</sup>	Supply current	Program/erase in one bank, asynchronous read in another bank		13	31	mA
(2)	(dual operations)	Program/erase in one bank, synchronous read in another bank		23	50	mA
I <sub>DD7</sub> <sup>(1)</sup>	Supply current program/ erase suspended (standby)	$\overline{E} = V_{DDQ} \pm 0.2V$ K=V <sub>SS</sub>		10	50	μA
	V <sub>PP</sub> supply current (program)	$V_{PP} = V_{PPH}$		2	5	mA
ı (1)	vpp supply current (program)	$V_{PP} = V_{DD}$		0.2	5	μA
I <sub>PP1</sub> <sup>(1)</sup>	V <sub>PP</sub> supply current (erase)	$V_{PP} = V_{PPH}$		2	5	mA
	vpp supply current (elase)	$V_{PP} = V_{DD}$		0.2	5	μA
I <sub>PP2</sub>	V <sub>PP</sub> supply current (read)	V <sub>PP</sub> ≤V <sub>DD</sub>		0.2	5	μΑ
$I_{PP3}^{(1)}$	V <sub>PP</sub> supply current (standby)	V <sub>PP</sub> ≤V <sub>DD</sub>		0.2	5	μA

Table 20. DC characteristics - currents

1. Sampled only, not 100% tested.

2.  $V_{\text{DD}}$  dual operation current is the sum of read and program or erase currents.



DC and AC parameters

Ourshall Deservation Test servativities Min Test Mary Unit							
Symbol	Parameter	Test condition	Min	Тур	Max	Unit	
V <sub>IL</sub>	Input low voltage		-0.5		0.4	V	
$V_{IH}$	Input high voltage		$V_{DDQ}$ –0.4		$V_{DDQ} + 0.4$	V	
V <sub>OL</sub>	Output low voltage	I <sub>OL</sub> = 100 μA			0.1	V	
V <sub>OH</sub>	Output high voltage	I <sub>OH</sub> = −100 μA	V <sub>DDQ</sub> -0.1			V	
V <sub>PP1</sub>	V <sub>PP</sub> program voltage-logic	Program, erase	1.3	1.8	3.3	V	
V <sub>PPH</sub>	V <sub>PP</sub> program voltage factory	Program, erase	11.4	12	12.6	V	
V <sub>PPLK</sub>	Program or erase lockout				0.4	V	
V <sub>LKO</sub>	V <sub>DD</sub> lock voltage				1	V	
V <sub>RPH</sub>	RP pin Extended high voltage				3.3	V	

Table 21. DC characteristics - voltages





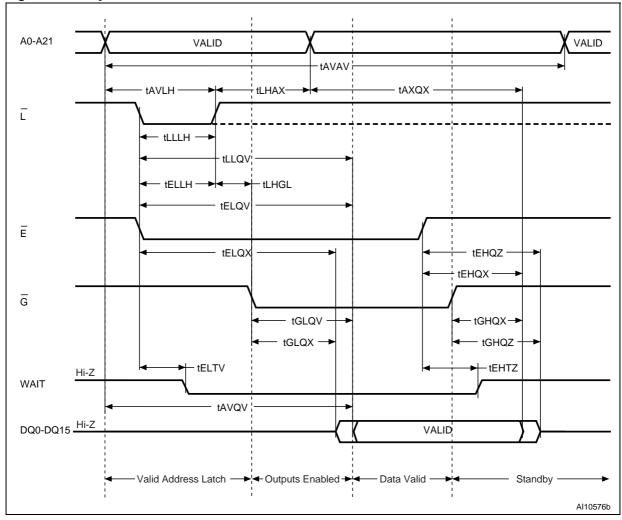


Figure 9. Asynchronous random access read AC waveforms

1. Write Enable,  $\overline{W}$ , is High, WAIT is active Low.

57

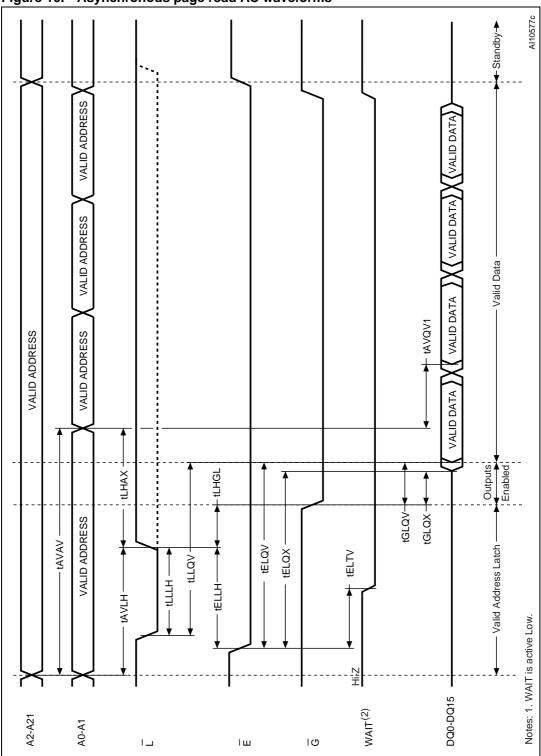


Figure 10. Asynchronous page read AC waveforms

www.DataSheet4U.com

57

Quarter			Proventer		M58WR	064HT/B	
5	Symbol	Alt	Alt Parameter		60	70	Unit
	t <sub>AVAV</sub>	t <sub>RC</sub>	Address Valid to Next Address Valid	Min	60	70	ns
	t <sub>AVQV</sub>	t <sub>ACC</sub>	Address Valid to Output Valid (Random)	Max	60	70	ns
	t <sub>AVQV1</sub>	t <sub>PAGE</sub>	Address Valid to Output Valid (page)	Max	20	20	ns
	t <sub>AXQX</sub> <sup>(1)</sup>	t <sub>OH</sub>	Address Transition to Output Transition	Min	0	0	ns
	t <sub>ELTV</sub>		Chip Enable Low to Wait Valid	Max	11	14	ns
s	$t_{\text{ELQV}}^{(2)}$	t <sub>CE</sub>	Chip Enable Low to Output Valid	Max	60	70	ns
ning	t <sub>ELQX</sub> <sup>(1)</sup>	t <sub>LZ</sub>	Chip Enable Low to Output Transition	Min	0	0	ns
Read Timings	t <sub>EHTZ</sub>		Chip Enable High to Wait Hi-Z	Max	14	17	ns
Rea	$t_{\text{EHQX}}^{(1)}$	t <sub>OH</sub>	Chip Enable High to Output Transition	Min	0	0	ns
	t <sub>EHQZ</sub> <sup>(1)</sup>	t <sub>HZ</sub>	Chip Enable High to Output Hi-Z	Max	14	17	ns
	$t_{GLQV}^{(2)}$	t <sub>OE</sub>	Output Enable Low to Output Valid	Max	20	20	ns
	t <sub>GLQX</sub> <sup>(1)</sup>	t <sub>OLZ</sub>	Output Enable Low to Output Transition	Min	0	0	ns
	t <sub>GHQX</sub> <sup>(1)</sup>	t <sub>ОН</sub>	Output Enable High to Output Transition	Min	0	0	ns
	t <sub>GHQZ</sub> <sup>(1)</sup>	t <sub>DF</sub>	Output Enable High to Output Hi-Z	Max	14	14	ns
	t <sub>AVLH</sub>	t <sub>AVADVH</sub>	Address Valid to Latch Enable High	Min	7	9	ns
	t <sub>ELLH</sub>	t <sub>ELADVH</sub>	Chip Enable Low to Latch Enable High	Min	10	10	ns
Latch Timings	t <sub>LHAX</sub>	t <sub>ADVHAX</sub>	Latch Enable High to Address Transition	Min	7	9	ns
h Tir	t <sub>LLLH</sub>	t <sub>ADVLADVH</sub>	Latch Enable Pulse Width	Min	7	9	ns
Latc	t <sub>LLQV</sub>	t <sub>ADVLQV</sub>	Latch Enable Low to Output Valid (Random)	Max	60	70	ns
	t <sub>LHGL</sub>	t <sub>ADVHGL</sub>	Latch Enable High to Output Enable Low	Min	0	0	ns

Table 22.	Asynchronous read AC characteristics
-----------	--------------------------------------

1. Sampled only, not 100% tested.

2.  $\overline{G}$  may be delayed by up to  $t_{ELQV}$  -  $t_{GLQV}$  after the falling edge of  $\overline{E}$  without increasing  $t_{ELQV}$ .




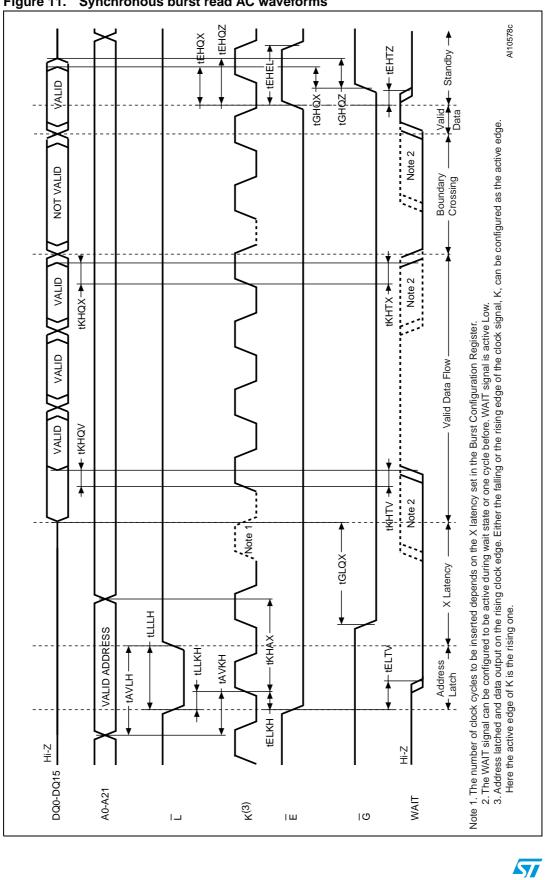


Figure 11. Synchronous burst read AC waveforms





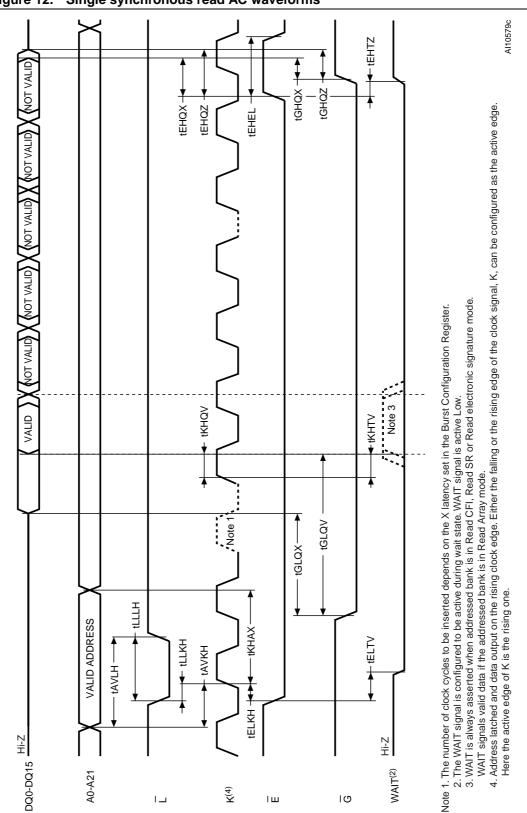

**DC and AC parameters** 

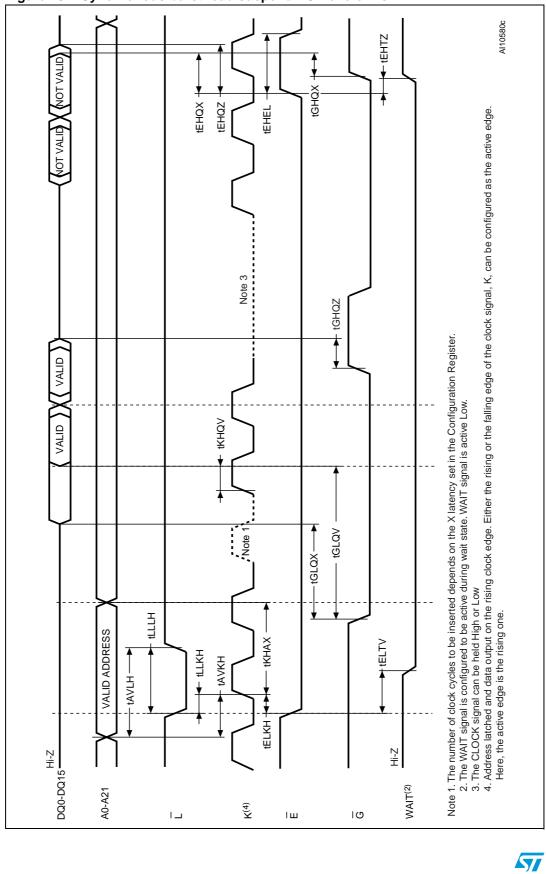



Figure 13. Synchronous burst read suspend AC waveforms

#### M58WR064HT, M58WR064HB

 

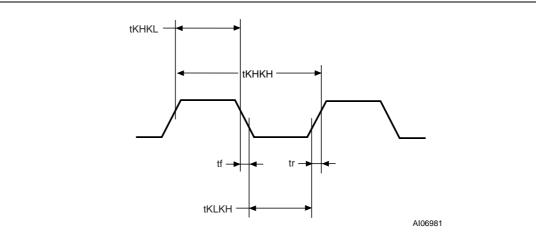


Table 23.	Synchronous read AC characteristics <sup>(1) (2)</sup>
Table 23.	Synchronous read AC characteristics <sup>(1)</sup> <sup>(2)</sup>

Symbol		Alt	Devenuetor		M58WR	064HT/B	Unit	
55	Symbol		Parameter		60	70	Unit	
	t <sub>AVKH</sub>	t <sub>AVCLKH</sub>	Address Valid to Clock High	Min	7	9	ns	
	t <sub>ELKH</sub>	t <sub>ELCLKH</sub>	Chip Enable Low to Clock High	Min	7	9	ns	
gs	t <sub>ELTV</sub>		Chip Enable Low to Wait Valid	Max	11	14	ns	
Read Timings	t <sub>EHEL</sub>		Chip Enable Pulse Width (subsequent synchronous reads)	Min	14	14	ns	
Rea	t <sub>EHTZ</sub>		Chip Enable High to Wait Hi-Z	Max	11	14	ns	
sno	t <sub>KHAX</sub>	t <sub>CLKHAX</sub>	Clock High to Address Transition	Min	7	9	ns	
Synchronous	t <sub>KHQV</sub> t <sub>KHTV</sub>	t <sub>CLKHQV</sub>	Clock High to Output Valid Clock High to WAIT Valid	Max	11	14	ns	
ŝ	t <sub>KHQX</sub> t <sub>KHTX</sub>	t <sub>CLKHQX</sub>	Clock High to Output Transition Clock High to WAIT Transition	Min	3	4	ns	
	t <sub>LLKH</sub>	t <sub>ADVLCLKH</sub>	Latch Enable Low to Clock High	Min	7	9	ns	
su			Clock Period (f=54MHz)	Min		18.5	ns	
Clock Specifications	<sup>t</sup> кнкн	t <sub>CLK</sub>	Clock Period (f=66MHz)	Min	15		ns	
	t <sub>KHKL</sub> t <sub>KLKH</sub>		Clock High to Clock Low Clock Low to Clock High	Min	3.5	4.5	ns	
Clock	t <sub>f</sub> t <sub>r</sub>		Clock Fall or Rise Time	Max	3	3	ns	

1. Sampled only, not 100% tested.

2. For other timings please refer to Table 22: Asynchronous read AC characteristics.



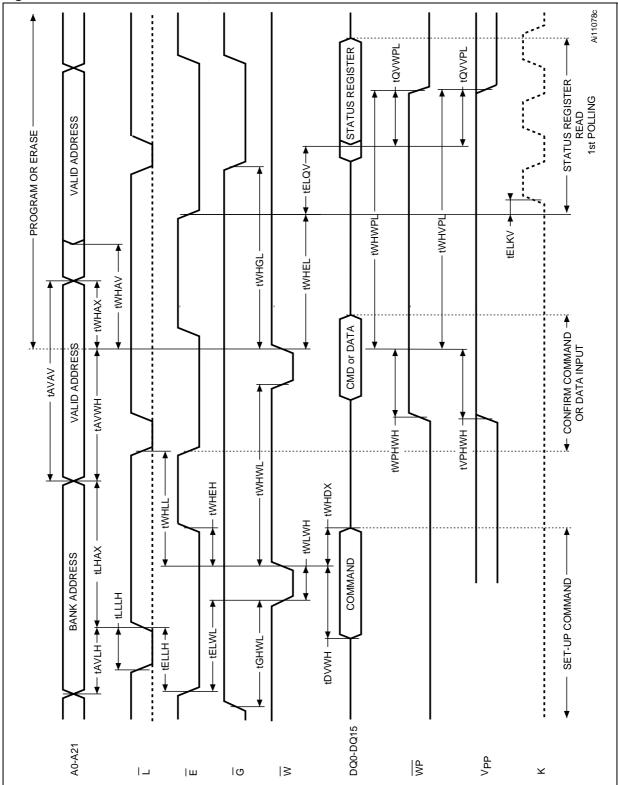


Figure 15. Write AC waveforms, Write Enable controlled

57

Table 24. Write A	C characteristics	, Write Enable controlled <sup>(1)</sup>
-------------------	-------------------	--


Symbol			Demonster	M58WR	L las it		
		Alt Parameter			60	70	Unit
	t <sub>AVAV</sub>	t <sub>WC</sub>	t <sub>WC</sub> Address Valid to Next Address Valid Min		60	70	ns
	t <sub>AVLH</sub>		Address Valid to Latch Enable High	Min	7	9	ns
	t <sub>AVWH</sub> <sup>(2)</sup>		Address Valid to Write Enable High	Min	40	45	ns
	t <sub>DVWH</sub>	t <sub>DS</sub>	Data Valid to Write Enable High	Min	40	45	ns
	t <sub>ELLH</sub>		Chip Enable Low to Latch Enable High	Min	10	10	ns
	t <sub>ELWL</sub>	t <sub>CS</sub>	Chip Enable Low to Write Enable Low	Min	0	0	ns
sbu	t <sub>ELQV</sub>		Chip Enable Low to Output Valid	Min	60	70	ns
Timir	t <sub>ELKV</sub>		Chip Enable Low to Clock Valid	Min	7	9	ns
led <sup>-</sup>	t <sub>GHWL</sub>		Output Enable High to Write Enable Low	Min	5	5	ns
ntrol	t <sub>LHAX</sub>		Latch Enable High to Address Transition	Min	7	9	ns
e Co	t <sub>LLLH</sub>	t <sub>LLLH</sub> Latch Enable Pulse Width Min		Min	7	9	ns
Write Enable Controlled Timings	$t_{WHAV}^{(2)}$		Write Enable High to Address Valid	Min	0	0	ns
e Er	t <sub>WHAX</sub> <sup>(2)</sup>	t <sub>AH</sub>	Write Enable High to Address Transition	Min	0	0	ns
Wri	t <sub>WHDX</sub>	t <sub>DH</sub>	Write Enable High to Input Transition	Min	0	0	ns
	t <sub>WHEH</sub>	t <sub>CH</sub>	Write Enable High to Chip Enable High	Min	0	0	ns
	t <sub>WHEL</sub> (3)		Write Enable High to Chip Enable Low	Min	20	25	ns
	t <sub>WHGL</sub>		Write Enable High to Output Enable Low	Min	0	0	ns
	t <sub>WHLL</sub>		Write Enable High to Latch Enable Low	Min	0	0	ns
	t <sub>WHWL</sub>	t <sub>WPH</sub>	Write Enable High to Write Enable Low	Min	20	25	ns
	t <sub>WLWH</sub>	t <sub>WP</sub>	Write Enable Low to Write Enable High	Min	40	45	ns
	t <sub>QVVPL</sub>		Output (Status Register) Valid to $V_{PP}$ Low	Min	0	0	ns
Protection Timings	t <sub>QVWPL</sub>		Output (Status Register) Valid to Write Protect Low	Min	0	0	ns
n Ti	t <sub>VPHWH</sub>	t <sub>VPS</sub>	V <sub>PP</sub> High to Write Enable High	Min	200	200	ns
ectic	t <sub>WHVPL</sub>		Write Enable High to V <sub>PP</sub> Low	Min	200	200	ns
Prot	t <sub>WHWPL</sub>	WHWPL Write Enable High to Write Protect Low		Min	200	200	ns
	t <sub>WPHWH</sub> Write Protect High to Write Enable High M		Min	200	200	ns	

1. Sampled only, not 100% tested.

2. Meaningful only if  $\overline{L}$  is always kept low.

t<sub>WHEL</sub> has this value when reading in the targeted bank or when reading following a Set Configuration Register command. System designers should take this into account and may insert a software No-Op instruction to delay the first read in the same bank after issuing any command and to delay the first read to any address after issuing a Set Configuration Register command. If the first read after the command is a Read Array operation in a different bank and no changes to the Configuration Register have been issued, t<sub>WHEL</sub> is 0ns. 3.



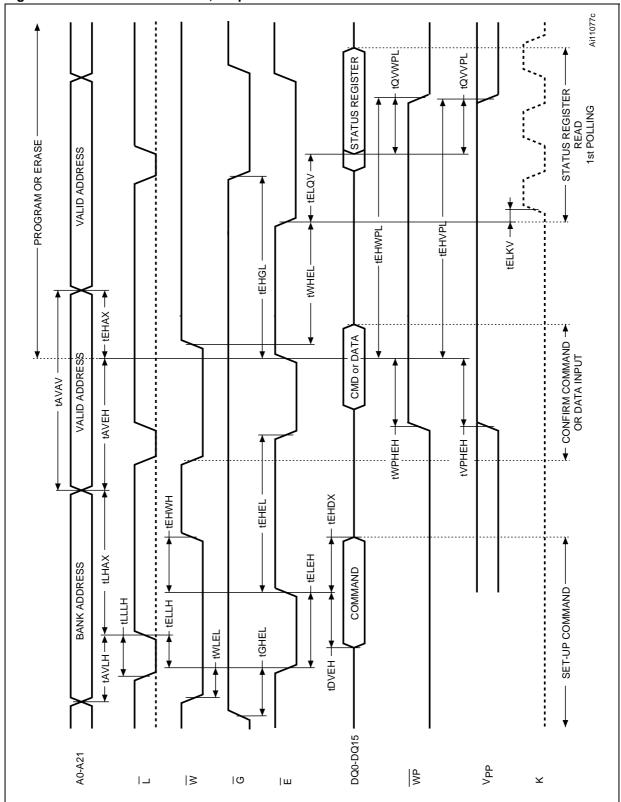

#### Figure 16. Write AC waveforms, Chip Enable controlled

57

Symbol							
		Alt	Parameter	60	70	Unit	
	t <sub>AVAV</sub>	t <sub>WC</sub>	Address Valid to Next Address Valid	Min	60	70	ns
	t <sub>AVEH</sub>		Address Valid to Chip Enable High	Min	40	45	ns
	t <sub>AVLH</sub>		Address Valid to Latch Enable High	Min	7	9	ns
	t <sub>DVEH</sub>	t <sub>DS</sub>	Data Valid to Chip Enable High	Min	40	45	ns
	t <sub>EHAX</sub>	t <sub>AH</sub>	Chip Enable High to Address Transition	Min	0	0	ns
sĝ	t <sub>EHDX</sub>	t <sub>DH</sub>	Chip Enable High to Input Transition	Min	0	0	ns
īmir	t <sub>EHEL</sub>	t <sub>CPH</sub>	Chip Enable High to Chip Enable Low	Min	20	25	ns
led T	t <sub>EHGL</sub>		Chip Enable High to Output Enable Low	Min	0	0	ns
ntroll	t <sub>EHWH</sub>	t <sub>CH</sub>	Chip Enable High to Write Enable High	Min	0	0	ns
Col	t <sub>ELKV</sub>	V Chip Enable Low to Clock Valid M		Min	7	9	ns
Chip Enable Controlled Timings	t <sub>ELEH</sub>	t <sub>CP</sub>	Chip Enable Low to Chip Enable High	Min	40	45	ns
	t <sub>ELLH</sub>		Chip Enable Low to Latch Enable High	Min	10	10	ns
	t <sub>ELQV</sub>		Chip Enable Low to Output Valid	Min	60	70	ns
	t <sub>GHEL</sub>		Output Enable High to Chip Enable Low	Min	14	17	ns
	t <sub>LHAX</sub>		Latch Enable High to Address Transition	Min	7	9	ns
	t <sub>LLLH</sub>		Latch Enable Pulse Width	Min	7	9	ns
	$t_{\text{WHEL}}^{(2)}$		Write Enable High to Chip Enable Low	Min	20	25	ns
	t <sub>WLEL</sub> t		Write Enable Low to Chip Enable Low	Min	0	0	ns
	t <sub>EHVPL</sub>		Chip Enable High to V <sub>PP</sub> Low	Min	200	200	ns
ngs	t <sub>EHWPL</sub>		Chip Enable High to Write Protect Low	Min	200	200	ns
Timi	t <sub>QVVPL</sub>		Output (Status Register) Valid to $V_{PP}$ Low	Min	0	0	ns
Protection Timings	t <sub>QVWPL</sub>		Output (Status Register) Valid to Write Protect Low	Min	0	0	ns
Prot	t <sub>VPHEH</sub>	t <sub>VPS</sub>	V <sub>PP</sub> High to Chip Enable High	Min	200	200	ns
	twphen         Write Protect High to Chip Enable High		Min	200	200	ns	

 Table 25.
 Write AC characteristics, Chip Enable controlled<sup>(1)</sup>

1. Sampled only, not 100% tested.

2. t<sub>WHEL</sub> has this value when reading in the targeted bank or when reading following a Set Configuration Register command. System designers should take this into account and may insert a software No-Op instruction to delay the first read in the same bank after issuing any command and to delay the first read to any address after issuing a Set Configuration Register command. If the first read after the command is a Read Array operation in a different bank and no changes to the Configuration Register have been issued, t<sub>WHEL</sub> is Ons.

57



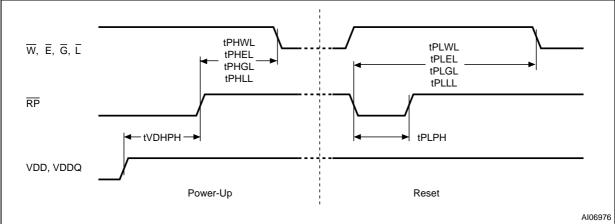


Table 26.	Reset and	power-up	AC characteristics
-----------	-----------	----------	--------------------

Symbol	Parameter	Test condition		60	70	Unit
t <sub>PLWL</sub>	Reset Low to	During Program	Min	10	10	μs
t <sub>PLEL</sub>	Write Enable Low, Chip Enable Low, Output Enable Low, Latch Enable Low	During Erase	Min	20	20	μs
t <sub>PLGL</sub> t <sub>PLLL</sub>		Other Conditions	Min	80	80	ns
<sup>t</sup> PHWL <sup>t</sup> PHEL <sup>t</sup> PHGL <sup>t</sup> PHLL	Reset High to Write Enable Low Chip Enable Low Output Enable Low Latch Enable Low		Min	30	30	ns
t <sub>PLPH</sub> <sup>(1),(2)</sup>	RP Pulse Width		Min	50	50	ns
t <sub>VDHPH</sub> <sup>(3)</sup>	Supply Voltages High to Reset High		Min	50	50	μs

1. The device Reset is possible but not guaranteed if  $t_{PLPH}$  < 50 ns.

2. Sampled only, not 100% tested.


3. It is important to assert RP to allow proper CPU initialization during power-up or reset.



# 15 Package mechanical

To meet environmental requirements, ST offers the M58WR064HB and M58WR064HT in a VFBGA ECOPACK<sup>®</sup> package. ECOPACK<sup>®</sup> packages have a lead-free second-level interconnect. The category of second-level interconnect is marked on the package and on the inner box label, in compliance with JEDEC Standard JESD97. The maximum ratings related to soldering conditions are also marked on the inner box label. ECOPACK is an ST trademark. ECOPACK specifications are available at: *www.st.com*.

Figure 18. VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, bottom view package outline

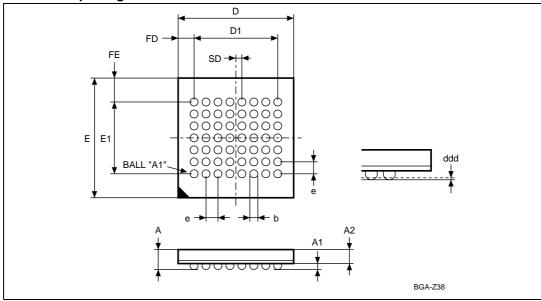

1. Drawing is not to scale.

#### Package mechanical

Symbol	Millimeters			Inches			
Symbol	Тур	Min	Max	Тур	Min	Max	
А			1.000			0.0394	
A1		0.200			0.0079		
A2	0.660			0.0260			
b	0.350	0.300	0.400	0.0138	0.0118	0.0157	
D	7.700	7.600	7.800	0.3031	0.2992	0.3071	
D1	5.250	-	-	0.2067	-	-	
ddd			0.080			0.0031	
е	0.750	-	-	0.0295	-	-	
E	9.000	8.900	9.100	0.3543	0.3504	0.3583	
E1	4.500	-	-	0.1772	-	-	
FD	1.225	-	-	0.0482	-	-	
FE	2.250	-	-	0.0886	-	-	
SD	0.375	-	-	0.0148	_	-	

# Table 27.VFBGA56 - 7.7 x 9 mm, 8 x 7 ball array, 0.75 mm pitch, package<br/>mechanical data



# 16 Part numbering

Ordering information scheme

Table 28.

# M58WR064HT 70 ZB 6 F Example: **Device type** M58 Architecture W = multiple bank, burst mode **Operating voltage** $R = V_{DD} = 1.7 V \text{ to } 2 V, V_{DDQ} = 1.7 V \text{ to } 2.24 V$ Density 064 = 64 Mbit Technology H = 90 nm technology Parameter bank location T = top boot B = bottom boot Speed 60 = 60 ns 70 = 70 ns Package ZB = VFBGA56: 7.7 x 9 mm, 8 x 7 active ball array, 0.75 mm pitch **Temperature range** 6 = -40 to $85^{\circ}C$

### Option

E = ECOPACK® package, standard packing

F = ECOPACK® package, tape and reel packing



# Block address tables

# Appendix A Block address tables

ble 29. Top boot block addresses, M58WR064HT				
Bank <sup>(1)</sup>	#	Size (KWord)	Address range	
	0	4	3FF000-3FFFFF	
	1	4	3FE000-3FEFFF	
	2	4	3FD000-3FDFFF	
	3	4	3FC000-3FCFFF	
	4	4	3FB000-3FBFFF	
~	5	4	3FA000-3FAFFF	
ban	6	4	3F9000-3F9FFF	
leter	7	4	3F8000-3F8FFF	
Parameter bank	8	32	3F0000-3F7FFF	
à	9	32	3E8000-3EFFFF	
	10	32	3E0000-3E7FFF	
	11	32	3D8000-3DFFFF	
	12	32	3D0000-3D7FFF	
	13	32	3C8000-3CFFFF	
	14	32	3C0000-3C7FFF	
	15	32	3B8000-3BFFFF	
	16	32	3B0000-3B7FFF	
	17	32	3A8000-3AFFFF	
4 1	18	32	3A0000-3A7FFF	
Bank 1	19	32	398000-39FFFF	
	20	32	390000-397FFF	
	21	32	388000-38FFFF	
	22	32	380000-387FFF	
	23	32	378000-37FFFF	
	24	32	370000-377FFF	
	25	32	368000-36FFFF	
Bank 2	26	32	360000-367FFF	
Bar	27	32	358000-35FFFF	
	28	32	350000-357FFF	
	29	32	348000-34FFFF	
	30	32	340000-347FFF	

Table 29.	Top boot block addresses,	
Table 29.	TOP DOOL DIOCK addresses,	



Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	31	32	338000-33FFFF
	32	32	330000-337FFF
	33	32	328000-32FFFF
× 3	34	32	320000-327FFF
Bank 3	35	32	318000-31FFFF
	36	32	310000-317FFF
	37	32	308000-30FFFF
	38	32	300000-307FFF
	39	32	2F8000-2FFFFF
	40	32	2F0000-2F7FFF
	41	32	2E8000-2EFFFF
大 4	42	32	2E0000-2E7FFF
Bank 4	43	32	2D8000-2DFFFF
	44	32	2D0000-2D7FFF
	45	32	2C8000-2CFFFF
	46	32	2C0000-2C7FFF
	47	32	2B8000-2BFFFF
	48	32	2B0000-2B7FFF
	49	32	2A8000-2AFFFF
Bank 5	50	32	2A0000-2A7FFF
Ban	51	32	298000-29FFFF
	52	32	290000-297FFF
	53	32	288000-28FFFF
	54	32	280000-287FFF
	55	32	278000-27FFFF
	56	32	270000-277FFF
	57	32	268000-26FFFF
х 0	58	32	260000-267FFF
Bank 6	59	32	258000-25FFFF
	60	32	250000-257FFF
	61	32	248000-24FFFF
	62	32	240000-247FFF

Table 29. Top boot block addresses, M58WR064HT (continued)



**Block address tables** 

Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	63	32	238000-23FFFF
	64	32	230000-237FFF
	65	32	228000-22FFFF
× 7	66	32	220000-227FFF
Bank 7	67	32	218000-21FFFF
	68	32	210000-217FFF
	69	32	208000-20FFFF
	70	32	200000-207FFF
	71	32	1F8000-1FFFFF
F	72	32	1F0000-1F7FFF
	73	32	1E8000-1EFFFF
8	74	32	1E0000-1E7FFF
Bank 8	75	32	1D8000-1DFFFF
	76	32	1D0000-1D7FFF
F	77	32	1C8000-1CFFFF
	78	32	1C0000-1C7FFF
	79	32	1B8000-1BFFFF
F	80	32	1B0000-1B7FFF
F	81	32	1A8000-1AFFFF
6 × 0	82	32	1A0000-1A7FFF
Bank 9	83	32	198000-19FFFF
	84	32	190000-197FFF
	85	32	188000-18FFFF
	86	32	180000-187FFF
	87	32	178000-17FFFF
F	88	32	170000-177FFF
F	89	32	168000-16FFFF
¢ 10	90	32	160000-167FFF
Bank 10	91	32	158000-15FFFF
-	92	32	150000-157FFF
F	93	32	148000-14FFFF
F	94	32	140000-147FFF

Table 29. Top boot block addresses, M58WR064HT (continued)



95         32         138000-13FFFF           96         32         130000-137FFF           97         32         128000-12FFF           98         32         120000-127FFF           99         32         118000-11FFF           100         32         100000-107FFF           101         32         108000-10FFFF           102         32         108000-10FFFF           103         32         0F8000-0FFFF           104         32         0F8000-0FFFF           105         32         0E8000-0EFFFF           106         32         0E8000-0EFFFF           106         32         0E8000-0EFFFF           107         32         0B8000-0FFFF           108         32         0C0000-0FFFF           109         32         0C8000-0EFFFF           110         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           112         32         0B8000-0AFFFF           113         32         0A8000-0AFFFF           114         32         0B8000-0BFFFF           115         32         098000-0FFFF           116         32	Bank <sup>(1)</sup>	#	Size (KWord)	Address range
97         32         128000-12FFF           98         32         120000-127FFF           99         32         118000-11FFFF           100         32         110000-117FFF           101         32         108000-10FFFF           102         32         10000-07FFF           103         32         0F8000-0FFFF           104         32         0F8000-0FFFF           105         32         0E8000-0EFFFF           106         32         0D8000-0DFFFF           107         32         0D8000-0DFFFF           108         32         0D0000-0DFFFF           109         32         0C8000-0EFFFF           110         32         0D8000-0DFFFF           110         32         0D8000-0DFFFF           111         32         0B8000-0BFFFF           112         32         0B8000-0AFFFF           113         32         0A8000-0AFFFF           114         32         0A8000-0AFFFF           115         32         098000-09FFFF           116         32         098000-08FFFF           118         32         0A8000-0AFFFF           120         32		95	32	138000-13FFFF
98         32         12000-127FFF           99         32         118000-117FFF           100         32         110000-117FFF           101         32         108000-107FFF           102         32         100000-107FFF           103         32         0F8000-0FFFF           104         32         0F8000-0FFFF           105         32         0E8000-0EFFFF           106         32         0E0000-0EFFFF           106         32         0B8000-0DFFFF           106         32         0B8000-0DFFFF           107         32         0B8000-0DFFFF           108         32         0C8000-0CFFFF           110         32         0C8000-0CFFFF           110         32         0C8000-0CFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0AFFFF           111         32         0B8000-0AFFFF           111         32         0B8000-0AFFFF           111         32         0A8000-0AFFFF           111         32         0A8000-0AFFFF           111         32         0A8000-0AFFFF           111         32 <td></td> <td>96</td> <td>32</td> <td>130000-137FFF</td>		96	32	130000-137FFF
1003211000-117FFF1013210800-10FFFF1023210000-107FFF103320F8000-0FFFFF104320F0000-0F7FFF105320E8000-0EFFFF106320D8000-0DFFFF107320D8000-0DFFFF108320C0000-0TFFF109320C8000-0EFFFF110320C0000-0TFFF111320B8000-0BFFFF112320B8000-0BFFFF113320A8000-0AFFFF114320A8000-0AFFFF11532098000-09FFFF11632090000-09FFFF11732088000-08FFFF11832078000-07FFFF12032078000-07FFFF12132068000-06FFFF12332068000-06FFFF12432050000-05FFFF12532048000-04FFFF		97	32	128000-12FFFF
1003211000-117FFF1013210800-10FFFF1023210000-107FFF103320F8000-0FFFFF104320F0000-0F7FFF105320E8000-0EFFFF106320D8000-0DFFFF107320D8000-0DFFFF108320C0000-0TFFF109320C8000-0EFFFF110320C0000-0TFFF111320B8000-0BFFFF112320B8000-0BFFFF113320A8000-0AFFFF114320A8000-0AFFFF11532098000-09FFFF11632090000-09FFFF11732088000-08FFFF11832078000-07FFFF12032078000-07FFFF12132068000-06FFFF12332068000-06FFFF12432050000-05FFFF12532048000-04FFFF	۲1 × 11	98	32	120000-127FFF
10132108000-10FFFF10232100000-107FFF103320F8000-0FFFF104320F0000-0F7FF105320E8000-0EFFFF106320E0000-0E7FFF107320D8000-0DFFFF108320C0000-0C7FFF109320C8000-0EFFFF110320C0000-0C7FFF111320B8000-0BFFFF112320B8000-0BFFFF113320A8000-0AFFFF114320A8000-0AFFFF11532098000-09FFFF11632090000-09FFFF11732088000-08FFFF11832078000-07FFFF12032070000-07FFFF12132068000-06FFFF12332058000-06FFFF12432050000-057FFF12532048000-04FFFF	Banl	99	32	118000-11FFFF
1023210000-107FFF103320F8000-0FFFF104320F0000-0F7FF105320E8000-0EFFFF106320E0000-0E7FFF107320D8000-0DFFFF108320C0000-0CFFFF109320C3000-0CFFFF110320C0000-0CFFFF111320B8000-0BFFFF112320B8000-0BFFFF113320A8000-0AFFFF114320A8000-0AFFFF11532098000-09FFFF11632090000-09FFFF11732088000-08FFFF11832078000-07FFFF12032070000-07FFFF12132068000-06FFFF12332058000-06FFFF12432050000-057FFF12532048000-04FFFF		100	32	110000-117FFF
Initial         Second Sec		101	32	108000-10FFFF
Initial         Second Sec		102	32	100000-107FFF
Initial         Initial <t< td=""><td></td><td>103</td><td>32</td><td>0F8000-0FFFFF</td></t<>		103	32	0F8000-0FFFFF
Image: Note of the system         Im		104	32	0F0000-0F7FFF
108         32         0D000-0D7FFF           109         32         0C8000-0CFFFF           110         32         0C0000-0C7FFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           1113         32         0A8000-0AFFFF           114         32         0A8000-0AFFFF           115         32         098000-09FFFF           116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF		105	32	0E8000-0EFFFF
108         32         0D000-0D7FFF           109         32         0C8000-0CFFFF           110         32         0C0000-0C7FFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           1113         32         0A8000-0AFFFF           114         32         0A8000-0AFFFF           115         32         098000-09FFFF           116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF	× 12	106	32	0E0000-0E7FFF
108         32         0D000-0D7FFF           109         32         0C8000-0CFFFF           110         32         0C0000-0C7FFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           111         32         0B8000-0BFFFF           1113         32         0A8000-0AFFFF           114         32         0A8000-0AFFFF           115         32         098000-09FFFF           116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF	Banl	107	32	0D8000-0DFFFF
110         32         0C0000-0C7FFF           111         32         0B8000-0BFFFF           112         32         0B0000-0B7FFF           113         32         0A8000-0AFFFF           114         32         0A8000-0AFFFF           115         32         098000-09FFFF           116         32         090000-097FFF           117         32         088000-08FFFF           118         32         090000-097FFF           119         32         078000-07FFFF           120         32         078000-07FFFF           121         32         068000-06FFFFF           122         32         068000-06FFFFF           123         32         058000-05FFFFF           124         32         050000-057FFFF           125         32         048000-04FFFFF		108	32	0D0000-0D7FFF
Initial         32         OB8000-0BFFFF           112         32         OB0000-0B7FFF           113         32         OA8000-0AFFFF           114         32         OA0000-0A7FFF           115         32         O98000-09FFFF           116         32         O90000-097FFF           117         32         O88000-08FFFF           118         32         090000-097FFF           119         32         078000-087FFF           120         32         078000-077FFF           121         32         068000-06FFFF           123         32         068000-06FFFF           124         32         058000-05FFFF           125         32         048000-04FFFF		109	32	0C8000-0CFFFF
Initial         Second Sec		110	32	0C0000-0C7FFF
PYPE         113         32         0A8000-0AFFFF           114         32         0A0000-0A7FFF           115         32         098000-09FFFF           116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         078000-07FFFF           121         32         068000-06FFFF           122         32         068000-06FFFF           123         32         058000-05FFFF           124         32         058000-05FFFF           125         32         048000-04FFFF		111	32	0B8000-0BFFFF
PY         114         32         0A0000-0A7FFF           115         32         098000-09FFFF           116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         068000-06FFFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF		112	32	0B0000-0B7FFF
116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         068000-06FFFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF		113	32	0A8000-0AFFFF
116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         068000-06FFFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF	٤13	114	32	0A0000-0A7FFF
116         32         090000-097FFF           117         32         088000-08FFFF           118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         068000-06FFFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF	Banl	115	32	098000-09FFFF
118         32         080000-087FFF           119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-057FFF           124         32         050000-057FFF           125         32         048000-04FFFF		116	32	090000-097FFF
119         32         078000-07FFFF           120         32         070000-077FFF           121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF		117	32	088000-08FFFF
120         32         070000-077FFF           121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF		118	32	080000-087FFF
121         32         068000-06FFFF           122         32         060000-067FFF           123         32         058000-057FFF           124         32         050000-057FFF           125         32         048000-04FFFF		119	32	078000-07FFFF
122         32         060000-067FFF           123         32         058000-05FFFF           124         32         050000-057FFF           125         32         048000-04FFFF		120	32	070000-077FFF
124         32         050000-057FFF           125         32         048000-04FFFF		121	32	068000-06FFFF
124         32         050000-057FFF           125         32         048000-04FFFF	× 14	122	32	060000-067FFF
124         32         050000-057FFF           125         32         048000-04FFFF	Banl	123	32	058000-05FFFF
	_	124	32	050000-057FFF
126 32 040000-047FFF		125	32	048000-04FFFF
		126	32	040000-047FFF

 Table 29.
 Top boot block addresses, M58WR064HT (continued)



**Block address tables** 

Table 29. Top boot block addresses, Moowkooth T (continued)				
Bank <sup>(1)</sup>	#	Size (KWord)	Address range	
	127	32	038000-03FFFF	
	128	32	030000-037FFF	
	129	32	028000-02FFFF	
< 15	130	32	020000-027FFF	
Bank	131	32	018000-01FFFF	
	132	32	010000-017FFF	
	133	32	008000-00FFFF	
	134	32	000000-007FFF	

 Table 29.
 Top boot block addresses, M58WR064HT (continued)

1. There are two Bank Regions: Bank Region 1 contains all the banks that are made up of main blocks only; Bank Region 2 contains the banks that are made up of the parameter and main blocks (Parameter Bank).

Table 30.	Bottom	boot block addresses	s, M58WR064HB

Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	134	32	3F8000-3FFFFF
	133	32	3F0000-3F7FFF
	132	32	3E8000-3EFFFF
Bank 15	131	32	3E0000-3E7FFF
Banl	130	32	3D8000-3DFFFF
	129	32	3D0000-3D7FFF
	128	32	3C8000-3CFFFF
	127	32	3C0000-3C7FFF
	126	32	3B8000-3BFFFF
	125	32	3B0000-3B7FFF
	124	32	3A8000-3AFFFF
Bank 14	123	32	3A0000-3A7FFF
Banl	122	32	398000-39FFFF
	121	32	390000-397FFF
	120	32	388000-38FFFF
	119	32	380000-387FFF



Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	118	32	378000-37FFFF
	117	32	370000-377FFF
	116	32	368000-36FFFF
Bank 13	115	32	360000-367FFF
Banl	114	32	358000-35FFFF
	113	32	350000-357FFF
	112	32	348000-34FFFF
	111	32	340000-347FFF
	110	32	338000-33FFFF
	109	32	330000-337FFF
	108	32	328000-32FFFF
< 12 < 12	107	32	320000-327FFF
Bank 12	106	32	318000-31FFFF
	105	32	310000-317FFF
	104	32	308000-30FFFF
	103	32	300000-307FFF
	102	32	2F8000-2FFFFF
	101	32	2F0000-2F7FFF
	100	32	2E8000-2EFFFF
(11	99	32	2E0000-2E7FFF
Bank 11	98	32	2D8000-2DFFFF
_	97	32	2D0000-2D7FFF
	96	32	2C8000-2CFFFF
	95	32	2C0000-2C7FFF
	94	32	2B8000-2BFFFF
	93	32	2B0000-2B7FFF
	92	32	2A8000-2AFFFF
۶ <b>1</b> 0	91	32	2A0000-2A7FFF
Bank 10	90	32	298000-29FFFF
	89	32	290000-297FFF
	88	32	288000-28FFFF
	87	32	280000-287FFF

 Table 30.
 Bottom boot block addresses, M58WR064HB (continued)





**Block address tables** 

Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	86	32	278000-27FFFF
Γ	85	32	270000-277FFF
Γ	84	32	268000-26FFFF
6 ×	83	32	260000-267FFF
Bank 9	82	32	258000-25FFFF
	81	32	250000-257FFF
	80	32	248000-24FFFF
Γ	79	32	240000-247FFF
	78	32	238000-23FFFF
Γ	77	32	230000-237FFF
Γ	76	32	228000-22FFFF
8	75	32	220000-227FFF
Bank 8	74	32	218000-21FFFF
	73	32	210000-217FFF
	72	32	208000-20FFFF
	71	32	200000-207FFF
	70	32	1F8000-1FFFFF
	69	32	1F0000-1F7FFF
	68	32	1E8000-1EFFFF
k 7	67	32	1E0000-1E7FFF
Bank 7	66	32	1D8000-1DFFFF
Γ	65	32	1D0000-1D7FFF
	64	32	1C8000-1CFFFF
	63	32	1C0000-1C7FFF
	62	32	1B8000-1BFFFF
	61	32	1B0000-1B7FFF
	60	32	1A8000-1AFFFF
9 × 0	59	32	1A0000-1A7FFF
Bank 6	58	32	198000-19FFFF
	57	32	190000-197FFF
	56	32	188000-18FFFF
F	55	32	180000-187FFF

 Table 30.
 Bottom boot block addresses, M58WR064HB (continued)



Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	54	32	178000-17FFFF
	53	32	170000-177FFF
	52	32	168000-16FFFF
к Л	51	32	160000-167FFF
Bank 5	50	32	158000-15FFFF
	49	32	150000-157FFF
	48	32	148000-14FFFF
	47	32	140000-147FFF
	46	32	138000-13FFFF
	45	32	130000-137FFF
	44	32	128000-12FFFF
Bank 4	43	32	120000-127FFF
Ban	42	32	118000-11FFFF
	41	32	110000-117FFF
	40	32	108000-10FFFF
	39	32	100000-107FFF
	38	32	0F8000-0FFFFF
	37	32	0F0000-0F7FFF
	36	32	0E8000-0EFFFF
× 3	35	32	0E0000-0E7FFF
Bank 3	34	32	0D8000-0DFFFF
	33	32	0D0000-0D7FFF
	32	32	0C8000-0CFFFF
	31	32	0C0000-0C7FFF
	30	32	0B8000-0BFFFF
	29	32	0B0000-0B7FFF
	28	32	0A8000-0AFFFF
× 7	27	32	0A0000-0A7FFF
Bank 2	26	32	098000-09FFFF
	25	32	090000-097FFF
	24	32	088000-08FFFF
F	23	32	080000-087FFF

Table 30.	Bottom	boot block addresses	, M58WR064HB	(continued)





**Block address tables** 

Bank <sup>(1)</sup>	#	Size (KWord)	Address range
	22	32	078000-07FFFF
	21	32	070000-077FFF
	20	32	068000-06FFFF
¥ 7	19	32	060000-067FFF
Bank 1	18	32	058000-05FFFF
	17	32	050000-057FFF
	16	32	048000-04FFFF
	15	32	040000-047FFF
	14	32	038000-03FFFF
	13	32	030000-037FFF
	12	32	028000-02FFFF
	11	32	020000-027FFF
	10	32	018000-01FFFF
× _	9	32	010000-017FFF
Parameter Bank	8	32	008000-00FFFF
eter	7	4	007000-007FFF
aram	6	4	006000-006FFF
а С	5	4	005000-005FFF
	4	4	004000-004FFF
	3	4	003000-003FFF
	2	4	002000-002FFF
	1	4	001000-001FFF
	0	4	000000-000FFF

 Table 30.
 Bottom boot block addresses, M58WR064HB (continued)

1. There are two Bank Regions: Bank Region 2 contains all the banks that are made up of main blocks only; Bank Region 1 contains the banks that are made up of the parameter and main blocks (Parameter Bank).



# Appendix B Common Flash interface

The common Flash interface is a JEDEC approved, standardized data structure that can be read from the Flash memory device. It allows a system software to query the device to determine various electrical and timing parameters, density information and functions supported by the memory. The system can interface easily with the device, enabling the software to upgrade itself when necessary.

When the Read CFI Query command is issued the device enters CFI query mode and the data structure is read from the memory. Tables *31*, *32*, *33*, *34*, *35*, *36*, *37*, *38*, *39* and *40* show the addresses used to retrieve the data. The query data is always presented on the lowest order data outputs (DQ0-DQ7), the other outputs (DQ8-DQ15) are set to 0.

The CFI data structure also contains a security area where a 64 bit unique security number is written (see *Figure 4: Protection Register memory map*). This area can be accessed only in read mode by the final user. It is impossible to change the security number after it has been written by ST. Issue a Read Array command to return to read mode.

Offset	Sub-section name	Description
00h	Reserved	Reserved for algorithm-specific information
10h	CFI query identification string	Command set ID and algorithm data offset
1Bh	System interface information	Device timing and voltage information
27h	Device geometry definition	Flash device layout
Ρ	Primary algorithm-specific extended query table	Additional information specific to the primary algorithm (optional)
А	Alternate algorithm-specific extended query table	Additional information specific to the alternate algorithm (optional)
80h	Security code area	Lock Protection Register Unique device number and user programmable OTP

Table 31.	Querv	/ structure	overview <sup>(1)</sup>

1. The Flash memory display the CFI data structure when CFI Query command is issued. In this table are listed the main sub-sections detailed in Tables *32*, *33*, *34* and *35*. Query data is always presented on the lowest order data outputs.

Common	Flash	interface
--------	-------	-----------

Table 52.	ble 32. CFI query identification string			
Offset	Sub-section name	Description	Value	
00h	0020h	Manufacturer code	ST	
01h	8810h 8811h	Device code	Top (M58WR064HT) Bottom (M58WR064HB)	
02h	reserved	Reserved		
03h	reserved	Reserved		
04h-0Fh	reserved	Reserved		
10h	0051h		"Q"	
11h	0052h	Query Unique ASCII String "QRY"	"R"	
12h	0059h		"Y"	
13h	0003h	Primary Algorithm Command Set and		
14h	0000h	Control Interface ID code 16 bit ID code defining a specific algorithm		
15h	offset = $P = 0039h$	Address for Primary Algorithm extended	p = 39h	
16h	0000h	Query table (see <i>Table 35</i> )	p = 391	
17h	0000h	Alternate Vendor Command Set and		
18h	0000h	Control Interface ID Code second vendor - specified algorithm supported	NA	
19h	value = A = 0000h	Address for Alternate Algorithm extended	NA	
1Ah	0000h	Query table	INA INA	

Table 32.	CFI querv	y identification string
-----------	-----------	-------------------------



57

M58WR064HT, M58WR064HB

Offset	Data	Description	Value
1Bh	0017h	V <sub>DD</sub> Logic Supply Minimum Program/Erase or Write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 millivolts	1.7 V
1Ch	0020h	V <sub>DD</sub> Logic Supply Maximum Program/Erase or Write voltage bit 7 to 4 BCD value in volts bit 3 to 0 BCD value in 100 millivolts	2 V
1Dh	00B4h	<ul> <li>V<sub>PP</sub> [Programming] Supply Minimum Program/Erase voltage</li> <li>bit 7 to 4 HEX value in volts</li> <li>bit 3 to 0 BCD value in 100 millivolts</li> </ul>	11.4 V
1Eh	00C6h	V <sub>PP</sub> [Programming] Supply Maximum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 millivolts	12.6 V
1Fh	0004h	Typical timeout per single byte/word program = $2^{n} \mu s$	16 µs
20h	0000h	Typical timeout for multi-byte programming = $2^{n} \mu s$	NA
21h	000Ah	Typical timeout per individual block erase = 2 <sup>n</sup> ms	1s
22h	0000h	Typical timeout for full chip erase = $2^n$ ms	NA
23h	0003h	Maximum timeout for word program = 2 <sup>n</sup> times typical	128 µs
24h	0000h	Maximum timeout for multi-byte programming = 2 <sup>n</sup> times typical	NA
25h	0002h	Maximum timeout per individual block erase = 2 <sup>n</sup> times typical	4 s
26h	0000h	Maximum timeout for chip erase = 2 <sup>n</sup> times typical	NA

### Table 33. CFI query system interface information

**Common Flash interface** 

	Offset rd Mode	Data	Description	Value
	27h 0017h		Device Size = $2^{n}$ in number of bytes	8 MByte
	28h 29h	0001h 0000h	Flash Device Interface Code description	x16 async.
	2Ah 2Bh	0000h 0000h	Maximum number of bytes in multi-byte program or page = 2 <sup>n</sup>	NA
	2Ch	0002h	Number of identical sized erase block regions within the device bit 7 to $0 = x =$ number of Erase Block Regions	2
	2Dh 2Eh	007Eh 0000h	Region 1 Information Number of identical-size erase blocks = 007Eh+1	127
ΗT	2Fh 30h	0000h 0001h	Region 1 Information Block size in Region 1 = 0100h * 256 byte	64 KByte
M58WR064HT	31h 32h	0007h 0000h	Region 2 Information Number of identical-size erase blocks = 0007h+1	8
M58	33h 34h	0020h 0000h	Region 2 Information Block size in Region 2 = 0020h * 256 byte	8 KByte
	35h 38h	reserved	Reserved for future erase block region information	NA
	2Dh 2Eh	0007h 0000h	Region 1 Information Number of identical-size erase block = 0007h+1	8
НВ	2Fh 30h	0020h 0000h	Region 1 Information Block size in Region 1 = 0020h * 256 byte	8 KByte
M58WR064HB	31h 32h	007Eh 0000h	Region 2 Information Number of identical-size erase block = 007Eh+1	127
M58	33h 34h	0000h 0001h	Region 2 Information Block size in Region 2 = 0100h * 256 byte	64 KByte
	35h 38h	reserved	Reserved for future erase block region information	NA

# Table 34. Device geometry definition



Offset	Data	Description	Value
(P)h = 39h	0050h		"P"
	0052h	Primary Algorithm extended Query table unique ASCII string "PRI"	"R"
	0049h		" "
(P+3)h = 3Ch	0031h	Major version number, ASCII	"1"
(P+4)h = 3Dh	0033h	Minor version number, ASCII	"3"
(P+5)h = 3Eh	00E6h	Extended Query table contents for Primary Algorithm. Address	
	0003h	(P+5)h contains less significant byte.	
(P+7)h = 40h	0000h	bit 0Chip Erase supported(1 = Yes, 0 = No)	No
(P+8)h = 41h	0000h	bit 1Erase Suspend supported(1 = Yes, 0 = No) bit 2Program Suspend supported(1 = Yes, 0 = No) bit 3Legacy Lock/Unlock supported(1 = Yes, 0 = No) bit 4Queued Erase supported(1 = Yes, 0 = No) bit 5Instant individual block locking supported(1 = Yes, 0 = No) bit 6Protection bits supported(1 = Yes, 0 = No) bit 7Page mode read supported(1 = Yes, 0 = No) bit 8Synchronous read supported(1 = Yes, 0 = No) bit 9Simultaneous operation supported(1 = Yes, 0 = No) bit 10 to 31Reserved; undefined bits are '0'. If bit 31 is '1' then another 31 bit field of optional features follows at the end of the bit-30 field.	Yes Yes No Yes Yes Yes Yes
(P+9)h = 42h	0001h	Supported Functions after Suspend Read Array, Read Status Register and CFI Query bit 0Program supported after Erase Suspend (1 = Yes, 0 = No) bit 7 to 1Reserved; undefined bits are '0'	Yes
(P+A)h = 43h	0003h	Block Protect Status	
(P+B)h = 44h	0000h	Defines which bits in the Block Status Register section of the Query are implemented. bit 0Block protect Status Register Lock/Unlock bit active(1 = Yes, 0 = No) bit 1Block Lock Status Register Lock-Down bit active (1 = Yes, 0 = No) bit 15 to 2Reserved for future use; undefined bits are '0'	Yes Yes
(P+C)h = 45h	0018h	V <sub>DD</sub> Logic Supply Optimum Program/Erase voltage (highest performance) bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	1.8V
(P+D)h = 46h	00C0h	V <sub>PP</sub> Supply Optimum Program/Erase voltage bit 7 to 4 HEX value in volts bit 3 to 0 BCD value in 100 mV	12V

# Table 35. Primary algorithm-specific extended query table



## Common Flash interface

#### Table 36.Protection Register information

Offset	Data	Description	Value
(P+E)h = 47h	0001h	Number of protection register fields in JEDEC ID space. 0000h indicates that 256 fields are available.	1
(P+F)h = 48h	0080h	Protection Field 1: Protection Description	0080h
(P+10)h = 49h	0000h	Bits 0-7 Lower byte of protection register address	006011
(P+11)h = 4Ah	0003h	Bits 8-15 Upper byte of protection register address Bits 16-23 2 <sup>n</sup> bytes in factory pre-programmed region	8 Bytes
(P+12)h= 4Bh	0004h	Bits 24-31 2 <sup>n</sup> bytes in user programmable region	16 Bytes

#### Table 37.Burst read information

Offset	Data	Description	Value
(P+13)h = 4Ch	0003h	Page-mode read capability bits 0-7'n' such that 2 <sup>n</sup> HEX value represents the number of read- page bytes. See offset 28h for device word width to determine page-mode data output width.	8 Bytes
(P+14)h = 4Dh	0004h	Number of synchronous mode read configuration fields that follow.	4
(P+15)h = 4Eh	0001h	Synchronous mode read capability configuration 1 bit 3-7Reserved bit 0-2'n' such that 2 <sup>n+1</sup> HEX value represents the maximum number of continuous synchronous reads when the device is configured for its maximum word width. A value of 07h indicates that the device is capable of continuous linear bursts that will output data until the internal burst counter reaches the end of the device's burstable address space. This field's 3-bit value can be written directly to the read configuration register bit 0-2 if the device is configured for its maximum word width. See offset 28h for word width to determine the burst data output width.	4
(P+16)h = 4Fh	0002h	Synchronous mode read capability configuration 2	8
(P+17)h = 50h	0003h	Synchronous mode read capability configuration 3	16
(P+18)h = 51h	0007h	Synchronous mode read capability configuration 4	Cont.

# Table 38. Bank and erase block region information<sup>(1) (2)</sup>

Top Devi	ces	Bottom De	vices	Description
Offset	Data	Offset	Data	Description
(P+19)h = 52h	02h	(P+19)h = 52h	02h	Number of Bank Regions within the device

1. The variable P is a pointer which is defined at CFI offset 15h.

2. Bank Regions. There are two Bank Regions, see Appendix A, Table 29 and Table 30.

Table 39.	Bank and erase block region 1 information <sup>(1)</sup>
Table 55.	Dank and erase block region 1 mormation*

M58WR064	HT	M58WR064	НВ	Description				
Offset	Data	Offset	Data	Description				
(P+1A)h = 53h	0Fh	(P+1A)h = 53h	01h	Number of identical banks within Bank Region 1				
(P+1B)h = 54h	00h	(P+1B)h = 54h	00h					
(P+1C)h = 55h	11h	(P+1C)h = 55h	11h	Number of program or erase operations allowed in region 1: Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations				
(P+1D)h = 56h	00h	(P+1D)h = 56h	00h	Number of program or erase operations allowed in other banks while a bank in same region is programming Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations				
(P+1E)h = 57h	00h	(P+1E)h = 57h	00h	Number of program or erase operations allowed in other banks while a bank in this region is erasing Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations				
(P+1F)h = 58h	01h	(P+1F)h = 58h	02h	Types of erase block regions in region 1 n = number of erase block regions with contiguous same-size erase blocks. Symmetrically blocked banks have one blocking region. <sup>(2)</sup>				
(P+20)h = 59h	07h	(P+20)h = 59h	07h	Bank Region 1 Erase Block Type 1 Information				
(P+21)h = 5Ah	00h	(P+21)h = 5Ah	00h	Bits 0-15: n+1 = number of identical-sized erase				
(P+22)h = 5Bh	00h	(P+22)h = 5Bh	20h	Bits 16-31: $n \times 256 = number of bytes in erase block$				
(P+23)h = 5Ch	01h	(P+23)h = 5Ch	00h	region				
(P+24)h = 5Dh	64h	(P+24)h = 5Dh	64h	Bank Region 1 (Erase Block Type 1)				
(P+25)h = 5Eh	00h	(P+25)h = 5Eh	00h	Minimum block erase cycles × 1000				
(P+26)h = 5Fh	01h	(P+26)h = 5Fh	01h	Bank Region 1 (Erase Block Type 1): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved 5Eh 01 5Eh 01				
(P+27)h = 60h	03h	(P+27)h = 60h	03h	Bank Region 1 (Erase Block Type 1): Page mode and synchronous mode capabilities Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved				



# Common Flash interface

able 59.			cylon				
M58WR06	64HT	M58WR064	HB	- Description			
Offset	Data	Offset	Data	Description			
		(P+28)h = 61h	06h	Bank Region 1 Erase Block Type 2 Information			
		(P+29)h = 62h	00h	Bits 0-15: n+1 = number of identical-sized			
		(P+2A)h = 63h	00h	erase blocks			
		(P+2B)h = 64h	01h	Bits 16-31: nx256 = number of bytes in erase block region			
		(P+2C)h = 65h	64h	Bank Region 1 (Erase Block Type 2)			
		(P+2D)h = 66h	00h	Minimum block erase cycles × 1000			
		(P+2E)h = 67h	01h	Bank Regions 1 (Erase Block Type 2): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved			
		(P+2F)h = 68h	03h	Bank Region 1 (Erase Block Type 2): Page mode and synchronous mode capabilities Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved			

Table 39.	Bank and erase block region 1	l information <sup>(1)</sup>	(continued)
-----------	-------------------------------	------------------------------	-------------

1. The variable P is a pointer which is defined at CFI offset 15h.

2. Bank Regions. There are two Bank Regions, see Appendix A, Table 29 and Table 30.

Table 40.	Bank and erase block region 2 information <sup>(1)</sup>
-----------	--

M58WR064HT		M58WR064	НВ	Description		
Offset	Data	Offset	Data	Description		
(P+28)h = 61h	01h	(P+30)h = 69h	0Fh	Number of identical banks within bank region 2		
(P+29)h = 62h	00h	(P+31)h = 6Ah	00h			
(P+2A)h = 63h	11h	(P+32)h = 6Bh	11h	Number of program or erase operations allowed in bank region 2: Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations		
(P+2B)h = 64h	00h	(P+33)h = 6Ch	00h	Number of program or erase operations allowed in other banks while a bank in this region is programming Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations		

57

M58WR064	HT	M58WR064HB		Description
Offset	Data	Offset	Data	Description
(P+2C)h = 65h	00h	(P+34)h = 6Dh	00h	Number of program or erase operations allowed in other banks while a bank in this region is erasing Bits 0-3: Number of simultaneous program operations Bits 4-7: Number of simultaneous erase operations
(P+2D)h = 66h	02h	(P+35)h = 6Eh	01h	Types of erase block regions in region 2 n = number of erase block regions with contiguous same-size erase blocks. Symmetrically blocked banks have one blocking region. <sup>(2)</sup>
(P+2E)h = 67h	06h	(P+36)h = 6Fh	07h	Bank Region 2 Erase Block Type 1 Information
(P+2F)h = 68h	00h	(P+37)h = 70h	00h	Bits 0-15: n+1 = number of identical-sized erase
(P+30)h = 69h	00h	(P+38)h = 71h	00h	Bits 16-31: nx256 = number of bytes in erase block
(P+31)h = 6Ah	01h	(P+39)h = 72h	01h	region
(P+32)h = 6Bh	64h	(P+3A)h = 73h	64h	Bank Region 2 (Erase Block Type 1)
(P+33)h = 6Ch	00h	(P+3B)h = 74h	00h	Minimum block erase cycles × 1000
(P+34)h = 6Dh	01h	(P+3C)h = 75h	01h	Bank Region 2 (Erase Block Type 1): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved
(P+35)h = 6Eh	03h	(P+3D)h = 76h	03h	<ul> <li>Bank Region 2 (Erase Block Type 1): Page mode and synchronous mode capabilities (defined in <i>Table 37</i>)</li> <li>Bit 0: Page-mode reads permitted</li> <li>Bit 1: Synchronous reads permitted</li> <li>Bit 2: Synchronous writes permitted</li> <li>Bits 3-7: reserved</li> </ul>
(P+36)h = 6Fh	07h			Bank Region 2 Erase Block Type 2 Information
(P+37)h = 70h	00h			Bits 0-15: n+1 = number of identical-sized erase
(P+38)h = 71h	20h			Bits 16-31: nx256 = number of bytes in erase block
(P+39)h = 72h	00h			region
(P+3A)h = 73h	64h			Bank Region 2 (Erase Block Type 2)
(P+3B)h = 74h	00h			Minimum block erase cycles × 1000
(P+3C)h = 75h	01h			Bank Region 2 (Erase Block Type 2): Blts per cell, internal ECC Bits 0-3: bits per cell in erase region Bit 4: reserved for "internal ECC used" Blts 5-7: reserved

Table 40.	Bank and erase block region 2 information <sup>(1)</sup> (	(continued)
-----------	--	-------------



## Common Flash interface

Table 40. Bank and crase block region 2 mormation (continued)								
M58WR064	M58WR064HT		НВ	Description				
Offset	Data	Offset	Data	Description				
(P+3D)h = 76h	03h			Bank Region 2 (Erase Block Type 2): Page mode and synchronous mode capabilities (defined in <i>Table 37</i> ) Bit 0: Page-mode reads permitted Bit 1: Synchronous reads permitted Bit 2: Synchronous writes permitted Bits 3-7: reserved				
(P+3E)h = 77h		(P+3E)h = 77h		Feature Space definitions				
(P+3F)h = 78h		(P+3F)h = 78h		Reserved				


 Table 40.
 Bank and erase block region 2 information<sup>(1)</sup> (continued)

1. The variable P is a pointer which is defined at CFI offset 15h.

2. Bank Regions. There are two Bank Regions, see Appendix A, Table 29 and Table 30.



# Appendix C Flowcharts and pseudo codes

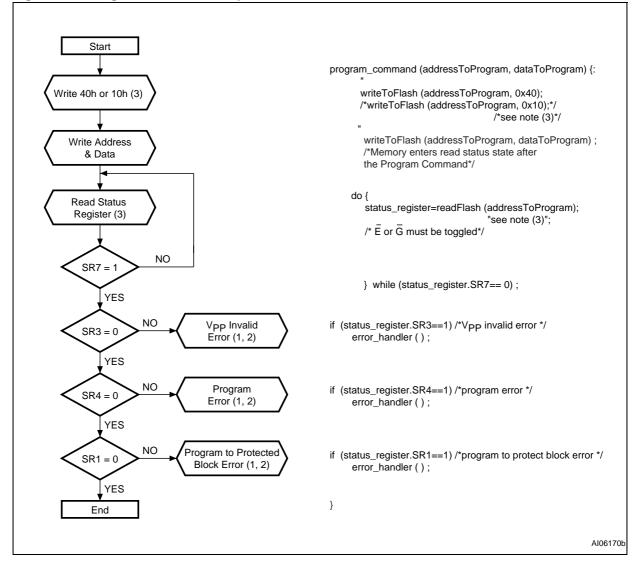


#### Figure 19. Program flowchart and pseudo code

M58WR064HT, M58WR064HB

 Status check of SR1 (Protected Block), SR3 (V<sub>PP</sub> Invalid) and SR4 (Program Error) can be made after each program operation or after a sequence.

2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

3. Any address within the bank can equally be used.

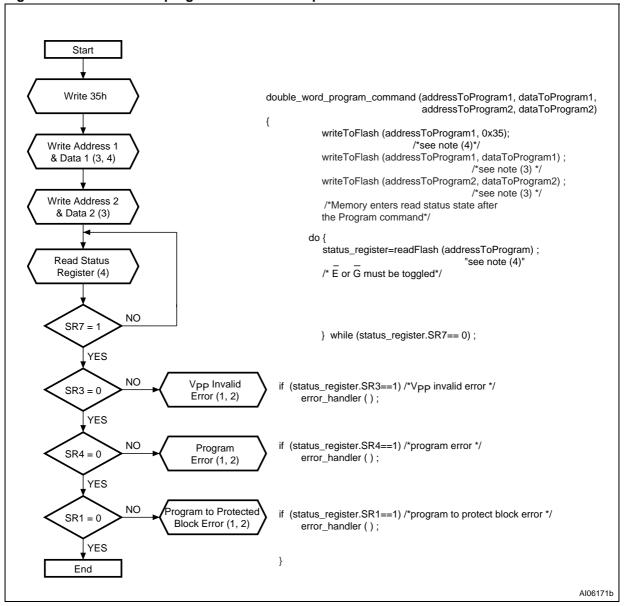

#### Figure 20. Double word program flowchart and pseudo code


 Status check of SR1 (Protected Block), SR3 (V<sub>PP</sub> Invalid) and SR4 (Program Error) can be made after each program operation or after a sequence.

2. If an error is found, the Status Register must be cleared before further Program/Erase operations.

3. Address 1 and Address 2 must be consecutive addresses differing only for bit A0.

4. Any address within the bank can equally be used.



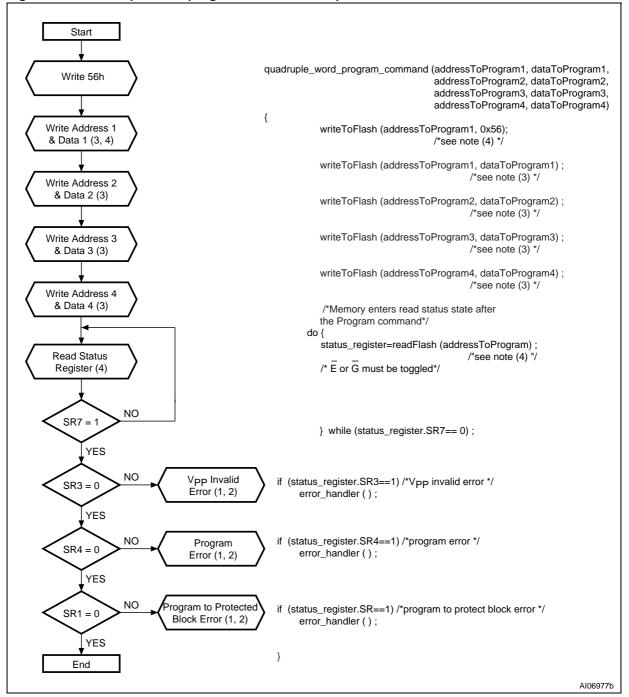


#### Figure 21. Quadruple word program flowchart and pseudo code

1. Status check of SR1 (Protected Block), SR3 (V<sub>PP</sub> Invalid) and SR4 (Program Error) can be made after each program operation or after a sequence.

- 2. If an error is found, the Status Register must be cleared before further Program/Erase operations.
- 3. Address 1 to Address 4 must be consecutive addresses differing only for bits A0 and A1.
- 4. Any address within the bank can equally be used.


5/

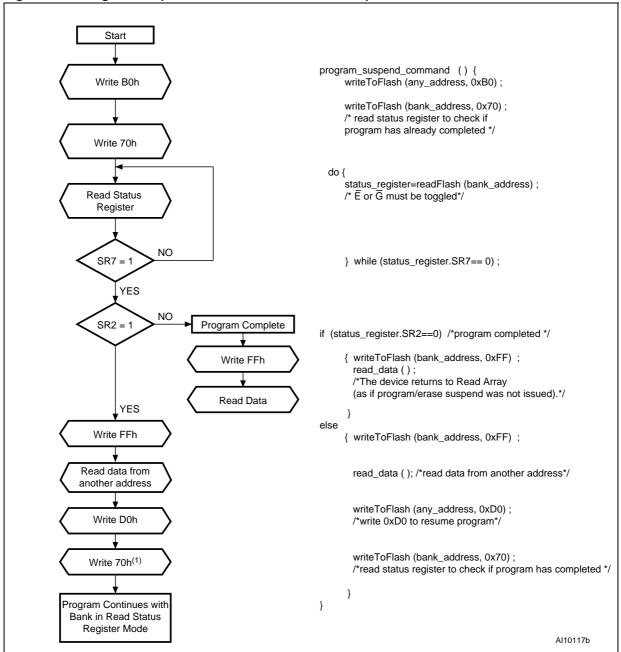

#### Figure 22. Program suspend and resume flowchart and pseudo code

1. The Read Status Register command (Write 70h) can be issued just before or just after the Program Resume command.




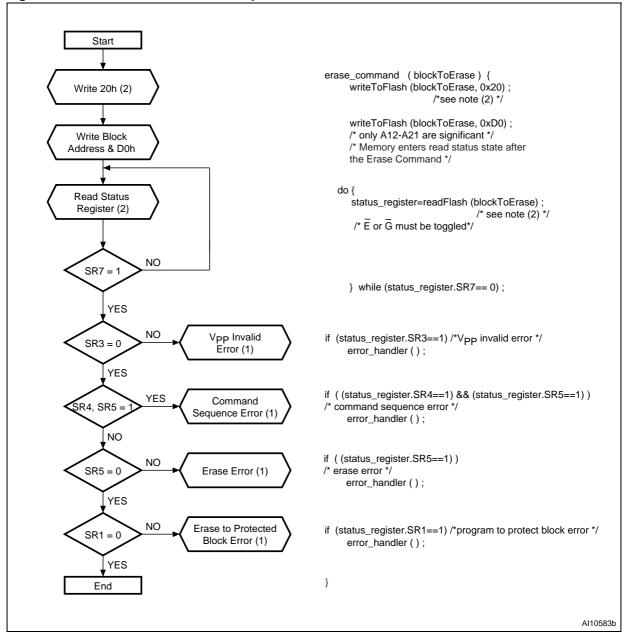



1. If an error is found, the Status Register must be cleared before further Program/Erase operations.


2. Any address within the bank can be used also.

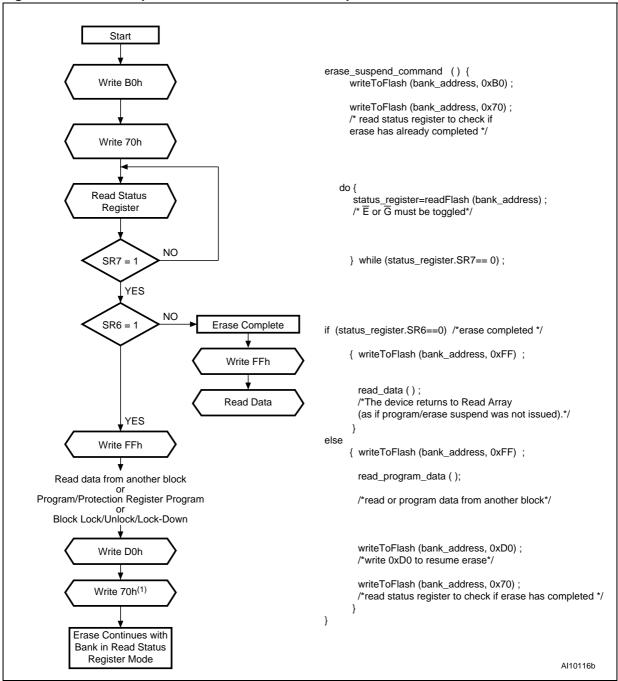

#### Figure 24. Erase suspend and resume flowchart and pseudo code

1. The Read Status Register command (Write 70h) can be issued just before or just after the Erase Resume command.




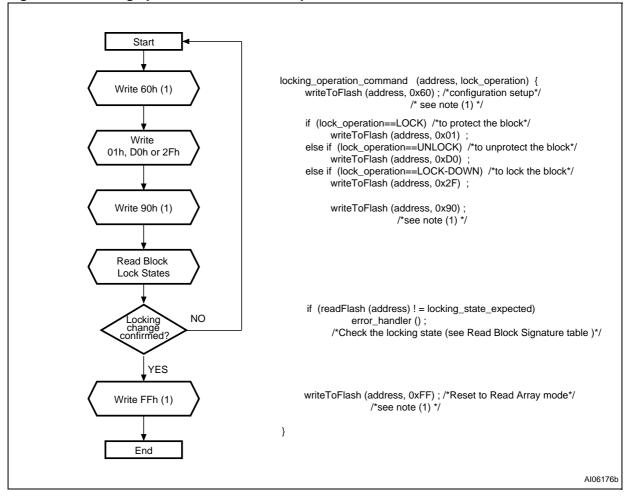



1. Any address within the bank can equally be used.

57

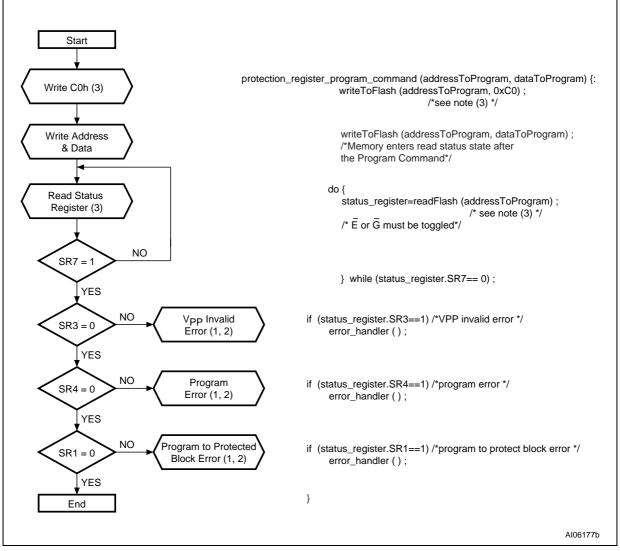

#### Figure 26. Protection Register program flowchart and pseudo code

1. Status check of SR1 (protected block), SR3 (V<sub>PP</sub> invalid) and SR4 (program error) can be made after each program operation or after a sequence.

2. If an error is found, the Status Register must be cleared before further Program/Erase Controller operations.

3. Any address within the bank can equally be used.



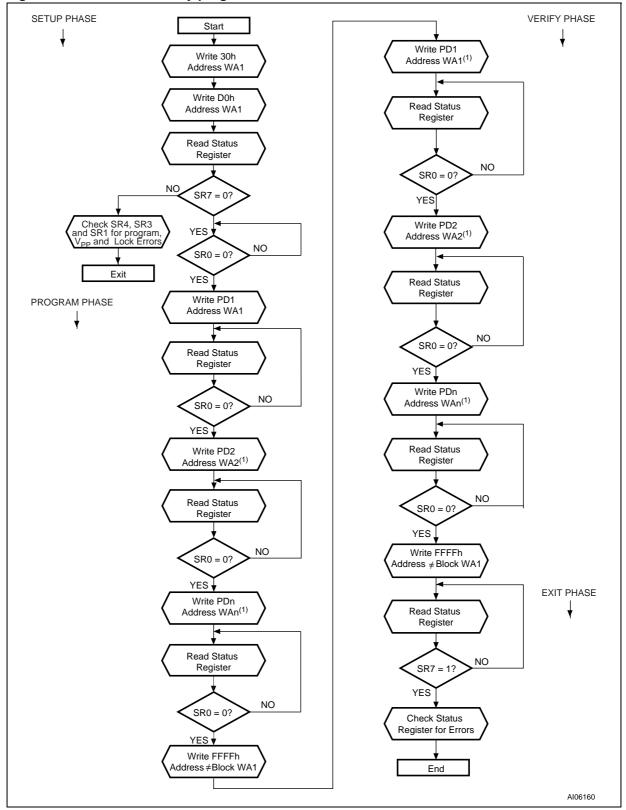


Figure 27. Enhanced factory program flowchart


1. Address can remain Starting Address WA1 or be incremented.

{

# Enhanced factory program pseudo code

```
efp_command(addressFlow,dataFlow,n)
/* n is the number of data to be programmed */
   /* setup phase */
  writeToFlash(addressFlow[0],0x30);
  writeToFlash(addressFlow[0],0xD0);
  status_register=readFlash(any_address);
  if (status_register.SR7==1) {
      /*EFP aborted for an error*/
      if (status_register.SR4==1) /*program error*/
         error_handler();
      if (status_register.SR3==1) /*VPP invalid error*/
         error_handler();
      if (status_register.SR1==1) /*program to protect block error*/
         error_handler();
   }
   else{
      /*Program Phase*/
     do {
         status_register=readFlash(any_address);
         /* E or G must be toggled*/
      } while (status_register.SR0==1)
      /*Ready for first data*/
      for (i=0; i++; i< n) {</pre>
         writeToFlash(addressFlow[i],dataFlow[i]);
         /* status register polling*/
         do {
            status_register=readFlash(any_address);
            /* E or G must be toggled*/
         } while (status_register.SR0==1);
         /* Ready for a new data */
      }
     writeToFlash(another_block_address,FFFFh);
      /* Verify Phase */
      for (i=0; i++; i< n) {</pre>
         writeToFlash(addressFlow[i],dataFlow[i]);
         /* status register polling*/
         do {
           status_register=readFlash(any_address);
            /* E or G must be toggled*/
         } while (status_register.SR0==1);
         /* Ready for a new data */
      }
     writeToFlash(another_block_address,FFFFh);
      /* exit program phase */
      /* Exit Phase */
      /* status register polling */
      do {
         status_register=readFlash(any_address);
         /* E or G must be toggled */
      } while (status_register.SR7==0);
      if (status_register.SR4==1) /*program failure error*/
         error_handler();
      if (status_register.SR3==1) /*VPP invalid error*/
         error_handler();
      if (status_register.SR1==1) /*program to protect block error*/
         error handler();
   }
```



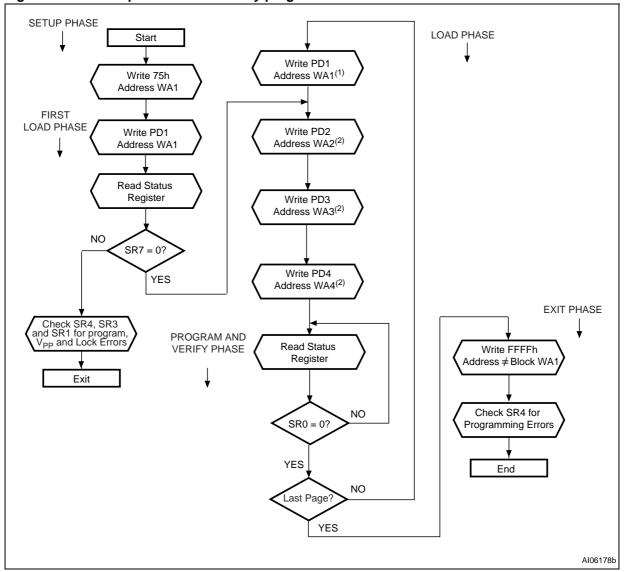



1. Address can remain starting address WA1 (in which case the next page is programmed) or can be any address in the same block.

2. The address is only checked for the first word of each page as the order to program the words is fixed, so subsequent words in each page can be written to any address.



# Quadruple enhanced factory program pseudo code

```
quad_efp_command(addressFlow,dataFlow,n)
/\,{}^{\star} n is the number of pages to be programmed.*/
           {
      /* Setup phase */
  writeToFlash(addressFlow[0],0x75);
     for (i=0; i++; i< n) {</pre>
                              /*Data Load Phase*/
      /*First Data*/
     writeToFlash(addressFlow[i],dataFlow[i,0]);
            /*at the first data of the first page, Quad-EFP may be aborted*/
      if (First Page) {
                  status_register=readFlash(any_address);
                  if (status_register.SR7==1){
            /*EFP aborted for an error*/
                        if (status_register.SR4==1) /*program error*/
               error handler();
                        if (status_register.SR3==1) /*VPP invalid error*/
               error_handler();
                        if (status_register.SR1==1) /*program to protect block
error*/
               error_handler();
        }
      }
      /*2nd data*/
           writeToFlash(addressFlow[i],dataFlow[i,1]);
      /*3rd data*/
                  writeToFlash(addressFlow[i],dataFlow[i,2]);
      /*4th data*/
           writeToFlash(addressFlow[i],dataFlow[i,3]);
      /* Program&Verify Phase */
     do{
         status_register=readFlash(any_address);
         /* E or G must be toggled*/
      }while (status_register.SR0==1)
  }
   /* Exit Phase */
  writeToFlash(another_block_address,FFFFh);
     /* status register polling */
   do {
      status_register=readFlash(any_address);
      /* E or G must be toggled */
   } while (status_register.SR7==0);
        if (status_register.SR1==1) /*program to protected block error*/
      error_handler();
     if (status_register.SR3==1) /*VPP invalid error*/
      error_handler();
     if (status_register.SR4==1) /*program failure error*/
      error_handler();
   }
}
```



# Appendix D Command interface state tables

							Command Input						
Current	CI State	Read Array <sup>(2)</sup> (FFh)	WP setup <sup>(3)</sup> (4) (10/40h)	DWP, QWP Setup <sup>(3)(4)</sup> (35h, 56h)	Block Erase, Bank Erase Setup <sup>(3)(4)</sup> (20h, 80h)	EFP Setup (30h)	Quad- EFP Setup (75h)	Erase Confirm P/E Resume, Block Unlock confirm, EFP Confirm (D0h)	Program/ Erase Suspend (B0h)	Read Status Register (70h)	Clear status Register <sup>(5)</sup> (50h)	Read Electronic signature, Read CFI Query (90h, 98h)	
Re	ady	Ready	Program Setup	Program Setup	Erase Setup	EFP Setup	Quad- EFP Setup			Ready			
Lock/C	R Setup		Ready (Lock Error) Ready Ready (Lock Error)										
отр	Setup						OTP B	161/					
on	Busy							usy					
	Setup						Program	Busy					
Program	Busy		Program Busy						Program Suspended				
	Suspend		Program Suspended Program Busy Program Suspended										
	Setup		Ready (error)   Erase Busy   Ready (error)										
Erase	Busy				Erase Busy				Erase Suspended		Erase Bus	sy	
	Suspend	Erase Suspended						Erase Busy		Erase S	uspended		
	Setup					Program	n Busy in E	rase Suspend					
Program in Erase Suspend	Busy			Program B	usy in Erase	e Suspei	nd		Program Suspend in Erase Suspend	Program I	Busy in Era	se Suspend	
	Suspend		Program	Suspend ir	n Erase Sus	pend		Program Busy in Erase Suspend	Program	n Suspend	l in Erase S	Suspend	
	R Setup Suspend	Erase Suspend (Lock Error) Erase Suspend (Lock Error) Erase Suspend (Lock Error)							ror)				
	Setup		Ready (error) EFP Busy Ready (error)										
EFP	Busy						EFP Bu	sy <sup>(6)</sup>					
	Verify						EFP Ver	ify <sup>(6)</sup>					
Quad	Setup					(	Quad EFP	Busy <sup>(6)</sup>					
EFP	Busy					(	Quad EFP	Busy <sup>(6)</sup>					

 CI = Command Interface, CR = Configuration Register, EFP = Enhanced Factory Program, Quad EFP = Quadruple Enhanced Factory Program, DWP = Double Word Program, QWP = Quadruple Word Program, P/E. C. = Program/Erase Controller.

2. At Power-Up, all banks are in read array mode. A Read Array command issued to a busy bank, results in undetermined data output.

3. The two cycle command should be issued to the same bank address.

4. If the P/EC is active, both cycles are ignored.

5. The Clear Status Register command clears the Status Register error bits except when the P/EC is busy or suspended.

6. EFP and Quad EFP are allowed only when Status Register bit SR0 is set to '0'.EFP and Quad EFP are busy if Block Address is first EFP Address. Any other commands are treated as data.



Table 41.
 Command interface states - modify table, next state<sup>(1)</sup>

#### Command interface state tables

	Command Input <sup>(2)</sup>											
Current CI State	Read Array <sup>(3)</sup> (FFh)	DWP, QWP Setup <sup>(4)(5)</sup> (35h, 56h)	Block Erase, Bank Erase Setup <sup>(4)(5)</sup> (20h, 80h)	EFP Setup (30h)	Quad- EFP Setup (75h)	Erase Confirm P/E Resume, Block Unlock confirm, EFP Confirm (D0h)	Program/ Erase Suspend (B0h)	Read Status Register (70h)	Clear status Register <sup>(6)</sup> (50h)	Read Electronic signature, Read CFI Query (90h, 98h)		
Program Setup												
Erase Setup												
OTP Setup												
Program in Erase Suspend												
EFP Setup												
EFP Busy		Status Register										
EFP Verify												
Quad EFP Setup												
Quad EFP Busy												
Lock/CR Setup												
Lock/CR Setup in Erase Suspend												
OTP Busy										Status Register		
Ready												
Program Busy												
Erase Busy	Array		Status R	egister		Output Und	changed	Status	Output	Electronic		
Program/Erase	-			Ŭ.			5	Register	Unchanged	Signature/C		
Program Busy in Erase Suspend												
Program Suspend in Erase Suspend												

## Table 42. Command interface states - modify table, next output<sup>(1)</sup>

 CI = Command Interface, CR = Configuration Register, EFP = Enhanced Factory Program, Quad EFP = Quadruple Enhanced Factory Program, DWP = Double Word Program, QWP = Quadruple Word Program, P/E. C. = Program/Erase Controller.

2. The output state shows the type of data that appears at the outputs if the bank address is the same as the command address. A bank can be placed in Read Array, Read Status Register, Read Electronic Signature or Read CFI Query mode, depending on the command issued. Each bank remains in its last output state until a new command is issued. The next state does not depend on the bank's output state.

3. At Power-Up, all banks are in read array mode. A Read Array command issued to a busy bank, results in undetermined data output.

4. The two cycle command should be issued to the same bank address.

5. If the P/EC is active, both cycles are ignored.

6. The Clear Status Register command clears the Status Register error bits except when the P/EC is busy or suspended.



Current CI State		Command Input								
		Lock/CR Setup <sup>(2)</sup> (60h)	OTP Setup <sup>(2)</sup> (C0h)	Block Lock Confirm (01h)	Block Lock- Down Confirm (2Fh)	Set CR Confirm (03h)	EFP Exit, Quad EFP Exit <sup>(3)</sup>	Illegal Command <sup>(4)</sup>	P/E. C. Operation Completed	
Ready		Lock/CR Setup	OTP Setup	Ready				N/A		
Lock/CR Setup		Ready (L	ock error)	Ready			Ready (Lock error)		N/A	
ОТР	Setup	OTP Busy							N/A	
	Busy	OTE Dusy							Ready	
Program	Setup	Program Busy							N/A	
	Busy	Program Busy							Ready	
	Suspend	Program Suspended							N/A	
Erase	Setup	Ready (error)							N/A	
	Busy	Erase Busy							Ready	
	Suspend	Lock/CR Setup in Erase Suspend	Setup in Erase Suspended							
Program in Erase Suspend	Setup	Program Busy in Erase Suspend								
	Busy	Program Busy in Erase Suspend							Erase Suspended	
	Suspend	Program Suspend in Erase Suspend							N/A	
Lock/CR Setup in Erase Suspend		Erase Susper	rase Suspend (Lock error)		Erase Suspend		Erase Suspend (Lock error)		N/A	
EFP	Setup	Ready (error)							N/A	
	Busy			EFP Busy <sup>(5)</sup>	P Busy <sup>(5)</sup>			EFP Busy <sup>(5)</sup>	N/A	
	Verify	EFP Verify <sup>(5)</sup>					Ready	EFP Verify <sup>(5)</sup>	Ready	
QuadEFP	Setup	Quad EFP Busy <sup>(5)</sup>					•	N/A		
	Busy	Quad EFP Busy <sup>(5)</sup>				Ready	Quad EFP Busy <sup>(4)</sup>	Ready		

# Table 43. Command interface states - lock table, next state<sup>(1)</sup>

1. CI = Command Interface, CR = Configuration Register, EFP = Enhanced Factory Program, Quad EFP = Quadruple Enhanced Factory Program, P/E. C. = Program/Erase Controller.

2. If the P/EC is active, both cycles are ignored.

3. EFP and Quad EFP exit when Block Address is different from first Block Address and data is FFFFh.

4. Illegal commands are those not defined in the command set.

5. EFP and Quad EFP are allowed only when Status Register bit SR0 is set to '0'. EFP and Quad EFP are busy if Block Address is first EFP Address. Any other commands are treated as data.



	Command Input								
Current CI State	Lock/CR Setup <sup>(2)</sup> (60h)	OTP Setup <sup>(2)</sup> (C0h)	Block Lock Confirm (01h)	Block Lock- Down Confirm (2Fh)	Set CR Confirm (03h)	EFP Exit, Quad EFP Exit <sup>(3)</sup>	lllegal Command <sup>(4)</sup>	P/E. C. Operation Completed	
Program Setup									
Erase Setup									
OTP Setup									
Program in Erase Suspend									
EFP Setup	Status Register								
EFP Busy									
EFP Verify									
Quad EFP Setup									
Quad EFP Busy									
Lock/CR Setup								Output Unchanged	
Lock/CR Setup in Erase Suspend	Status F		Register		Array	Status Register			
OTP Busy									
Ready			Output Unchanged						
Program Busy									
EraseBusy	Status Register	Pogistor			ed Array	Output Unchanged			
Program/Erase		Output Unchange			Allay				
Program Busy in Erase Suspend									
Program Suspend in Erase Suspend									

# Table 44. Command interface states - lock table, next output<sup>(1)</sup>

1. CI = Command Interface, CR = Configuration Register, EFP = Enhanced Factory Program, Quad EFP = Quadruple Enhanced Factory Program, P/E. C. = Program/Erase Controller.

2. If the P/EC is active, both cycles are ignored.

3. EFP and Quad EFP exit when Block Address is different from first Block Address and data is FFFFh.

4. Illegal commands are those not defined in the command set.



# 17 Revision history

Table 45.	Document revision history
-----------	---------------------------

Date	Revision	Changes
12-Jan-2006	1	Initial release.
30-Mar-2006	2	M58WR032HT and M58WR032HB part numbers removed. First cycle address changed for Clear Status Register command in <i>Table 5: Standard commands</i> . Small text changes.
04-Dec-2007	3	Changed the t <sub>GHWL</sub> value from 14 and 17 to 5 ns for both speed classes in <i>Table 24: Write AC characteristics, Write Enable controlled</i> .



#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED ST REPRESENTATIVE, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2007 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan -Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com