


All other signals including VSS, VDD, etc. terminated internal to the RF Module.

For nRF905 use information, reference the Nordic nRF905 data sheet.

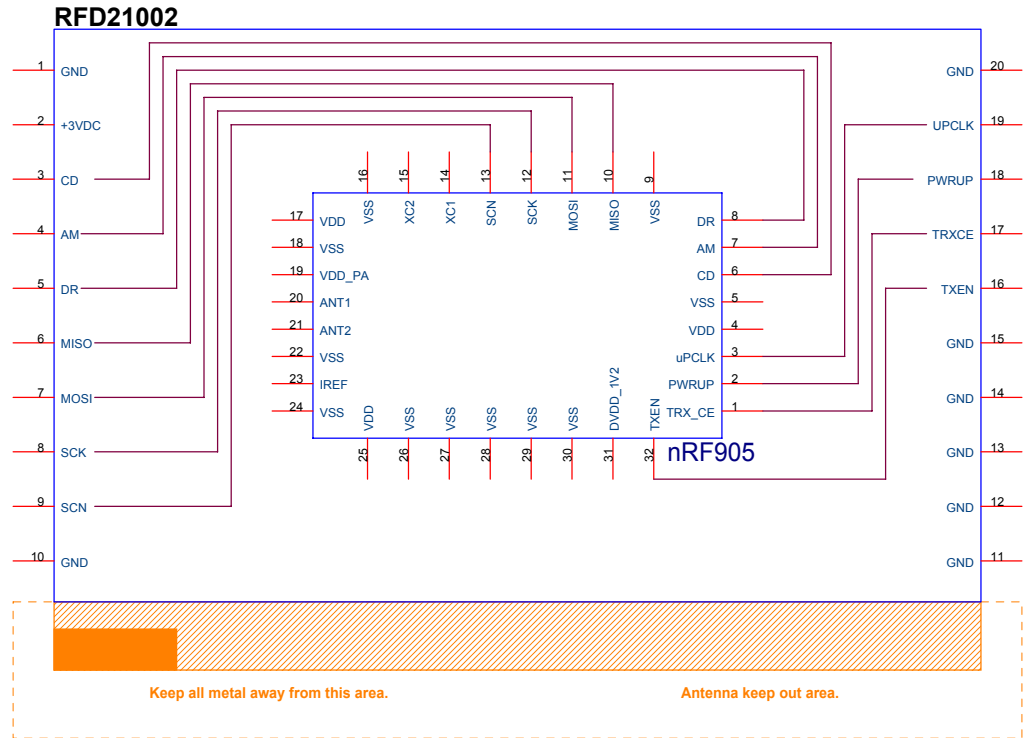

RFD21002
Internal Wiring Diagram
 09-20-06 03:20 PM - AF

RF DIGITAL
 CORPORATION

(C) Copyright 2006, RF Digital Corporation
 support@rfdigital.com • sales@rfdigital.com
 Tel: (818) 541-7622 • www.rfdigital.com