

# Subminiature Photoelectric Sensor

**E3T** 

# Omron's Next Generation of Sub-miniature Photoelectric Sensors

- Utilizes Omron's "Hyper LED" technology to achieve the industry's smallest visible red beam
- Self-contained sensor ideal for space-restricted applications
- "Pin-point" beam for detecting extremely small objects
- Offered in both flat and rectangular body styles
- Retroreflective model employs Omron's Free-Angle Optics technology (FAO) to detect objects as small as 2 mm dia.
- Convergent-beam model spot diameter is 0.15 mm
- Through-beam model is capable of sensing distances of 1 meter with a 2 mm target diameter
- CE conformance
- Robotic cable versions available (See Note 2, below.)





# Ordering Information

## **■ PHOTOELECTRIC SENSORS**

Sensor type		Sensing method								
			Through-bean	n	Retroreflective	Diffuse reflective	Convergent-be	eam		
Appearance			Side-view	Flat	Side-view	Flat	Side-view			
			Silver Co.							
Sensing distance		1 m	500 mm	10 to 200 mm	5 to 30 mm	5 to 15 mm	5 to 30 mm			
Part number	Light-ON	NPN	E3T-ST11	E3T-FT11	E3T-SR11	E3T-FD11N	E3T-SL11	E3T-SL21		
		PNP	E3T-ST13	E3T-FT13	E3T-SR13	E3T-FD13N	E3T-SL13	E3T-SL23		
	Dark-ON	NPN	E3T-ST12	E3T-FT12	E3T-SR12	E3T-FD12N	E3T-SL12	E3T-SL22		
		PNP	E3T-ST14	E3T-FT14	E3T-SR14	E3T-FD14N	E3T-SL14	E3T-SL24		

Note: 1. All through-beam models are packaged and sold as pairs (one transmitter and one receiver).

- 2. E3T sensors are available with robotic cable. To order, add the letter "R" to the end of the part number. Example: E3T-ST11R
- 3. 5-M cable models are available. To order, add the desigination 5M to the end of the part number. Example: E3T-T11 5M

# ■ ACCESSORIES (ORDER SEPARATELY)

# Slits (Apertures)

Slits for sensor models	Slit width	Sensing distance	Minimum sensing object (typical)	Comments	Part number
E3T-ST1□	-ST1 ☐ 0.5 dia. 50 mm		0.5 mm wide		E39-S63
	1 dia.	100 mm	1 mm wide	and Receiver	

Slits for sensor models	Slit width	Sensing distance	Minimum sensing object (typical)	Comments	Part number
E3T-FT1□	-FT1□ 0.5 dia. 50 mm		0.5 mm wide	One each for Emitter	E39-S64
	1 dia.	100 mm	1 mm wide	and Receiver	

#### Reflectors

Item	Sensing distance	Minimum sensing object (typical)	Part number
Compact retroreflective model 10 to 200 mm		2 mm wide	E39-R4 (See Note.)
	10 to 100 mm		E39-R37

Note: E39-R4 reflector included with the E3T-SR1  $\square$  (can also be ordered separately).

# **Adjustable Aperture**

For sensor models	Appearance	Part number
E3T-ST1□		E39-E10

# **Mounting Brackets**

For sensor models	Appearance	Comments	Part number
E3T-S□		Two mounting brackets are required for through-beam models.	E39-L116
			E39-L117
			E39-L118
E3T-F			E39-L119
			E39-L120

# Specifications \_\_\_\_\_


# ■ RATINGS/CHARACTERISTICS

Sensing method		Through-beam				Retroreflective Convergent beam				Diffuse reflective			
Shape		Side-view Flat			Side-view				Flat				
Output type		NPN	PNP	NPN	PNP	NPN	PNP	NPN	PNP	NPN	PNP	NPN	PNP
Part number	Light-ON	-ST11	-ST13	-FT11	-FT13	-SR11	-SR13	-SL11	-SL13	-SL21	-SL23	-FD11	-FD13
	Dark-ON	-ST12	-ST14	-FT12	-FT14	-SR12	-SR14	-SL12	-SL14	-SL22	-SL24	-FD12	-FD14
Sensing dista	Sensing distance		1 m (adjustable aperture is available)		500 mm		10 to 200 mm (with the E39-R4)		5 to 15 mm (50 x 50 mm Kodak white card)		mm 0 mm white	5 to 30 m (50 x 50 Kodak w	
Standard sens	sing target	2 mm d	lia. min.			10 mm d	ia. min.						
Min. sensing t (typical)	arget	2 mm d	lia. min.			2 mm dia (sensing at 100 m	distance	0.15 m	0.15 mm dia. (sensing distance at 1		at 10 mm)		
Hysteresis								2 mm r	nax.	6 mm n	nax.	6 mm ma	ax.
Optical	Emitter	3° to 10	)°	3° to 13		2° to 5°							
angle	Receiver	3° to 70	)°	3° to 70	0								
Light source (wave length)		Red LE	D ("Pin-ן	ooint" LE	D) (λ=670	nm)							
Power supply	voltage	12 to 24	12 to 24 VDC ±10%, ripple (p-p) 10% max.							24 VDC ±10%			
Current consu	ımption	12 mA	max. em	itter/rece	iver	20 mA m	ıax.						•
Output	Output		Open collector, load current: 50 mA max. at 24 VDC, residual voltage: 1 V max., operation mode: Light-ON or Dark-ON (separate models)										
Circuit protection (See <i>Precautions</i> Section.)		Protection from reversed and output short-circuit  Protection from reversed polarity, output short-circuit, and mutual interference						al					
Response tim	е	1 ms max. each for on and off											
Ambient light	Incandes- cent lamp	5,000 ℓx max.											
immunity	Sunlight	10,000 ℓx max.											
Ambient	Operating	-25°C to 55°C (-13°F to 131°F)											
temperature	Storage	-40°C to 70°C (-40°F to 158°F) with no icing or condensation											
Ambient	Operating	35% to	85% RH										
humidity	Storage	35% to 95% RH (with no condensation)											
Insulation resi	istance	20 MΩ min. (at 500 VDC)											
Dielectric stre	Dielectric strength		1,000 VAC, 50/60 Hz for 1 min										
Vibration resistance		10 to 2,	000 Hz,	1.5-mm	double an	nplitude o	r 300 m/s <sup>2</sup>	(approx	. 30G) fo	r 0.5 hrs	each in 2	X, Y, and Z	z axis
Shock resistance		1,000 m/s <sup>2</sup> (approx. 100G) 3 times each in X, Y, and Z axis											
Enclosure rating		IEC605	29: IP67										
Connection method		Pre-lea	ded (sta	ndard len	gth: 2 m)	, optional	5-M cable,	optional	robotic	cable			
Weight (with packaging)		Approx	. 40 g			Approx.	20 g						
Materials	Case	PBT				•							
	Lens and cover	Polycarbonate											
Accessories in	ncluded	Two ea model o		mountin	g screws	spring wa	ashers, an	d flat wa	shers, ar	nd reflect	or (E39-	R4: retrore	flective


# **Engineering Data**

# **■ EXCESS GAIN VS. SET DISTANCE (TYPICAL)**


E3T-ST1 (Through-beam)

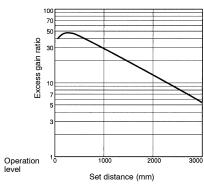


E3T-FT1□ (Through-beam)

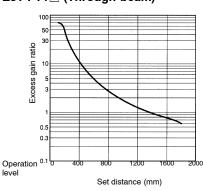


E3T-SR1 with E39-R4 (Retroreflective)

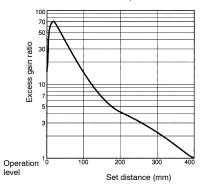


E3T-FD1□ (Diffuse Reflective)

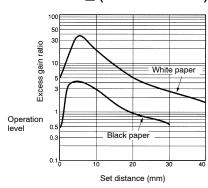

E3T-SL1□ (Convergent Beam)

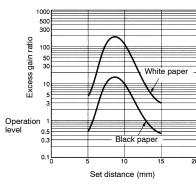


E3T-SL2□ (Convergent Beam)

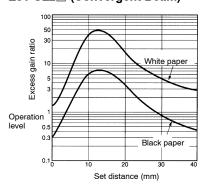


# **■ PARALLEL OPERATING RANGE (TYPICAL)**


# E3T-ST1 ☐ with Slit (Aperture) (Through-Beam)

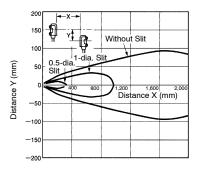


E3T-ST1□ with Slit (Enlarged graph) (Through-Beam)

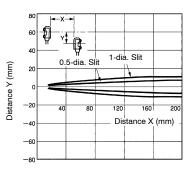


E3T-SR1 with E39-R4 (Retroreflective)

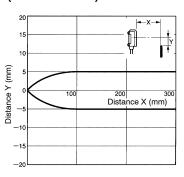

E3T-FT1 with Slit (Through-Beam)

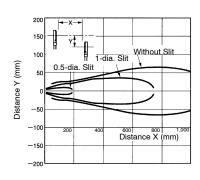


E3T-FT1□ with Slit (Enlarged graph) (Through-Beam)

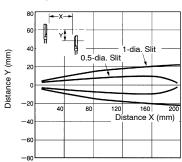

# ■ ANGLE CHARACTERISTICS (TYPICAL)


E3T-SL1□

(Up and Down)

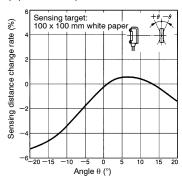


E3T-SL1□

(Left and Right)

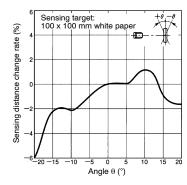


# **■ CLOSE-DISTANCE SENSING CAPABILITY (TYPICAL)**

E3T-SL1 , E3T-SL2 , E3T-FD1

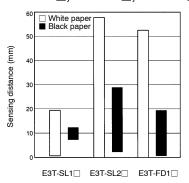


# ■ SENSING TARGET SIZE VS. SENSING DISTANCE (TYPICAL)

E3T-SL1

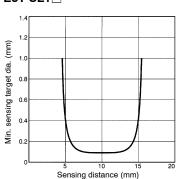


E3T-FD1□, E3T-SL2□

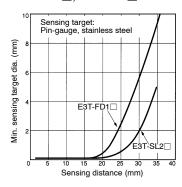


# **■** OPERATION RANGE (TYPICAL)


E3T-FD1 (Diffuse Reflective)

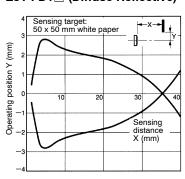


E3T-SL1 (Convergent Beam)

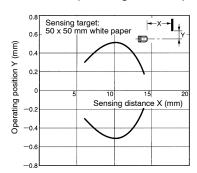


E3T-SL2□ (Convergent Beam)

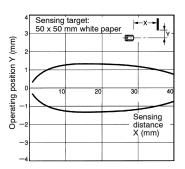


# ■ SENSING DISTANCE CHARACTERISTICS OF ADJUSTABLE APERTURE (WHEN COMPLETING OPTICAL AXIS ADJUSTMENT)

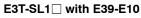


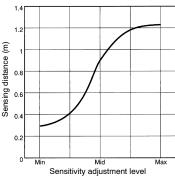

# Operation

#### **■ OUTPUT CIRCUITS**

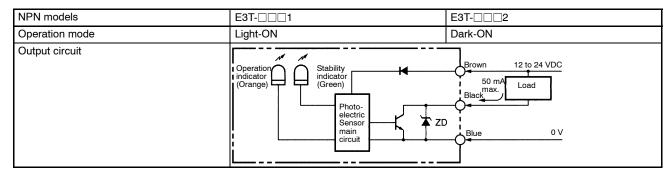

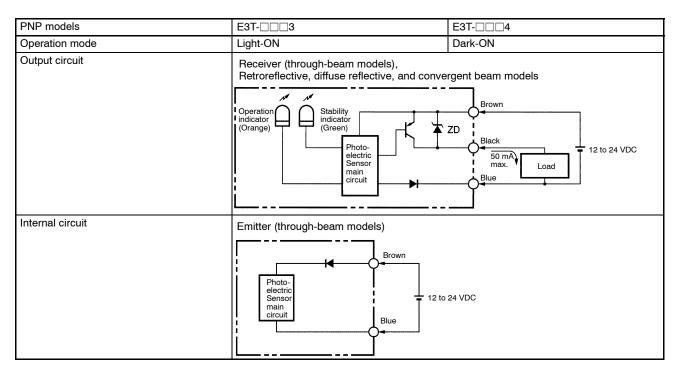

# **■ TIMING CHART**

Diffuse and convergent beam	Light-ON	Dark-ON			
	Target present Target not present	Target present  Target not present			
	Operation ON indicator (orange) OFF	Operation ON indicator (orange) OFF			
	Output ON transistor OFF	Output ON transistor OFF			
	Load Energized De-energized	Energized Load De-energized			
Retroreflective/through-beam	Light-ON	Dark-ON			
	Target present Target not present	Target present  Target not present			
	Operation ON indicator (orange) OFF	Operation ON indicator (orange) OFF			
	Output transistor OFF	Output ON transistor OFF			
	Load Energized De-energized	Energized Load De-energized			

# Dimensions


Unit: mm (inch)


## **■ SIDE-VIEW SENSORS**

## **Through-Beam Models**

E3T-ST11 E3T-ST12 E3T-ST13 E3T-ST14



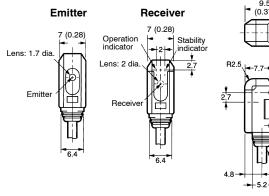

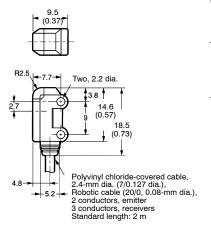


# Mounting Holes Two, M2


15±0.2 (0.59)

#### **Retroreflective Models**

E3T-SR11 E3T-SR12 E3T-SR13 E3T-SR14




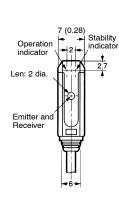

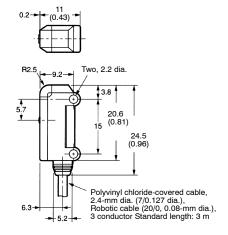

#### **Mounting Holes**


**E3T** 

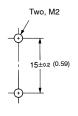


## **Convergent-Beam Models**

E3T-SL11	E3T-SL21
E3T-SL12	E3T-SL22
E3T-SL13	E3T-SL23
E3T-SL14	E3T-SL24



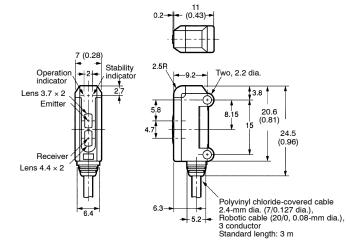

#### **Mounting Holes**

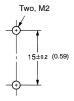


Unit: mm (inch)

#### **■ FLAT THIN SENSORS**

#### **Through-Beam Emitter and Receiver Models**

E3T-FT11 E3T-FT12 E3T-FT13 E3T-FT14



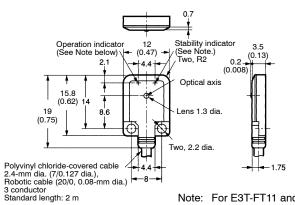


**Mounting Holes** 

Note: For E3T-FT11 and E3T-FT12 Receivers only.

#### **Diffuse Reflective Models**

E3T-FD11-N E3T-FD12-N E3T-FD13-N E3T-FD14-N



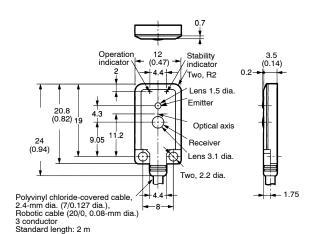


## **Mounting Holes**

## **■ REFLECTORS**

#### Retroreflector


#### E39-R4 (Provided with the E3T-SR1□)




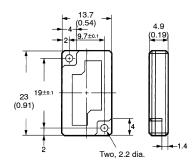

#### E39-R37 Reflector



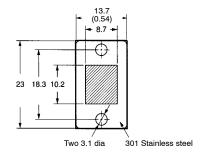


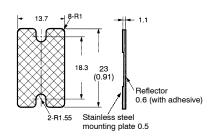

Note: A reflector and a stainless steel mounting plate are supplied together as a set.


# **■ SLITS/APERTURES (ORDER SEPARATELY)**

E39-S63 (Use with E3T-ST1 )

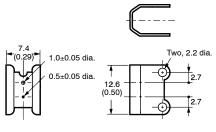


Material: 0.2-mm-thick stainless steel (301 Stainless)

#### **Shown with Sensor**

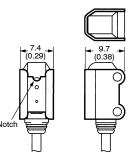


Note: Align the notch direction of the slit when installing on the Emitter and Receiver.

#### E39-S64 (Use with E3T-FT1 )

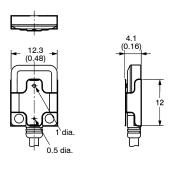



# **Adjustable Aperture**


#### E39-E10 (Use with E3T-ST1 )

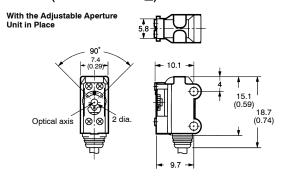

# Use of E39-E10 Adjustable Aperture (Example Dark-ON: E3T-ST12/ST14)

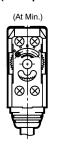

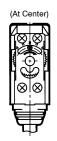

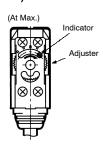

#### For Dark-ON:


- 1. Mount the unit on the receiver.
- Set the adjuster of the Unit to Max (factory setting is at Max).
- Adjust the optical axis (align) and tighten mounting hardware.
- Place a target between emitter and receiver and gradually turn the adjuster counterclockwise toward the Min side. Stop turning the adjuster when the operation indicator and stability indicator (green) turn ON
- Remove the target and confirm that the operation indicator is OFF and the stability indicator (green) is ON.

Note: For Light-ON, adjustment is similar, except that indicators would operate in opposite manner as with Dark-ON.


Unit: mm (inch)

# **■ MOUNTING BRACKETS**

## E39-L116 (Use with E3T-S \( \subseteq \subseteq \) Order Separately

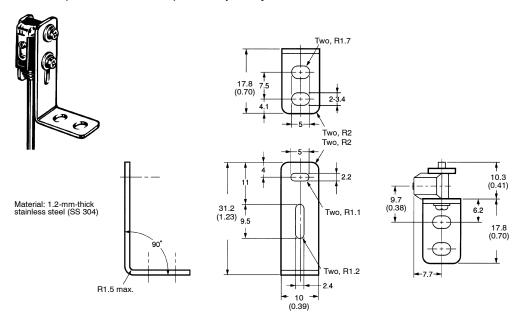


# E39-L116 (Use with E3T-ST1□)

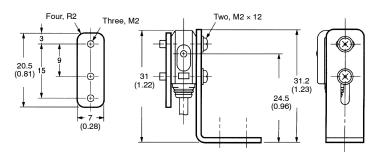


Order brackets separately.

#### 

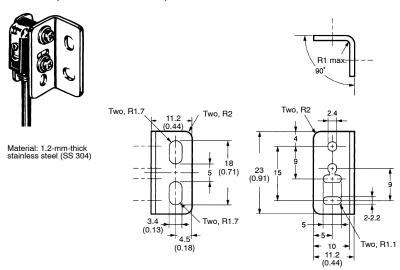

#### E39-L117 (Shown with E3T-ST1□)

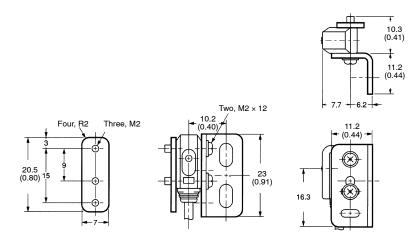


Unit: mm (inch)


Order brackets separately.


## 






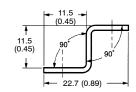


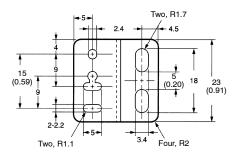


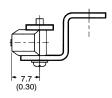

## E39-L118 (Shown with E3T-ST1 )

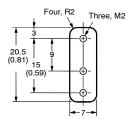


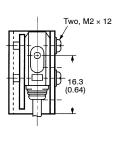


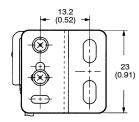


# Mounting Brackets for E3T-FT1□/E3T-FD1□

E39-L119

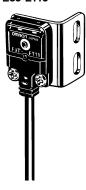


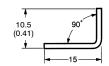

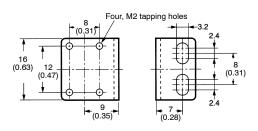



E39-L119 Shown with E3T-F 1




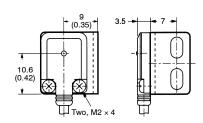

E39-L120

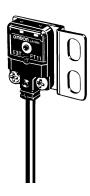


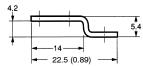

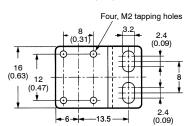

E39-L120 (Shown with E3T-F 1 )



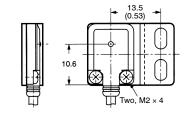

# **Precautions**



Caution

Avoid damage to the E3T: NEVER apply AC power to the E3T.

#### AVOID DAMAGE TO THE E3T

- Do not exceed the rated voltage on the E3T.
- . Do not short-circuit the load connected to the E3T.
- When supplying power to the E3T, make sure that the polarity of the power is correct.

#### **■** OPERATING ENVIRONMENT

To avoid malfunction, DO NOT install the E3T in the following environments:

- · Locations where the E3T is exposed to intense sunlight.
- Locations with high humidity and where condensation may result.
- · Locations with corrosive gas.
- · Locations with vibration or shock affecting the E3T.

#### HIGH-TENSION LINES

To avoid Sensor damage or malfunctioning due to induction noise, do not place the power supply lines of the Photoelectric Sensor within the same conduit as power lines or high-tension lines.

#### **■ CABLE**

The cable can be extended up to 100 m provided that cable thickness does not exceed the 0.3 mm<sup>2</sup> maximum.

#### **■ POWER SUPPLIES**

If a switching regulator is connected to the E3T, you must ground the FG (frame ground) and G (ground) terminals, or the switching noise of the switching regulator may cause the E3T to malfunction.

#### **■ WATER RESISTANCE**

- Do not use the E3T underwater, outdoors, or in the rain.
- Use M2 screws and washers to mount the E3T. When mounting the E3T, NEVER strike the E3T with a hammer, or the E3T will lose its watertight properties.

#### **■ LOAD SHORT-CIRCUIT PROTECTION**

The E3T incorporates a load short-circuit protection function. If the load short-circuits, the output of the E3T will be turned OFF. Recheck the wiring and turn on the E3T again to reset the load short-circuit protection function. The load short-circuit protection function will work if there is a current flow that is 2.4 times larger than the rated load current.

When using an inductance load, be sure that the inrush current will not exceed 2.4 times larger than the rated current.


#### ■ CLEANING

DO NOT apply paint thinner when cleaning the E3T. Paint thinner will damage the casing of the E3T.

#### **■ INDICATORS**

The following graphs indicate the status of each operation level.

Be sure to use the E3T within the stable operating range.

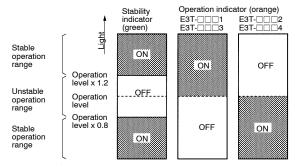

Note: When the E3T's operation level is set to the stable operation range, the E3T will be in its most reliable operation without being influenced by temperature, voltage fluctuation, dust, or mounting changes.

#### **■ TURNING ON POWER SUPPLY**

- The E3T will be ready for sensing 100 ms after the power is turned ON.
- If the E3T is connected to a power source different from one for loads, be sure to turn ON the power supply to the E3T first.

NOTE: DIMENSIONS SHOWN ARE IN MILLIMETERS. To convert millimeters to inches divide by 25.4.

# ONRON ELECTRONICS LLC

One East Commerce Drive Schaumburg, IL 60173

1-800-55-OMRON

#### **OMRON ON-LINE**

Global - http://www.omron.com USA - http://www.omron.com/oei Canada - http://www.omron.com/oci OMRON CANADA, INC.

885 Milner Avenue Scarborough, Ontario M1B 5V8

416-286-6465