

ACT2801

Rev 0, 21-Jan-14

5V/1.5A Backup Battery Pack Manager

FEATURES

- Dedicated Single Chip Solution for Mobile Power With Minimal Component Count
- 5V/1.5A Constant Output Current in Boost Mode
- 1.5A Switching Charger
- Programmable 4.1V to 4.35V Battery Voltage
- 95% Boost Efficiency (Vbat=4.1V)
- Adaptive to 10mA-2400mA Input Sources
- Battery Disconnection at Output Short
- <10µA Low Battery Leakage Current at HZ Mode During Storage
- Boost Auto Turn-off at No Load and Push Button Turn-on
- Battery Over Current, Over Voltage, Over Temperature and Short Circuit Protections
- Boost Auto Startup with Load Detection
- Up to 2.0A Input Current Limit with Prioritized Power Path to Output
- 5V+/-100mV Output Voltage in Boost Mode
- 1.1MHz/0.55MHz Boost Switching Frequencies
- 2.2uH SMD Inductor and Low Profile Ceramic Capacitors
- 4 LEDs Battery Level and Status Indication
- Battery Impedance Compensation
- Full Cycle of Battery Charge Management Preconditioning, Fast Charge, Top Off and End of Charge
- Charge Current Foldback at 110°C Die Temperature
- IC Over Temperature Protection at 160°C
- QFN4x4-24 Package

APPLICATIONS

- Backup Battery Pack
- Power Bank
- Mobile Power
- Standalone Battery Charger with USB Output

GENERAL DESCRIPTION


ACT2801 is a space-saving and high-performance low-profile single-chip solution for backup battery pack and standalone battery charger. ACT2801 integrates all the functions that a backup battery pack needs, including switching charger, boost converter and LED indication.

ACT2801 operates at 2.2MHz/1.1MHz for switching charger and 1.1MHz/0.55MHz for boost converter allowing tiny external inductor and capacitors. ACT2801 provides a direct power path from input to output with programmable current limit while providing power to switching charger. Output has higher priority than battery charger if the programmed input current limit is reached.

ACT2801 charges battery with full cycle of preconditioning, fast charge with constant current and constant voltage until end of charge. The battery charger is thermally regulated at 110°C with charge current foldback.

ACT2801 boost converter steps battery voltage up to 5V. Boost converter features high efficiency, constant current regulation, short circuit protection and over voltage protection.

ACT2801 provides 3.5mA constant currents to drive 4 LEDs to indicate battery level and charge status.

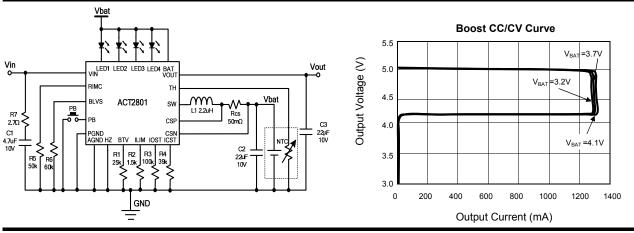




ORDERING INFORMATION

PART NUMBER	BOOST SWITCH FREQUENCY	ОИТРИТ	CHARGE CURRENT	PACKAGE	PACKING
ACT2801QL-T	1.1MHz	5V/1.5A	1.5A	QFN44-24	TAPE & REEL, 3KU/REEL
ACT2801QL-T0550	0.55MHz	5V/1.5A	1.5A	QFN44-24	TAPE & REEL, 3KU/REEL

PIN CONFIGURATION

TOP VIEW

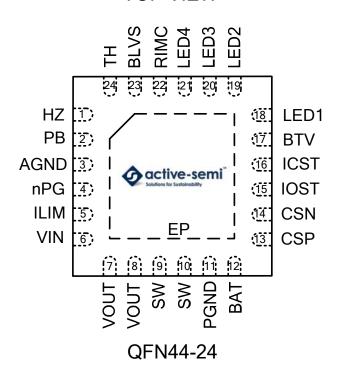



PIN DESCRIPTIONS

HZ Boost high-Z mode enable pin, internally pulled up by a 3MO resistor to battery. When HZ pin is pulled ground, boost is enabled if VIN is not present. PB Psh button input, connect a push button from this pin to AGND, internally pulled up by a 3MO resistor to battery. When this pin is pushed for 100ms, LED1-4 indicators are enable for 5 seconds. PB starts up boost converter if HZ pin is grounded and VIN is not present. 3 AGND Logic ground. 4 nPG Drive external P-FET to protect output short circuit and leakage during shutdown. nPG pin is pulled up to VOUT internally. nPG pin is pulled low if VOUT is in the range. 5 ILIM Input current limit setting pin. Connect a resistor from this pin to AGND to set the input current limit. The current setting ranges from 0.5A-2.0A. 7, 8 VOUT Output pin. Bypass to PGND with a high quality low ESR and ESL ceramic capacitor placed as close to the IC as possible. 9, 10 SW Internal switch to output inductor terminal. 11 PGND Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver. Battery input. Connected to the battery pack positive terminal to provide power in High -2.7 mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. 13 CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. 14 CSN Negative terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. 16 ICST Fast charge current setting ranges from 0.5A-1.5A. 17 BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. 18 LED1 Battery terwination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is	PIN	NAME	DESCRIPTION
2 PB by a 3MΩ resistor to battery. When this pin is pushed for 100ms, LED1-4 indicators are enable for 5 seconds. PB starts up boost converter if HZ pin is grounded and VIN is not present. 3 AGND Logic ground. 4 nPG Drive external P-FET to protect output short circuit and leakage during shutdown. nPG pin is pulled up to VOUT internally. nPG pin is pulled low if VOUT is in the range. 5 ILIM Input current limit. The current setting ranges from 0.5A-2.0A. 6 VIN USB or AC adaptor input. When VIN is valid, charge and power path is enabled. 7, 8 VOUT Output pin. Bypass to PGND with a high quality low ESR and ESL ceramic capacitor placed as close to the IC as possible. 9, 10 SW Internal switch to output inductor terminal. 11 PGND Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MGSFET's gate driver. 12 BAT Sattery input. Connected to the battery pack positive terminal to provide power in High -Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. 13 CSP Positive terminal of charge current sense input. 14 CSN Negative terminal of charge current sense input. 15 IOST Output current setting ranges from 0.5A-1.5A.	1	HZ	
prive external P-FET to protect output short circuit and leakage during shutdown. nPG pin is pulled up to VOUT internally. nPG pin is pulled low if VOUT is in the range. ILIM Input current limit setting pin. Connect a resistor from this pin to AGND to set the input current limit. The current setting ranges from 0.5A-2.0A. VIN USB or AC adaptor input. When VIN is valid, charge and power path is enabled. VOUT Output pin. Bypass to PGND with a high quality low ESR and ESL ceramic capacitor placed as close to the IC as possible. Internal switch to output inductor terminal. PGND Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver. Battery input. Connected to the battery pack positive terminal to provide power in High 2 mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. CSN Negative terminal of charge current sense input. IOST Output current setting connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery inpedance. Battery level vo	2	PB	by a $3M\Omega$ resistor to battery. When this pin is pushed for 100ms, LED1-4 indicators are enable for 5 seconds. PB starts up boost converter if HZ pin is grounded and VIN
pin is pulled up to VOUT internally. nPG pin is pulled low if VOUT is in the range. ILIM Input current limit setting pin. Connect a resistor from this pin to AGND to set the input current limit. The current setting ranges from 0.5A-2.0A. VIN USB or AC adaptor input. When VIN is valid, charge and power path is enabled. VOUT Output pin. Bypass to PGND with a high quality low ESR and ESL ceramic capacitor placed as close to the IC as possible. 9, 10 SW Internal switch to output inductor terminal. Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver. Battery input. Connected to the battery pack positive terminal to provide power in High -Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. Negative terminal of charge current sense input. Sort Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. CST Fast charge current setting ranges from 0.5A-1.5A. Fast charge current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery level indication thresholds. TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	3	AGND	Logic ground.
current limit. The current setting ranges from 0.5A-2.0A. VIN USB or AC adaptor input. When VIN is valid, charge and power path is enabled. 7,8 VOUT Output pin. Bypass to PGND with a high quality low ESR and ESL ceramic capacitor placed as close to the IC as possible. 9, 10 SW Internal switch to output inductor terminal. 11 PGND Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver. Battery input. Connected to the battery pack positive terminal to provide power in High IC as possible. 13 CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. 14 CSN Negative terminal of charge current sense input. 15 IOST Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. 16 ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. 17 BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. 18 LED1 Battery level indicator. An internal 3.5mA sink current limit is built in. 19 LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. 20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery the polyment in the battery inpedance. Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery bulled down resistor.	4	nPG	
7,8 VOUT Output pin. Bypass to PGND with a high quality low ESR and ESL ceramic capacitor placed as close to the IC as possible. 9, 10 SW Internal switch to output inductor terminal. 11 PGND Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver. 12 BAT Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. 13 CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. 14 CSN Negative terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. 15 IOST Output current setting. Connect a resistor from this pin to AGND to set output current. The current setting ranges from 0.5A-1.5A. 16 ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. 17 BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. 18 LED1 Battery level indicator. An internal 3.5mA sink current limit is built in. 19 LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. 20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery level indicator. An internal 3.5mA sink current limit is built in. 23 BLVS Battery level indicator. An internal 3.5mA sink current limit is built in. 24 TH Temperature sensing input. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds.	5	ILIM	Input current limit setting pin. Connect a resistor from this pin to AGND to set the input current limit. The current setting ranges from 0.5A-2.0A.
placed as close to the IC as possible. 11	6	VIN	USB or AC adaptor input. When VIN is valid, charge and power path is enabled.
Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver. BAT Battery input. Connected to the battery pack positive terminal to provide power in High -Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. Negative terminal of charge current sense input. Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU	7, 8	VOUT	
the MOSFET's gate driver. Battery input. Connected to the battery pack positive terminal to provide power in High -Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. CSN Negative terminal of charge current sense input. CSN Negative terminal of charge current sense input. Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. EED2 Battery level indicator. An internal 3.5mA sink current limit is built in. EED3 Battery level indicator. An internal 3.5mA sink current limit is built in. EED4 Battery level indicator. An internal 3.5mA sink current limit is built in. EED5 Battery level indicator. An internal 3.5mA sink current limit is built in. EED6 Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. BETU Battery level indicator. An internal 3.5mA sink current limit is built in. EED6 Battery level indicator. An internal 3.5mA sink current limit is built in. EED7 Battery level indicator. An internal 3.5mA sink current limit is built in. EED8 Battery level indicator. An internal 3.5mA sink current limit is built in. EED8 Battery level indicator. An internal 3.5mA sink current limit is built in. EED8 Battery level indicator. An internal 3.5mA sink current limit is built in. EED8 Battery level indicator.	9, 10	SW	Internal switch to output inductor terminal.
12 BAT -Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the IC as possible. 13 CSP Positive terminal of charge current sense input. Kevin sense is required with 10nF ceramic capacitor right across CSP and CSN pins. 14 CSN Negative terminal of charge current sense input. 15 IOST Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. 16 ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. 17 BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. 18 LED1 Battery level indicator. An internal 3.5mA sink current limit is built in. 19 LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. 20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. The Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	11	PGND	Power ground. PGND is connected to the source of low-side N-channel MOSFET and the MOSFET's gate driver.
ceramic capacitor right across CSP and CSN pins. 14 CSN Negative terminal of charge current sense input. 15 IOST Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. 16 ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. 17 BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. 18 LED1 Battery level indicator. An internal 3.5mA sink current limit is built in. 19 LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. 20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	12	BAT	-Z mode. Bypass to PGND with a high quality ceramic capacitor placed as close to the
Output current setting. Connect a resistor from this pin to AGND to set output constant current. The current setting ranges from 0.5A-1.5A. ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. BED1 Battery level indicator. An internal 3.5mA sink current limit is built in. BED2 Battery level indicator. An internal 3.5mA sink current limit is built in. BED3 Battery level indicator. An internal 3.5mA sink current limit is built in. LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. BED4 Battery level indicator. An internal 3.5mA sink current limit is built in. BED4 Battery level indicator. An internal 3.5mA sink current limit is built in. BED4 Battery level indicator. An internal 3.5mA sink current limit is built in. BED4 Battery level indicator. An internal 3.5mA sink current limit is built in. BED5 Battery level voltage shift. Connect to a resistor from this pin to APNG to program the battery impedance. BED6 BATTERY level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	13	CSP	
current. The current setting ranges from 0.5A-1.5A. ICST Fast charge current setting pin. Connect a resistor from this pin to AGND to set the charge current. The current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	14	CSN	Negative terminal of charge current sense input.
charge current. The current setting ranges from 0.5A-1.5A. BTV Battery termination voltage setting. Connect a resistor from this pin to AGND to program battery charge termination voltage. Battery level indicator. An internal 3.5mA sink current limit is built in. Battery level indicator. An internal 3.5mA sink current limit is built in. LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	15	IOST	
program battery charge termination voltage. 18 LED1 Battery level indicator. An internal 3.5mA sink current limit is built in. 19 LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. 20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. 24 TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	16	ICST	
19 LED2 Battery level indicator. An internal 3.5mA sink current limit is built in. 20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. 24 TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	17	BTV	
20 LED3 Battery level indicator. An internal 3.5mA sink current limit is built in. 21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. 24 TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	18	LED1	Battery level indicator. An internal 3.5mA sink current limit is built in.
21 LED4 Battery level indicator. An internal 3.5mA sink current limit is built in. 22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. 24 TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	19	LED2	Battery level indicator. An internal 3.5mA sink current limit is built in.
22 RIMC Battery impendence compensation input. Connect to a resistor from this pin to APNG to program the battery impedance. 23 BLVS Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. 24 TH Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	20	LED3	Battery level indicator. An internal 3.5mA sink current limit is built in.
to program the battery impedance. Battery level voltage shift. Connect a resistor from this pin to AGND to shift the battery LED indication thresholds. The Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	21	LED4	Battery level indicator. An internal 3.5mA sink current limit is built in.
LED indication thresholds. Temperature sensing input. Connect to battery thermistor terminal. If no use, put 10K pulled down resistor.	22	RIMC	
pulled down resistor.	23	BLVS	
25 EP Exposed pad. Must be soldered to ground on the PCB.	24	TH	
	25	EP	Exposed pad. Must be soldered to ground on the PCB.



ABSOLUTE MAXIMUM RATINGS®

PARAMETER	VALUE	UNIT
All the pin to PGND and AGND	-0.3 to 6.5	V
Junction to Ambient Thermal Resistance	40	°C/W
Maximum Power Dissipation	2.5	W
Operating Ambient Temperature Range	-40 to 85	°C
Operating Junction Temperature	-40 to 150	°C
Storage Junction Temperature	-40 to 150	°C
Lead Temperature (Soldering 10 sec.)	300	°C

①: Do not exceed these limits to prevent damage to the device. Exposure to absolute maximum rating conditions for long periods may affect device reliability.



ELECTRICAL CHARACTERISTICS

 $(V_{IN} = 5V, T_A = 25^{\circ}C, unless otherwise specified.)$

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Input Current Limit		•			•
Input Voltage Range		4.5		5.5	V
V _{IN} Over Voltage Protection	VIN rising, V _{IN} OVP	5.5	6.0	6.5	V
Input Voltage Validation Time	VIN_UVLO <vin<vin_ovp< td=""><td></td><td>32</td><td></td><td>ms</td></vin<vin_ovp<>		32		ms
Input Current Limit Setting Range	R_{ILIM} =1.2k Ω —4.8k Ω	0.5		2.0	Α
Input Current Limit	R _{ILIM} =2kΩ	-10%	1.2	+10%	Α
Input Current Limit Gain			2000		
Leakage Current from VOUT to VIN in Boost Mode	3.0V <vbat<4.35v, ta="25℃</td"><td></td><td>0</td><td>10</td><td>μA</td></vbat<4.35v,>		0	10	μA
Battery Discharge Current in High-Z Mode	3.0V <vbat<4.35v, ta="25℃</td"><td></td><td>7.5</td><td>15</td><td>μΑ</td></vbat<4.35v,>		7.5	15	μΑ
Power Switches					
VIN-to-VOUT FET on Resistance			90		mΩ
VOUT-to-SW FET on Resistance			70		mΩ
SW-to-PGND FET on Resistance			75		mΩ
Buck Converter					
Switching Frequency	ACT2801QL-T	-15%	2.2	+15%	MHz
Switching Frequency	ACT2801QL-T0550	-15%	1.1	+15%	MHz
High Side Switch Peak Current Limit		3.5	5		Α
Minimum On-time			100		ns
Over Temperature Protection (OTP)	OTP rising		160		$^{\circ}$ C
OTP Hysteresis	OTP falling		35		$^{\circ}$ C
Charge Mode					
Charge Current Setting Range	Rcs=50m Ω , R _{ICST} =20k Ω —60.4k Ω	0.5		1.5	Α
Charge Current Setting	Rcs=50m Ω , R _{ICST} =39k Ω	-10%	975	+10%	mA
Thermal Regulation Temperature			110		$^{\circ}$ C
Battery Adjust Voltage (V _{BAJ})	Rbtv=25kΩ		0.1		V
End of Charge (EOC) Voltage		-0.5%	4.1+V _{BAJ}	0.5%	V
EOC Voltage Accuracy	Rbtv=0		4.1		V
Battery Over Voltage Threshold	VBAT rising		4.6		V
Battery Over Voltage Threshold Hysteresis	VBAT falling		200		mV



ELECTRICAL CHARACTERISTICS

(V_{IN} = 5V, T_A = 25°C, unless otherwise specified.)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNI T
Fast Charge Current	VBAT=3.5V	-10%	I _{CHRG}	10%	Α
Precondition Charge Current	2.4V≤VBAT≤2.8V, Percent of I _{CHRG}		10		%
Precondition Voltage Threshold	VBAT rising, Rbtv=0		2.8		V
Precondition Voltage Threshold Hysteresis			130		mV
Low VBAT Charge Current	VBAT=1V, R _{ICST} =39kΩ		200		mA
EOC Current Threshold	VBAT=4.2V, ratio to the fast charge current	4	13	25	%
Charge Restart Voltage Threshold			200		mV
TH Upper Temperature Voltage Threshold	Cold detect NTC thermistor	1.45	1.5	1.55	V
TH Lower Temperature Voltage Threshold	Hot detect NTC thermistor	0.28	0.3	0.32	V
TH Hysteresis			50		mV
TH Internal Pull-up Current			60		μΑ
Boost Mode					
Input Voltage Operation Range		3.0		4.5	V
Cuitabine Francisco	ACT2801QL-T	-15%	1.1	+15%	MHz
Switching Frequency	ACT2801QL-T0550	-15%	0.55	+15%	MHz
Input Voltage UVLO	VBAT rising		3.3		٧
Input Voltage UVLO Hysteresis	VBAT falling		2.9		٧
Output Voltage	Ta=25℃	4.97	5.05	5.10	٧
Output Voltage Accuracy	All conditions	-3	VOUT	2	%
Output Voltage Transient Response	80mA-1A-80mA, 0.1A/us	4.8		5.25	٧
Output Over Voltage Protection	VOUT rising	5.5	5.7	5.9	٧
Output Over Voltage Protection Hysteresis	VOUT falling		300		mV
Output Current Regulation Range	Rcs=50mΩ, R _{IOST} =37.5kΩ—113kΩ	0.5		1.5	Α
Output Current Limit	Rcs=50mΩ, R_{IOST} =75kΩ	-10%	1.0	+10%	Α
Minimum On-Time			100		ns
Low Side Switch Peak Current Limit	VBAT=3.2V, VOUT=5V	3	5.0		Α
Soft-Startup Time			400		μs
Under Voltage Protection (UVP Threshold)	VOUT falling	4.1	4.25	4.4	٧




ELECTRICAL CHARACTERISTICS

(V_{IN} = 5V, T_A = 25°C, unless otherwise specified.)

PARAMETER	TEST CONDITIONS	MIN	TYP	MAX	UNIT
Under Voltage Protection (UVP Threshold)	VOUT rising		4.6		V
UVP Blanking Time During Startup			3		ms
UVP Sense Detection Time	VOUT falling		20		μs
Restart After UVP	Hiccup mode		2		S
Light Load Current Shut off Threshold		2	40	80	mA
Light Load Current Detect Time			90		S
HZ Pin High Voltage	HZ voltage rising		0.9	1.4	V
HZ Pin Low Voltage	HZ voltage falling	0.4	0.75		V
HZ Internal Pull-up Resistor			3		МΩ
PB Turn off Boost Time			3		S
PB Turn on Boost Time			100		ms
Mode Transition					
Transition Waiting Time between Charge Mode and Boost Mode	TRANTIME		2		S
Battery Level Indication					
Battery Impedance Compensation Range		40		500	mΩ
Battery Impedance Compensation	Rcs=50mΩ, R_{IMC} =100kΩ		200		mΩ
PB Deglitch Time			100		ms
PB High Input Voltage	PB voltage rising		0.9	1.4	V
PB Low Input Voltage	PB voltage falling	0.4	0.75		V
PB Internal Pull-up Resistor			3		МΩ
LED Indication Time	PB is pushed and released		5		s
LED Flash Frequency	Charging, LED flash 1s on and 1s off		0.5		Hz



FUNCTIONAL BLOCK DIAGRAM

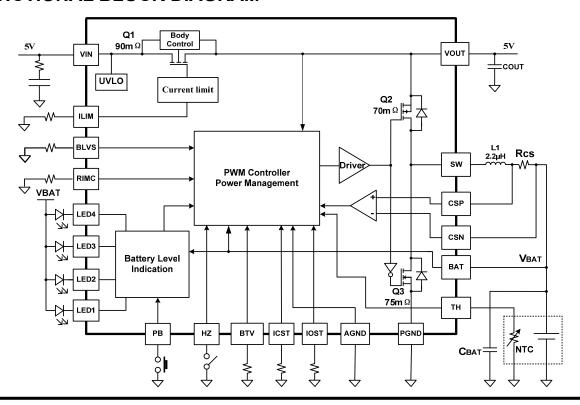

FUNCTIONAL DESCRIPTION

ACT2801 is a complete battery charging and discharging power management solution for applications of single-cell lithium-based backup battery pack or power bank. There is a power path from input to output with programmable input current limit. When output is over loaded, the input switch Q1 starts going into linear mode and thus output voltage starts to drop. If output voltage drops below 4.25V, the input switch Q1 turns off and restart in 2 seconds.

With the advanced ACT2801 architecture, a synchronous buck/boost converter is connected from VOUT to switching node (SW). With the bidirectional architecture, the converter could be configured as either buck to charge battery or boost to discharge battery. With switching charger and discharger, the higher charge current and higher conversion efficiency are achieved.

Modes of Operation

ACT2801 has 3 operation modes: charge mode, boost mode and high-impedance (HZ) mode. In charge mode, the input current limit is enabled and the Q2 and Q3 operate as a buck converter to charge battery. In boost mode, Q2 and Q3 operate as boost converter to step battery voltage up to +5V

at VOUT, and the current limit switch Q1 is turned off, and the reverse current from VOUT to VIN is blocked. In HZ mode, all the switches are turned off and the drainage current from battery is very low. The system operation flow chart as shown in Figure 1

Any transitions between boost mode and charge mode go through HZ mode by turning off all the switches Q1-Q3 into HZ mode for 2 seconds before enabling the other mode.

The modes are determined by HZ pin and VIN pin as shown in the table 1. A valid VIN voltage forces ACT2801 into charge mode. Boost mode is enabled if HZ pin is pulled low and VIN is invalid or not present. When HZ=0, if PB is pulled low for more than 100ms, boost converter is enabled. A running boost is disabled if one of the following conditions is met:

- 1. After PB is released, if PB is pulled low for more than 3 seconds.
- 2. Boost converter output current is below light load threshold for 1.5 minutes.
- Battery voltage falls below the boost cut-off threshold.



FUNCTIONAL DESCRIPTION

Figure 1.
ACT2801 System Operation Flow Chart

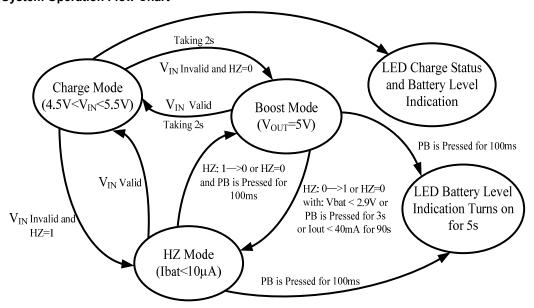


Table 1: Mode Selection

HZ PIN	0	0	1	1
VIN Valid	0	1	0	1
Mode	Boost	Charge	HZ	Charge

Input Current Limit

When the input current reaches the programmed value, switch Q1 goes into linear mode and output voltage starts to drop. When output voltage drops to 4.25V, hiccup mode is triggered and switch Q1 turns off and restart in 2 seconds.

Switching Battery Charger

ACT2801 is configured in charge mode (buck mode) when VIN is valid. In this mode, a battery is charged with preconditioning, fast charge, top-off and end of charge (EOC). The typical charge management is shown in Figure 2 and Figure 3.

CC/CV Regulation Loop

There are CC/CV regulation loops built in ACT2801, which regulates either current or voltage as necessary to ensure fast and safe charging of the battery. In a normal charge cycle, this loop regulates the current to the value set by the external resistor at the ICST pin. Charging continues at this current until the battery cell voltage reaches the termination voltage. At this point the CV loop takes over, and charge current is allowed

to decrease as necessary to maintain charging at the termination voltage.

Precondition Charge

A new charging cycle begins with the precondition state, and operation continues in this state until V_{BAT} exceeds the precondition threshold voltage. When operating in precondition state, the cell is charged at a reduced current, 10% of the programmed maximum fast charge constant current. Once V_{BAT} reaches the precondition threshold voltage the state machine jumps to the fast charge state.

Fast Charge

If battery voltage is above preconditioning threshold, buck converter charges battery with constant current. In fast charge state, the ACT2801 charges at the current set by the external resistor connected at the ICST pin During a normal charge cycle fast charge continues in CC mode until V_{BAT} reaches the charge termination voltage, at which point the ACT2801 charges in top off state.

Top Off

With the battery voltage approaches the EOC voltage set by the BTV pin. Charge current decreases as charging continues. In the top off state, the cell is charged in constant voltage (CV) mode. During a normal charging cycle charging proceeds until the charge current decreases below



FUNCTIONAL DESCRIPTION

the end of charge (EOC) threshold, defined as 13% of fast charge current. When this happens, the state machine terminates the charge cycle and jumps to the EOC state.

End of Charge

When charges current decreases to 13% of set fast charge current, the buck converter goes into end of

charge mode and keep monitoring the battery voltage.

Recharge

When battery voltage drops by 200mV below the end of charge voltage, the charger is reinitiated with constant current charge.

Figure 2.

Typical Li+ Charge Profile and ACT2801 Charge States


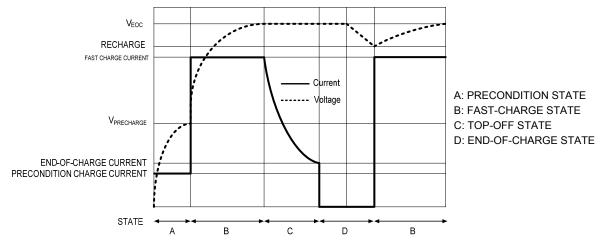


Figure 3.
Charger State Diagram

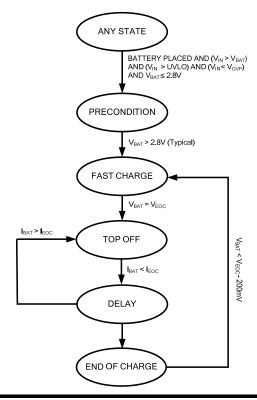

APPLICATIONS INFORMATION

Battery Charge Termination Voltage

Battery charge termination voltage is set by a resistor Rbtv connected from BTV pin to AGND as shown in Figure 4. The battery charge termination voltage is estimated as the following equation:

$$V_{BAT}(V) = 4.1(V) + R_{btv} \times 4 \times 10^{-6}(V)$$
 (1)

R_{btv} is selected based on the battery voltage rating. 1% accuracy resistor is recommended for R_{btv}.

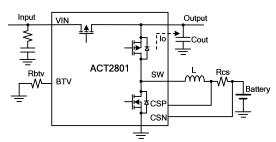


Figure 4. Battery terminal voltage setting circuit

LED Status Indication

4 LEDs ON/OFF and flash show the charge status and the remained capacity level as shown in the table 2. The LED status is based on battery voltage and operation modes. In charge mode, when a battery is fully charged, flashing stops and all the 4 LEDs are solid on.

Battery level voltage shift (BLVS pin)

LED1-4 voltage thresholds are adjusted from HZ mode during charging and discharging based on the compensated impedance. Those thresholds are

programmed by a resistor connected from BLVS pin to AGND as shown in Figure 5. The following equation shows the LED4 voltage threshold:

$$V_{BATLED4}(V) = 3.5(V) + 0.01(mA) \times R_{BLVS}(k\Omega)$$
 (2)

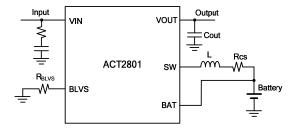


Figure 5. Battery level voltage shift setting circuit

As long as LED4 is set, all the other 3 LED thresholds is fixed as shown in the table 3:

Table 3: 4 LED Voltage Thresholds

R _{BLVS} (ohm)	50K	60K	70K	80K
LED1	3.35V	3.45V	3.55V	3.65V
LED2	3.60V	3.70V	3.80V	3.90V
LED3	3.75V	3.85V	3.95V	4.05V
LED4	4.00V	4.10V	4.20V	4.30V

Input Current Limit


An external resistor is used to set the input current limit connected from ILIM pin to AGND as shown in Figure 6. Input current limit has built-in soft startup and current foldback control loop. The input current limit is estimated as the following equation:

$$I_{ILIM}(A) = \frac{2.4 (V)}{R_{ILIM} (k\Omega)}$$
(3)

Table2: LED Indication

	Charge Mode				PB time>100ms (Boost or HZ Mode)			Mode)
	LED1	LED2	LED3	LED4	LED1	LED2	LED3	LED4
VBAT <led1< td=""><td>Flash</td><td>Off</td><td>Off</td><td>Off</td><td>Off</td><td>Off</td><td>Off</td><td>Off</td></led1<>	Flash	Off	Off	Off	Off	Off	Off	Off
LED1≤VBAT <led2< td=""><td>On</td><td>Flash</td><td>Off</td><td>Off</td><td>On</td><td>Off</td><td>Off</td><td>Off</td></led2<>	On	Flash	Off	Off	On	Off	Off	Off
LED2≤VBAT <led3< td=""><td>On</td><td>On</td><td>Flash</td><td>Off</td><td>On</td><td>On</td><td>Off</td><td>Off</td></led3<>	On	On	Flash	Off	On	On	Off	Off
LED3≤VBAT <led4< td=""><td>On</td><td>On</td><td>On</td><td>Flash</td><td>On</td><td>On</td><td>On</td><td>Off</td></led4<>	On	On	On	Flash	On	On	On	Off
VBAT≥LED4	On	On	On	Flash	On	On	On	On
VBAT≥LED4 (End of Charge)	On	On	On	On	On	On	On	On



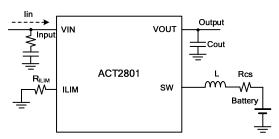

Input current limit setting circuit

Input current limit at various resistor curve is shown in Figure 7.


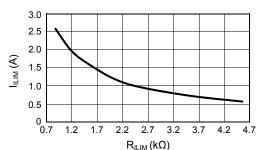


Figure 7. Input current limit setting


Battery Fast Charge Current

Battery fast charge current is set by a resistor connected from ICST pin to AGND as shown in Figure 8, figure 9 gives out different fast charge current with various R_{ICST}. The battery fast charge current is estimated as the following equation:
 
$$Ic(A) = 1.25(A) \times \frac{R_{ICST}(k\Omega)}{Rcs(m\Omega)}$$
 (4)



Battery fast charge current setting circuit

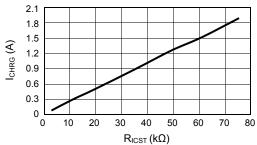


Battery fast charge current setting

Boost Output Constant Current

Boost output current is set by a resistor connected

from IOST pin to AGND as shown in Figure 10. The boost output current is estimated as the following

$$I_{lOST}(A) = \frac{2}{3}(A) \times \frac{R_{lOST}(k\Omega)}{Rcs(m\Omega)}$$
 (5)

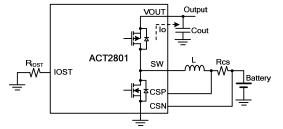

Boost output current setting circuit

Figure 11 gives out boost output current with various R_{IOST}.

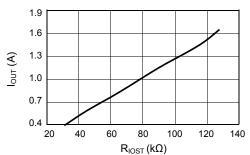


Figure 11. Boost output current setting

 
Battery Impedance Compensation

An external resistor is used to set the impedance from $40m\Omega$ to $500m\Omega$ as shown in Figure 12. RIMC is corresponding to battery impedance. Higher R_{IMC} gives higher compensation voltage which is positively proportional to battery charge/discharge current.

Select R_{IMC} based on battery impedance:

$$R_{IMC}(k\Omega) = \frac{25 \times R(m\Omega)}{Rcs(m\Omega)}$$
(6)

$$V_{BAT}(V) = BAT(V) - I_{BAT}(A) \times R(m\Omega) \times 10^{-3}$$
(7)



Battery impedance compensation Figure 12

The battery impedance as shown in the table 4 according to the R_{IMC} and Rcs:

Table 4:	Battery	Impedance
----------	---------	-----------

R _{IM}	50	100	200	
Battery	Rcs=25mΩ	50	100	200
Impedance $R(m\Omega)$	Rcs=50mΩ	100	200	400

Boost Output Plug-in Auto Detection

Figure 13 provides a solution for auto plug-in detection.

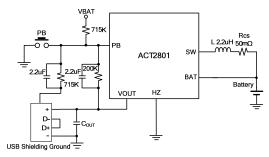


Figure 13. Boost output auto detection circuit

Input Over Voltage Surge

In the case of pure ceramic input capacitor is chosen, if the input cable is long, stray inductance may cause over voltage spikes as twice as the steady-state voltage when input source is plugged in. Below input circuit is recommended to avoid input voltage surge. R10 resistor is added in series with capacitor C3 to damp the potential LC resonance as shown in Figure 14.

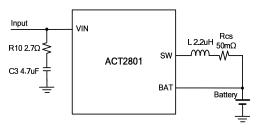


Figure 14. Input over voltage surge protection circuit

External Input Over Voltage Protection

Considering the maximum voltage rating at VIN pin, the external OVP circuit as shown in Figure 15 is recommended if input voltage may go higher than 7V. With the enhanced OVP circuit, input voltage can be up to 18V.

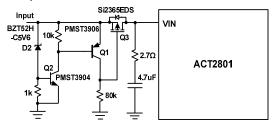


Figure 15. Input over voltage protection circuit

Flashlight Circuit

Figure 16 shows a circuit with flashlight driver and control.

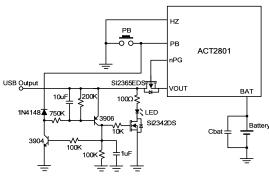


Figure 16. Flashlight circuit

LEDs on in Boost Mode

LEDs can be always on during boost mode, the schematic is shown in Figure 17.

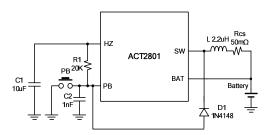


Figure 17. LEDs on in boost mode

Inductor and Capacitor Selection

ACT2801 supports SMD components. 2.2uH SMD inductor is recommended. On input side, 4.7uF ceramic capacitor in series with 2.7Ω resistor are recommended, while on battery side and output sides, 22uF ceramic capacitors are recommended.

Battery Temperature Monitoring

The ACT2801 continuously monitors the temperature of the battery pack by sensing the resistance of its thermistor, and suspends charging if the temperature of the battery pack exceeds the safety limits.

In a typical application, the TH pin is connected to the battery pack's thermistor input as shown in Figure 18. The ACT2801 injects a 60µA current out of the TH pin into the thermistor, so that the thermistor resistance is monitored by comparing the voltage at TH to the internal V_{THL} and V_{THH} thresholds of 0.3V and 1.5V, respectively. When $V_{\text{TH}} > V_{\text{THH}}$ or $V_{\text{TH}} < V_{\text{THL}}$ charging and the charge timers are suspended. When V_{TH} returns to the normal range, charging and the charge timers resume.



The net resistance from TH to GND required to cross the threshold is given by:

 $60\mu A \times R_{NOM} \times k_{HOT} = 0.3V \rightarrow R_{NOM} \times k_{HOT} = 5k\Omega$

$$60\mu A \times R_{NOM} \times k_{COLD} = 1.5V \rightarrow R_{NOM} \times k_{COLD} = 25k\Omega$$

where R_{NOM} is the nominal thermistor resistance at room temperature, and k_{HOT} and k_{COLD} are the ratios of the thermistor's resistance at the desired hot and cold thresholds, respectively.

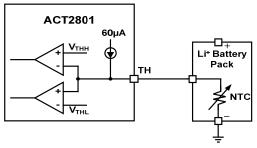


Figure 18. Battery thermal circuit



PC Board Layout Guidance


When laying out the printed circuit board, the following checklist should be used to ensure proper operation of the IC.

- 1. Arrange the power components to reduce the AC loop size, VIN pin, Vout pin, SW pin and the Schottky diode.
- Place ceramic capacitor C3 and resistor R10 as close to VIN pin as possible. R10 is added in series with capacitor C3 to damp the potential LC resonance.
- 3. Use copper plane for power GND for best heat dissipation and noise immunity.
- Place CSP and CSN capacitor C6 (10nF) close to CSP and CSN pin as possible, use Kevin Sense from sense resistor R2 to CSP and CSN pins. 22uF decoupling capacitor is added close to BAT pin.
- 5. Place the ceramic capacitor C2 and D1 as


- close to VOUT and PGND as possible, SW goes under the C2 (recommend C2 to use 1206 size). SW pad is a noisy node switching. It should be isolated away from the rest of circuit for good EMI and low noise operation.
- 6. Thermal pad is connected to GND layer through vias (recommend 4X4 pins and the aperture is 10mil). Ground plane, PGND and AGND is single point connected under the ACT2801 thermal pad through vias to limited SW area.
- 7. From BAT pin to the Battery positive terminal, need to lay the divided line to ensure the battery voltage accuracy of sampling.
- 8. RC snubber is recommended to add across SW to PGND to reduce EMI noise. 1A/20V Schottky is added to across V_{OUT} and SW pins.

A demo board PCB layout example is shown in the figure 19.

Figure 19. PCB Layout

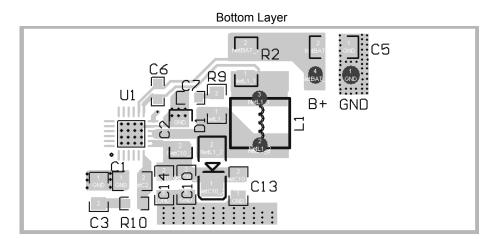

Top Layer

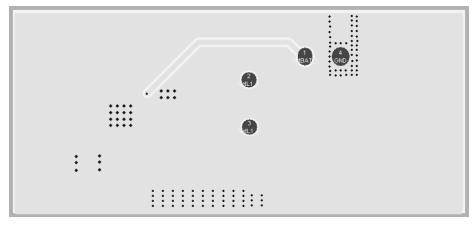



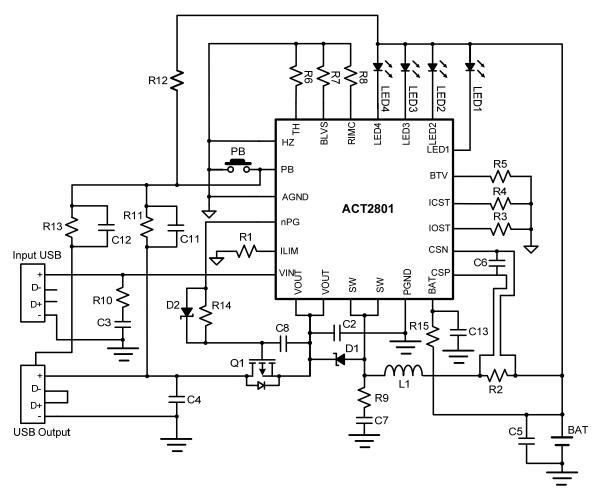


Figure 20. Typical application circuit (Input current limit 2.0A, fast charge current limit 1.5A, boost output constant current limit 1.3A)




BOM List


ITEM	REFERENCE	DESCRIPTION	QTY	MANUFACTURER
1	L1	SWPA4020S1R0NT 2.2uH 3.4A (4*4*2mm)	1	Sunlord
2	Q1	SI2333DDS, Rdson=28m Ω at VGS = - 4.5 V	1	Vishay
3	D1	SS12, Vf=0.5V, 20V Schottky	1	Panjit
4	D2	1N4148, Vf=0.7V, 75V Schottky	1	Vishay
5	C2,C5	Ceramic Capacitor, 22uF/10V, X7R, 1206	2	Murata/TDK
6	C3	Ceramic Capacitor, 4.7uF/10V, X7R, 1206	1	Murata/TDK
7	C4	Ceramic Capacitor, 0.1uF/10V, X7R, 0603	1	Murata/TDK
8	C6	Ceramic Capacitor, 10nF/10V, X7R, 0402	1	Murata/TDK
9	C7	Ceramic Capacitor, 1nF/10V, X7R, 0603	1	Murata/TDK
10	C8	Ceramic Capacitor, 1uF/10V, X7R, 0603	1	Murata/TDK
11	C11,C12,C13	Ceramic Capacitor, 2.2uF/10V, X7R, 0603	3	Murata/TDK
12	R1	Chip Resistor, 1.2kΩ, 1/16W, 1%, 0402	1	Murata/TDK
13	R2	Chip Resistor, 50mΩ, 1/4W, 1%, 1206	1	Murata/TDK
14	R3	Chip Resistor, 100kΩ, 1/16W, 1%, 0402	1	Murata/TDK
15	R4	Chip Resistor, 60.4kΩ, 1/16W, 1%, 0402	1	Murata/TDK
16	R5	Chip Resistor, 25kΩ, 1/16W, 1%, 0402	1	Murata/TDK
17	R6	Chip Resistor, 10kΩ, 1/16W, 1%, 0402	1	Murata/TDK
18	R7	Chip Resistor, 60kΩ, 1/16W, 1%, 0402	1	Murata/TDK
19	R8	Chip Resistor, 50kΩ, 1/16W, 1%, 0402	1	Murata/TDK
20	R9	Chip Resistor, 1Ω, 1/8W, 5%, 0805	1	Murata/TDK
21	R10	Chip Resistor, 2.7Ω, 1/4W, 5%, 1206	1	Murata/TDK
22	R11	Chip Resistor, 200kΩ, 1/10W, 5%, 0603	1	Murata/TDK
23	R12,R13	Chip Resistor, 715kΩ, 1/10W, 5%, 0603	2	Murata/TDK
24	R14	Chip Resistor, 100kΩ, 1/10W, 5%, 0603	1	Murata/TDK
25	R15	Chip Resistor, 2.2Ω, 1/10W, 5%, 0603	1	Murata/TDK
26	LED1,LED2, LED3,LED4	LED, 0603, Blue	4	LED Manu
27	РВ	Push Button Switch	1	Nikkai Omron
28	USB	10.2*14.6*7mm, 4P	1	
29	Micro-USB	MICRO USB 5P/F SMT B	1	
30	U1	IC, ACT2801, T-QFN 44-24	1	ACT





TYPICAL PERFORMANCE CHARACTERISTICS CONT'D


(Schematic as show in Figure 20, Ta = 25°C, unless otherwise specified)

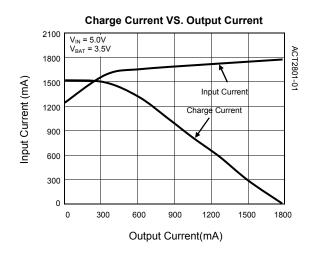


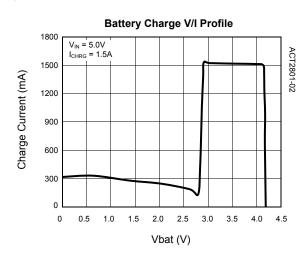

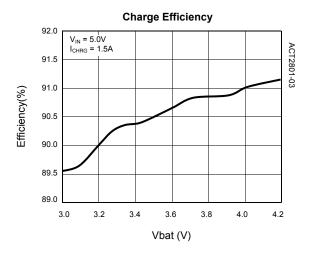

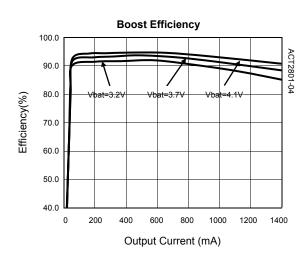

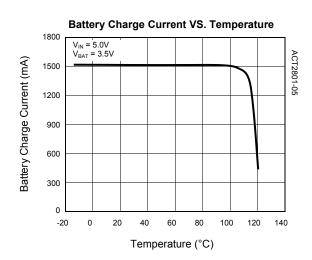


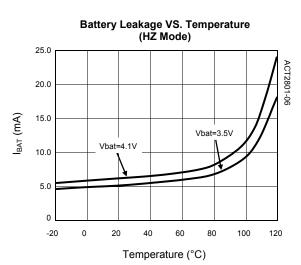






TYPICAL PERFORMANCE CHARACTERISTICS CONT'D


(Schematic as show in Figure 20, Ta = 25°C, unless otherwise specified)

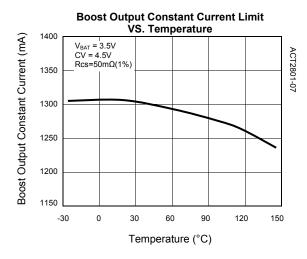


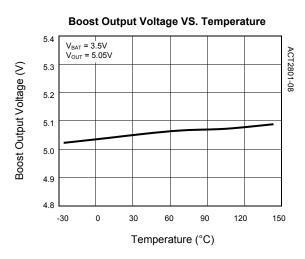

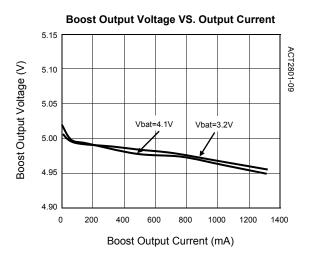

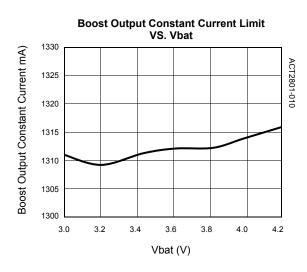

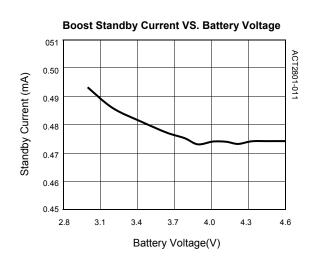

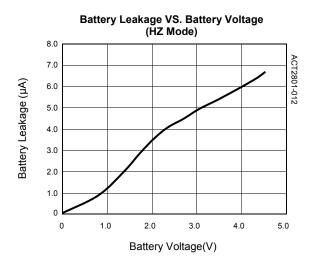




TYPICAL PERFORMANCE CHARACTERISTICS CONT'D


(Schematic as show in Figure 20, Ta = 25°C, unless otherwise specified)

Boost Load Transient (80mA-1A-80mA)

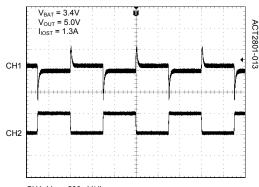


CH1: V_{OUT}, 200mV/div CH2: I_{OUT}, 1A/div TIME: 1ms/div

Boost Load Transient (80mA-1A-80mA)

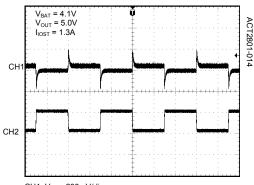


CH1: V_{OUT}, 200mV/div CH2: I_{OUT}, 1A/div TIME: 1ms/div

SW and Output Waveforms in Boost Mode

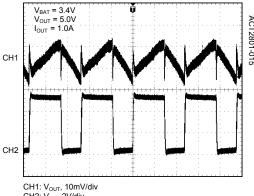


CH1: V_{OUT}, 10mV/div CH2: V_{SW}, 2V/div TIME: 400ns/div

SW and Output Waveforms in Boost Mode

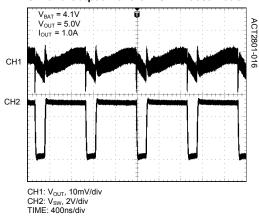

Transition Between Buck Mode and Boost Mode

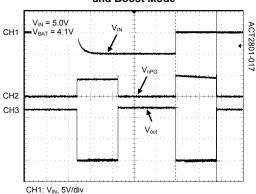


CH1: V_{IN}, 5V/div CH2: V_{nPG}, 5V/div CH3: vout, 2V/div TIME: 1s/div



PACKAGE OUTLINE

QFN44-24 PACKAGE OUTLINE AND DIMENSIONS

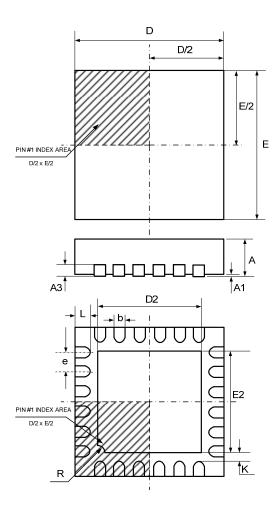

SYMBOL	DIMENSION IN MILLIMETERS		DIMENSION IN INCHES	
	MIN	MAX	MIN	MAX
А	0.700	0.800	0.028	0.031
A1	0.000	0.050	0.000	0.002
A3	0.200 REF		0.008 REF	
b	0.180	0.300	0.007	0.012
D	3.850	4.150	0.152	0.163
Е	3.850	4.150	0.152	0.163
D2	2.500	2.800	0.098	0.110
E2	2.500	2.800	0.098	0.110
е	0.500 BSC		0.020 BSC	
L	0.350	0.450	0.014	0.018
R	0.200 TYP		0.008 TYP	
К	0.200		0.008	

Active-Semi, Inc. reserves the right to modify the circuitry or specifications without notice. Users should evaluate each product to make sure that it is suitable for their applications. Active-Semi products are not intended or authorized for use as critical components in life-support devices or systems. Active-Semi, Inc. does not assume any liability arising out of the use of any product or circuit described in this datasheet, nor does it convey any patent license.

Active-Semi and its logo are trademarks of Active-Semi, Inc. For more information on this and other products, contact <u>sales@active-semi.com</u> or visit <u>http://www.active-semi.com</u>.

Ogactive-semi is a registered trademark of Active-Semi.