

# **SYSDRIVE**


## **3G3MV Series**

# **CATALOG**

**OMRON**


# Nomenclature

## ■ Panel

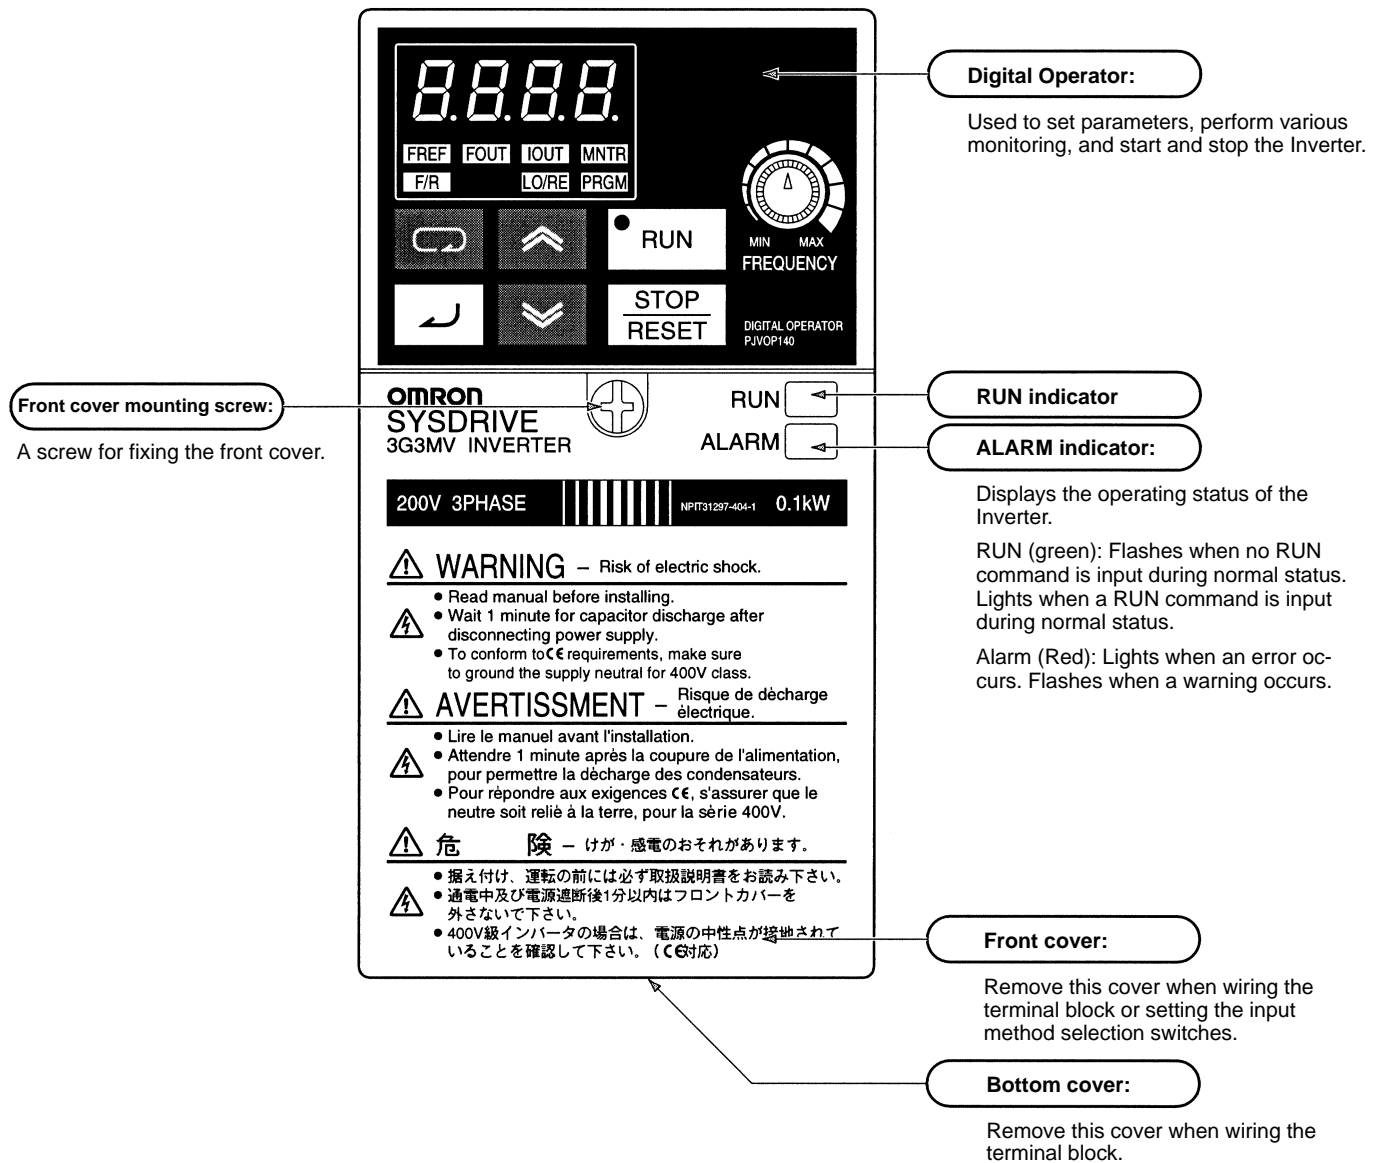

# Nomenclature

## ■ Digital Operator

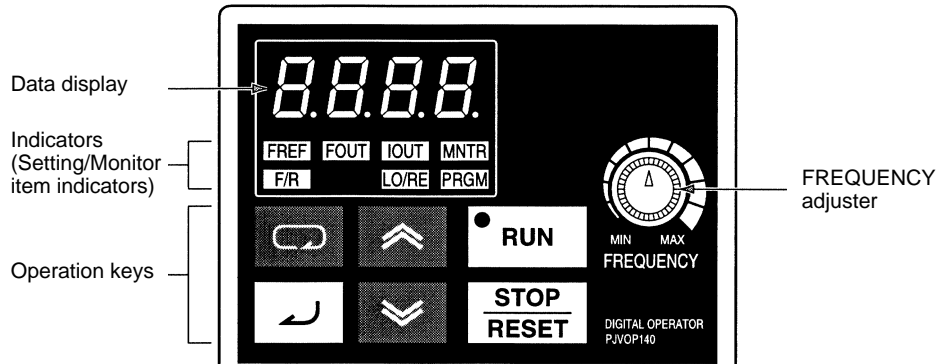


Appearance	Name	Function
	Data display	Displays relevant data items, such as frequency reference, output frequency, and parameter set values.
	Frequency adjuster	Sets the frequency reference within a range between 0 Hz and the maximum frequency.
	Frequency reference indicator	The frequency reference can be monitored or set while this indicator is lit.
	Output frequency indicator	The output frequency of the Inverter can be monitored while this indicator is lit.
	Output current indicator	The output current of the Inverter can be monitored while this indicator is lit.
	Multi-function monitor indicator	The values set in U01 through U10 are monitored while this indicator is lit.
	Forward/Reverse selection indicator	The direction of rotation can be selected while this indicator is lit when operating the Inverter with the RUN Key.
	Local/Remote selection indicator	The operation of the Inverter through the Digital Operator or according to the set parameters is selectable while this indicator is lit. (See note 1.)
	Parameter setting indicator	The parameters in n001 through n179 can be set or monitored while this indicator is lit. (See note 2.)
	Mode Key	Switches the simplified-LED (setting and monitor) item indicators in sequence. Parameter being set will be canceled if this key is pressed before entering the setting.
	Increment Key	Increases multi-function monitor numbers, parameter numbers, and parameter set values.
	Decrement Key	Decreases multi-function monitor numbers, parameter numbers, and parameter set values.
	Enter Key	Enters multi-function monitor numbers, parameter numbers, and internal data values after they are set or changed.
	RUN Key	Starts the Inverter running when the 3G3MV is in operation with the Digital Operator.
	STOP/RESET Key	Stops the Inverter unless parameter n007 is set to disable the STOP Key. Used to reset the Inverter when an error occurs. (See note 3.)

- Note:**
1. The status of the local/remote selection indicator can be only monitored while the Inverter is in operation. Any RUN command input is ignored while this indicator is lit.
  2. While the Inverter is in operation, the parameters can be only monitored and only some parameters can be changed. Any RUN command input is ignored while the parameter setting indicator is lit.
  3. For safety reasons, the reset function cannot be used while an operation instruction (forward/reverse) is being input. Turn the operation instruction OFF before using this function.


# Using Digital Operator

## ■ Selecting Indicators

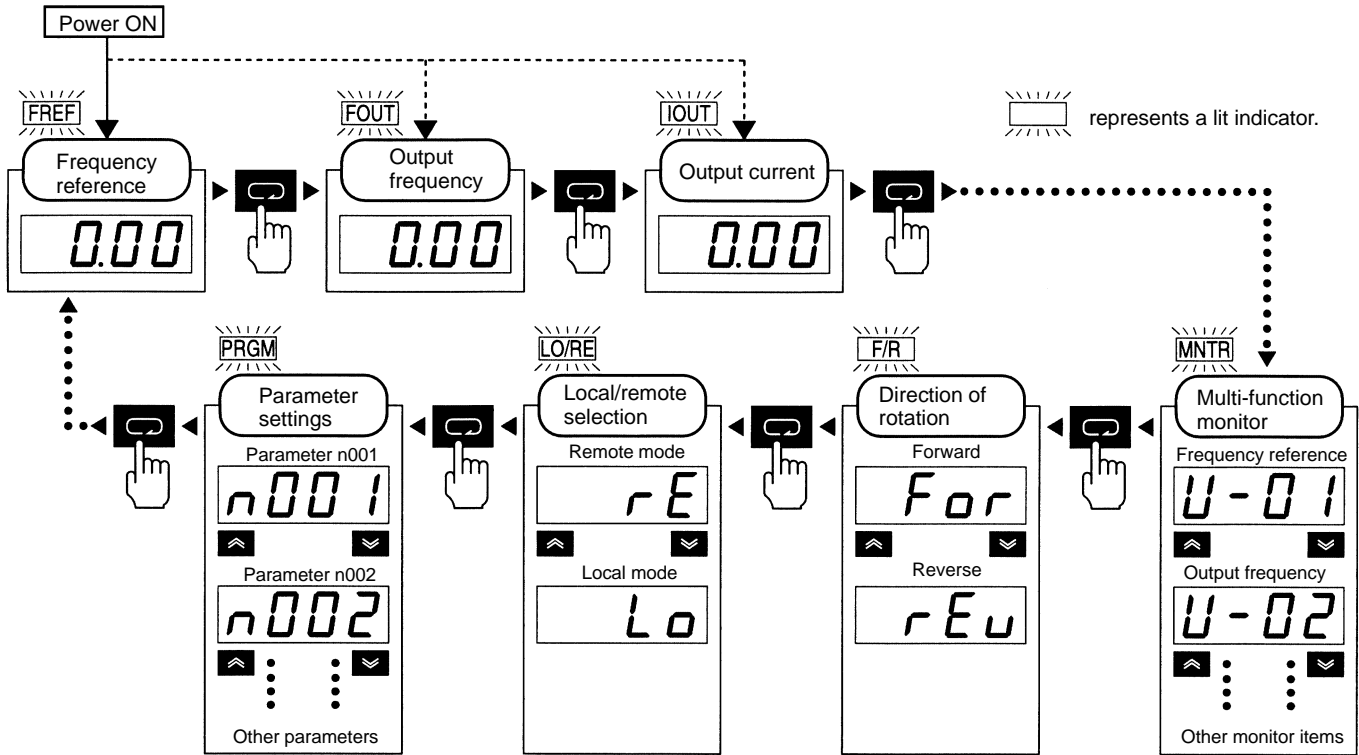

**Note:** If the power is turned OFF with the FOUT or IOUT indicator lit, the same indicator will light when the power is turned ON again. In other cases, the FREF indicator will light when the power is turned ON.

## ■ Example of Frequency Reference Settings

 


Key sequence	Indicator	Display example	Explanation
	FREF	6.00	Power ON <b>Note</b> If the FREF indicator has not been lit, press the Mode Key repeatedly until the FREF indicator is lit.
↑ ↓	FREF	6000	Use the Increment or Decrement Key to set the frequency reference. The data display will flash while the frequency reference is set. (see note)
↵	FREF	6000	Press the Enter Key so that the set value will be entered and the data display will be lit. (see note)

**Note:** The Enter Key need not be pressed when performing the setting for n08. The frequency reference will change when the set value is changed with the Increment or Decrement Key while the data display is continuously lit.

# Using Digital Operator

## ■ Example of Multi-function Display

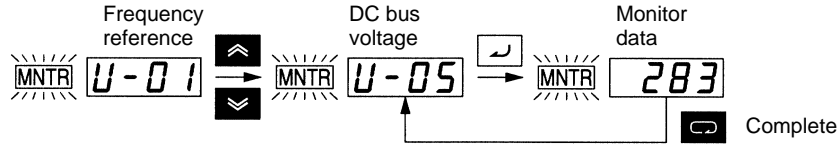



Key sequence	Indicator	Display	Explanation
	[FREF]	6.00	Power ON
[Mode]	[MNTR]	U-01	Press the Mode Key repeatedly until the MNTR indicator is lit. U01 will be displayed.
[Up] [Down]	[MNTR]	U-05	Use the Increment or Decrement Key to select the monitor item to be displayed.
[Enter]	[MNTR]	283	Press the Enter Key so that the data of the selected monitor item will be displayed.
[Mode]	[MNTR]	U-05	The monitor number display will appear again by pressing the Mode Key.

## Status Monitor

 Item	Display	Display unit	Function
U-01	Frequency reference	Hz (see note 1)	Monitors the frequency reference. (Same as FREF)
U-02	Output frequency	Hz (see note 1)	Monitors the output frequency. (Same as FOUT)
U-03	Output current	A	Monitors the output current. (Same as IOUT)
U-04	Output voltage	V	Monitors the internal output voltage reference value of the Inverter.
U-05	DC bus voltage	V	Monitors the DC voltage of the internal main circuit of the Inverter.
U-06	Input terminal status	---	Shows the ON/OFF status of inputs.  Terminal S1: Multi-function input 1 Terminal S2: Multi-function input 2 Terminal S3: Multi-function input 3 Terminal S4: Multi-function input 4 Terminal S5: Multi-function input 5 Terminal S6: Multi-function input 6 Terminal S7: Multi-function input 7 Not used
U-07	Output terminal status	---	Shows the ON/OFF status of outputs.  Terminal MA: Multi-function contact output Terminal P1: Multi-function photo-coupler output 1 Terminal P2: Multi-function photo-coupler output 2 Not used
U-08	Torque monitor	%	Displays the torque being currently output as a percentage of the rated motor torque. This display can only be made in vector control mode.

**Note:** 1. The units used for frequency reference (U-01) and output frequency (U-02) are determined by the setting of n035 (frequency reference setting/display unit selection; factory set to Hz).


# Using Digital Operator

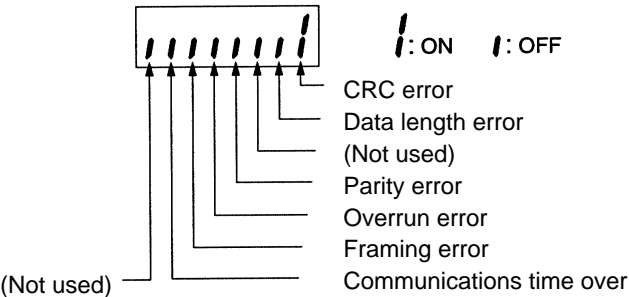Item	Display	Display unit	Function
U-09	Error log (most recent one)	---	<p>The four most recent errors can be checked.</p>  <p><b>Note</b> "1" means that the latest error is displayed. Press the Increment Key to display the second latest error. A maximum of four errors can be displayed.</p>
U-10	Software No.	---	OMRON use only.
U-11	Output power	W	Monitors the output power of the Inverter (see note 1)
U-13	Accumulated operating time	× 10H	Monitors the accumulated operating time in 10-hour units (see note 2)
U-15	Communications error	---	<p>Displays the contents (same as register number 003D Hex) of general-purpose serial communications (RS422/485) errors</p>  <p>(Not used)      Communications time over          Framing error          Overrun error          Parity error          Data length error (Not used)          CRC error</p> <p>! : ON    ! : OFF</p>
U-16	PID feedback	%	Monitors the PID control feedback (Max. frequency: 100%)
U-17	PID input	%	Monitors the PID control input (Max. frequency: 100%)
U-18	PID output	%	Monitors the PID output (Max. frequency: 100%)

- Note:**
- Monitoring is not possible in vector control mode. "----" will be displayed.
  - The accumulated operating time monitoring function is available only with 200-V-class, 5.5/7.5-kW Inverters and 400-V-class, 5.5/7.5-kW Inverters.

# Using Digital Operator

## ■ Example of Parameter Settings

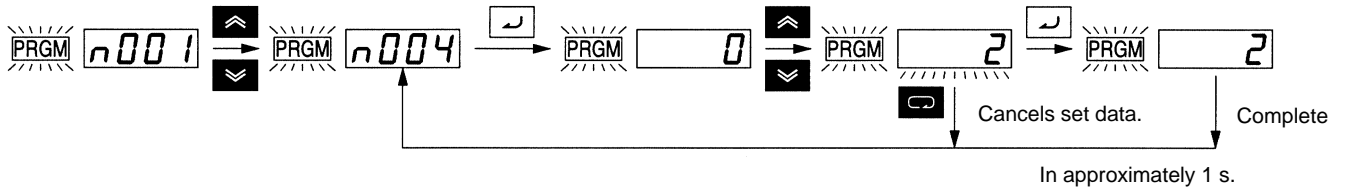

Key sequence	Indicator	Display example	Explanation
	FREF	0.00	Power ON
M	PRGM	n001	Press the Mode Key repeatedly until the PRGM indicator is lit.
↑ ↓	PRGM	n004	Use the Increment or Decrement Key to set the parameter number.
↵	PRGM	0	Press the Enter Key. The data of the selected parameter number will be displayed.
↑ ↓	PRGM	2	Use the Increment or Decrement Key to set the data. At that time the display will flash.
↵	PRGM	2	Press the Enter Key so that the set value will be entered and the data display will be lit. (see note 1)
In approximately 1 s.	PRGM	n004	The parameter number will be displayed.

**Note:** 1. To cancel the set value, press the Mode Key instead. The parameter number will be displayed.

2. There are parameters that cannot be changed while the Inverter is in operation. Refer to the list of parameters. When attempting to change such parameters, the data display will not change by pressing the Increment or Decrement Key.

# List of Parameters

## ■ List of Parameters

### Function Group 1 (n001 through n049)

Parameter No.	Name	Description	Setting range	Unit of setting (see note 3)	Default setting	Changes during operation	Reference page
n001	Parameter write-prohibit selection/parameter initialization	Used to prohibit parameters to be written, sets parameters, or change the monitor range of parameters. Used to initialize parameters to default values.	0 to 9	1	1	No	20
n002	Control mode selection	Used to select the control mode of the Inverter. <b>Note</b> The set value in n002 is not initialized when parameter initialization is performed using n001. <b>Note</b> Some parameters will be initialized if n002 is changed. For details refer to the reference page.	0, 1	1	0	No	20
n003	Operation mode selection	Used to select the input method for the RUN and STOP commands in remote mode.	0 to 3	1	0	No	20
n004	Frequency reference selection	Used to set the input method for the frequency reference in remote mode.	0 to 9	1	0	No	20
n005	Interruption mode selection	Used to set the stopping method for use when the STOP command is input.	0, 1	1	0	No	20
n006	Reverse rotation-prohibit selection	Used to select the operation with the reverse command input.	0, 1	1	0	No	20
n007	STOP/RESET Key function selection	Used to select the stop method in remote mode with n003 for operation mode selection set to 0.	0, 1	1	0	No	20
n008	Frequency selection in local mode	Used to set the input method for the frequency reference in local mode.	0, 1	1	0	No	20
n009	Key sequential frequency setting	Used to enable the Enter Key for setting the frequency reference with the Increment and Decrement Keys.	0, 1	1	0	No	21
n010	Operation selection at Digital Operator interruption	Used to select whether or not to detect the OPR error (Digital Operator connection error).	0, 1	1	0	No	21
n011	Maximum frequency (FMAX)	Used to set the V/f pattern as the basic characteristic of the Inverter.	50.0 to 400.0	0.1 Hz	60.0	No	21
n012	Maximum voltage (VMAX)	V/f control mode: Set output voltage per frequency Vector control mode: Set for torque adjustment	0.1 to 255.0 (0.1 to 510.0)	0.1 V	200.0 (400.0)	No	21
n013	Maximum voltage frequency (FA)		0.2 to 400.0	0.1 Hz	60.0	No	21
n014	Middle output frequency (FB)		0.1 to 399.9	0.1 Hz	1.5	No	21
n015	Middle output frequency voltage (VC)		0.1 to 255.0 (0.1 to 510.0)	0.1 V	12.0 (24.0) (see note 2)	No	21
n016	Minimum output frequency (FMIN)		0.1 to 10.0	0.1 Hz	1.5	No	21
n017	Minimum output frequency voltage (VMIN)		0.1 to 50.0 (0.1 to 100.0)	0.1 V	12.0 (24.0) (see note 2)	No	21
n018	Acceleration/Deceleration time setting Unit (n018)	Used to select the unit of acceleration or deceleration time of the Inverter.	0, 1	1	0	No	21
n019	Acceleration time 1	Acceleration time: The time required to go from 0% to 100% of the maximum frequency.	0.0 to 6000	0.1 s (change in n018)	10.0	Yes	21
n020	Deceleration time 1	Deceleration time: The time required to go from 100% to 0% of the maximum frequency.			10.0	Yes	21
n021	Acceleration time 2	<b>Note</b> The actual acceleration or deceleration time is obtained from the following formula. <b>Acceleration/Deceleration time = (Acceleration/Deceleration time set value) × (Frequency reference value) ÷ (Max. frequency)</b>			10.0	Yes	21
n022	Deceleration time 2				10.0	Yes	21

**Note:** 1. The values in brackets are those for 400-V-class Inverters.

2. The default settings for middle output frequency voltage (n015) and the minimum output frequency voltage (n017) are 10.0 V for 200-V-class, 5.5/7.5-kW Inverters and 20.0 V for 400-V-class, 5.5/7.5-kW Inverters.

3. Values longer than 4 digits are rounded up to the next unit multiple.



# List of Parameters

Parameter No.	Name	Description	Setting range	Unit of setting (see note)	Default setting	Changes during operation	Reference page
n023	S-shape acceleration/deceleration characteristic	Used to set S-shape acceleration/deceleration characteristics.	0 to 3	1	0	No	21
n024	Frequency reference 1	<p>Used to set internal frequency references.</p> <p><b>Note</b> Frequency reference 1 is enabled in remote mode with n004 for frequency reference selection set to 1.</p> <p><b>Note</b> These frequency references are selected with multi-step speed references (multi-function input). See the reference pages for the relationship between multi-step speed references and frequency references.</p>	0.0 to max. frequency	0.1 Hz (change in n035)	6.0	Yes	22
n025	Frequency reference 2				0.0	Yes	22
n026	Frequency reference 3				0.0	Yes	22
n027	Frequency reference 4				0.0	Yes	22
n028	Frequency reference 5				0.0	Yes	22
n029	Frequency reference 6				0.0	Yes	22
n030	Frequency reference 7				0.0	Yes	22
n031	Frequency reference 8				0.0	Yes	22
n032	Inching frequency command				Used to set the inching frequency command.		
n033	Frequency reference upper limit	Used to set the upper and lower frequency reference limits in percentage based on the maximum frequency as 100%.	0 to 110	1%	100	No	22
n034	Frequency reference lower limit		0 to 110	1%	0	No	22
n035	Frequency reference setting/display unit selection	Used to set the unit of frequency reference and frequency-related values to be set or monitored through the Digital Operator.	0 to 3999	1	0	No	22
n036	Rated motor current	Used to set the rated motor current for motor overload detection (OL1) based on the rated motor current. <b>Note</b> Motor overload detection (OL1) is disabled by setting the parameter to 0.0.	0.0 to 150% of rated output current of the Inverter	0.1 A	Varies with the capacity.	No	22
n037	Motor protection characteristics	Used to set the motor overload detection (OL1) for the electronic thermal characteristics of the motor.	0 to 2	1	0	No	23
n038	Motor protective time setting	Used to set the electric thermal characteristics of the motor to be connected in 1-minute increments.	1 to 60	1 min	8	No	23
n039	Cooling fan operation function	Used to operate the Cooling Fan of the Inverter while the Inverter is turned on or only while the Inverter is in operation.	0, 1	1	0	No	23
n040 to n049	Not used	---	---	---	---	---	---

**Note:** Values longer than 4 digits are rounded up to the next unit multiple.

## Function Group 2 (n050 through n079)

Parameter No.	Name	Description	Setting range	Unit of setting	Default setting	Changes during operation	Reference page
n050	Multi-function input 1 (Input terminal S1)	Used to select the functions of multi-function input terminals S1 through S7.	1 to 25	1	1	No	23
n051	Multi-function input 2 (Input terminal S2)		1 to 25	1	2	No	23
n052	Multi-function input 3 (Input terminal S3)		0 to 25	1	3	No	23
n053	Multi-function input 4 (Input terminal S4)		1 to 25	1	5	No	23
n054	Multi-function input 5 (Input terminal S5)		1 to 25	1	6	No	23
n055	Multi-function input 6 (Input terminal S6)		1 to 25	1	7	No	23
n056	Multi-function input 7 (Input terminal S7)		1 to 25, 34, 35	1	10	No	23

# List of Parameters

Parameter No.	Name	Description	Setting range	Unit of setting	Default setting	Changes during operation	Reference page
n057	Multi-function output (MA/MB and MC output terminals)	Used to select the functions of multi-function output terminals.	0 to 7, 10 to 19	1	0	No	24
n058	Multi-function output 2 (P1-PC output terminals)		0 to 7, 10 to 19	1	1	No	24
n059	Multi-function output 3 (P2-PC output terminals)		0 to 7, 10 to 19	1	2	No	24
n060	Frequency reference gain	Used to the input characteristics of analog frequency references.	0 to 255	1%	100	Yes	25
n061	Frequency reference bias		-100 to 100	1%	0	Yes	25
n062	Analog frequency reference filter time	Used to set the digital filter with a first-order lag for analog frequency references to be input.	0.00 to 2.00	0.01 s	0.10	No	25
n063	Not used	---	---	---	---	---	---
n064	Frequency reference loss processing selection (see note)	Used to specify the processing that is performed when frequency references from control circuit terminals suddenly drop. 0: Disabled (operates in compliance with frequency reference) 1: Enabled (continues to operate at 80% of the frequency reference before loss) (“Frequency reference loss” is defined to be a drop of more than 90% in the frequency reference within 400 ms.)	0, 1	1	0	No	---
n065	Multi-function analog output type selection	Used to select the multi-function analog output type.	0, 1	1	0	No	25
n066	Multi-function analog output	Used to select the monitor item with n065 set to 0.	0 to 5	1	0	No	25
n067	Multi-function analog output gain	Used to set the output characteristics of multi-function analog output.	0.00 to 2.00	0.01	1.00	Yes	25
n068	Multi-function analog voltage input gain	Used to set the input characteristics of multi-function analog voltage input.	-255 to 255	1%	100	Yes	25
n069	Multi-function analog voltage input bias		-100 to 100	1%	0	Yes	25
n070	Multi-function analog voltage input filter time constant	Used to set a primary delay digital filter for multi-function analog voltage input.	0.00 to 2.00	0.01 s	0.10	Yes	25
n071	Multi-function analog current input gain	Used to set the input characteristics of multi-function analog current input.	-255 to 255	1%	100	Yes	25
n072	Multi-function analog current input bias		-100 to 100	1%	0	Yes	25
n073	Multi-function analog current input filter time constant	Used to set a primary delay digital filter for multi-function analog current input.	0.00 to 2.00	0.01 s	0.10	Yes	26
n074	Pulse train frequency reference gain	Used to set the input characteristics of pulse train input.	-255 to 255	1%	100	Yes	26
n075	Pulse train frequency reference bias		-100 to 100	1%	0	Yes	26
n076	Pulse train frequency reference filter time constant	Used to set a primary delay digital filter for pulse train frequency references to be input.	0.00 to 2.00	0.01 s	0.10	Yes	---
n077	Multi-function analog input function selection	Used to select the function for allocation to the Digital Operator's multi-function analog input terminals.	0 to 4	1	0	No	---
n078	Multi-function analog input terminal selection	Used to set voltage input or current input for multi-function analog input terminals.	0, 1	1	0	No	---
n079	Multi-function analog input frequency bias	Used to set the standard bias value when the multi-function analog input function selection (n077) is set to frequency bias (set value: 3).	0 to 50	1%	10	No	---

**Note:** The frequency reference loss processing selection setting is available only with 5.5/7.5-kW Inverters.

# List of Parameters

## Function Group 3 (n080 through n0119)

Parameter No.	Name	Description	Setting range	Unit of setting (see note 2)	Default setting	Changes during operation	Reference page
n080	Carrier frequency selection	Used to set the carrier frequency.	1 to 4, 7 to 9	1	Varies with the capacity.	No	26
n081	Momentary power interruption compensation	Used to specify the processing that is performed when a momentary power interruption occurs.	0 to 2	1	0	No	26
n082	Number of fault retries	Used set the number of times that reset and restart are automatically attempted for the Inverter when the Inverter has an overvoltage fault or overcurrent fault.	0 to 10	1	0	No	26
n083	Jump frequency 1	Used to set the frequency jump function.	0.00 to 400.0	0.01 Hz	0.00	No	27
n084	Jump frequency 2	<b>Note</b> Set n083 to n085 to satisfy the following condition. n083 □ n084 □ n085	0.00 to 400.0	0.01 Hz	0.00	No	27
n085	Jump frequency 3		0.00 to 400.0	0.01 Hz	0.00	No	27
n086	Jump width		0.00 to 25.50	0.01 Hz	0.00	No	27
n087	Accumulated operating time function selection (see note 1)		Used to select the function that displays the accumulated operating time (U-13).	0, 1	1	0	No
n088	Accumulated operating time (see note 1)	Used to set the default value for accumulated operating time in time units. <b>Note</b> The operating time is accumulated from the set values. <b>Note</b> Set n088 to 0 to clear the value.	0 to 6550	1=10H	0	No	---
n089	DC injection braking current	Used to impose DC on the induction motor for braking control.	0 to 100	1%	50	No	27
n090	DC injection braking-to-stop time		0.0 to 25.5	0.1 s	0.5	No	27
n091	Startup DC injection braking time		0.0 to 25.5	0.1 s	0.0	No	27
n092	Stall prevention during deceleration	Used to select a function to change the deceleration time of the motor automatically so that there will be no overvoltage imposed on the motor during deceleration.	0, 1	1	0	No	27
n093	Stall prevention level during acceleration	Used to select a function to stop the acceleration of the motor automatically for stall prevention during acceleration.	30 to 200	1%	170	No	27
n094	Stall prevention level during operation	Used to select a function to reduce the output frequency of the Inverter automatically for stall prevention during operation.	30 to 200	1%	160	No	28
n095	Frequency detection level	Used to set the frequency to be detected.	0.00 to 400.0	0.01 Hz	0.00	No	28
n096	Overtorque detection function selection 1	Used to enable or disable overtorque detection and select the processing method after overtorque detection.	0 to 4	1	0	No	28
n097	Overtorque detection function selection 2	Used to select the item to detect overtorque.	0, 1	1	0	No	28
n098	Overtorque detection level	Used to set overtorque detection level.	30 to 200	1%	160	No	28
n099	Overtorque detection time	Used to set the detection time of overtorque.	0.1 to 10.0	0.1 s	0.1	No	28
n100	UP/DOWN frequency memory	Used to store the adjusted frequency reference with the UP/DOWN function.	0, 1	1	0	No	29
n101	High-speed search deceleration time (see note 1)	Used to set the output frequency deceleration time during execution of high-speed search in second units. <b>Note</b> Set the time to be taken in going from the maximum frequency to 0 Hz.	0.0 to 10.0	0.1 s	2.0 s	No	---
n102	High-speed search operating level (see note 1)	Used to set the operating level for high-speed search.	0 to 200	1%	150	No	---

- Note:** 1. Settings marked with an asterisk are available only with 5.5/7.5-kW Inverters.  
2. Values longer than 4 digits are rounded up to the next unit multiple.

# List of Parameters

Parameter No.	Name	Description	Setting range	Unit of setting (see note)	Default setting	Changes during operation	Reference page
n103	Torque compensation gain	Used to set the gain of the torque compensation function.	0.0 to 2.5	0.1	1.0	Yes	---
n104	Torque compensation primary delay time constant	Used to set the response speed of the torque compensation function.	0.0 to 25.5	0.1 s	0.3	No	---
n105	Torque compensation core loss	Used to set the core loss of the motor in use. <b>Note</b> This parameter is enabled in V/f control mode only.	0.0 to 6,550	0.1 W	Varies with the capacity.	No	---
n106	Rated motor slip	Used to set the rated slip value of the motor in use.	0.0 to 20.0	0.1 Hz	Varies with the capacity.	Yes	---
n107	Motor phase-to-neutral resistance	Used to set this parameter to 1/2 of the phase-to-phase resistance or phase-to-neutral resistance of the motor.	0.000 to 65.50	0.001 $\Omega$	Varies with the capacity	No	---
n108	Motor leakage inductance	Used to set the leakage inductance of the motor in use.	0.00 to 655.0	0.01 mH	Varies with the capacity.	No	---
n109	Torque compensation limit	Used to set a limit on the torque compensation function in vector control mode.	0 to 250	1%	150	No	---
n110	Motor no-load current	Used to set the no-load current of the motor in use based on the rated motor current as 100%.	0 to 99	1%	Varies with the capacity	No	---
n111	Slip compensation gain	Used to set the gain of the slip compensation function. <b>Note</b> The default is set to 1.0 in vector control mode. <b>Note</b> The slip compensation function is disabled with n111 set to 0.0.	0.0 to 2.5	0.1	0.0	Yes	---
n112	Slip compensation primary delay time	Used for the response speed of the slip compensation function. <b>Note</b> The default is set to 0.2 in vector control mode.	0.0 to 25.5	0.1 s	2.0	No	---
n113	Slip compensation during regeneration	Used to select the slip compensation function in regenerative operation. <b>Note</b> This parameter is valid only in vector control mode.	0, 1	1	0	No	---
n114	Not used	---	---	---	---	---	---
n115	Stall prevention level automatic suppression selection	Used to select whether or not to automatically decrease the level for stall prevention during operation if the frequency lies in a constant output range exceeding the frequency set in n013 for max. voltage frequency (a range greater than the rated motor frequency).	0, 1	1	0	No	---
n116	Stall prevention acceleration/deceleration time setting	Used to set the acceleration/deceleration time for the stall prevention function during operation.	0, 1	1	0	No	---
n117 to n119	Not used	---	---	---	---	---	---

**Note:** Values longer than 4 digits are rounded up to the next unit multiple.

# List of Parameters

## Function Group 4 (n120 through n179)

Parameter No.	Name	Description	Setting range	Unit of setting (see note)	Default setting	Changes during operation	Reference page
n120	Frequency reference 9	Used to set the internal frequency references. <b>Note</b> These frequency references are selected with multi-step speed references (multi-function inputs). See the reference pages for the relationship between multi-step frequency references and frequency references.	0.00 Hz to max.	0.01 Hz (Changeable with n035 settings)	0.00	Yes	22
n121	Frequency reference 10				0.00	Yes	22
n122	Frequency reference 11				0.00	Yes	22
n123	Frequency reference 12				0.00	Yes	22
n124	Frequency reference 13				0.00	Yes	22
n125	Frequency reference 14				0.00	Yes	22
n126	Frequency reference 15				0.00	Yes	22
n127	Frequency reference 16				0.00	Yes	22
n128	PID control selection	Used to select the PID control method.	0 to 8	1	0	No	---
n129	Feedback value adjustment gain	Used to set the value by which the feedback value is multiplied.	0.00 to 10.00	0.01	1.00	Yes	---
n130	Proportional (P) gain	Used to set the proportional (P) gain for PID control. <b>Note</b> PID control is disabled with this parameter set to 0.0.	0.0 to 25.0	0.1	1.0	Yes	---
n131	Integral (I) time	Used to set the integral (I) time for PID control. <b>Note</b> Integral control is disabled with this parameter set to 0.0.	0.0 to 360.0	0.1 s	1.0	Yes	---
n132	Derivative (D) time	Used to set the derivative (D) time for PID control. <b>Note</b> Derivative control is disabled with this parameter set to 0.0.	0.00 to 2.50	0.01 s	0.00	Yes	---
n133	PID offset adjustment	This parameter is for the offset adjustment of all PID control.	-100 to 100	1%	0	Yes	---
n134	Integral (I) upper limit	Used to set the upper limit value of integral control output.	0 to 100	1%	100	Yes	---
n135	PID primary delay time	Used to set the primary delay time constant for the frequency reference after PID control.	0.0 to 10.0	0.1 s	0.0	Yes	---
n136	Feedback loss detection selection	Used to set the detection method of feedback loss in PID control.	0 to 2	1	0	No	---
n137	Feedback loss detection level	Used to set the detection level of feedback loss.	0 to 100	1%	0	No	---
n138	Feedback loss detection time	Used to set the detection time of feedback loss.	0.0 to 25.5	0.1 s	1.0	No	---
n139	Energy-saving control selection	Used to select the energy-saving control function. <b>Note</b> This parameter is enabled in V/f control mode only.	0, 1	1	0	No	---
n140	Energy-saving control coefficient K2	Used to set the coefficient for the primary level of energy-saving control.	0.0 to 6,550	0.1	Varies with the capacity	No	---
n141	Energy-saving voltage lower limit at 60-Hz output	These parameters prevent the output voltage of the Inverter from dropping excessively so that the motor will not stall or come to a stop at the primary level of energy-saving control.	0 to 120	1%	50	No	---
n142	Energy-saving voltage lower limit at 6-Hz output		0 to 25	1%	12	No	---
n143	Power averaging time	Used to set the time required to calculate the average of power used in energy-saving control. Power averaging time (ms) = Set value x 24 (ms)	1 to 200	1 (24 ms)	1	No	---
n144	Probe operation voltage limit	Used to set the range of voltage control for the secondary level of energy-saving control. <b>Note</b> No probe operation is available with the parameter set to 0.	0 to 100	1%	0	No	---


**Note:** Values longer than 4 digits are rounded up to the next unit multiple.

# List of Parameters

Parameter No.	Name	Description	Setting range	Unit of setting (see note)	Default setting	Changes during operation	Reference page
n145	Probe operation control voltage step at 100%	Used to set the range of probe operation voltage in percentage based on the rated motor voltage as 100%.	0.1 to 10.0	0.1%	0.5	No	---
n146	Probe operation control voltage step at 5%		0.1 to 10.0	0.1%	0.2	No	---
n147	Not used	---	---	---	---	---	---
n148							
n149	Pulse train input scale	Used to set this parameter to the pulse train input scale so that frequency references can be executed by pulse train input.	100 to 3,300	1 (10 Hz)	2,500	No	26
n150	Multi-function analog output, pulse train frequency selection.	Used to select the relationship between the pulse train output frequency and output frequency.	0, 1, 6, 12, 24, 36	1	0	No	---
n151	RS-422/485 communications time-over detection selection	The set value in the parameter determines whether communications time-over detection will be performed with "CE" displayed if there is an interval of more than 2 s between normal communications and how the detected communications time-over will be processed.	0 to 4	1	0	No	---
n152	RS-422/485 communications frequency reference/display unit selection	Used to set the unit of frequency reference and frequency-related values to be set or monitored through communications.	0 to 3	1	0	No	---
n153	RS-422/485 communications Slave address	Used to set the Slave address (Slave unit number) for communications.	00 to 32	1	00	No	---
n154	RS-422/485 baud rate selection	Used to select the communications baud rate.	0 to 3	1	2	No	---
n155	RS-422/485 parity selection	Used to select the parity check function for communications data.	0 to 2	1	0	No	---
n156	RS-422/485 send wait time	Used to set the time to wait for a response after the DSR (data-send-request) message is received from the Master.	10 to 65	1 ms	10	No	---
n157	RS-422/485 RTS control selection	Used to select whether or not to enable the RTS (request-to-send) communications control function.	0, 1	1	0	No	---
n158	Motor code	Used to set the code to automatically set the constants for energy-saving control.	0 to 70	1	Varies with the capacity.	No	---
n159	Energy-saving voltage upper limit at 60-Hz output	These parameters prevent the motor from over excitation due to voltage changes during energy-saving control.	0 to 120	1%	120	No	---
n160	Energy-saving upper limit voltage at 6-Hz output		0 to 25	1%	16	No	---
n161	Power detection width for probe operation switching	Used to set the detection width of power that sets the Inverter into probe operation. Set the width in percentage based on the power to be detected as 100%. <b>Note</b> Normally, the default setting does not need to be changed.	0 to 100	1%	10	No	---
n162	Power detection filter constant	Used to set the filter time constant of the power detection block of the Inverter operating in probe operation. Filter time constant (ms) = Set value in n162 x 4 (ms) <b>Note</b> The Inverter will operate with a time constant of 20 ms if the value is set to 0.	0 to 255	1 (4 ms)	5	No	---
n163	PID output gain	Used to set the rate by which PID control value is multiplied for PID control.	0.0 to 25.0	0.1	1.0	No	---
n164	PID feedback input block selection	Used to set the feedback input block for PID control detection.	0 to 5	1	0	No	---
n165	Not used	---	---	---	---	---	---

**Note:** Values longer than 4 digits are rounded up to the next unit multiple.

# List of Parameters

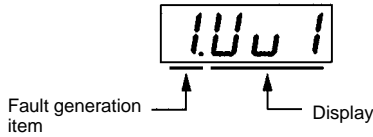Parameter No.	Name	Description	Setting range	Unit of setting (see note 1)	Default setting	Changes during operation	Reference page
n166	Input open-phase detection level (see note 3)	Used to set the open-phase detection level (voltage fluctuation) for input power supply voltage. 400 V/100% (200-V class) 800 V/100% (400-V class) <b>Note</b> Nothing detected if set to 0. <b>Note</b> Recommended setting: 7%.	0 to 100	1%	0	No	---
n167	Input open-phase detection time (see note 3)	Used to set the open-phase detection time for input power supply voltage. <b>Note</b> Recommended setting: 10 s.	0 to 255	1 s	0	No	---
n168	Output open-phase detection level (see note 3)	Used to set the open-phase detection level for Inverter output current. <b>Note</b> Nothing detected if set to 0. <b>Note</b> Set a lower value if the capacity of the applicable motor is small compared to the capacity of the Inverter. <b>Note</b> Recommended setting: 5%.	0 to 100	1%	0	No	---
n169	Output open-phase detection time (see note 3)	Used to set the open-phase detection time for Inverter output current. <b>Note</b> Nothing detected if set to 0.0 <b>Note</b> Recommended setting: 0.2 s.	0.0 to 2.0	0.1 s	0.0	No	---
n170 to n174	Not used	---	---	---	---	---	---
n175	Low carrier frequency at low speed	This function automatically reduces the carrier frequency to 2.5 kHz if the output frequency is 5 kHz or less, and the output current is 110% or greater than the rated Inverter current. Normally this setting is not necessary. This function improves the overload capacity at low frequencies.	0, 1	1	0 (see note 2)	No	---
n176	Parameter copy and verify function selection	Used to select the function to read, copy, and verify the parameter between the memory of the Inverter and that of the Digital Operator.	rdy to Sno	---	rdy	No	---
n177	Parameter read prohibit selection	Used to select the copy-prohibit function. Set this parameter to store the data in the EEPROM of the Digital Operator.	0, 1	1	0	No	---
n178	Fault log	Used to display the four most recent faults recorded.  <b>Note</b> The most recent fault is indicated by "1." <b>Note</b> This parameter is monitored only.	---	---	---	---	---
n179	Software number	Used to display the software number of the Inverter for OMRON's control reference use. <b>Note</b> This parameter is monitored only.	---	---	---	---	---

- Note:**
1. Values longer than 4 digits are rounded up to the next unit multiple.
  2. The default setting for 5.5/7.5-kW Inverters is "1."
  3. Functions marked with an asterisk are available only with 5.5/7.5-kW Inverters.

# Function of Each Parameter

**Note:** The shaded values indicate default settings.

## Parameter Write-prohibit Selection/Parameter Initialization (n001)

This parameter makes it possible to write-prohibit parameters, change the parameter set or displayed range, or initialize all parameters to default values.

Value	Description
0	Displays and sets n001. Parameters from n002 to n179 can be displayed only.
1	Sets or monitors parameters n001 through n049 (i.e., function group 1 settings).
2	Sets or monitors parameters n001 through n079 (i.e., function groups 1 and 2 settings).
3	Sets or monitors parameters n001 through n119 (i.e., function groups 1 through 3 settings).
4	Sets or monitors parameters n001 through n179 (i.e., function groups 1 through 4 settings).
6	Clears the error log.
8	Initializes parameters to default settings in 2-wire sequence.
9	Initializes parameters in 3-wire sequence.
10	For the USA, initializes parameter in 2-wire sequence
11	For the USA, initializes parameter in 3-wire sequence

## Control Mode Selection (n002)

The 3G3MV Inverter operates in vector or V/f control mode to be selected according to the application.

Value	Description
0	V/f control mode
1	Vector control mode (open loop)

- Note:**
1. This parameter is not initialized when parameter initialization is performed using n001 (parameter write-prohibit selection/parameter initialization).
  2. The following parameters are initialized when n002 is changed. The default values vary with the control mode.

n014: Middle output frequency

n015: Middle output frequency voltage

n016: Minimum output frequency

n017: Minimum output frequency voltage

n104: Torque compensation primary-delay time constant

n111: Slip compensation gain

n112: Slip compensation primary-delay time constant

## Operation Mode Selection (n003)

Select the method of operation mode input to start or stop the Inverter in remote mode.

Value	Description
0	The RUN and STOP/RESET Keys of the Digital Operator are enabled.
1	Multi-function input in 2- or 3-wire sequence through the control circuit terminals is enabled.
2	RS-422/485 communications are enabled.
3	Input from option (CompoBus/D Communications Unit) is enabled.

**Note:** In local mode, RUN commands can be entered using the Digital Operator only.

## Frequency Reference Selection (n004) (Remote Mode)

Select the method for inputting the frequency reference to the Inverter in remote mode.

Value	Description
0	The FREQ adjuster of the Digital Operator is enabled.
1	Frequency reference 1 (n024) is enabled.
2	The frequency reference control terminal (for 0- to 10-V input) is enabled.
3	The frequency reference control terminal (for 4- to 20-mA current input) is enabled.
4	The frequency reference control terminal (for 0- to 20-mA current input) is enabled.
5	The pulse train command control input is enabled.
6	Frequency reference (0002 Hex) through RS-422/485 communications is enabled.
7	Multi-function analog voltage input (0 to 10 V) is enabled.
8	Multi-function analog current input (4 to 20 mA) is enabled.
9	Frequency reference input from option (CompoBus/D Communications Unit) is enabled.

## Interrupt Mode Selection (n005)

Select the stopping method to be used when the STOP command is input.

Value	Description
0	Frequency deceleration stop (Decelerates to stop in preset time.)
1	Free running (Output shut OFF by STOP command.)

## Reverse Rotation-prohibit Selection (n006)

Select the operation to be performed when the reverse rotation command is input.

Value	Description
0	Reverse rotation possible (command accepted)
1	Reverse rotation prohibited (command not accepted)

## STOP/RESET Key Function Selection (n007)

When parameter n003 is not set to 0, set whether or not to use the STOP/RESET Key of the Digital Operator to stop the Inverter in remote mode. The STOP/RESET Key is always enabled in local mode regardless of the setting in n007.

Value	Description
0	The STOP/RESET Key of the Digital Operator is enabled.
1	The STOP/RESET Key of the Digital Operator is disabled.

## Frequency Reference Selection (n008) (Local Mode)

Select the input method of frequency references in local mode.

Value	Description
0	The FREQ adjuster of the Digital Operator is enabled.
1	Key sequences on the Digital Operator are enabled. (Set in n024.)



# Function of Each Parameter

## Key Sequential Frequency Setting (n009)

Select whether to enable the Enter Key when setting the frequency reference with the Increment and Decrement Keys on the Digital Operator.

Value	Description
0	The Enter Key is enabled. (The setting is made valid by pressing the Enter Key.)
1	The Enter Key is disabled. (The setting is directly treated as a frequency reference without the Enter Key being pressed.)

## Operation Selection at Digital Operator Interruption (n010)

Select whether or not to detect Digital Operator connection errors.

Value	Description
0	The Digital Operator connection error is not detected (Nonfatal error)
1	The Digital Operator connection error is detected (Error output and the Inverter coasts to a stop)

## V/f Pattern Settings (n011 to n017)


Used to set the V/f pattern as the basic characteristic of the Inverter.

V/f control mode: set output voltage per frequency

Vector control mode: set for torque adjustment

Value	Name	Setting range	Unit of setting	Default settings
n011	Maximum Frequency (FMAX)	50.0 to 400	0.1 Hz	60.0
n012	Maximum Voltage (VMAX)	0.1 to 255.0 (0.1 to 510.0)	0.1 V	200.0 (400.0)
n013	Maximum Voltage Frequency (FA)	0.2 to 400.0	0.1 Hz	60.0
n014	Middle Output Frequency (FB)	0.1 to 399.9	0.1 Hz	1.5
n015	Middle Output Frequency Voltage (VC)	0.1 to 255.0 (0.1 to 510.0)	0.1 V	12.0 (24.0) (see note 2)
n016	Minimum Output Frequency (FMIN)	0.1 to 10.0	0.1 Hz	1.5
n017	Minimum Output Frequency Voltage (VMIN)	0.1 to 50.0	0.1 V	12.0 (24.0) (see note 2)

- Note:**
- ( ) values indicate those for 400-V-class Inverters.
  - The default settings of n015 and n017 are 10.0 V for 200-V-class, 5.5/7.5 Inverters and 20.0 V for 400-V-class, 5.5/7.5 Inverters.

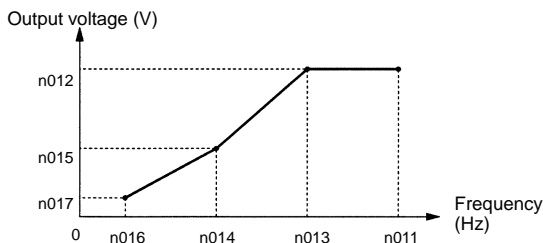

- Note:**
- Set the parameters so that the following condition will be satisfied.  
 $n016 \leq n014 < n013 \leq n011$
  - The value set in n015 will be ignored if parameters n014 and n016 are the same in value.

## Acceleration/Deceleration Time Setting Unit (n018)

Select the acceleration or deceleration time unit of the Inverter.

Value	Description
0	Less than 1,000 s: 0.1-s increments 1,000 s or over: 1-s increments
1	Less than 100 s: 0.01-s increments 100 s or over: 0.1-s increments

## Acceleration/Deceleration Time Settings (n019 to n022)

The acceleration time is the time required to go from 0% to 100% of the maximum frequency and the deceleration time is the time required to go from 100% to 0% of the maximum frequency. The actual acceleration or deceleration time is obtained from the following formula.

Acceleration/Deceleration time =  
 (Acceleration/Deceleration time set value) × (Frequency reference value) ÷ (Max. frequency)

Value	Name	Setting range	Unit of setting	Default settings
n019	Acceleration time 1	0.0 to 6000	0.1 s (Change in n018.)	10.0
n020	Deceleration Time 1			10.0
n021	Acceleration time 2			10.0
n022	Deceleration Time 2			10.0

## S-shape Acceleration/Deceleration Characteristic Selection (n023)

Any one of three S-shape acceleration/deceleration times (0.2, 0.5, and 1.0 s) is selectable.

Value	Description
0	No S-shape acceleration/deceleration characteristic (Trapezoidal acceleration/deceleration)
1	S-shape acceleration/deceleration characteristic time is 0.2 s
2	S-shape acceleration/deceleration characteristic time is 0.5 s
3	S-shape acceleration/deceleration characteristic time is 1.0 s

**Note:** When the S-shape acceleration/deceleration characteristic time is set, the acceleration and deceleration times will be lengthened according to the S-shape at the beginning and end of acceleration/deceleration.

# Function of Each Parameter

## Frequency References 1 to 16 and Inching Frequency Command Settings (n024 to n031, n120 to n127 and n032)

Set internal frequency references.

Value	Name	Setting range	Unit of setting	Default settings
n024	Frequency reference 1	0.00 to max. frequency	0.01 Hz (Change in n035.)	6.00
n025	Frequency reference 2			0.00
n026	Frequency reference 3			0.00
n027	Frequency reference 4			0.00
n028	Frequency reference 5			0.00
n029	Frequency reference 6			0.00
n030	Frequency reference 7			0.00
n031	Frequency reference 8			0.00
n120	Frequency reference 9			0.00
n121	Frequency reference 10			0.00
n122	Frequency reference 11			0.00
n123	Frequency reference 12			0.00
n124	Frequency reference 13			0.00
n125	Frequency reference 14			0.00
n126	Frequency reference 15			0.00
n127	Frequency reference 16			0.00
n032	Inching frequency command			

- Note:**
1. Frequency reference 1 is enabled with n004 for frequency reference selection set to 1. (Remote mode)
  2. Frequency references 1 to 16 are enabled by setting multi-step speed references 1, 2, and 3 in n36 to n39 for multi-function input. Refer to the following table for the relationship between multi-step speed references 1 to 3 and frequency references 1 to 8.

Frequency reference	Multi-step speed reference 1	Multi-step speed reference 2	Multi-step speed reference 3	Multi-step speed reference 4
Frequency reference 1	OFF	OFF	OFF	OFF
Frequency reference 2	ON	OFF	OFF	OFF
Frequency reference 3	OFF	ON	OFF	OFF
Frequency reference 4	ON	ON	OFF	OFF
Frequency reference 5	OFF	OFF	ON	OFF
Frequency reference 6	ON	OFF	ON	OFF
Frequency reference 7	OFF	ON	ON	OFF
Frequency reference 8	ON	ON	ON	OFF
Frequency reference 9	OFF	OFF	OFF	ON
Frequency reference 10	ON	OFF	OFF	ON
Frequency reference 11	OFF	ON	OFF	ON
Frequency reference 12	ON	ON	OFF	ON
Frequency reference 13	OFF	OFF	ON	ON
Frequency reference 14	ON	OFF	ON	ON

Frequency reference 15	OFF	ON	ON	ON
Frequency reference 16	ON	ON	ON	ON

- Note:**
1. "ON" and "OFF" represent "input ON" and "input OFF," respectively.
  2. Inching frequency commands take precedence over multi-step speed references.

## Frequency Reference Upper and Lower Limit Settings (n033 and n034)

Set the upper and lower frequency reference limits in percentage based on the maximum frequency as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n33	Frequency Reference Upper Limit	0 to 110	1%	100
n34	Frequency Reference Lower Limit	0 to 110	1%	0

- Note:** If n034 is set to a value less than the minimum output frequency (FMIN) (n016), the Inverter will have no output when a frequency reference less than the minimum output frequency input is ON.

## Frequency Reference Setting/Display Unit Selection (n035)

Set the unit of frequency reference and frequency-related values to be set or monitored in n035 through the Digital Operator.

Value	Description
0	0.01 Hz increments
1	0.1% increments
2 to 39	1-rpm increments
40 to 3,999	Unit setting: The value to be set or monitored at max. frequency

- Note:** The unit of setting of each parameter and monitor item below varies with the decimal place.

Parameters: n024 to n032, n120 to n127

Monitor Items: U-01, U-02

## Rated Motor Current Setting (n036)

Set the rated motor current as the reference value for motor overload detection (OL1).

- Note:**
1. In vector control mode, this parameter is used as a constant for vector control operation.
  2. Setting 0.0 disables the motor overload detection (OL1) function.
  3. The rated motor current value is factory-set for each Inverter according to the maximum applicable motor capacity.

Value	Name	Setting range	Unit of setting	Default settings
n036	Rated Motor Current	0.0% to 150% (A) of rated output current of Inverter	0.1 A	Varies with the capacity.

# Function of Each Parameter

## Motor Protection Characteristic Selection (n037)

Set the motor overload detection (OL1) for the electronic thermal characteristics of the motor.

Value	Description
0	Protection characteristics for general-purpose induction motors
1	Protection characteristics for Inverter-dedicated motors
2	No protection

**Note:** When connecting multiple motors to one Inverter, set 2 (equivalent to n036 = 0.0). In addition, take overload prevention measures by mounting a thermal relay in each motor, for example.

## Motor Protective Time Setting (n038)

Set the electronic thermal characteristics of the motor to be connected in 1-minute increments.

Value	Name	Setting range	Unit of setting	Default settings
n038	Motor Protective Time Setting	1 to 60	1 min	8

- Note:**
1. The default setting does not need any changes in normal operation.
  2. To set the parameter according to the characteristics of the motor, confirm the thermal time constant with the motor manufacturer and set the parameter with some margin. In other words, set the value a little shorter than the thermal time constant.
  3. To detect motor overloading more quickly, reduce the set value, provided that it does not cause any application problems.

## Cooling Fan Operation Function Selection (n039)

This parameter is used to operate the cooling fan of the Inverter while the Inverter is turned on or only while the Inverter is in operation.

Value	Description
0	The fan rotates only while the RUN command is input and for 1 minute after the Inverter stops operating.
1	The fan rotates while the Inverter is turned ON.

- Note:**
1. This parameter is available only if the Inverter incorporates a cooling fan.
  2. If the operation frequency of the Inverter is low, the life of the fan can be prolonged by setting the parameter to 0.

## Multi-function Input Selection (n050 to n056)

Select the functions of multi-function input terminals S1 to S7.

Value	Name	Setting range	Unit of setting	Default settings
n050	Multi-function Input 1 (S1)	1 to 26	1	1
n051	Multi-function Input 2 (S2)	1 to 26	1	2
n052	Multi-function Input 3 (S3)	0 to 26	1	3
n053	Multi-function Input 4 (S4)	1 to 26	1	5
n054	Multi-function Input 5 (S5)	1 to 26	1	6
n055	Multi-function Input 6 (S6)	1 to 26	1	7
n056	Multi-function Input 7 (S7)	1 to 26, 34, 35	1	10

Value	Function	Description
0	Forward/Reverse rotation command	3-wire sequence (to be set in n052 only) This setting overrides the settings in n050 and n051. S1: RUN input (RUN when ON) S2: STOP input (STOP when OFF) S3: Forward/Reverse rotation command (ON: Reverse)
1	Forward/Stop	Forward rotation command in 2-wire sequence
2	Reverse/Stop	Reverse rotation command (2-wire sequence) (ON: Reverse)
3	External fault (NO)	ON: External fault
4	External fault (NC)	OFF: External fault
5	Fault reset	ON: Fault reset
6	Multi-step speed reference 1	Signals to select frequency references 2 to 16.
7	Multi-step speed reference 2	
8	Multi-step speed reference 3	
9	Multi-step speed reference 4	
10	Inching frequency command	ON: Inching frequency command
11	Acceleration/Deceleration time selection	ON: Acceleration/deceleration time 2
12	External base block command (NO)	ON: Output shut OFF
13	External base block command (NC)	OFF: Output shut OFF
14	Search command (Searching starts from maximum frequency)	ON: Speed search (Searching starts from n09)
15	Search command (Searching starts from preset frequency)	ON: Speed search (Searching starts from the frequency specified by n03.)
16	Acceleration/Deceleration-prohibit command	ON: Acceleration/Deceleration is on hold
17	Local or remote selection	ON: Local mode (operated with the Digital Operator)
18	Communications/Remote selection	ON: Communications input is enabled.

# Function of Each Parameter

19	Emergency stop fault (NO)	The Inverter stops according to the setting in n005 for interruption mode selection when the emergency stop input turns ON.
20	Emergency stop alarm (NO)	<b>Note</b> NO: Emergency stop with the contact closed. NC: Emergency stop with the contact opened.
21	Emergency stop fault (NC)	<b>Note</b> Fault: Fault output is ON and reset with RESET input. Alarm output is ON (no reset required).
22	Emergency stop alarm (NC)	<b>Note</b> "STP" is displayed (lit with fault input ON and flashes with alarm input ON)
23	PID control cancel	ON: PID control is disabled.
24	PID control integral reset	ON: Integral value is reset (cleared).
25	PID control integral hold	ON: Integral value is kept on hold (fixed).
26 (see note)	Inverter overheating warning OH3	ON: "OH3" displayed at the Digital Operator and Inverter overheating warning output turns ON (multi-function output). <b>Note</b> Operation is continued during input. When the input is turned OFF, the message is displayed and the output unlocked. <b>Note</b> Used, for example, when displaying the input status of an external thermal relay.
34	Up or down command	Up or down command (set in n056 only) This setting overrides the n055 setting. S6: Up command S7: Down command
35	Self-diagnostic test	ON: RS-422/485 communications self-diagnostic test (set in n056 only)

**Note:** The inverter overheating warning is available only with 5.5/7.5-kW Inverters.

## Multi-function Output Selection (n057 to n059)

Select the functions of multi-function output terminals.

Value	Name	Setting range	Unit of setting	Default settings
n057	Multi-function Output 1 (MA/MB and MC)	0 to 7, 10 to 21	1	0
n058	Multi-function Output 2 (P1-PC)	0 to 7, 10 to 21	1	1
n059	Multi-function Output 3 (P2-PC)	0 to 7, 10 to 21	1	2

Value	Function	Description
0	Fault output	ON: Fault output
1	Operation in progress	ON: Operation in progress
2	Frequency detection	ON: Frequency detection
3	Idling	ON: Idling
4	Frequency detection 1	ON: Output frequency □ frequency detection level (n095)
5	Frequency detection 2	ON: Output frequency □ frequency detection level (n095)

6	Overtorque being monitored (NO-contact output)	Output if any of the following parameter conditions is satisfied. • Overtorque detection function selection 1 (n096) • Overtorque detection function selection 2 (n097)
7	Overtorque being monitored (NC-contact output)	• Overtorque detection level (n098) • Overtorque detection time (n099) <b>Note</b> NO contact: ON with overtorque being detected; NC contact: OFF with overtorque being detected
10	Alarm output	ON: Alarm being detected (Nonfatal error)
11	Base block in progress	ON: Base block in progress
12	RUN mode	ON: Local mode
13	Inverter ready	ON: Inverter ready to operate
14	Fault retry	ON: Fault retry
15	UV in progress	ON: Undervoltage being monitored (main circuit undervoltage UV or UV1 detected)
16	Rotating in reverse direction	ON: Rotating in reverse direction
17	Speed search in progress	ON: Speed search in progress
18	Communications output	Turns communications output 1 ON.
19	PID feedback loss	ON: PID feedback being lost
20 (see note 2)	Frequency reference loss	ON: Frequency reference being lost (Used when frequency reference loss processing selection (n064) is enabled and analog input or pulse train input is set with frequency reference selection (n004).)
21 (see note 2)	Inverter overheating warning OH3	ON: Inverter overheating warning (ON while the multi-function input Inverter overheating warning signal is input (OH3 flashes).)

- Note:**
1. Use the operation in progress setting (set value: 1) or the idling setting (set value: 3) to control the timing at which the motor is dampened by its brake. To set the stop timing with precision, set the frequency detection 1 or 2 setting (set values: 4 or 5), and use the frequency detection level (n095).
  2. Frequency reference loss and Inverter overheating warning OH3 settings are available only with 5.5/7.5-kW Inverters.

# Function of Each Parameter

## Gain and Bias Settings (n060 and n061)

Set the input characteristics of analog frequency references in n41 (for the frequency reference gain) and n42 (for the frequency reference bias).

Set the frequency of maximum analog input (10 V or 20 mA) in n41 as percentage based on the maximum frequency as 100%.

Set the frequency of minimum analog input (0 V, 0 mA, or 4 mA) in n42 as percentage based on the maximum frequency as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n060	Frequency Reference Gain	0 to 255	1%	100
n061	Frequency Reference Bias	-99 to 99	1%	0

## Analog Frequency Reference Filter Time Setting (n062)

The digital filter with a first-order lag can be set for analog frequency references to be input.

Value	Name	Setting range	Unit of setting	Default settings
n062	Analog Frequency Reference Filter Time	0.00 to 2.00	0.01 s	0.10

## Multi-function Analog Output Type Selection (n065)

Select the multi-function analog output type.

Value	Description
0	Analog voltage output (functions set in n066)
1	Pulse train output (functions set in n150)

## Multi-function Analog Output Selection (n066)

Select the monitor item with n065 set to 0.

Value	Description
0	Output frequency (with 10-V output at max. frequency)
1	Output current (with 10-V output with Inverter rated output current) (see note 3)
2	Main-circuit DC voltage (with 10-V output at 400 [800] V DC)
3	Vector operation torque monitor (Reference: 10-V output at rated motor torque)
4	Output power (with 10-V output at power equivalent to max. applicable motor capacity)
5	Output voltage (with 10-V output at 200 [400] V AC)

- Note:**
1. Values in ( ) apply with n067 set to 1.00.
  2. Values in [ ] are for 400-V models.
  3. Output current is not available in vector control mode.

## Multi-function Analog Output Gain Setting (n067)

Set the output characteristics of multi-function analog output.

Value	Name	Setting range	Unit of setting	Default settings
n067	Multi-function Analog Output Gain	0.00 to 2.00	0.01	1.00

## Gain and Bias Settings of Multi-function Analog Voltage Input (n068 and n069)

Set the input characteristics of multi-function analog voltage input.

Gain: Set the frequency of maximum analog input (10 V) in percentage based on the maximum frequency as 100%.

Bias: Set the frequency of minimum analog input (0 V) in percentage based on the maximum frequency as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n068	Multi-function Analog Voltage Input Gain	-255 to 255	1%	100
n069	Multi-function Analog Voltage Input Bias	-100 to 100	1%	0

## Filter Time Constant Settings of Multi-function Analog Voltage Input (n070)

Use this parameter to set a primary-delay digital filter for multi-function analog voltage input.

Value	Name	Setting range	Unit of setting	Default settings
n070	Multi-function Analog Voltage Input Filter Time Constant	0.00 to 2.00	0.01 s	0.10

## Gain and Bias Settings of Multi-function Analog Current Input (n071 and n072)

Set the input characteristics of multi-function analog current input.

Gain: Set the frequency of maximum analog input (20 mA) in percentage based on the maximum frequency as 100%.

Bias: Set the frequency of minimum analog input (0 V) in percentage based on the maximum frequency as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n071	Multi-function Analog Current Input Gain	-255 to 255	1%	100
n072	Multi-function Analog Current Input Bias	-100 to 100	1%	0

# Function of Each Parameter

## Filter Time Constant Settings of Multi-function Analog Current Input (n073)

Use this parameter to set a primary-delay digital filter for multi-function analog current input.

Value	Name	Setting range	Unit of setting	Default settings
n073	Multi-function Analog Current Input Filter Time Constant	0.00 to 2.00	0.01 s	0.10

## Frequency Reference Settings by Pulse Train Input (n074, n075 and n149)

Set the input characteristics of pulse train input.

Gain: Set the gain in percentage based on the maximum frequency of the pulse train input scale in n149 as 100%.

Bias: Set the bias in percentage for frequency reference input at 0-Hz pulse train input based on the maximum frequency as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n074	Pulse Train Frequency Reference Gain	-255 to 255	1%	100
n075	Pulse Train Frequency Reference Bias	-100 to 100	1%	0
n149	Pulse Train Input Scale	100 to 3300	1 (10 Hz)	2500

**Note:** These settings are enabled when n004 (frequency reference selection) is set to 5 (pulse train command control input enabled).

## Carrier Frequency Selection (n080)

Set the carrier frequency.

Value	Description
1	2.5 kHz
2	5.0 kHz
3	7.5 kHz
4	10.0 kHz
7	2.5 kHz (12x): 12 times as high as output frequency (between 1.0 and 2.5 kHz)
8	2.5 kHz (24x): 24 times as high as output frequency (between 1.0 and 2.5 kHz)
9	2.5 kHz (36x): 36 times as high as output frequency (between 1.0 and 2.5 kHz)

**Note:** Normally, the factory setting need not be changed.

## Momentary Power Interruption Compensation Setting (n081)

The parameter specifies the processing that will be performed when a momentary power interruption occurs.

Value	Description
0	Disabled.
1	The Inverter will continue operating if power is restored within 0.5 s.
2	The Inverter will restart when power is restored.

## Fault Retry Setting (n082)

Set the number of times the Inverter is to be automatically reset and restarted when the Inverter has an overvoltage fault, over-current fault, or ground fault.

Value	Name	Setting range	Unit of setting	Default settings
n082	Fault Retry	0 to 10	1	0


# Function of Each Parameter

## Frequency Jump Function Setting (n083 to n086)

Set the frequency jump function.

Value	Name	Setting range	Unit of setting	Default settings
n083	Jump Frequency 1	0.0 to 400	0.1 Hz	0.0
n084	Jump Frequency 2	0.0 to 400	0.1 Hz	0.0
n085	Jump Frequency 3	0.0 to 400	0.1 Hz	0.0
n086	Jump Width	0.0 to 25.5	0.1 Hz	0.0

**Note:** These values must satisfy the following condition.  
 $n083 \square n084 \square n085$

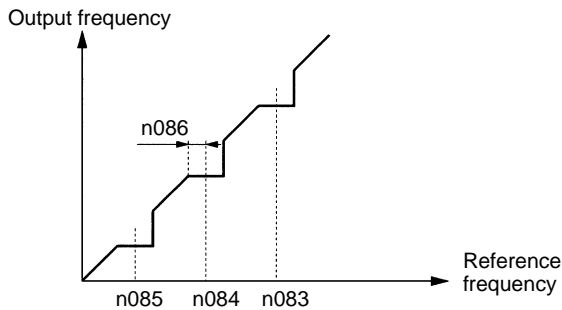


## DC Control Function Setting (n089 to n091)

Used to impose DC on the induction motor for braking control.

Value	Name	Setting range	Unit of setting	Default settings
n089	DC Control Current	0 to 100	1%	50
n090	Interruption DC Control Time	0.0 to 25.5	0.1 s	0.5
n091	Startup DC Control Time	0.0 to 25.5	0.1 s	0.0


**DC Control Current:**  
 Set this value in percentage based on the rated output current of the Inverter as 100%.

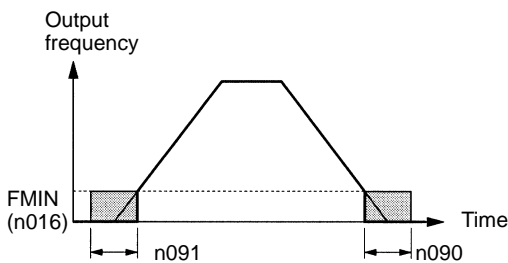

## Stall Prevention Selection during Deceleration (n092)

Select a function to change the deceleration time of the motor automatically so that there will be no overvoltage imposed on the motor during deceleration.

Value	Description
0	Stall prevention during deceleration
1	No stall prevention during deceleration

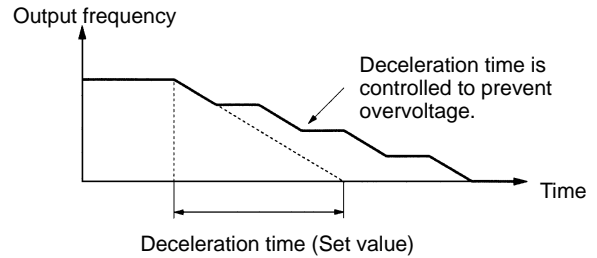


**Note:** Be sure to set the parameter to 1 when the Braking Resistor Unit or a braking resistor is used as an option.

## Stall Prevention Level Setting during Acceleration (n093)

Set the operation level of a function to stop the acceleration of the motor automatically for stall prevention during acceleration. Set this value in percentage based on the rated output current of the Inverter as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n093	Stall Prevention Level during Acceleration	30 to 200	1%	170

### Stall Prevention during Acceleration

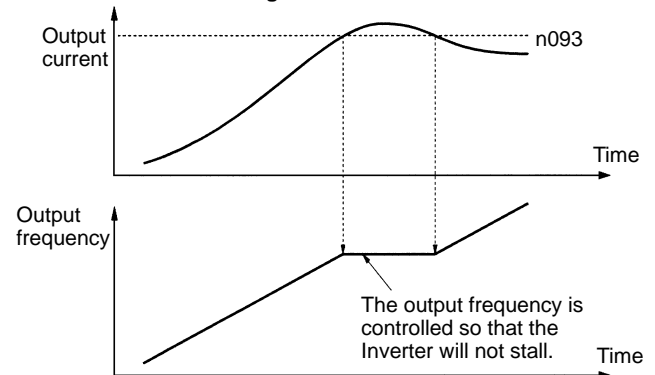


# Function of Each Parameter

## Stall Prevention Level Setting during Operation (n094)

Set the operation level of a function to reduce the output frequency of the Inverter automatically for stall prevention during operation. Set this value in percentage based on the rated output current of the Inverter as 100%.

Value	Name	Setting range	Unit of setting	Default settings
n094	Stall Prevention Level during Operation	30 to 200	1%	160

### Stall Prevention during Operation

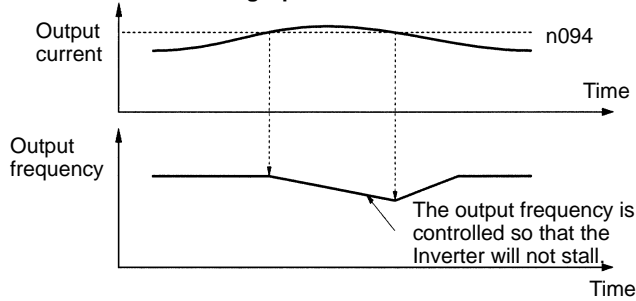

## Frequency Detection Level Setting (n095)

Set the frequency to be detected.

**Note:** When frequency detection 1 and 2 are to be output, n40 (multi-function output) must be set.

Value	Name	Setting range	Unit of setting	Default settings
n095	Frequency Detection Level	0.00 to 400	0.01 Hz	0.00

## Overtorque Detection Function Selection (n096 to n099)

Set n096 to enable or disable overtorque detection and select the processing to be performed after overtorque detection.

Value	Description
0	Inverter does not monitor overtorque.
1	Inverter monitors overtorque only when speed is matched. It continues operation (issues warning) even after overtorque is detected.
2	Inverter monitors overtorque only when speed is matched. It discontinues operation (through protective function) when overtorque is detected.
3	Inverter always monitors overtorque during operation. It continues operation (issues warning) even after overtorque is detected.
4	Inverter always monitors overtorque during operation. It discontinues operation (through protective function) when overtorque is detected.

Select the item to detect overtorque in n097.

Value	Description
0	Detects overtorque from output torque.
1	Detects overtorque from output current.

Set the overtorque detection level in n098 and the overtorque detection time in n099.

Value	Name	Setting range	Unit of setting	Default settings
n098	Overtorque Detection Level	30 to 200	1%	160
n099	Overtorque Detection Time	0.1 to 10.0	0.1 s	0.1


**Note:** 1. In n098, set the detection level for overtorque detection in the following way:

Detection from output torque: Set in percentage based on the rated motor torque as 100%.

Detection from output current: Set in percentage based on the rated Inverter output current as 100%.

2. In n099, set the overtorque detection time in seconds.

### Overtorque Detection

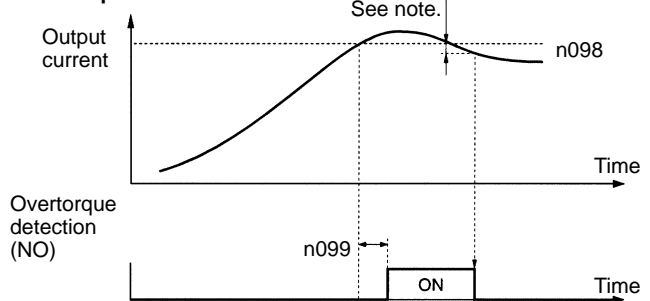

**Note:** Overtorque detection will be canceled if the output current decreases from the detection level by approximately 5% of the Inverter rated current.



# Function of Each Parameter

## UP/DOWN Command Frequency Memory Selection (n100)

Select whether to store the frequency reference adjusted with the UP/DOWN function.

Value	Description
0	The frequency on hold is not retained.
1	The frequency on hold for 5 s or more is retained.

The UP/DOWN function uses UP and DOWN commands to change frequency references.

When using the UP/DOWN function, set multi-function input 7 (n056) to 34 (UP or DOWN command). The terminals for multi-function input 6 (S6) and multi-function input 7 (S7) will be set to function in the following way:

Multiple-function input 6 (S6): UP command

Multiple-function input 7 (S7): DOWN command


Use n100 (UP/DOWN command frequency memory) to set whether the frequency reference on hold is stored or not when an UP or DOWN command is sent to the multi-function input terminals.

If n100 is set to 1, the output frequency held by the UP/DOWN function for 5 s or more will be stored in the memory. This value will be stored in memory even if power is interrupted. When a RESET command is input, operation will start with this value as the frequency.

If n100 is set to 0, the frequency will be cleared. If parameter initialization is performed (i.e.: n01 is set to 8 or 9), the stored frequency will be initialized.

**Note:** If the UP/DOWN function is used in remote mode, frequency references can only be given with UP/DOWN commands and inching commands. Multi-step speed references will be invalid.

### Operation of UP/DOWN Function

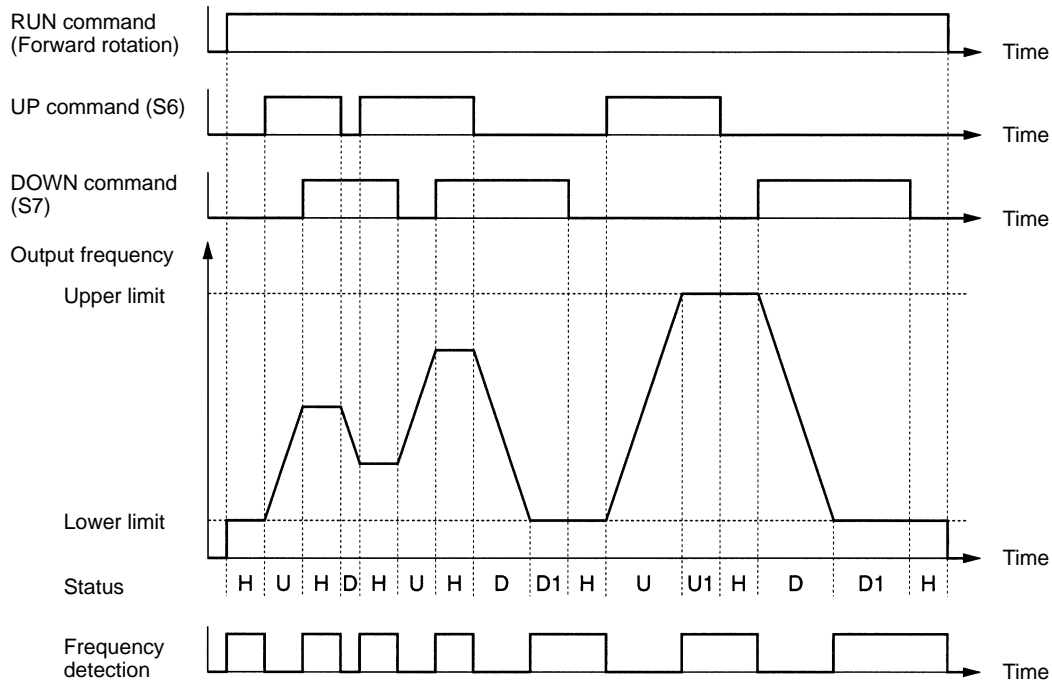

**Note:** Status  
 U: UP (acceleration)  
 D: DOWN (deceleration)  
 H: Hold  
 U1: Frequency acceleration restricted by upper limit.  
 D1: Frequency deceleration restricted by lower limit.

# Specifications

## ■ Specifications

### 200-V-class Inverters

3-phase 200-V AC models	Model 3G3MV-		A2001	A2002	A2004	A2007	A2015	A2022	A2037	A2055	A2075	
	Power supply	Rated voltage and frequency	3-phase 200 to 230 V AC at 50/60 Hz									
		Allowable voltage fluctuation	-15% to 10%									
		Allowable frequency fluctuation	±5%									
		Power supply capacity (kVA) (see note 1)	0.4	0.9	1.6	2.7	4.3	5.9	9.3	13.3	17.6	
Heat radiation (W) (see note 2)		13.0	18.0	28.1	45.1	72.8	94.8	149.1	249.8	318.1		
Weight (kg)		0.6	0.6	0.9	1.1	1.4	1.5	2.1	4.6	4.8		
Cooling method		Natural cooling				Cooling fan						

Single- phase 200-V AC models	Model 3G3MV-		AB001	AB002	AB004	AB007	AB015	AB022	AB037	---	---	
	Power supply	Rated voltage and frequency	Single-phase 200 to 240 V AC at 50/60 Hz									
		Allowable voltage fluctuation	-15% to 10%									
		Allowable frequency fluctuation	±5%									
		Power supply capacity (kVA) (see note 1)	0.5	0.9	1.6	2.7	4.3	5.9	9.3	---	---	
Heat radiation (W) (see note 2)		14.1	20.0	31.9	51.4	82.8	113.6	176.4	---	---		
Weight (kg)		0.6	0.7	1.0	1.5	1.5	2.2	2.9	---	---		
Cooling method		Natural cooling				Cooling fan						

**Note:** 1. The power supply capacity, is the capacity when the Inverter is operating at its rated output. The value will vary with the impedance at the input power supply side. (Because the power factor of the input power supply changes, the power factor will improve if an AC reactor is inserted.) The ratio with the rated current of the motor used and the rated output current of the Inverter will vary.

2. The "heat radiation" is the power consumed in the Inverter when it is operating at its rated output.

<b>Max. applicable motor capacity (kW)</b>		0.1	0.2	0.4	0.75	1.5	2.2	3.7	5.5	7.5	
<b>Output specifications</b>	Rated output capacity (kVA)	0.3	0.6	1.1	1.9	3.0	4.2	6.7	9.5	13.0	
	Rated output current (A)	0.8	1.6	3.0	5.0	8.0	11.0	17.5	25.0	33.0	
	Rated output voltage (V)	3-phase 200 to 240 V AC (according to the input voltage)									
	Max. output frequency	400 Hz parameter setting									
<b>Control characteristics</b>	Harmonic-current countermeasures	DC reactor (option) connection possible									
	Control method	Sine wave PWM (V/f control or vector control)									
	Carrier frequency	2.5 to 10.0 kHz (in vector control)									
	Frequency control range	0.1 to 400 Hz									
	Frequency precision (temperature characteristics)	Digital commands: ±0.01% (-10°C to 50°C) Analog commands: ±0.5% (25°C ± 10°C)									
	Frequency setting resolution	Digital commands: 0.01 Hz (less than 100 Hz) and 0.1 Hz (100 Hz or over) Analog commands: 0.06 Hz/60 Hz (equivalent to 1/1000)									
	Output frequency resolution	0.01 Hz									
	Overload capacity	150% of rated output current for 1 min									
	External frequency set signal	Selectable with FREQ adjuster: 0 to 10 V DC (20 kΩ), 4 to 20 mA (250 Ω), and 0 to 20 mA (250 Ω)									
	Acceleration/deceleration time	0.0 to 6,000 s (Independent acceleration and deceleration time settings: 2 types)									
<b>Protective functions</b>	Braking torque	Approx. 20% (125 to 150% possible with braking resistor)									
	Voltage/frequency characteristics	Set voltage vector control/user V/f pattern									
	Motor protection	Protection by electronic thermal									
	Instantaneous overcurrent protection	Stops at approx. 250% of rated output current									
	Overload protection	Stops in 1 min at approximately 150% of rated output current									
	Overvoltage protection	Stops when main-circuit DC voltage is approximately 410 V									
	Undervoltage protection	Stops when main-circuit DC voltage is approximately 200 V (160 V for single-phase 200-V AC model)									
	Momentary power interruption compensation (selection)	Stops for 15 ms or more. By setting the Inverter to momentary power interruption mode, operation can be continued if power is restored within approximately 0.5 s.									
	Cooling fin overheating	Detects at 110°C ± 10°C									
	Grounding protection	Protection at rated output current level									
Charge indicator (RUN indicator)		Lit when the main circuit DC voltage is approximately 50 V or less.									

# Specifications

<b>Environment</b>	<b>Location</b>	Indoors (with no corrosive gas, oil spray, or metallic dust)	
	<b>Ambient temperature</b>	Operating: -10°C to 50°C	Closed wall-mounting type: -10 to +40°C Panel-mounting type: -10 to +50°C
	<b>Ambient humidity</b>	Operating: 95% max. (with no condensation)	
	<b>Ambient temperature</b>	-20°C to 60°C	
	<b>Altitude</b>	1,000 m max.	
	<b>Insulation resistance</b>	5 MΩ min. (Do not carry out any insulation resistance or withstand voltage tests)	
	<b>Vibration resistance</b>	9.8 m/s <sup>2</sup> max. between 10 to 20 Hz 2.0 m/s <sup>2</sup> max. between 20 and 50 Hz	
<b>Degree of protection</b>		Panel-mounting models: Conforms to IP20	Closed wall-mounting type: NEMA1 (IP20) Panel-mounting type: (IP00) (see note)

**Note:** The 5.5/7.5-kW Inverters are closed wall-mounting with NEMA1 degree of protection (equivalent to IP20). Remove the upper and lower covers to use as a panel-mounting type (degree of protection: IP00).

# Specifications

## 400-V-class Inverters

3-phase 400-V AC models	Model 3G3MV-		A4002	A4004	A4007	A4015	A4022	A4037	A4055	A4075	
	Power supply	Rated voltage and frequency	3-phase 380 to 460 V AC at 50/60 Hz								
		Allowable voltage fluctuation	-15% to 10%								
		Allowable frequency fluctuation	±5%								
		Power supply capacity (see note 1)	1.3	1.9	3.6	5.1	5.9	9.1	15.8	19.2	
		Heat radiation (W) (see note 2)	23.1	30.1	54.9	75.3	83.0	117.9	256.5	308.9	
		Weight (kg)	1.0	1.1	1.5	1.5	1.5	2.1	4.8	4.8	
	Cooling method	Natural cooling			Cooling fan						

**Note:** 1. The power supply capacity, is the capacity when the Inverter is operating at its rated output. The value will vary with the impedance at the input power supply side. (Because the power factor of the input power supply changes, the power factor will improve if an AC reactor is inserted.) The ratio with the rated current of the motor used and the rated output current of the Inverter will vary.

2. The “heat radiation” is the power consumed in the Inverter when it is operating at its rated output.

<b>Max. applicable motor capacity (kW)</b>		0.2	0.4	0.75	1.5	2.2	3.7	5.5	7.5	
<b>Output specifications</b>	Rated output capacity (kVA)	0.9	1.4	2.6	3.7	4.2	6.6	11.0	14.0	
	Rated output current (A)	1.2	1.8	3.4	4.8	5.5	8.6	14.8	18.0	
	Rated output voltage (V)	3-phase 380 to 460 V AC (according to the input voltage)								
	Max. output frequency	400 Hz parameter setting								
<b>Control characteristics</b>	Harmonic-current countermeasures	DC reactor (option) connection possible								
	Control method	Sine wave PWM (V/f control or vector control)								
	Carrier frequency	2.5 to 10.0 kHz (step switching)								
	Frequency control range	0.1 to 400 Hz								
	Frequency precision (temperature characteristics)	Digital commands: ±0.01% (-10°C to 50°C) Analog commands: ±0.5% (25°C ± 10°C)								
	Frequency setting resolution	Digital commands: 0.01 Hz (less than 100 Hz) and 0.1 Hz (100 Hz or over) Analog commands: 0.06 Hz/60 Hz (equivalent to 1/1000)								
	Output frequency resolution	0.01 Hz								
	Overload capacity	150% of rated output current for 1 min								
	External frequency set signal	Selectable with FREQ adjuster: 0 to 10 V DC (20 kΩ), 4 to 20 mA (250 Ω), and 0 to 20 mA (250 Ω)								
	Acceleration/deceleration time	0.01 to 6,000 s (Independent acceleration and deceleration time settings)								
	Braking torque	Approx. 20% (125 to 150% possible with braking resistor: 2 types)								
Voltage/frequency characteristics	Set voltage vector control/user V/f pattern									
<b>Protective functions</b>	Motor protection	Protection by electronic thermal								
	Instantaneous overcurrent protection	Stops at approx. 250% of rated output current								
	Overload protection	Stops in 1 min at approximately 150% of rated output current								
	Overvoltage protection	Stops when main-circuit DC voltage is approximately 820 V								
	Undervoltage protection	Stops when main-circuit DC voltage is approximately 400 V								
	Momentary power interruption compensation (selection)	Stops for 15 ms or more. By setting the Inverter to momentary power interruption mode, operation can be continued if power is restored within approximately 0.5 s.								
	Cooling fin overheating	Detects at 110°C ± 10°C								
	Grounding protection	Protection at overcurrent detection level								
Charge indicator (RUN indicator)	Lit until the main circuit DC voltage drops to 50 V or less.									

# Specifications


<b>Environment</b>	<b>Location</b>	Indoors (with no corrosive gas, oil spray, or metallic dust)	
	<b>Ambient temperature</b>	Operating: -10°C to 50°C	Closed wall-mounting type: -10 to +40°C Panel-mounting type: -10 to +50°C
	<b>Ambient humidity</b>	Operating: 95% max. (with no condensation)	
	<b>Ambient temperature</b>	-20°C to 60°C	
	<b>Altitude</b>	1,000 m max.	
	<b>Insulation resistance</b>	5 MΩ min. (Do not carry out any insulation resistance or withstand voltage tests)	
	<b>Vibration resistance</b>	9.8 m/s <sup>2</sup> max. between 10 to 20 Hz 2.0 m/s <sup>2</sup> max. between 20 and 50 Hz	
<b>Degree of protection</b>		Panel-mounting models: Conforms to IP20	Closed wall-mounting type: NEMA1 (IP20) Panel-mounting type: (IP00) (see note)

**Note:** The 5.5/7.5-kW Inverters are closed wall-mounting with NEMA1 degree of protection of (equivalent to IP20). Remove the upper and lower covers to use as a panel-mounting type (degree of protection: IP00).


# Specifications

## ■ Terminal Block

### Position of Terminal Block

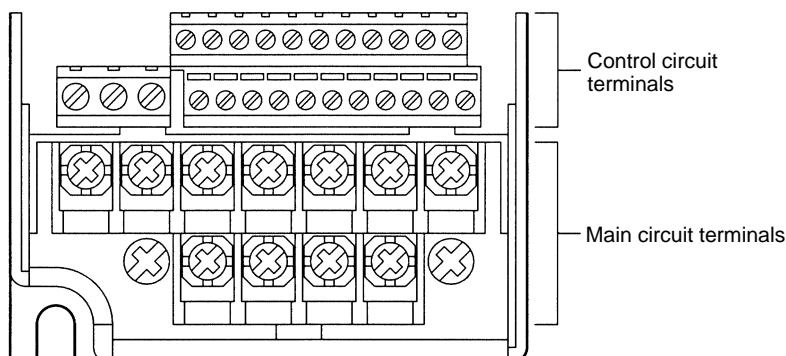

### Arrangement of Main Circuit Terminals

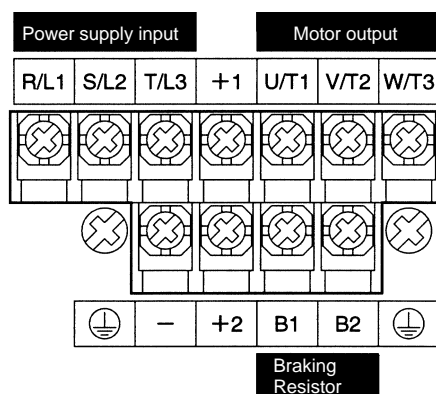


Symbol	Name	Description
R/L1	Power supply input terminals	3G3MV-A2□: 3-phase 200 to 230 V AC 3G3MV-AB□: Single-phase 200 to 240 V AC (see note 1) 3G3MV-A4□: 3-phase 380 to 460 V AC
S/L2		
T/L3		
U/T1	Motor output terminals	3-phase power supply output for driving motors. (see note 2) 3G3MV-A2□: 3-phase 200 to 230 V AC 3G3MV-AB□: 3-phase 200 to 240 V AC 3G3MV-A4□: 3-phase 380 to 460 V AC
V/T2		
W/T3		
B1	Braking Resistor connection terminals	Terminals for attaching an external Braking Resistor or a Braking Resistor Unit. (Connect to detect overvoltage during braking.)
B2		
+1	Connection terminals +1 and +2: DC reactor connection terminals  +1 and -: DC power supply input terminals	Connect the DC reactor for suppressing harmonics to terminals +1 and +2. <b>When driving the Inverter with DC power, input the DC power to terminals +1 and -.</b> (Terminal +1 is a positive terminal.)
+2		
-		
	Ground terminal	Be sure to ground the terminal under the following conditions. 3G3MV-A2□: Ground at a resistance of 100 Ω or less. 3G3MV-AB□: Ground at a resistance of 100 Ω or less. 3G3MV-A4□: Ground at a resistance of 10 Ω or less. To conform to EC Directives, connect to the neutral point of the power supply. <b>Note</b> Be sure to connect the ground terminal directly to the motor frame ground.


**Note:** 1. Connect single-phase input to both the R/L1 terminal and the S/L2 terminal.

2. The maximum voltage at the output side corresponds to the power supply voltage for Inverter input.

# Specifications

## Arrangement of Control Circuit Terminals

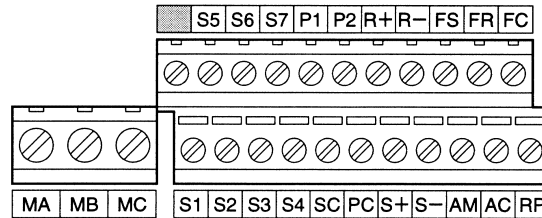

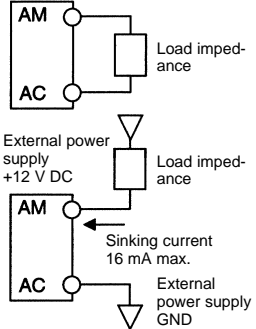Symbol	Name	Specification							
Input	S1	Multi-function input 1 (Forward/Stop)	Photocoupler 8 mA at 24 V DC (see note)						
	S2	Multi-function input 2 (Reverse/Stop)							
	S3	Multi-function input 3 (External fault: Normally open)							
	S4	Multi-function input 4 (Fault reset)							
	S5	Multi-function input 5 (Multi-step speed reference 1)							
	S6	Multi-function input 6 (Multi-step speed reference 2)							
	S7	Multi-function input 7 (Inching frequency command)							
	SC	Sequence input common	20 mA at 12 V DC						
	FS	Frequency reference power supply output							
	FR	Frequency reference input							
	FC	Frequency reference common	0 to 10 V DC (Input impedance: 20 kΩ)						
	RP	Pulse train input	Response frequency: 0 to 33 kHz (30% to 70% ED) H: 3.5 to 13.2 V L: 0.8 V max. (Input impedance: 2.24 kΩ) <b>Note:</b> If 3G3MV-series multi-function analog output is used for pulse train output, it can be connected directly to pulse train input.						
	Output	MA	Multi-function contact output (Normally open: During operation)	Relay output 1 A max. at 30 V DC 1 A max. at 250 V AC					
MB		Multi-function contact output (Normally closed: During operation)							
MC		Multi-function contact output common							
P1		Multi-function photocoupler output 1 (Fault)	Open collector output 50 mA max. at 48 V DC						
P2		Multi-function photocoupler output 2 (Fault)							
PC		Multi-function photocoupler output common							
AM		Multi-function analog output	<b>Analog output:</b> 2 mA max. at 0 to 10 V DC <b>Pulse train output:</b> • <b>Voltage Output</b> <table border="1" data-bbox="893 1402 1220 1507"> <thead> <tr> <th>Output voltage (insulated type)</th> <th>Load impedance</th> </tr> </thead> <tbody> <tr> <td>+5 V</td> <td>1.5 kΩ min.</td> </tr> <tr> <td>+10 V</td> <td>10 kΩ min.</td> </tr> </tbody> </table>	Output voltage (insulated type)	Load impedance	+5 V	1.5 kΩ min.	+10 V	10 kΩ min.
Output voltage (insulated type)		Load impedance							
+5 V	1.5 kΩ min.								
+10 V	10 kΩ min.								
AC	Multi-function analog output common	<table border="1" data-bbox="893 1549 1220 1654"> <thead> <tr> <th>External power supply (V)</th> <th>+12 V DC (±5%)</th> </tr> </thead> <tbody> <tr> <td>Sinking current</td> <td>16 mA max.</td> </tr> </tbody> </table>	External power supply (V)	+12 V DC (±5%)	Sinking current	16 mA max.			
External power supply (V)	+12 V DC (±5%)								
Sinking current	16 mA max.								
									
		<b>Note:</b> Do not use a power supply of +5 V DC or +24 V DC. Doing so will damage the internal circuits or cause the circuits to malfunction.							
Com-mu-nica-tions	R+	Receiver side	Conforming to RS-422/485						
	R-								
	S+	Sender side							
	S-								


**Note:** Various functions can be selected for multi-function inputs 1 to 7, multi-function contact outputs, and multi-function photocoupler outputs by changing the parameter settings. The functions indicated in the parentheses are the default function settings.

# Dimensions

## ■ Dimensions

**3G3MV-A2001 to 3G3MV-A2007 (0.1 to 0.75 kW)**  
3-phase 200-V AC Input


**3G3MV-AB001 to 3G3MV-AB004 (0.1 to 0.4 kW)**  
Single-phase 200-V AC Input

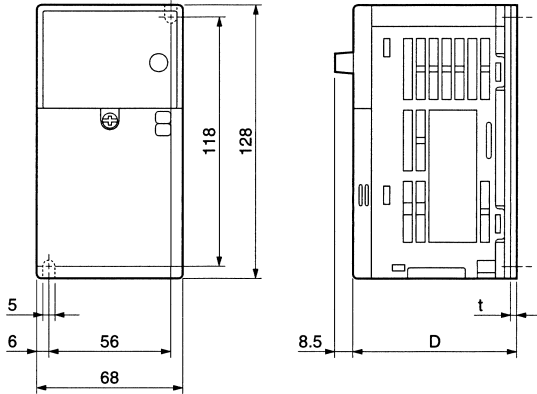

**3G3MV-A2015 to 3G3MV-A2022 (1.5 to 2.2 kW)**  
3-phase 200-V AC Input

**3G3MV-AB007 to 3G3MV-AB015 (0.75 to 1.5 kW)**  
Single-phase 200-V AC Input

**3G3MV-A4002 to 3G3MV-A4022 (0.2 to 2.2 kW)**  
3-phase 400-V AC Input

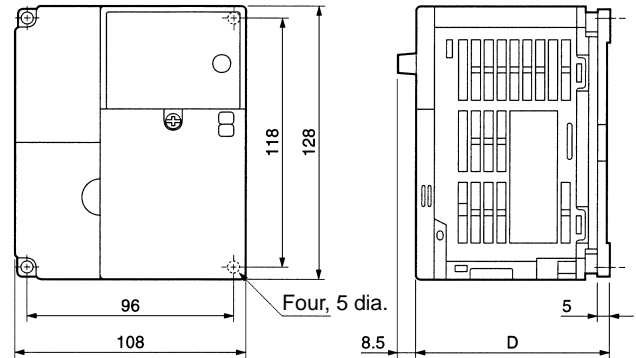

Rated voltage	Model 3G3MV-	Dimen- sions (mm)		Weight (kg)
		D	t	
3-phase 200 V AC	A2001	76	3	Approx. 0.6
	A2002	76	3	Approx. 0.6
	A2004	108	5	Approx. 0.9
	A2007	128	5	Approx. 1.1
Single-phase 200 V AC	AB001	76	3	Approx. 0.6
	AB002	76	3	Approx. 0.7
	AB004	131	5	Approx. 1.0

Rated voltage	Model 3G3MV-	Dimen- sions (mm)		Weight (kg)
		D		
3-phase 200 V AC	A2015	131		Approx. 1.4
	A2022	140		Approx. 1.5
Single-phase 200 V AC	AB007	140		Approx. 1.5
	AB015	156		Approx. 1.5
3-phase 400 V AC	A4002	92		Approx. 1.0
	A4004	110		Approx. 1.1
	A4007	140		Approx. 1.5
	A4015	156		Approx. 1.5
	A4022	156		Approx. 1.5




# Dimensions

**3G3MV-A2037 (3.7 kW) 3-phase 200-V AC Input**


**3G3MV-AB022 (2.2 kW) Single-phase 200-V AC Input**

**3G3MV-A4037 (3.7 kW) 3-phase 400-V AC Input**

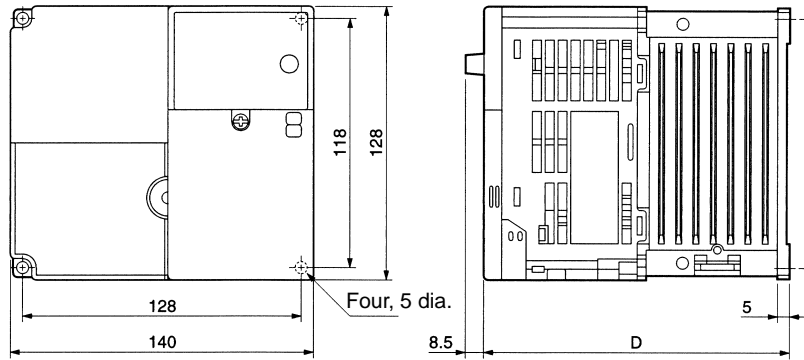

Rated voltage	Model 3G3MV-	Dimensions (mm)	Weight (kg)
		D	
3-phase 200 V AC	A2037	143	Approx. 2.1
Single-phase 200 V AC	AB022	163	Approx. 2.2
3-phase 400 V AC	A4037	143	Approx. 2.1


**3G3MV-AB037 (3.7 kW) Single-phase 200-V AC Input**

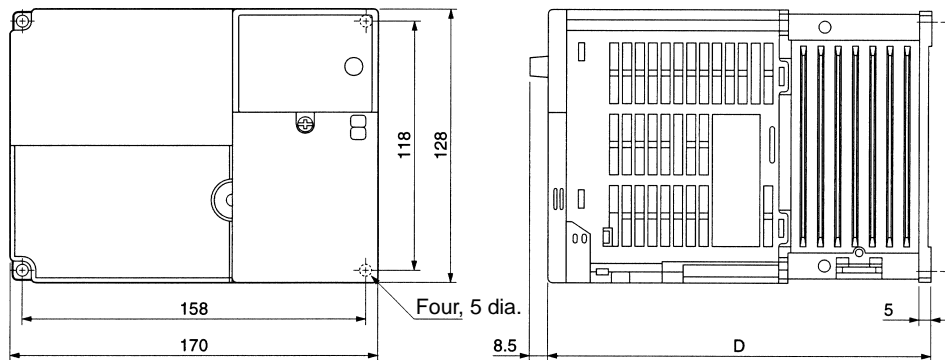

Rated voltage	Model 3G3MV-	Dimensions (mm)	Weight (kg)
		D	
Single-phase 200 V AC	AB037	180	Approx. 2.9

# Dimensions


3G3MV-A2055 to A2075 (5.5 to 7.5 kW) 3-phase 200 V AC Input  
 3G3MV-A4055 to A4075 (5.5 to 7.5 kW) 3-phase 400 V AC Input

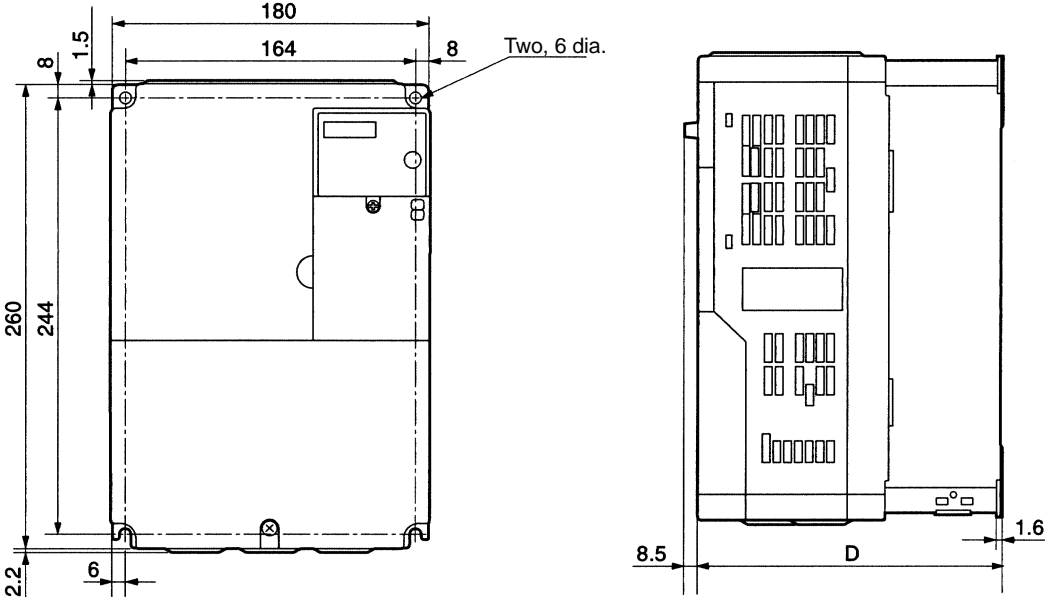

Rated voltage	Model 3G3MV-	Dimensions (mm)	Weight (kg)
		D	
3-phase 200 V AC	A2055	170	Approx. 4.6
	A2075	170	Approx. 4.8
3-phase 400 V AC	A4055	170	Approx. 4.8
	A4075	170	Approx. 4.8


# Standard Connections

## ■ Standard Connections

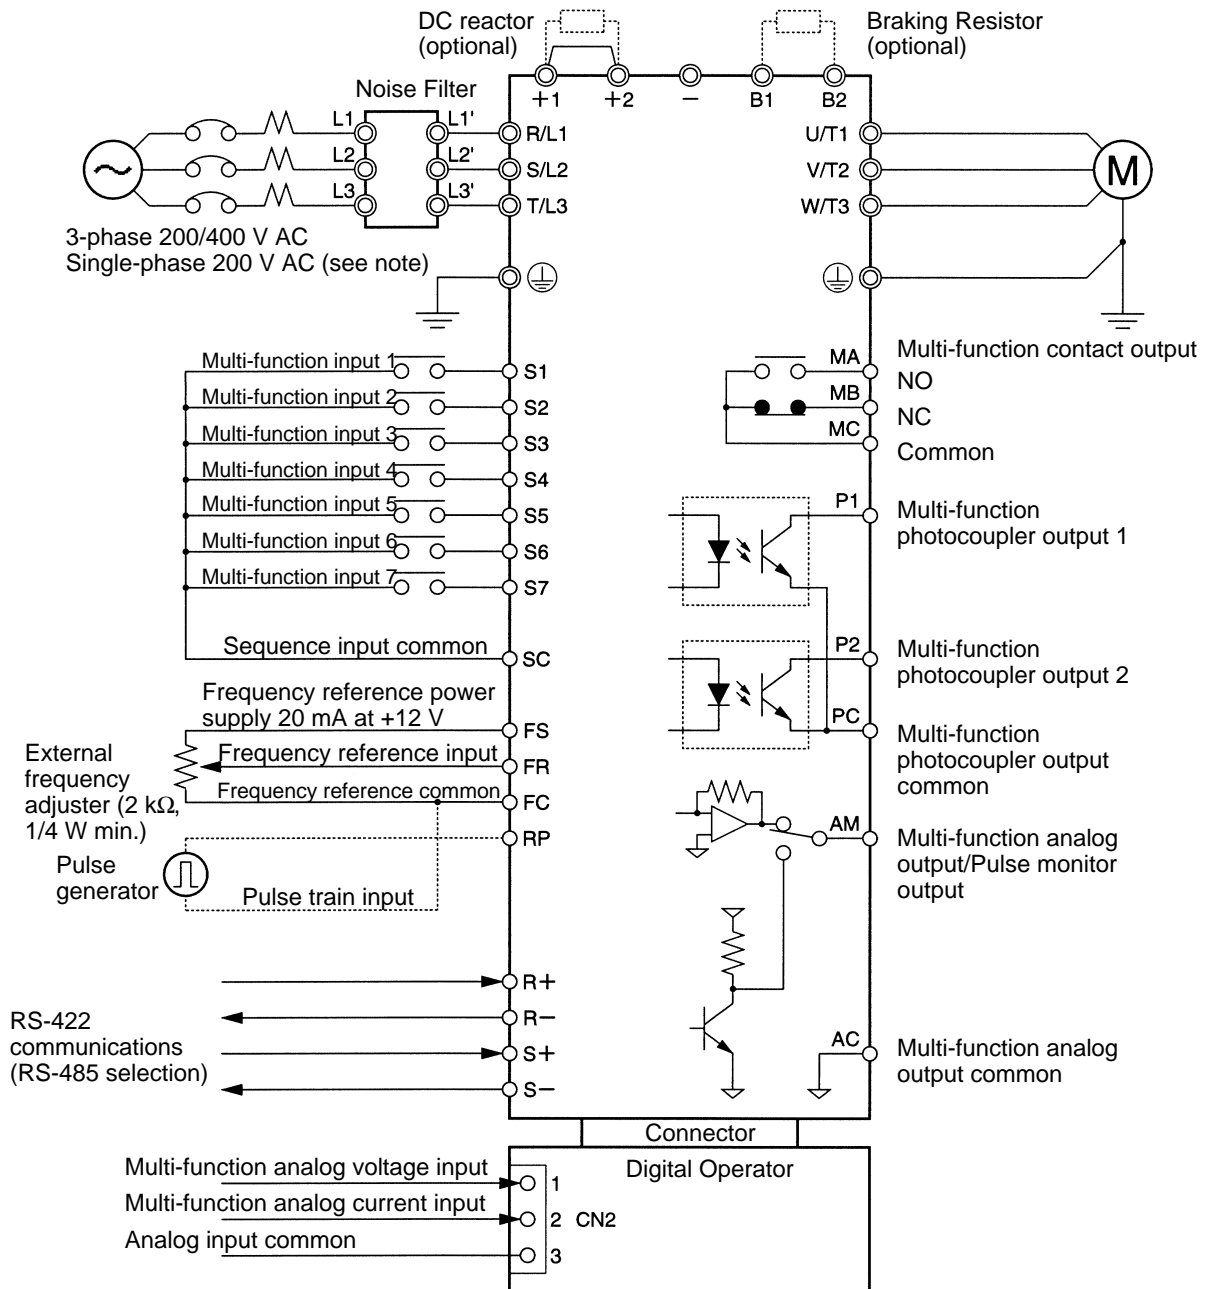

**Note:** Connect single-phase 200 V AC to terminals R/L1 and S/L2 of the 3G3MV-AB□.

## Three-wire Sequence Wiring Example

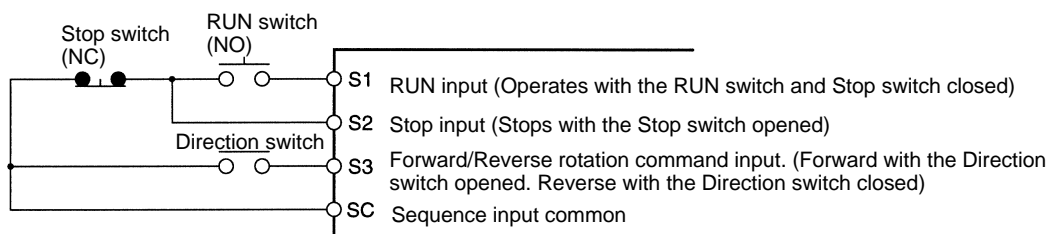


**Note:** Set parameter 052 to forward/reverse rotation command 0 for 3-wire sequence input.

# Standard Connections


## Selecting Input Method

Switches SW1 and SW2, both of which are located above the control circuit terminals, are used for input method selection.

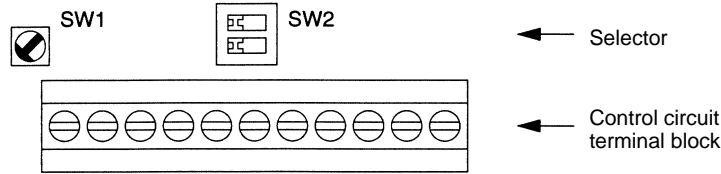



## Selecting Sequence Input Method

By using SW1, NPN or PNP input can be selected as shown below.

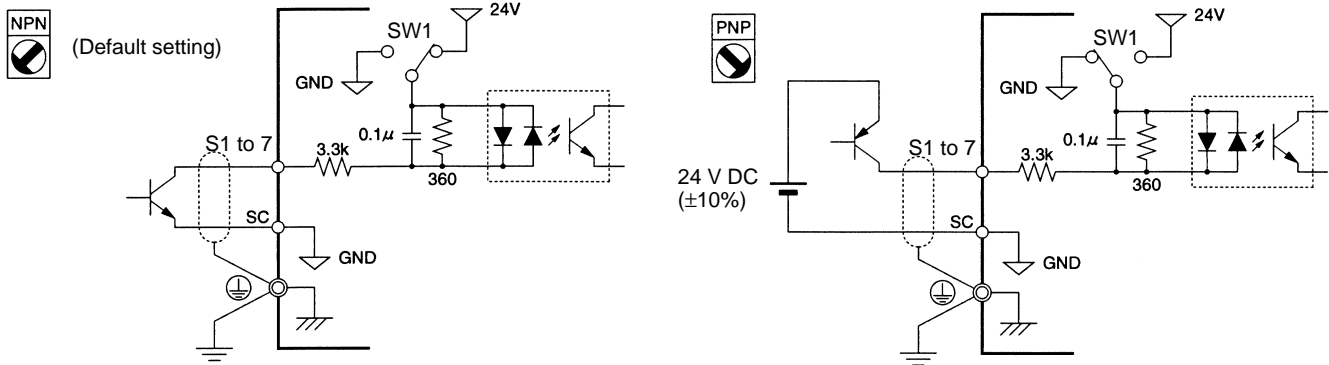

## Selecting RS-422/485 Termination Resistance

Termination resistance can be selected by setting pin 1 of the SW2 to ON. The default setting for the pin is OFF.

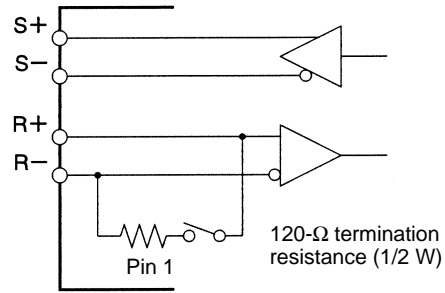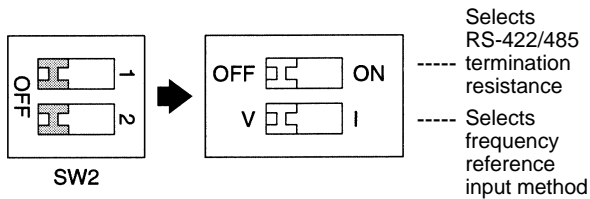

Communications method	Pin 1 setting
RS-422	Set to ON
RS-485	Set to ON only if the Unit is the end Slave.

## Selecting Frequency Reference Input Method


By using pin 2 of SW2, voltage input or current input can be selected as the input method for frequency reference. The default setting is for voltage input.

Parameter settings are required together with the selection of the frequency reference input method.

Frequency reference input method	Pin 2 setting	Frequency reference selection (parameter n004)
Voltage input	V (OFF)	Set value 2
Current input	I (ON)	Set value 3 or 4

**Note:** Do not set pin 2 to ON for current input while voltage is being input, otherwise the resistor in the input circuit may burn out.

## ■ Overview of Options

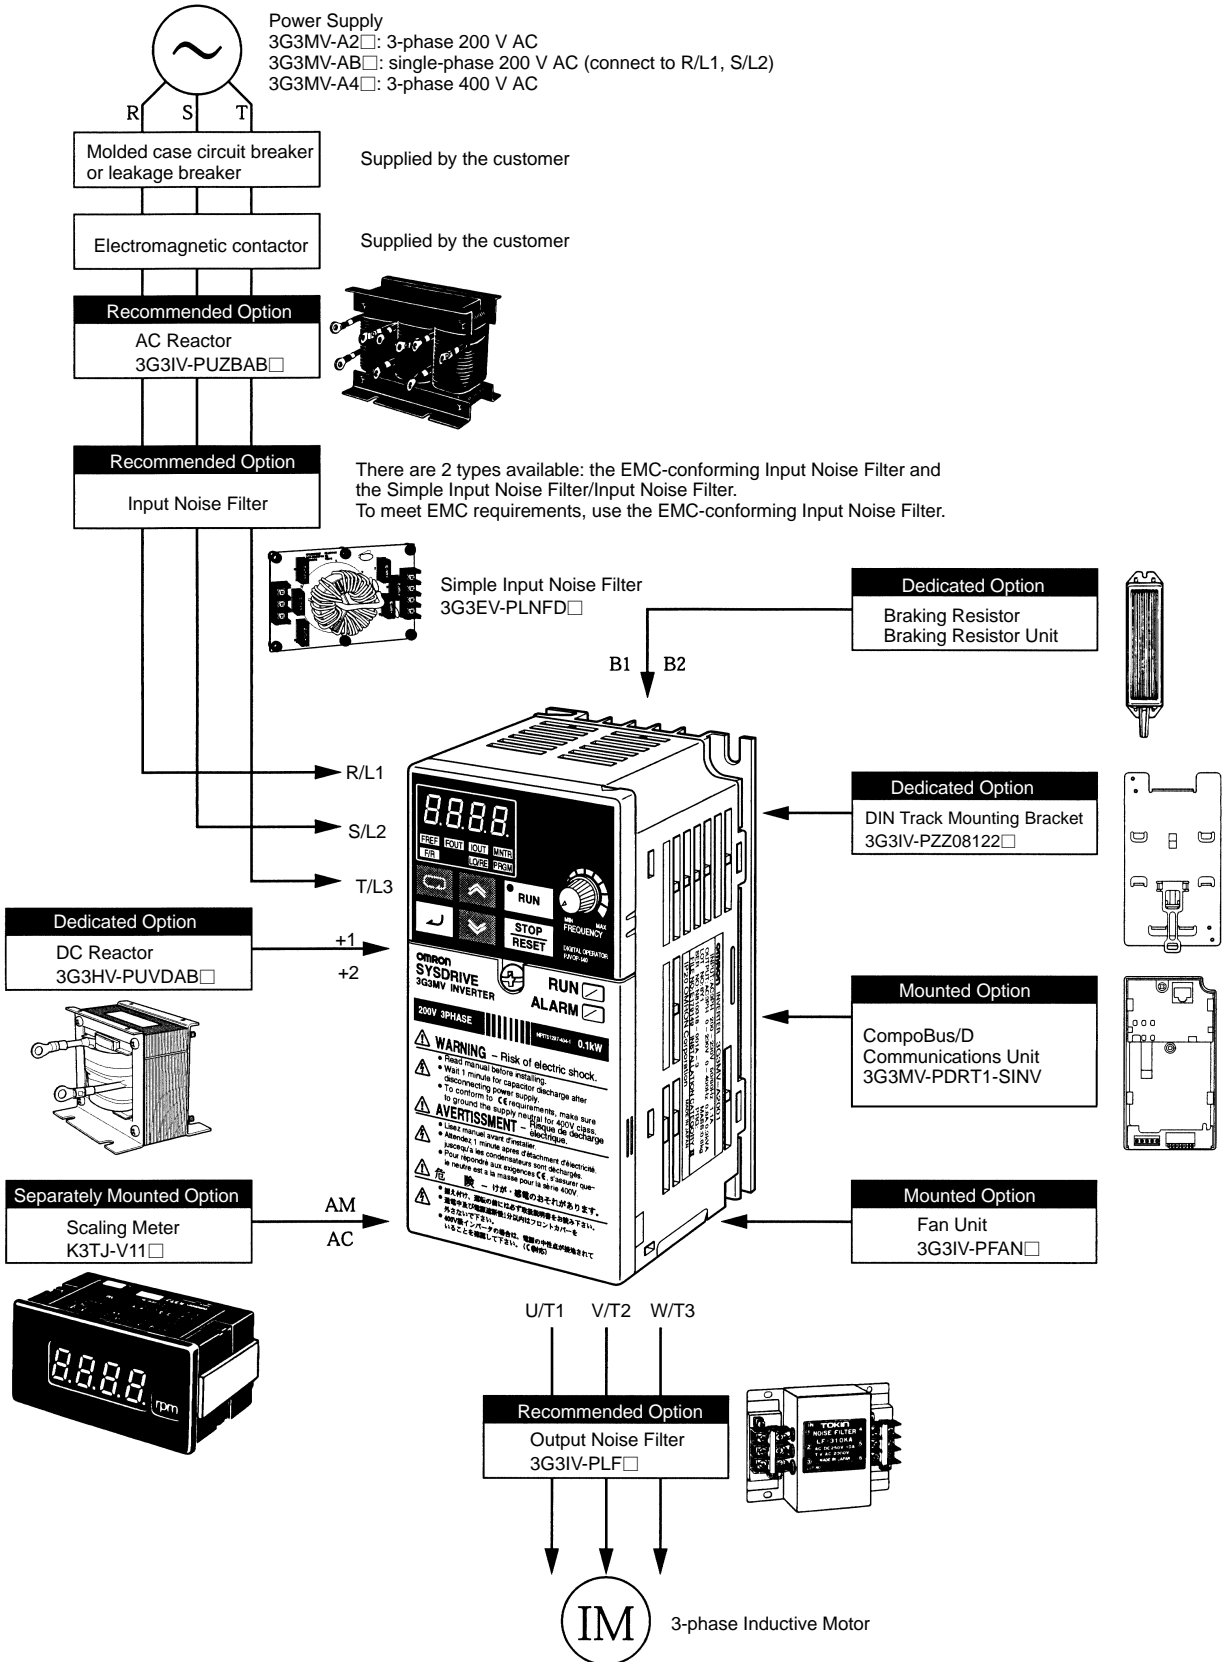

# Options

## Mounted Option

Name	Model	Description	Reference page
CompoBus/D Communications Unit	3G3MV-PDRT1-SINV	Required when controlling the Inverter from CompoBus/D. Remote I/O functions and message functions can be used to suit the application.	43
Fan Unit	3G3IV-PFAN□	Replacement for the existing cooling fan of the Inverter. Replace the cooling fan if it has reached the end of its service life or a warning of cooling fan failure (FAN) is indicated.	43

## Separately Mounted Option

Name	Model	Description	Reference page
Scaling Meter	K3TJ-V11□	Connected to the analog monitor output of the Inverter. The Scaling Meter displays the rpm or speed of the machine or line in actual units.	44

## Dedicated Options

Name	Model	Description	Reference page
Braking Resistor	3G3IV-PERF□	Uses a resistor to absorb regenerative energy of the motor to reduce deceleration time. (Usage rate: 3% ED.)	45
Braking Resistor Unit	3G3IV-PLKEB□	Uses a resistor to absorb regenerative energy of the motor to reduce deceleration time. (Usage rate: 10% ED.)	46
DC Reactor	3G3HV-PUVDAB□	Suppresses harmonic current generated from the Inverter and improves the power factor of the Inverter.	47
DIN Track Mounting Bracket	3G3IV-PZZ08122□	An adapter making it possible to easily mount the Inverter to DIN tracks.	48

## Recommended Options

Name	Model	Description	Reference page
AC Reactor (Yaskawa Electric)	3G3IV-PUZBAB□	Suppresses harmonic current generated from the Inverter and improves the power factor of the Inverter. Connect the AC Reactor to the Inverter if the capacity of the power supply is much larger than that of the Inverter.	49
EMC-conforming Input Noise Filter (Rasmi)	3G3MV-PRS□	A Noise Filter on the input side meeting the EC Directive's EMC requirements.	50
Simple Input Noise Filter (Yaskawa Electric)	3G3EV-PLNFD□	Each of these Filters connected to the power input side eliminates noise in the power line connected to the Inverter and suppresses noise leaking from the Inverter to the power line.	53
Input Noise Filter (Schaffner)	3G3IV-PFN□		
Output Noise Filter (Tokin)	3G3IV-PLF□	Connect this Filter to the output side of the Inverter to suppress the noise generated by the Inverter from being transmitted to the output line.	55


## ■ CompoBus/D Communications Unit

### 3G3MV-PDRT1-SINV

This Unit is required when controlling the Inverter from CompoBus/D. Remote I/O functions and message functions can be used to suit the application.

- Note:** 1. When using CompoBus/D communications, the Inverter cannot perform RS-422/485 communications.  
 2. With 5.5/7.5-kW Inverters, only use Communications Units that were manufactured in January 2000 or later. Communications Units that were manufactured in December 1999 or earlier are not compatible with these Inverters.

### Connection Example

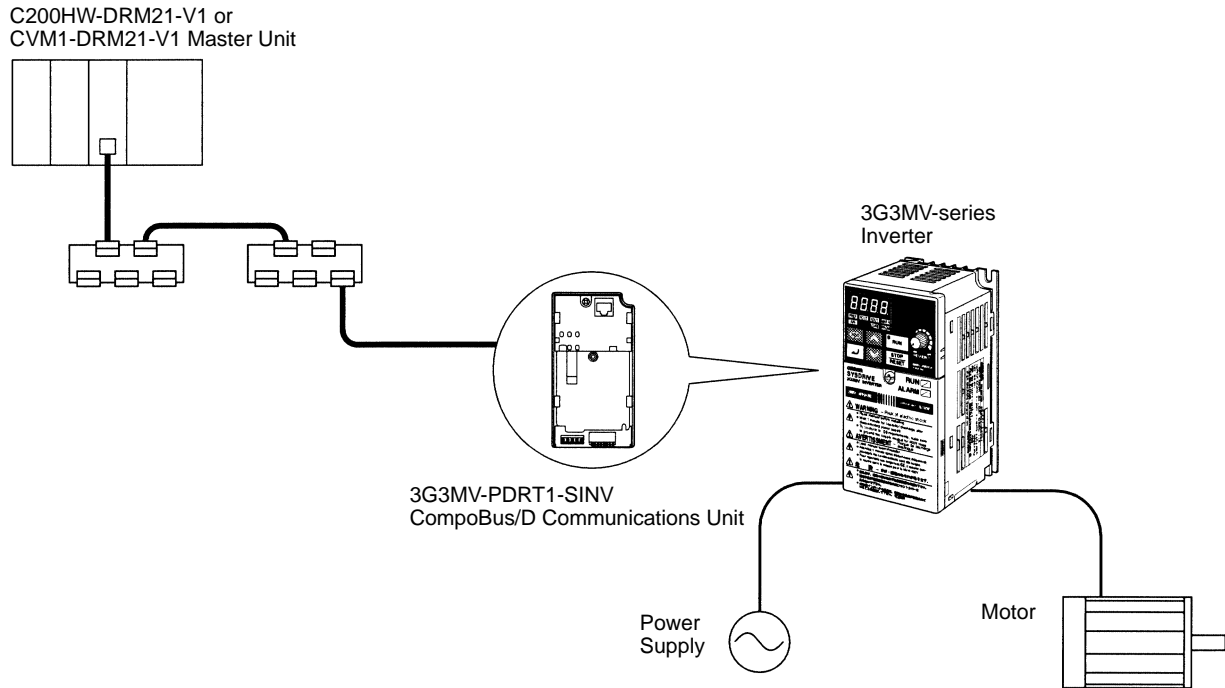

## ■ Fan Unit

### 3G3IV-PFAN□


The Fan Unit is a replacement for the presently installed cooling fan of the Inverter. Replace the cooling fan if it has reached the end of its service life or a warning of cooling fan failure (FAN) is indicated.

Inverter		Fan Unit
3-phase 200 V AC	3G3MV-A2007	3G3IV-PFAN2007
	3G3MV-A2015	3G3IV-PFAN2015M
	3G3MV-A2022	3G3IV-PFAN2022
	3G3MV-A2037	3G3IV-PFAN2037
	3G3MV-A2055	3G3IV-PFAN2037 (2 parts)
	3G3MV-A2075	3G3IV-PFAN2037 (2 parts)
Single-phase 200 V AC	3G3MV-AB015	3G3IV-PFAN2015M
	3G3MV-AB022	3G3IV-PFAN2037
	3G3MV-AB037	3G3IV-PFAN2037 (2 parts)
3-phase 400 V AC	3G3MV-A4015/-A4022	3G3IV-PFAN2015M
	3G3MV-A4037	3G3IV-PFAN2037
	3G3MV-A4055	3G3IV-PFAN2037 (2 parts)
	3G3MV-A4075	3G3IV-PFAN2037 (2 parts)

# Options

## ■ Scaling Meter

K3TJ-V11□

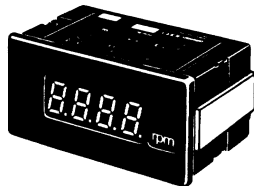

The Scaling Meter is connected to the analog monitor output of the Inverter so that the Scaling Meter will display the rpm and speed values of the machines and lines in actual units.

**Note:** The power supply circuit and input circuit are insulated from each other.


### Standard Specifications

Sampling cycle	2 times/s
Display refresh cycle	2 times/s
Average processing method	Simple or continuous average processing
Number of average processing times	1, 2, 4, or 8
Max. number of display digits	4 (−1,999 to 9,999)
Indicator	14.2-mm-high 7-segment LED
Decimal point display	Parameter selector or Up and Down Keys
Scaling method	Parameter selector or Up and Down Keys for shifting and scaling adjustments
Scaling range	−1,999 to +9,999
Zero-limit range	0 to 99 digits
Over range	Flashing
Zero suppress	Available
External control	Present value hold (with rear terminals shorted)
Degree of protection (conforming to IEC)	Front panel: IP51 (see note) Casing: IP20 Terminals: IP00
Memory protection	Nonvolatile memory

### Applicable Models


Model	Control power supply	Indicator
K3TJ-V111R	100 to 200 V AC	Red LED
K3TJ-V111G		Green LED
K3TJ-V116R	24 V DC insulated construction (see note)	Red LED
K3TJ-V116G		Green LED

### External Dimensions (mm)

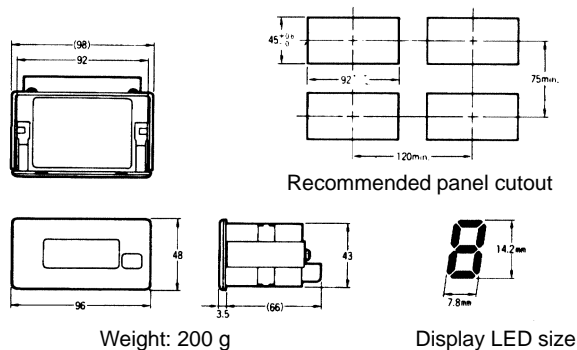

**Note:** The front panel ensures IP50, but the front panel with the K32-L493C Drip-proof Cover ensures IP51.

### Wiring Example

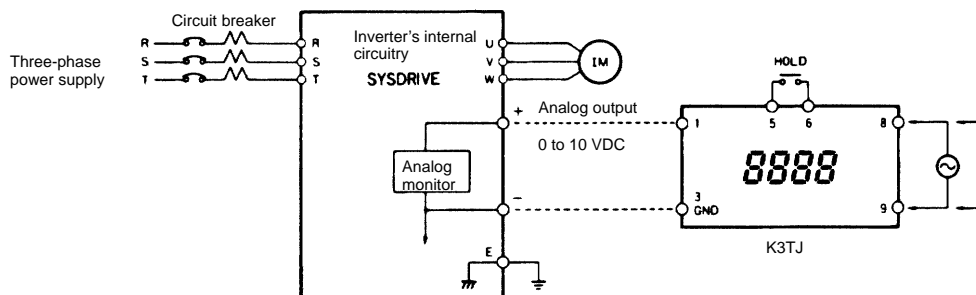



## ■ Braking Resistor

3G3IV-PERF□



Uses a resistor to absorb regenerative energy of the motor to reduce deceleration time.  
(Usage rate: 3% ED.)


### Applicable Models

Inverter		Braking Resistor			Approx. braking torque (3% ED) (%)
Voltage class	Max. applicable motor capacity (kW)	Model 3G3IV-	Resistor specifications	Number of parts	
200 V	0.1	PERF150WJ401	150 W, 400 Ω	1	220
	0.2			1	220
	0.4	PERF150WJ201	150 W, 200 Ω	1	220
	0.75			1	125
	1.5	PERF150WJ101	150 W, 100 Ω	1	125
	2.2	PERF150WJ700	150 W, 70 Ω	1	120
	3.7	PERF150WJ620	150 W, 62 Ω	1	100
	5.5	---	---	---	---
7.5	---	---	---	---	
400 V	0.2	PERF150WJ751	150 W, 750 Ω	1	230
	0.4			1	230
	0.75			1	130
	1.5	PERF150WJ401	150 W, 400 Ω	1	125
	2.2	PERF150WJ301	150 W, 300 Ω	1	115
	3.7	PERF150WJ401	150 W, 400 Ω	2	115 (see note 1)
	5.5	---	---	---	---
	7.5	---	---	---	---

**Note:** 1. The usage rate for the 3G3IV-PERF150WJ401 is 2% ED.

2. A usage rate of "3% ED" means that 3% of the operating time of one cycle is used for deceleration.


### External Dimensions (mm)

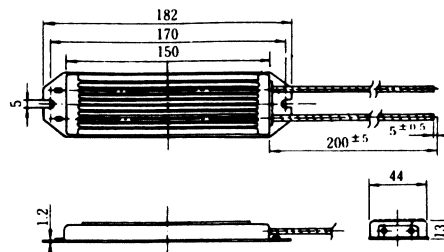

# Options

## ■ Braking Resistor Unit

3G3IV-PLKEB□

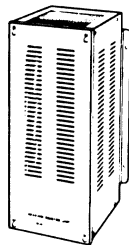

Uses a resistor to absorb regenerative energy of the motor to reduce deceleration time.  
(Usage rate: 10% ED.)


## Applicable Models

Inverter		Braking Resistor Unit				Approx. braking torque (10% ED) (%)
Voltage class	Max. applicable motor capacity (kW)	Model 3G3IV-	Resistor specifications	Unit		
				Number of parts	Max. number per Inverter (see note)	
200 V	0.1	---	---	---	---	---
	0.2	---	---	---	---	---
	0.4	PLKEB20P7	70 W, 200 Ω	1	1	220
	0.75			1	1	125
	1.5	PLKEB21P5	260 W, 100 Ω	1	1	125
	2.2	PLKEB22P2	260 W, 70 Ω	1	1	120
	3.7	PLKEB23P7	390 W, 40 Ω	1	1	125
	5.5	PLKEB25P5	520 W, 30 Ω	1	1	115
400 V	7.5	PLKEB27P5	780 W, 20 Ω	1	1	125
	0.2	PLKEB40P7	70 W, 750 Ω	1	1	230
				1	1	230
				1	1	130
	1.5	PLKEB41P5	260 W, 400 Ω	1	1	125
	2.2	PLKEB42P2	260 W, 250 Ω	1	1	135
	3.7	PLKEB43P7	390 W, 150 Ω	1	1	135
	5.5	PLKEB45P5	520 W, 100 Ω	1	1	135
7.5	PLKEB47P5	780 W, 75 Ω	1	1	130	

**Note:** 1. The “max. number per Inverter” column indicates the maximum number of Braking Resistor Units that can be connected to one Inverter.

2. A usage rate of “10% ED” means that 10% of the operating time of one cycle is used for deceleration.


## External Dimensions (mm)

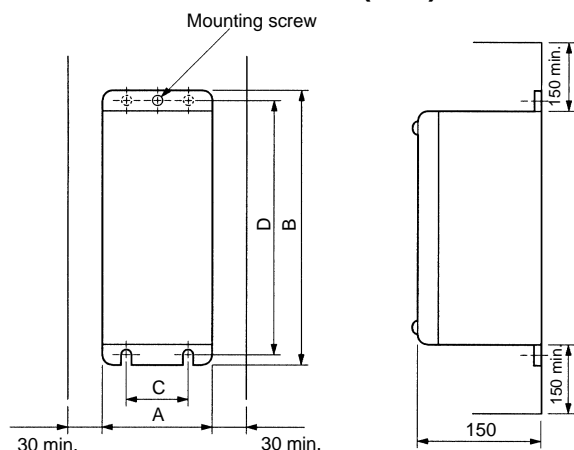

Voltage class	Braking Resistor Unit model 3G3IV-PLKEB□	Dimensions (mm)					Weight (kg)
		A	B	C	D	Mounting screw	
200 V	20P7	105	275	50	260	M5×3	3.0
	21P5	130	350	75	335	M5×4	4.5
	22P2	130	350	75	335	M5×4	4.5
	23P7	130	350	75	335	M5×4	5.0
	25P5	250	350	200	335	M6×4	7.5
	27P5	250	350	200	335	M6×4	8.5
400 V	40P7	105	275	50	260	M5×3	3.0
	41P5	130	350	75	335	M5×4	4.5
	42P2	130	350	75	335	M5×4	4.5
	43P7	130	350	75	335	M5×4	5.0
	45P5	250	350	200	335	M6×4	7.5
	47P5	250	350	200	335	M6×4	8.5

## ■ DC Reactor

### 3G3HV-PUZDAB□

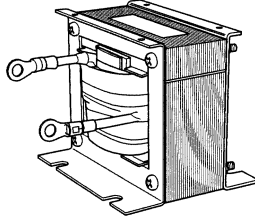


The DC Reactor suppresses harmonic current generated from the Inverter and improves the power factor of the Inverter. The DC Reactor suppresses harmonic current more effectively than the AC Reactor. Furthermore, the DC Reactor can be used in combination with the AC Reactor. Used with either 3-phase or single-phase 200-V AC Inverters.

## Applicable Models


Inverter		DC Reactor				
Voltage class	Max. applicable motor capacity (kW)	Model	Rated voltage (V)	Rated current (A)	Inductance (mH)	Loss (W)
200 V	0.1 to 0.75	3G3HV-PUZDAB5.4A8MH	800 V DC	5.4	8	8
	1.5 to 3.7	3G3HV-PUZDAB18A3MH		18	3	18
	5.5 to 7.5	3G3HV-PUZDAB36A1MH		36	1	22
400 V	0.2 to 0.75	3G3HV-PUZDAB3.2A28MH	800 V DC	3.2	28	9
	1.5 to 2.2	3G3HV-PUZDAB5.7A11MH		5.7	11	11
	3.7	3G3HV-PUZDAB12A6.3MH		12	6.3	16
	5.5 to 7.5	3G3HV-PUZDAB23A3.6MH		23	3.6	27

## External Dimensions (mm)

External Dimensions 1

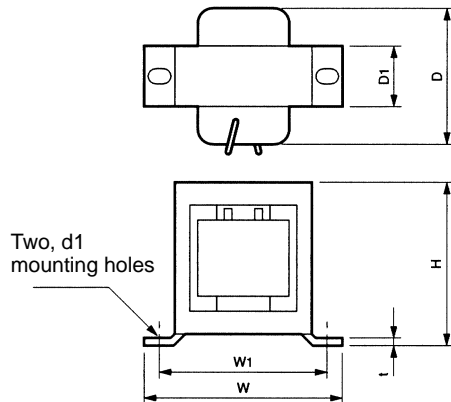

External Dimensions 2

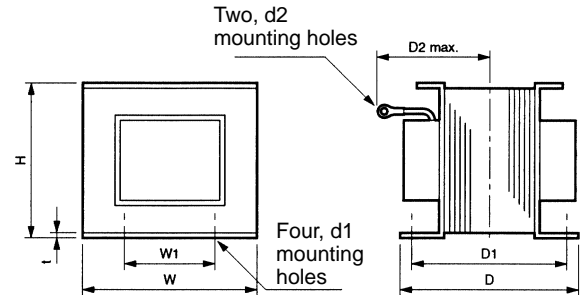

Model 3G3HV- PUZDAB□	External dimen- sions	Dimension (mm)									Weight (kg)
		H	W	W1	D	D1	D2	t	d1	d2	
5.4A8MH	1	53	85	74	60	32	---	0.8	M4	---	0.8
18A3MH	2	76	86	60	72	55	80	1.2	M4	M5	2.0
36A1MH	2	93	105	64	92	80	90	1.6	M6	M6	3.2
3.2A28MH	1	53	85	74	60	32	---	0.8	M4	---	0.8
5.7A11MH	1	60	90	80	60	32	---	0.8	M4	---	1.0
12A6.3MH	2	76	86	60	72	55	80	1.2	M4	M5	2.0
23A3.6MH	2	93	105	64	92	80	90	1.6	M6	M5	3.2

# Options

## ■ DIN Track Mounting Bracket

### 3G3IV-PZZ08122□


An adapter making it possible to easily mount the Inverter to DIN tracks.

### Applicable Models


	Inverter	DIN Track Mounting Bracket
3-phase 200 V AC	3G3MV-A2001/-A2002/-A2004/-A2007	3G3IV-PZZ08122A
	3G3MV-A2015/-A2022	3G3IV-PZZ08122B
	3G3MV-A2037	3G3IV-PZZ08122C
Single-phase 200 V AC	3G3MV-AB001/-AB002/-AB004	3G3IV-PZZ08122A
	3G3MV-AB007/-AB015	3G3IV-PZZ08122B
	3G3MV-AB022	3G3IV-PZZ08122C
	3G3MV-AB037	3G3IV-PZZ08122D
3-phase 400 V AC	3G3MV-A4002/-A4004/-A4007/-A4015/-A4022	3G3IV-PZZ08122B
	3G3MV-A4037	3G3IV-PZZ08122C

### External Dimensions (mm)


3G3IV-PZZ08122A

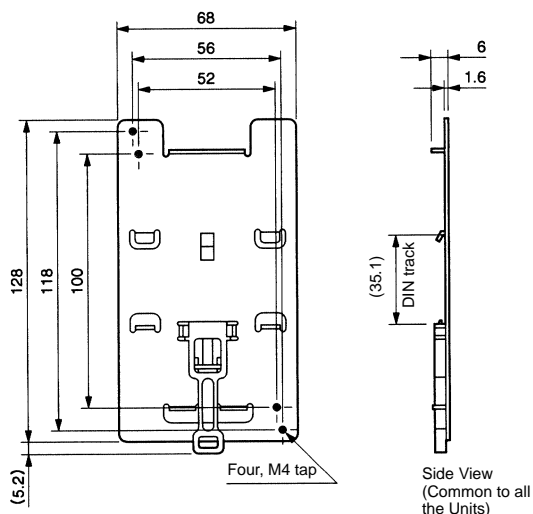


3G3IV-PZZ08122B

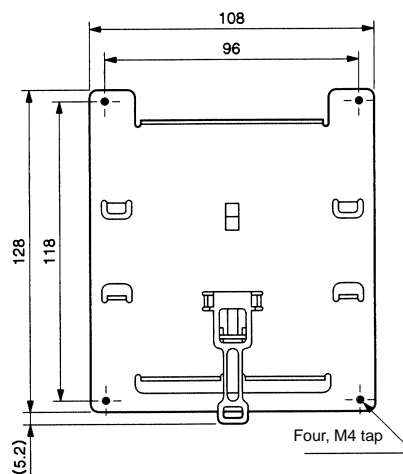

3G3IV-PZZ08122C

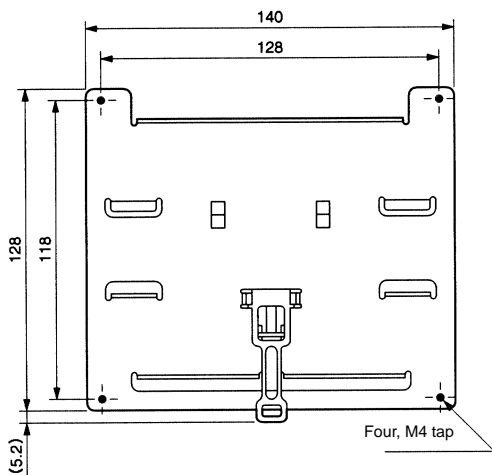

3G3IV-PZZ08122D

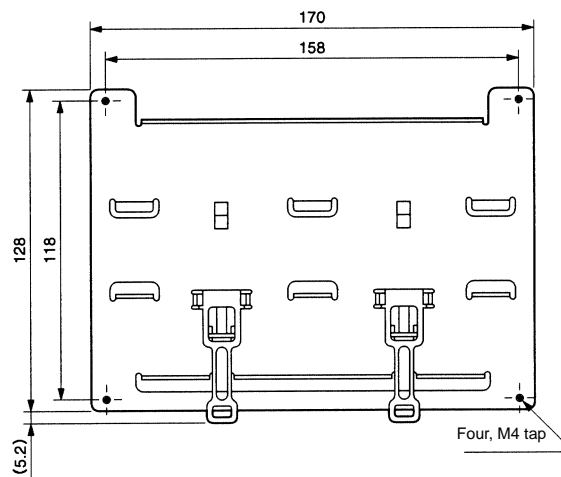


## ■ AC Reactor


### 3G3IV-PUZBAB□ (Yaskawa Electric)

The AC Reactor suppresses harmonic current generated from the Inverter and improves the power factor of the Inverter. Connect the AC Reactor to the Inverter if the capacity of the power supply is much larger than that of the Inverter. Select the AC Reactor model from the following table according to the motor capacity.


**Note:** The AC Reactor can be used with either 3-phase or single-phase 200-V AC Inverters.

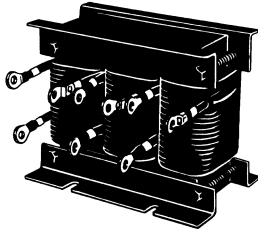

### Connection Example

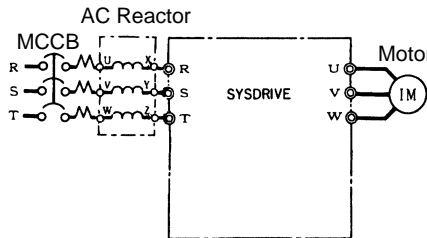

### Applicable Range

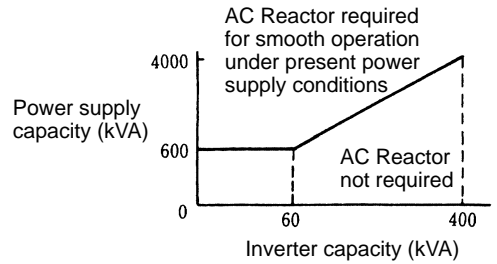

## Applicable Models and External Dimensions


### 200-V Class

Max. applicable motor capacity (kW)	Model 3G3IV-PUZBAB□	Current (A)	Inductance (mH)	Loss (W)	Weight (kg)	External dimensions	Dimension (mm)											
							A	B	B1	C	D	E	F	H	J	K	L	M
0.1 to 0.2	2A7.0MH	2	7.0	8	2.5	1	120	71	---	115	40	50	105	20	M6	10.5	7	M4
0.4	2.5A4.2MH	2.5	4.2	15	2.5		120	71	---	120	40	50	105	20	M6	10.5	7	M4
0.75	5A2.1MH	5	2.1	15	2.5		120	71	---	120	40	50	105	20	M6	10.5	7	M4
1.5	10A1.1MH	10	1.1	25	3	2	130	88	---	130	50	65	130	22	M6	11.5	7	M4
2.2	15A0.71MH	15	0.71	30	3		130	88	---	130	50	65	130	22	M6	11.5	7	M4
3.7	20A0.53MH	20	0.53	35	3	2	130	88	114	105	50	65	130	22	M6	11.5	7	M5
5.5	30A0.35MH	30	0.35	45	3		130	88	119	105	50	70	130	22	M6	9	7	M5
7.5	40A0.265MH	40	0.265	50	4		130	98	139	105	50	75	130	22	M6	11.5	7	M6


### 400-V Class

Max. applicable motor capacity (kW)	Model 3G3IV-PUZBAB□	Current (A)	Inductance (mH)	Loss (W)	Weight (kg)	External dimensions	Dimension (mm)											
							A	B	B1	C	D	E	F	H	J	K	L	M
0.2 to 0.4	1.3A18.0MH	1.3	18.0	15	2.5	1	120	71	---	120	40	50	105	20	M6	10.5	7	M4
0.75	2.5A8.4MH	2.5	8.4	15	2.5		120	71	---	120	40	50	105	20	M6	10.5	7	M4
1.5	5A4.2MH	5	4.2	25	3		130	88	---	130	50	70	130	22	M6	9	7	M4
2.2	7.5A3.6MH	7.5	3.6	35	3	2	130	88	---	130	50	70	130	22	M6	9	7	M4
3.7	10A2.2MH	10	2.2	43	3		130	88	---	130	50	65	130	22	M6	11.5	7	M4
5.5	15A1.42MH	15	1.42	50	4	2	130	98	---	130	50	75	130	22	M6	11.5	7	M4
7.5	20A1.06MH	20	1.06	50	5		160	90	115	130	75	70	160	25	M6	10	7	M5

### External Dimensions 1

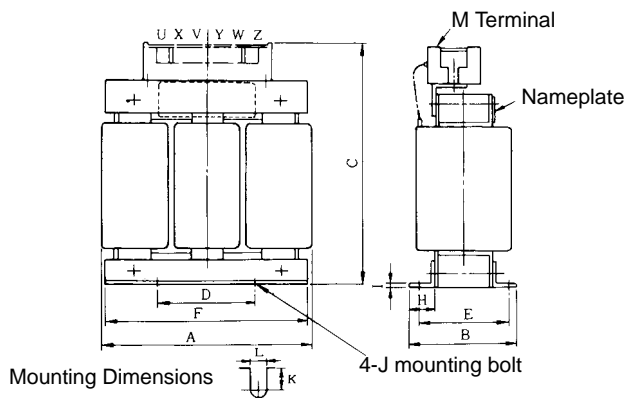

### External Dimensions 2

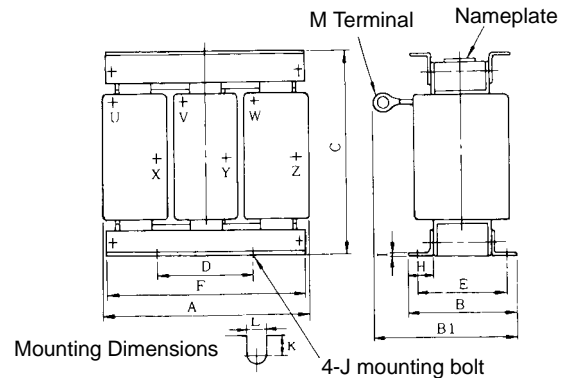


# Options

## ■ EMC-conforming Input Noise Filter

### 3G3MV-PRS□ (Rasmi)

The Input Noise Filter is connected between the power supply input terminals (R/L1, S/L2, T/L3) of the Inverter and the power supply in order to meet the EC Directive's EMC requirements.

### Connection Example

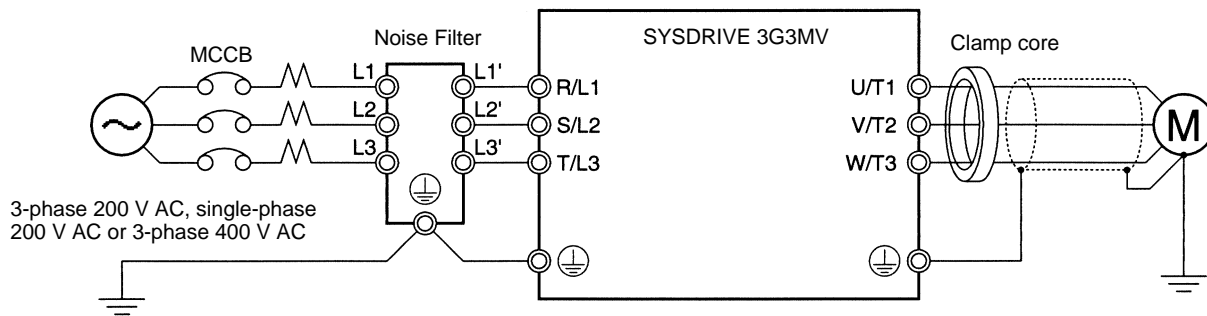


### Applicable Models


Inverter		EMC-compatible Noise Filter		
Voltage	Model 3G3MV-	Model 3G3MV-	Rated current (A)	Weight (kg)
3-phase 200 V AC	A2001/A2002/A2004/ A2007	PRS2010V	10	0.8
	A2015/A2022	PRS2020V	16	1.0
	A2037	PRS2030V	26	1.1
	A2055/A2075	PRS2050V	50	2.3
Single-phase 200 V AC	AB001/AB002/AB004	PRS1010V	10	0.6
	AB007/AB015	PRS1020V	20	1.0
	AB022	PRS1030V	30	1.1
	AB037	PRS1040V	40	1.2
3-phase 400 V AC	A4002/A4004	PRS3005V	5	1.0
	A4007/A4015/A4022	PRS3010V	10	1.0
	A4037	PRS3020V	15	1.1
	A4055/A4075	PRS3030V	30	2.3

## External Dimensions

### 3G3MV-PRS2010V

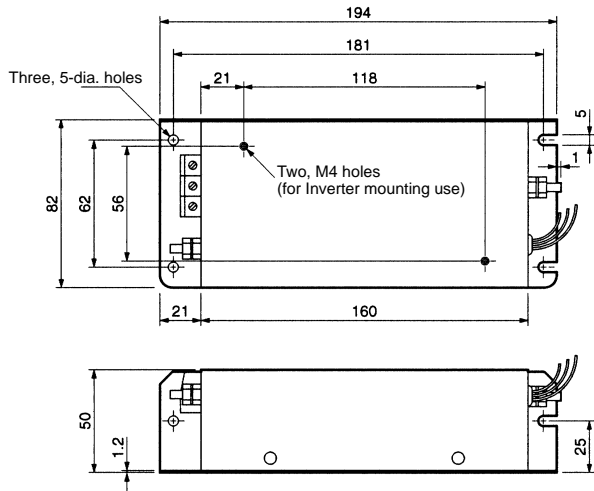


### 3G3MV-PRS2020V/-PRS3005V/-PRS3010V

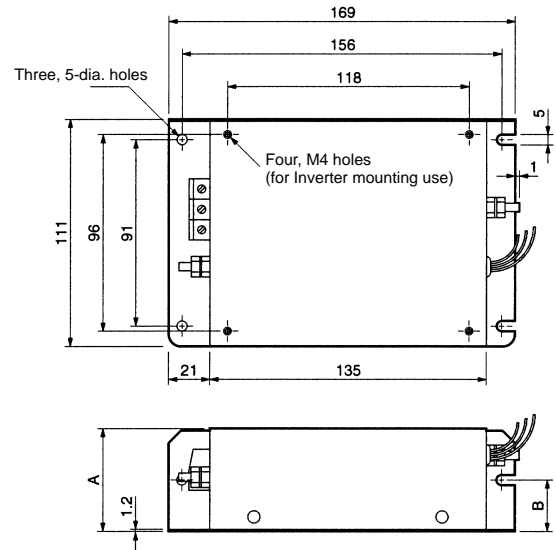


Voltage	Model 3G3MV-	Dimension (mm)	
		A	B
3-phase 200 V	PRS2020V	50	25
3-phase 400 V	PRS3005V	45	22
	PRS3010V	45	22

### 3G3MV-PRS2030V/-PRS3020V

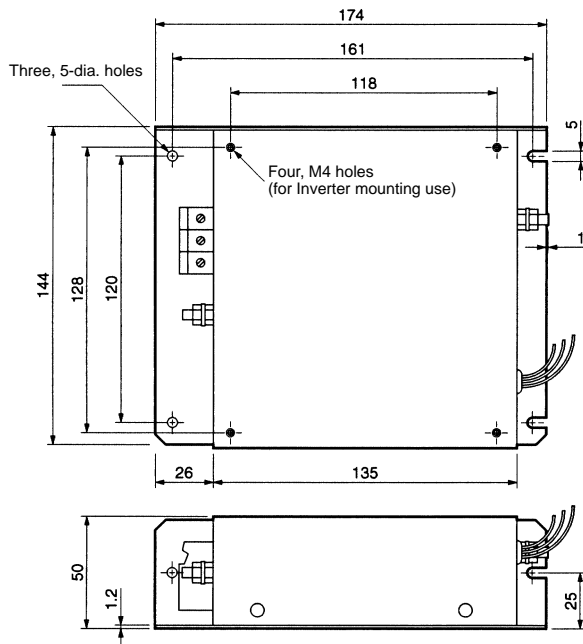


### 3G3MV-PRS1030V

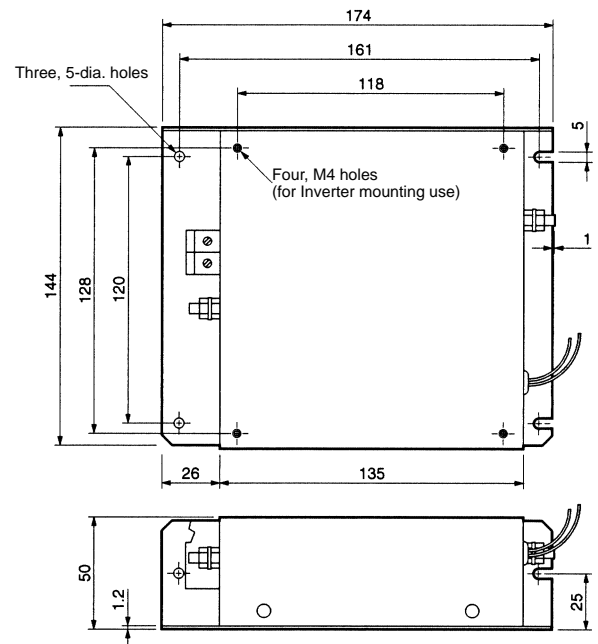


# Options


## 3G3MV-PRS2050V

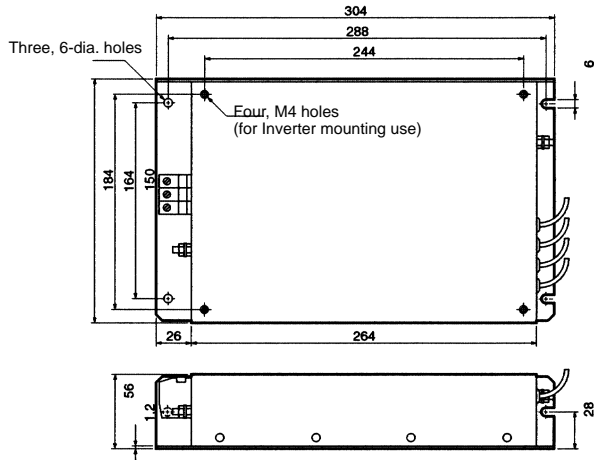


## 3G3MV-PRS1040V

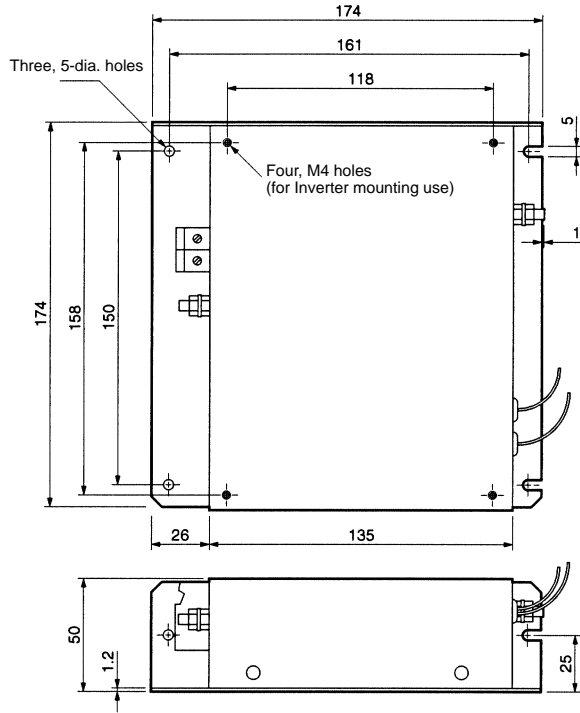


## 3G3MV-PRS1010V

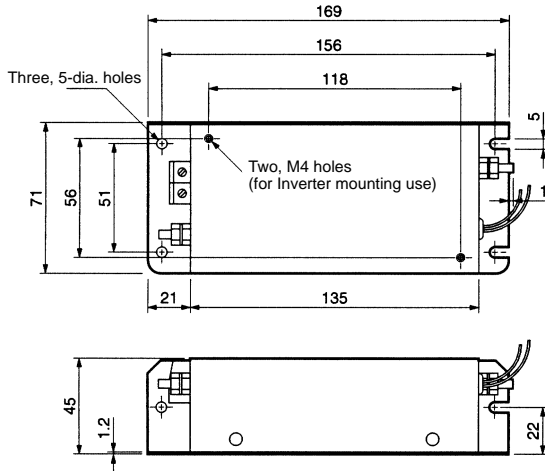

## 3G3MV-PRS3030V

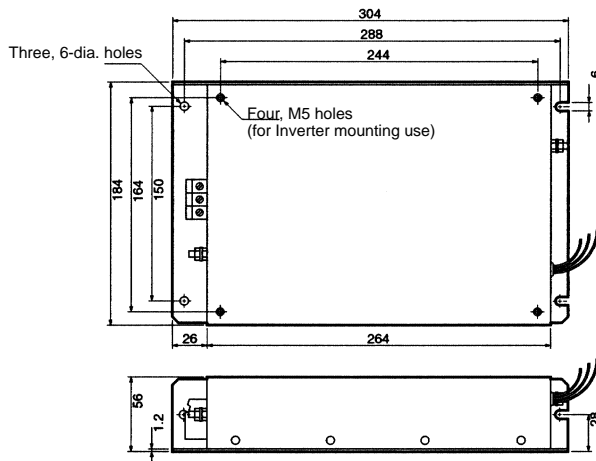


## 3G3MV-PRS1020V

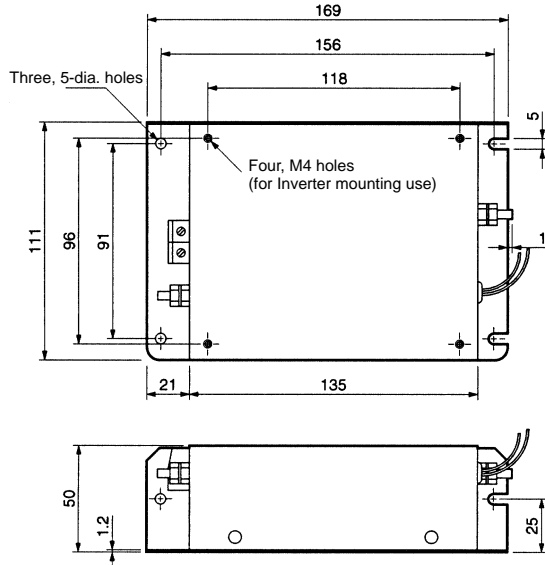



## ■ Simple Input Noise Filter/Input Noise Filter

3G3EV-PLNFD□ (Yaskawa Electric)/3G3IV-PFN□ (Schaffner)

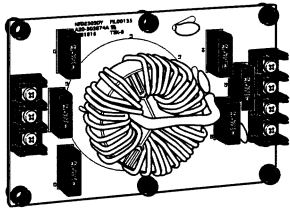

Simple Input Noise Filter



Input Noise Filter

The Simple Input Noise Filter or Input Noise Filter is connected to the power input side to eliminate the noise in the power line connected to the Inverter and suppress noise leaking from the Inverter to the power line.


## Applicable Models

Voltage	Inverter		Simple Input Noise Filter	
	Model 3G3MV-	Model	Rated current (A)	Weight (kg)
3-phase 200 V AC	A2001/A2002/A2004/A2007	3G3EV-PLNFD2103DY	10	0.2
	A2015	3G3EV-PLNFD2153DY	15	0.2
	A2022	3G3EV-PLNFD2203DY	20	0.4
	A2037	3G3EV-PLNFD2303DY	30	0.5
	A2055	3G3IV-PFN258L4207	42	2.8
	A2075	3G3IV-PFN258L5507	55	3.1
Single-phase 200 V AC	AB001/AB002	3G3EV-PLNFB2102DY	10	0.1
	AB004	3G3EV-PLNFB2152DY	15	0.2
	AB007	3G3EV-PLNFB2202DY	20	0.2
	AB015	3G3EV-PLNFB2302DY	30	0.3
	AB022	3G3EV-PLNFB2202DY	20 × 2P	0.2
	AB037	3G3EV-PLNFB2302DY	30 × 2P	0.3
3-phase 400 V AC	A4002/A4004/A4007	3G3EV-PLNFD4053DY	5	0.3
	A4015/A4022	3G3EV-PLNFD4103DY	10	0.4
	A4037	3G3EV-PLNFD4153DY	15	0.4
	A4055	3G3EV-PLNFD4203DY	20	0.5
	A4075	3G3EV-PLNFD4303DY	30	0.6


**Note:** The “2P” in the rated current column indicates parallel connection.

## Connection Example

3-phase input

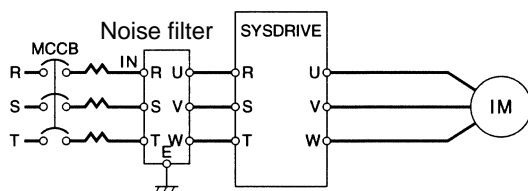


Single-phase input

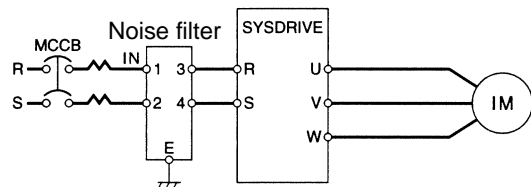




## ■ Output Noise Filter

### 3G3IV-PLF□ (Tokin)

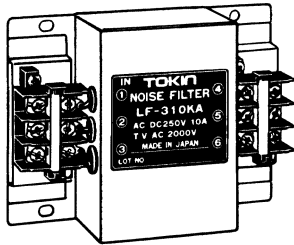

The Output Noise Filter suppresses the generated noise of the Inverter from being transmitted to the output line. Connect the Output Noise Filter to the output side of the Inverter.


### Connection Example

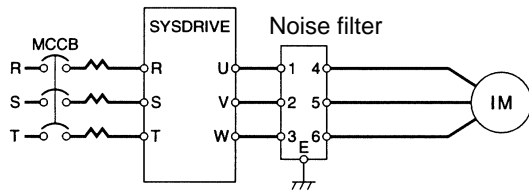

### Applicable Models

Voltage class	Inverter		Output Noise Filter	
	Max. applicable motor capacity (kW)	Inverter capacity (kVA)	Model 3G3IV-	Rated current (A)
200-V class	0.1	0.3	PLF310KA	10
	0.2	0.6		
	0.4	1.1		
	0.75	1.9		
	1.5	3.0	PLF320KA	
	2.2	4.2		
	3.7	6.7	PLF350KA	
	5.5	9.5		
7.5	13.0			
400-V class	0.2	0.9	PLF310KB	10
	0.4	1.4		
	0.75	2.6		
	1.5	3.7		
	2.2	4.2	PLF320KB	
	3.7	6.6		
	5.5	11.0	PLF320KB	
	7.5	14.0		

### External Dimensions

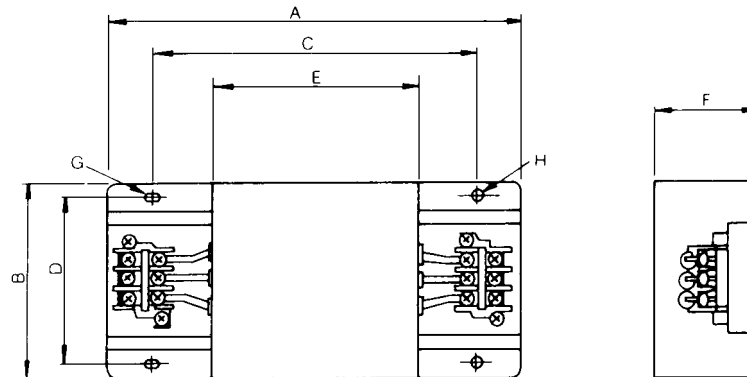

Model 3G3IV-	Terminal board	Dimension (mm)								Weight (kg)
		A	B	C	D	E	F	G	H	
PLF310KA	TE-K5.5	140	100	100	90	70	45	7 × 4.5 dia.	4.5 dia.	0.5
PLF320KA	M4									0.6
PLF350KA	TE-K22	260	180	180	160	120	65	7 × 4.5 dia.		2.0
PLF310KB	TE-K5.5	140	100	100	90	70	45	7 × 4.5 dia.		0.5
PLF320KB	M4								0.6	

# Inverter Models

## ■ Inverter Models

Rated voltage	Degree of protection	Max. applicable motor capacity	Model
3-phase 200 V AC	Panel-mounting type (equivalent to IP20)	0.1 kW	3G3MV-A2001
		0.2 kW	3G3MV-A2002
		0.4 kW	3G3MV-A2004
		0.75 kW	3G3MV-A2007
		1.5 kW	3G3MV-A2015
		2.2 kW	3G3MV-A2022
		3.7 kW	3G3MV-A2037
	Closed wall-mounting type (equivalent to IP20/NEMA1)	5.5 kW	3G3MV-A2055
		7.5 kW	3G3MV-A2075
Single-phase 200 V AC	Panel-mounting type (equivalent to IP20)	0.1 kW	3G3MV-AB001
		0.2 kW	3G3MV-AB002
		0.4 kW	3G3MV-AB004
		0.75 kW	3G3MV-AB007
		1.5 kW	3G3MV-AB015
		2.2 kW	3G3MV-AB022
		3.7 kW	3G3MV-AB037
3-phase 400 V AC	Panel-mounting type (equivalent to IP20)	0.2 kW	3G3MV-A4002
		0.4 kW	3G3MV-A4004
		0.75 kW	3G3MV-A4007
		1.5 kW	3G3MV-A4015
		2.2 kW	3G3MV-A4022
		3.7 kW	3G3MV-A4037
	Closed wall-mounting type (equivalent to IP20/NEMA1)	5.5 kW	3G3MV-A4055
		7.5 kW	3G3MV-A4075

## ■ Explanation of Product Code

# 3G3MV-A2007

Series name:  
3G3MV Series

Max. applicable motor capacity

001	0.1 kW
002	0.2 kW
004	0.4 kW
007	0.75 kW
015	1.5 kW
022	2.2 kW
037	3.7 kW
055	5.5 kW
075	7.5 kW

Voltage class

2	3-phase 200 V AC (200-V class)
B	Single-phase 200 V AC (200-V class)
4	3-phase 400 V AC (400-V class)

Degree of protection

A	Panel-mounting type (IP10 or higher)/closed wall-mounting type
---	--