# INTEGRATED CIRCUIT **TOSHIBA**

TECHNICAL DATA

TOSHIBA MOS DIGITAL INTEGRATED CIRCUIT TC58V32 FT SILICON GATE CMOS

# 32 MBIT (4 M $\times$ 8 BITS) CMOS NAND E<sup>2</sup>PROM

TENTATIVE DATA

## **DESCRIPTION**

The TC58V32FT device is a single 3.3-volt 33 M (34,603,008) bit NAND Electrically Erasable and Programmable Read Only Memory (NAND EEPROM) organized as 528 byte × 16 pages × 512 blocks. The device has a 528-byte, static register which allows the program and read data to be transferred between the register and the memory cell array in 528-byte increments. The Erase operation is implemented in a single block unit (8 kbytes + 256 bytes: 528 bytes  $\times$  16 pages).

The TC58V32FT is a serial type of memory device which utilizes the I/O pins for both address and data input/output as well as command inputs. The Erase and Program operations are automatically executed, making the device most suitable for applications such as solid state file storage, voice recording, image file memory for still cameras and other systems which require high-density, and non-volatile memory data storage.

### **FEATURES**

Organization : Memory cell array: 528 × 8 k × 8

> Register  $: 528 \times 8$ Page size : 528 bytes Block size : (8 k + 256) bytes

: Read, Reset, Auto Page Program Mode

Auto Block Erase, Suspend/Resume

Status Read

Mode control : Serial input/output

Command control

: 400 mil TSOP Type II Package

TC58V32FT: TSOP44-P-400B (Weight: 0.48 g typ)

Power supply  $: V_{CC} = 3.3 V \pm 0.3 V$ 

Access time

Cell array-Register: 10 µs max Serial Read Cycle: 50 ns min

Operating current

Read (50 ns cycle): 15 mA typ Program (ave.) : 40 mA typ Erase (ave.) : 20 mA typ Standby : 100 µA

#### PIN ASSIGNMENT (TOP VIEW)

# TC58V32FT

V <sub>SS</sub> CLE ALE WE NC NC NC NC	1 2 3 4 5 6 7 8 9 10	 44 43 42 41 40 39 38 37 36 35 34	V <sub>CC</sub> CE RE RVB OP NC NC NC NC NC NC
NC NC NC NC I/O 1 I/O 2 I/O 3 I/O 4 Vss	12 13 14 15 16 17 18 19 20 21 22	 33 32 31 30 29 28 27 26 25 24 23	NC NC NC NC NC I/O 8 I/O 7 I/O 6

#### PIN NAMES

I/O <sub>1 to 8</sub>	I/O Port
CE	Chip Enable
WE	Write Enable
RE	Read Enable
CLE	Command Latch Enable
ALE	Address Latch Enable
WP	Write Protect
R/B̄	Ready/Busy
ОР	Option Pin
V <sub>CC</sub>	Power Supply
V <sub>SS</sub>	Ground

OP: GND Input: 528 Byte/Page Operation V<sub>CC</sub> Input : 512 Byte/Page Operation

(J)

TC58V32FT-1 1996 - 08 - 19

TOSHIBA CORPORATION

The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA CORPORATION for any infringements of intellectual property or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any intellectual property or other rights of TOSHIBA CORPORATION or other These TOSHIBA products are intended for use in general commercial applications (office equipment, communication equipment, measuring equipment, domestic appliances, etc.). please make sure that you consult with us before you use these TOSHIBA products in equipment which requires extraordinarily high quality and/or reliability, and in equipment which may involve life ritricated application, including but not limited to such uses as atomic energy control, airplane or spaceship instrumentation, traffic signals, medical instrumentation, combustion control, all types of safety devices, etc. TOSHIBA control accept and hereby disclains liability for any damage which may occur in case the TOSHIBA products are used in such equipment or applications without prior consultation with TOSHIBA.


The products cescribed in this document are strategic products subject to COCOM regulations.

They should not be exported without authorization from the appropriate governmental authorities (as of 199)

# INTEGRATED CIRCUIT **TOSHIBA**

TECHNICAL DATA

## **BLOCK DIAGRAM**

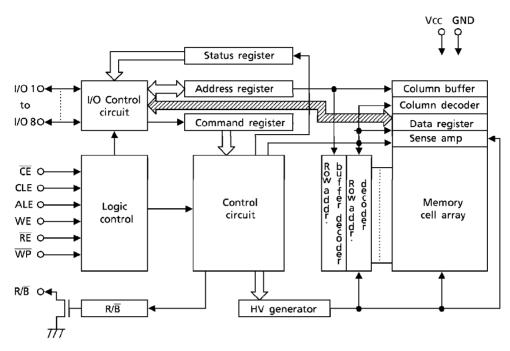

# **ABSOLUTE MAXIMUM RATINGS**

SYMBOL	RATING	VALUE	UNIT
V <sub>CC</sub>	Power Supply	- 0.6 to 5.5	٧
V <sub>IN</sub>	Input Voltage	- 0.6 to 5.5	V
V <sub>I/O</sub>	Input/Output Voltage	- 0.6 V to Vcc + 0.5 V (≦ 5.5 V)	V
P <sub>D</sub>	Power Dissipation	0.3	W
T <sub>SOLDER</sub>	Soldering Temperature (10 s)	260	°C
T <sub>STG</sub>	Storage Temperature	– 55 to 150	°C
T <sub>OPR</sub>	Operating Temperature	0 to 70	°C

# CAPACITANCE \*(Ta = 25°C, f = 1 MHz)

SYMBOL	PARAMETER	CONDITION	MIN	TYP	MAX	UNIT
C <sub>IN</sub>	Input	$V_{IN} = 0 V$	ı	5	10	РF
c <sub>out</sub>	Output	V <sub>OUT</sub> = 0 V	ı	5	10	РF

<sup>\*</sup> This parameter is periodically sampled and is not tested for every component.

TC58V32FT-2
1996 - 08 - 19
TOSHIBA CORPORATION

# INTEGRATED CIRCUIT

# TOSHIBA

TECHNICAL DATA

#### TC58V32 FT

# VALID BLOCK (1)

SYMBOL	PARAMETER		TC58V32FT		UNIT
	PARAIVIETER	MIN	TYP	MAX	UNIT
N <sub>VB</sub>	Valid Block Number	502	508	512	Blocks

<sup>(1)</sup> The TC58V32FT occasionally contains unusable blocks. Refer to Application Note (17) toward the end of this document.

# DC RECOMMENDED OPERATING CONDITIONS

SYMBOL	PARAMETER	MIN	TYP	MAX	UNIT
V <sub>CC</sub>	Power Supply	3.0	3.3	3.6	V
V <sub>IH</sub>	High Level Input Voltage	2.0	-	V <sub>CC</sub> + 0.5	٧
V <sub>IL</sub>	Low Level Input Voltage	- 0.3*	-	0.8	V

<sup>\* - 2</sup> V (pulse width  $\leq$  20 ns)

# DC CHARACTERISTICS (Ta = $0^{\circ}$ to $70^{\circ}$ C, $V_{CC}$ = $3.3 \text{ V} \pm 0.3 \text{ V}$ )

SYMBOL	PARAMETER	CONDITION	MIN	TYP	MAX	UNIT
I <sub>IL</sub>	Input Leak Current	V <sub>IN</sub> = 0 V to V <sub>CC</sub>	_	-	± 10	μΑ
I <sub>LO</sub>	Output Leak Current	$V_{OUT} = 0.4 V$ to $V_{CC}$	-	-	± 10	μΑ
I <sub>CCO1</sub>	Operating Current (Serial Read)	$\overline{\text{CE}}$ = VIL, lout = 0 mA, $t_{\text{cycle}}$ = 50 ns	_	15	30	mA
I <sub>CCO3</sub>	Operating Current (Command Input)	t <sub>cycle</sub> = 50 ns	_	15	30	mA
I <sub>CCO4</sub>	Operating Current (Data Input)	t <sub>cycle</sub> = 50 ns	_	40	60	mA
I <sub>CCO5</sub>	Operating Current (Address Input)	t <sub>cycle</sub> = 50 ns	_	15	30	mA
I <sub>CCO7</sub>	Programming Current	-	_	40	60	mA
I <sub>CCO8</sub>	Erasing Current	-	_	20	40	mA
I <sub>CCS1</sub>	Standby Current	CE = VIH	_	-	1	mA
I <sub>CCS2</sub>	Standby Current	$\overline{CE} = V_{CC} - 0.2 V$	-	-	100	μΑ
V <sub>OH</sub>	High Level Output Voltage	I <sub>OH</sub> = - 400 μA	2.4	-	-	V
V <sub>OL</sub>	Low Level Output Voltage	I <sub>OL</sub> = 2.1 mA	_	-	0.4	V
I <sub>OL</sub> (R/B)	Output Current of (R/B) Pin	V <sub>OL</sub> = 0.4 V	_	8	-	mA

TC58V32FT-3
1996 - 08 - 19

# INTEGRATED CIRCUIT **TOSHIBA**

TECHNICAL DATA

**TC58V32 FT** 

# AC CHARACTERISTICS AND OPERATING CONDITIONS (Ta = $0^{\circ}$ to $70^{\circ}$ C, $V_{CC}$ = 3.3 V $\pm$ 0.3 V) (1)

SYMBOL	PARAMETER	MIN	MAX	UNIT	NOTE
t <sub>CLS</sub>	CLE Set-Up Time	0	_	ns	
t <sub>CLH</sub>	CLE Hold Time	10	_	ns	
t <sub>CS</sub>	CE Set-Up Time	0	_	ns	
t <sub>CH</sub>	CE Hold Time	10	-	ns	
t <sub>WP</sub>	Write Pulse Width	25	-	ns	
t <sub>ALS</sub>	ALE Set-Up Time	0	-	ns	
t <sub>ALH</sub>	ALE Hold Time	10	-	ns	
t <sub>DS</sub>	Data Set-Up Time	20	-	ns	
t <sub>DH</sub>	Data Hold Time	10	-	ns	
t <sub>WC</sub>	Write Cycle Time	50	_	ns	(2)
t <sub>WH</sub>	WE High Hold Time	15	_	ns	
t <sub>WW</sub>	WP High to WE Low	100	_	ns	
t <sub>RR</sub>	Ready to RE Falling Edge	20	_	ns	
t <sub>RP</sub>	Read Pulse Width	25	_	ns	
t <sub>RC</sub>	Read Cycle Time	50	_	ns	
t <sub>REA</sub>	RE Access Time (Serial Data Access)	-	35	ns	
t <sub>CEH</sub>	CE High Time for the Last Address in Serial Read Cycle	100	_	ns	(4)
t <sub>REAID</sub>	RE Access Time (ID Read)	-	35	ns	
t <sub>OH</sub>	Data Output Hold Time	10	_	ns	
t <sub>RHZ</sub>	RE High to Output High Impedance	-	30	ns	
t <sub>CHZ</sub>	CE High to Output High Impedance	-	20	ns	
t <sub>REH</sub>	RE High Hold Time	15	-	ns	
t <sub>IR</sub>	Output High Impedance to RE Rising Edge	0	_	ns	
t <sub>RSTO</sub>	RE Access Time (Status Read)	-	35	ns	
t <sub>CSTO</sub>	CE Access Time (Status Read)	-	45	ns	
t <sub>RHW</sub>	RE High to WE Low	0	_	ns	
t <sub>WHC</sub>	WE High to CE Low	30	_	ns	
t <sub>WHR</sub>	WE High to RE Low	30	-	ns	
t <sub>AR1</sub>	ALE Low to RE Low (ID Read)	100	_	ns	
t <sub>CR</sub>	CE Low to RE Low (ID Read)	100	_	ns	
t <sub>R</sub>	Memory Cell Array to Starting Address	-	10	μ <b>s</b>	
t <sub>WB</sub>	WE High to Busy	_	200	ns	
t <sub>AR 2</sub>	ALE Low to RE Low (Read Cycle)	50	-	ns	
t <sub>RB</sub>	RE Last Clock Rising Edge to Busy (in Sequential Read)	_	200	ns	
t <sub>CRY</sub>	CE High to Ready (in Case of Interception by CE in Read Mode)	-	600	ns	(3)
t <sub>RST</sub>	Device Resetting Time (Read/Program/Erase/after Suspend Command)	-	6/10/500/5	μ\$	

# **AC TEST CONDITIONS**

Output load : 1 TTL &  $C_L$  (100 pF)

TC58V32FT-4
1996 - 08 - 19
TOSHIBA CORPORATION


# INTEGRATED CIRCUIT

# **TOSHIBA**

#### TECHNICAL DATA


TC58V32 FT

- (1) Transition time  $(t_T) = 5 \text{ ns}$
- (2) When CLE, ALE and  $\overline{\text{CE}}$  are input at the clock pulse,  $t_{WC}$  will exceed 50 ns

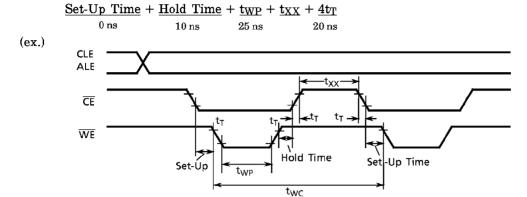

- (3) The  $\overline{\text{CE}}$  High to Ready time depends on the pull-up resistor tied to the R/ $\overline{\text{B}}$  pin. (Refer to Application Note (10) toward the end of this document.)
- (4) If the delay between  $\overline{RE}$  and  $\overline{CE}$  is less than 200 ns and  $t_{CEH}$  is greater than or equal to 100 ns, reading will stop.

If the RE-to-CE delay is less than 30 ns, the device will not turn to the Busy state.

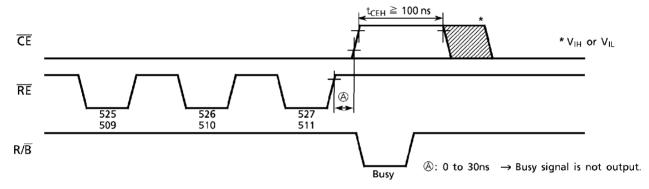

## PROGRAMMING AND ERASING CHARACTERISTICS (Ta = 0° to 70°C, V<sub>CC</sub> = 3.3 V ± 0.3 V)

SYMBOL	PARAMETER	MIN	TYP	MAX	UNIT	NOTE
t <sub>PROG</sub>	Average Programming Time		300	1500	μS	
N	Number of Programming Cycles on Same Page			3		(1)
t <sub>BERASE</sub>	Block Erasing Time		6	50	ms	
t <sub>SR</sub>	Suspend Input to Ready			0.5	ms	
P/E	Number of Program/Erase Cycles	·		1 × 10 <sup>6</sup>		

(1) Refer to Application Note (15) toward the end of this document.


TC58V32FT — 5
1996 - 08 - 19
TOSHIBA CORPORATION

# INTEGRATED CIRCUIT **TOSHIBA**

TECHNICAL DATA


# **TIMING DIAGRAMS**

# Latch Timing Diagram for Command/Address/Data

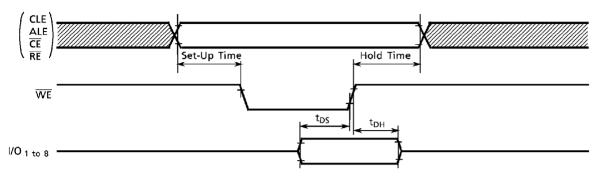

: V<sub>IH</sub> or V<sub>IL</sub>

## Command Input Cycle Timing Diagram

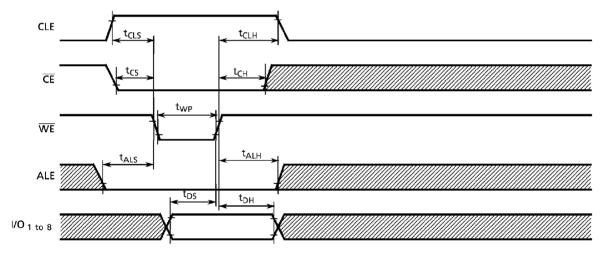


: V<sub>IH</sub> or V<sub>IL</sub>


TC58V32FT-6 1996 - 08 - 19 TOSHIBA CORPORATION

TECHNICAL DATA

## Address Input Cycle Timing Diagram

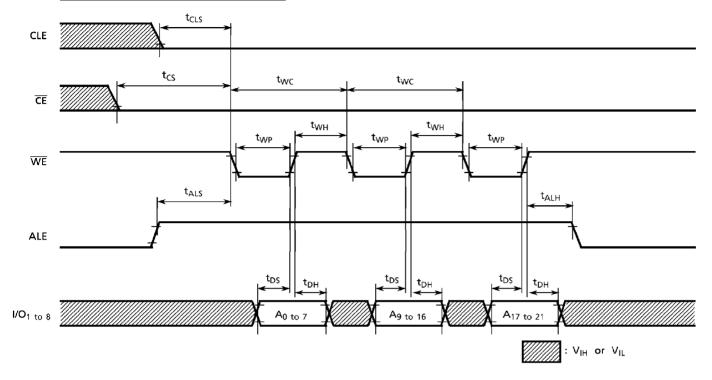


## Data Input Cycle Timing Diagram

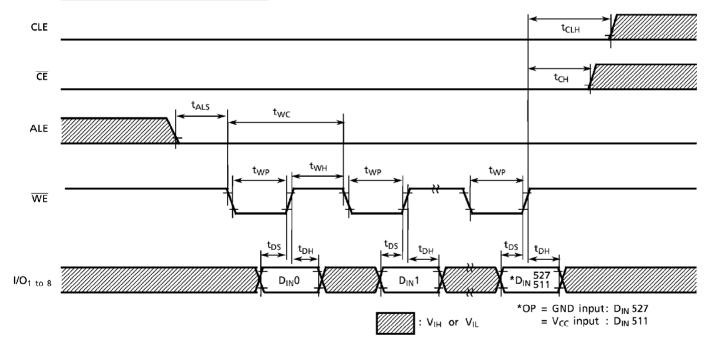


TC58V32FT-7 1996-08-19 TOSHIBA CORPORATION

TECHNICAL DATA

## Serial Read Cycle Timing Diagram

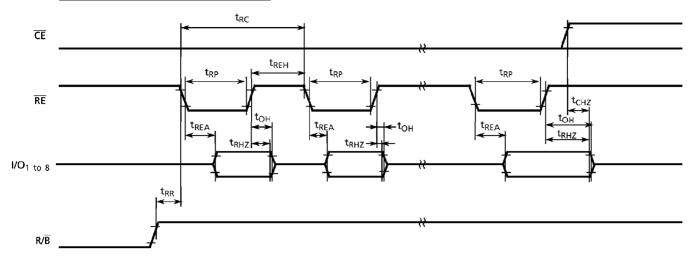



## Status Read Cycle Timing Diagram

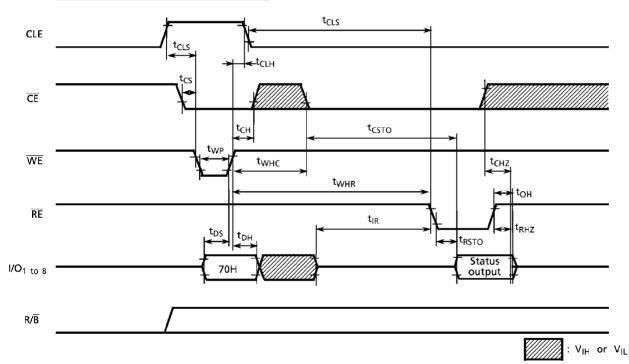

TC58V32FT-8 1996-08-19 TOSHIBA CORPORATION

TECHNICAL DATA

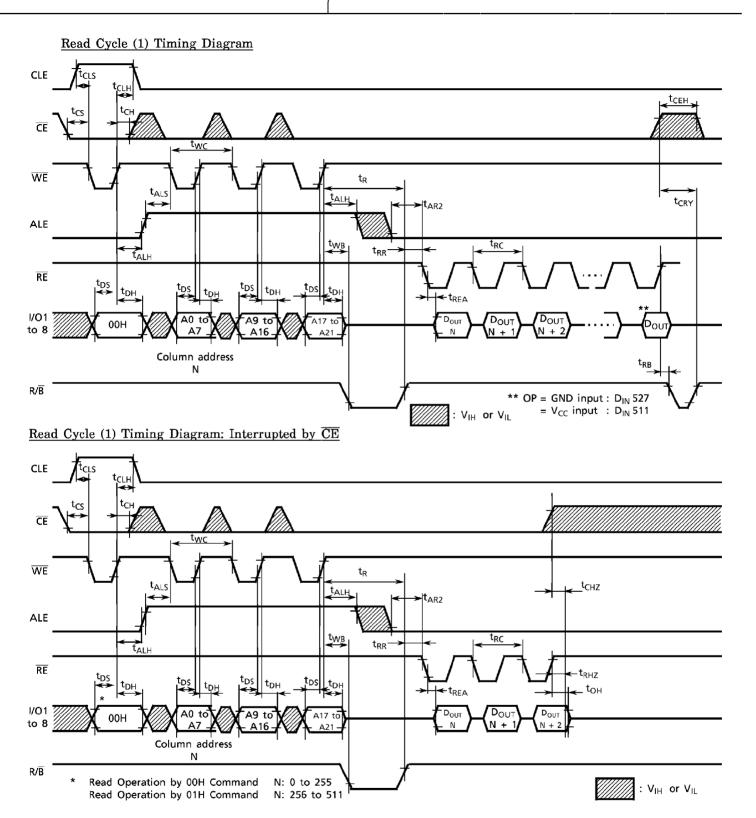





# INTEGRATED CIRCUIT

# **TOSHIBA**

TECHNICAL DATA

**TC58V32 FT** 



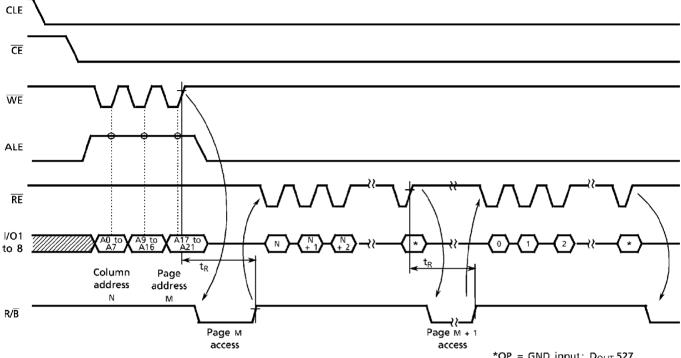

: V<sub>IH</sub> or V<sub>IL</sub>


\*OP = GND input:  $D_{OUT}$  527 =  $V_{CC}$  input :  $D_{OUT}$  511

TC58V32FT-10

<u> 1996 - 08 - 19</u>

TOSHIBA CORPORATION

TECHNICAL DATA

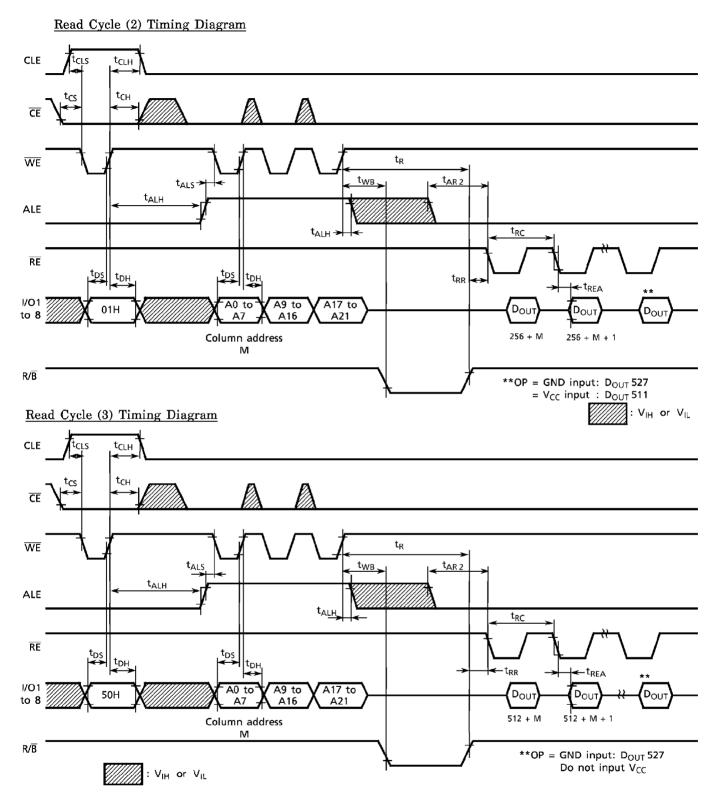

TC58V32FT— 11 1996 - 08 - 19 TOSHIBA CORPORATION


# INTEGRATED CIRCUIT

**TOSHIBA** 

TECHNICAL DATA

TC58V32 FT



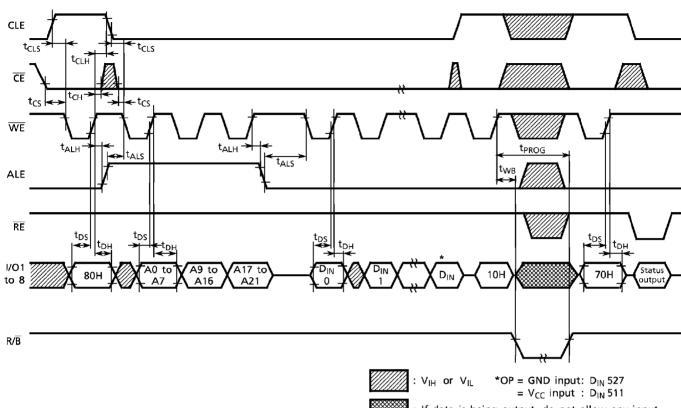

: If data is being output, do not allow any input.

TC58V32FT-12

1996 - 08 - 19


TOSHIBA CORPORATION


# INTEGRATED CIRCUIT

**TOSHIBA** 

TECHNICAL DATA

TC58V32 FT



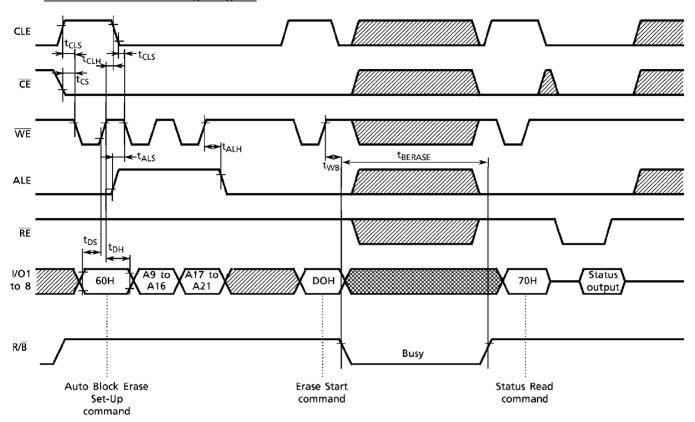

:  $V_{IH}$  or  $V_{IL}$ 


: If data is being output, do not allow any input.

TC58V32FT-13

1996 - 08 - 19

TOSHIBA CORPORATION


TECHNICAL DATA

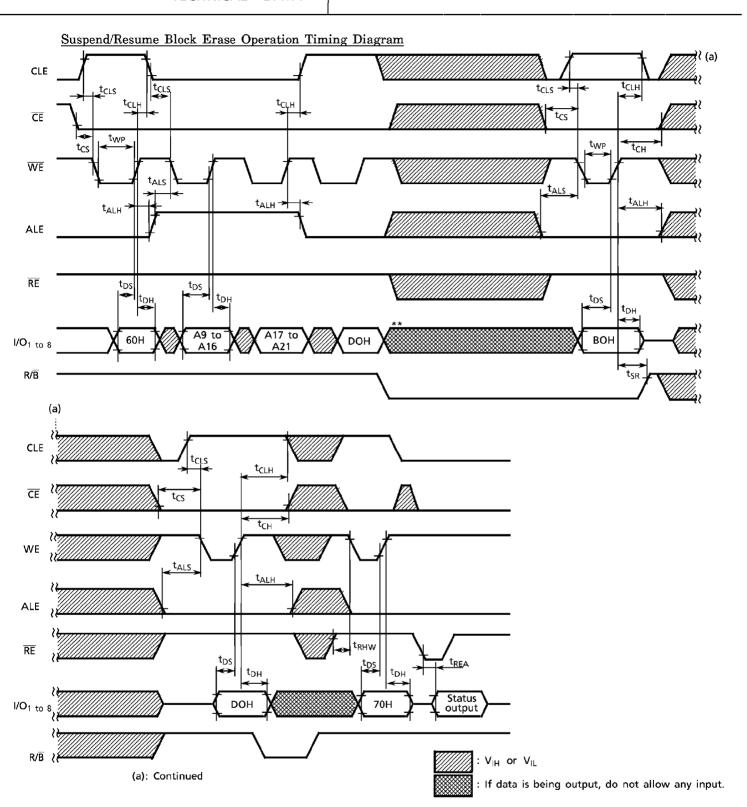

	TC58V32FT 14
_	
	1996 - 08 - 19
Т	OSHIBA CORPORATION

TECHNICAL DATA

## ID Read Operation Timing Diagram

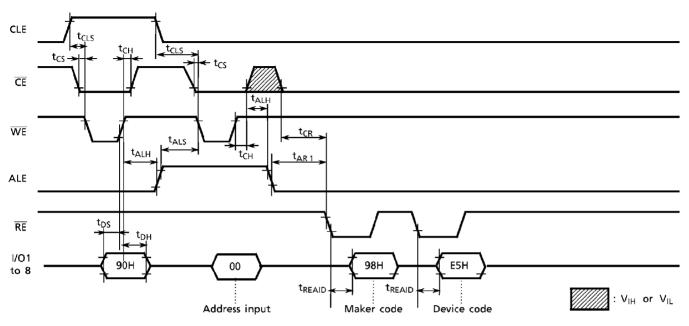

TC58V32FT — 15 1996 - 08 - 19

TOSHIBA CORPORATION

TC58V32 FT

#### PIN FUNCTIONS

The TC58V32FT is a serial access memory which utilizes time-sharing input of address information. The device pin-outs are configured as shown in Figure 1.

#### Command Latch Enable: CLE

The CLE input signal is used to control the acquisition of the operation mode command into the internal command register. The command is latched into the command register from the I/O port on the rising edge of the  $\overline{WE}$  signal while CLE is high.

#### Address Latch Enable: ALE

The ALE signal is used to control the acquisition of either address information or input data into the internal address/data register. Address information is latched on the rising edge of WE if ALE is high. Input data is latched if ALE is low.

#### Chip Enable: CE

The device goes into a low power standby mode during a Read operation when  $\overline{CE}$  goes high. The  $\overline{CE}$  signal is ignored when the device is in the Busy state (R/ $\overline{B}$  = L), such as during a Program or Erase operation, and will not go into Standby mode even if a  $\overline{CE}$  high signal is input. The  $\overline{CE}$  signal must stay low during the Read mode Busy state to ensure that memory signal array data is correctly transferred to the data register.

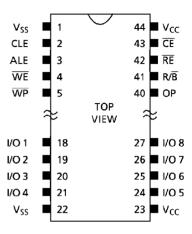


Figure 1.: TC58V32FT Pinout

#### Write Enable: WE

The WE signal is used to control the acquisition of data from the I/O port.

#### Read Enable: RE

The  $\overline{RE}$  signal controls serial data output. Data is available  $t_{REA}$  after the falling edge of  $\overline{RE}$ . The internal column address counter is also incremented (Address + 1) on this falling edge.

#### I/O Port: I/O 1 to 8

The I/O 1 to 8 pins are used as the port for transferring address, command and input/output data information to or from the device.

#### Write Protect: WP

The WP signal is used to protect the device from accidental programming or erasing. The internal voltage regulator is reset when WP is low. This signal is usually used for protecting the data during the power on/off sequence when input signals are invalid.

#### Ready/Busy: R/B

The  $R/\overline{B}$  output signal is used to indicate the operating condition of the device. The  $R/\overline{B}$  signal is in the Busy state ( $R/\overline{B} = L$ ) during the Program, Erase or Read operations and will return to Ready state ( $R/\overline{B} = H$ ) after completion of the operation. The output buffer for this signal is an open drain.

#### Option Pin: OP


The OP signal is used to change the page size. The device is in 528 byte/page mode when OP = GND, and 512 byte/page mode when OP =  $V_{CC}$ .

TC58V32FT— 16
1996 - 08 - 19
TOSHIBA CORPORATION

#### Schematic Cell Layout and Address Assignment

The Program operation is implemented in page units while the Erase operation is carried out in block units.

Figure 2.: TC58V32 Schematic Cell Layout

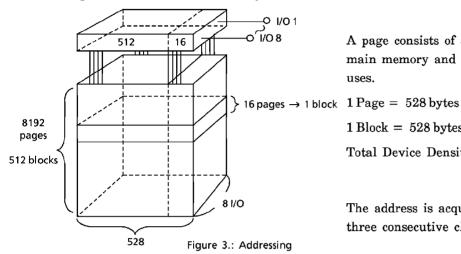

A page consists of 528 bytes in which 512 bytes are for main memory and 16 bytes are for redundancy or other uses.

 $1 \operatorname{Block} = 528 \operatorname{bytes} \times 16 \operatorname{pages} = (8 \mathrm{K} + 256) \operatorname{bytes}$ 

Total Device Density = 528 bytes × 16 pages × 512 blocks  $\simeq 33 \text{ Mbits } (4.125 \text{ Mbytes})$ 

The address is acquired through the I/O port over three consecutive clock cycles, as shown in Figure 3.

	I/O 1	1/02	I/O 3	1/0 4	I/O 5	I/O 6	1/07	1/08
First cycle	A0	<b>A</b> 1	A2	A3	A4	A5	A6	A7
Second cycle	A9	A10	A11	A12	A13	A14	A15	A16
Third cycle	A17	A18	A19	A20	A21	* L	* L	* L

A9 to A21: page address
(A13 to A21: block address
A9 to A12: NAND address in block)

### Operation Mode: Logic and Command Tables

The operation modes such as Program, Erase, Read, Erase Suspend and Reset are controlled by the eleven different command operations shown in Table 2. The address, command input and data input/output are controlled by the CLE, ALE,  $\overline{\text{CE}}$ ,  $\overline{\text{WE}}$ ,  $\overline{\text{RE}}$  and  $\overline{\text{WP}}$  signals, as shown in Table 1.

Table 1: Logic Table

	CLE	ALE	CE	WE	RE	WP
Command Input	Н	L	L	<b>□</b> _₹	Н	*
Data Input	L	L	L	┖┺	Н	*
Address Input	L	Н	L	工术	Н	*
Serial Data Output	L	L	L	Н	<b>₹</b>	*
During Programming (Busy)	*	*	*	*	*	Н
During Erasing (Busy)	*	*	*	*	*	Н
Program, Erase Inhibit	*	*	*	*	*	L

H: V<sub>IH</sub>, L: V<sub>IL</sub>, \*: V<sub>IH</sub> or V<sub>IL</sub>

TC58V32FT— 17
1996 - 08 - 19
TOSHIBA CORPORATION

<sup>\*:</sup> A8 is initially set to "Low" or "High" by a "00H" Command or a "01H" Command.

<sup>\*:</sup> I/O 6 to 8 must be set low in the third cycle.

#### **INTEGRATED CIRCUIT TOSHIBA**


**TC58V32 FT** 

TECHNICAL DATA

Table 2: Command table (HEX data)

	FIRST CYCLE	SECOND CYCLE	ACCEPTABLE COMMAND WHILE BUSY
Serial Data Input	80	_	
Read Mode (1)	00	_	
Read Mode (2)	01	_	
Read Mode (3)	50	_	
Reset	FF	_	0
Auto Program	10	_	
Auto Block Erase	60	D0	
Suspend In Erasing	В0	_	0
Resume	D0	_	
Status Read	70	_	0
ID Read	90	_	

Bit assignment of HEX data (Example)



Once the device is set to Read mode by the "00H", "01H" or "50H" command, additional Read commands are not needed for sequential page Read operations. Table 3 shows the operation states for Read mode.

Table 3: Read mode operation states


	CLE	ALE	CE	WE	RE	I/O 1 TO I/O 8	POWER
Output Select	L	L	L	Н	L	Data output	Active
Output Deselect	L	L	L	Н	Н	High impedance	Active
Standby	L	L	Н	Н	*	High impedance	Standby


#### TC58V32 FT

# **DEVICE OPERATION**

#### Read Mode (1)

Read mode (1) is set by issuing a "00H" command to the command register. Refer to Figure 4 below for timing details and a block diagram.

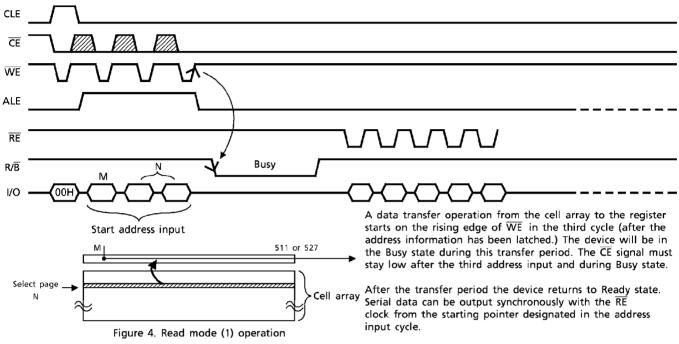

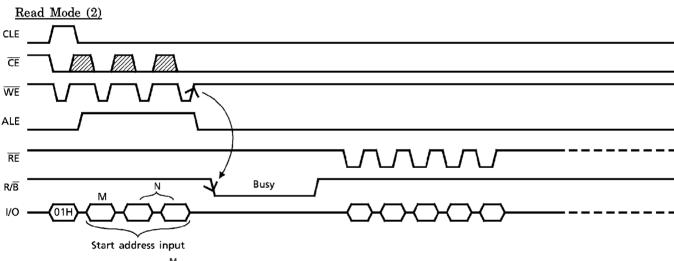




Figure 5. Read mode (2) operation


The operation of the device after input of a "01H" command is the same as Read Mode (1). If the starting pointer is to be set after column address 256, use Read Mode (2).

However, for a Sequential Read, output of the next page starts from column address 0.

TC58V32FT— 19
1 00010211 10
1996 - 08 - 19
TOSHIBA CORPORATION
TOO! IIDA GOAFGAA!IGIT

#### Read Mode (3)


Read mode (3) has the same timing as Read modes (1) and (2) but is used to access information in the extra 16-byte redundancy area of the page. The starting pointer is therefore assigned between bytes 512 and 527.

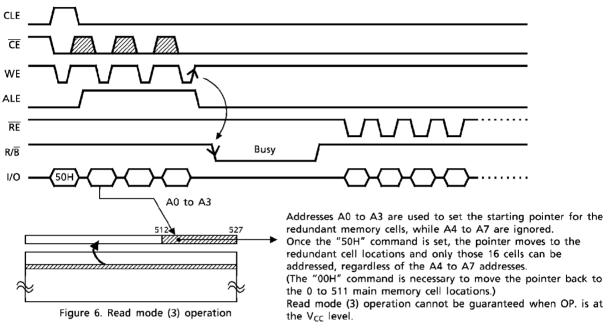

TC58V32 FT

#### Sequential Read (1) (2) (3)

This mode allows sequential reading without additional address input.

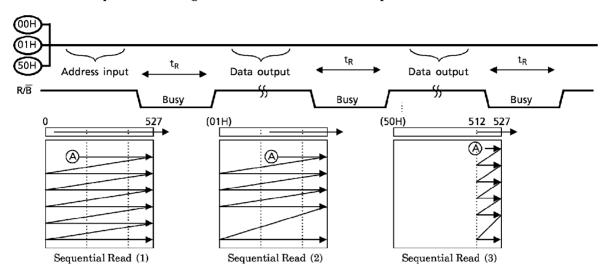

Sequential Read modes (1) and (2) output addresses 0 to 527 as shown above while Sequential Read mode (3) outputs the redundant address locations only. When the pointer reaches the last address, the device continues to output the data from this address  $^{**}$  on each  $\overline{\text{RE}}$  clock signal.

\*\* OP = GND input: column address 527.  $V_{CC}$  input: column address 511.

# INTEGRATED CIRCUIT **TOSHIBA**

TECHNICAL DATA

#### Status Read


The TC58V32FT automatically implements the execution and verification of the Program and Erase operations. The Status Read function is used to monitor the Ready/Busy status of the device, determine the pass/fail result of a Program or Erase operation, and determine if the device is in Suspend or Protect mode. The device status is output through the I/O port using the  $\overline{\text{RE}}$  clock after a "70H" command input. The resulting information is outlined in Table 4.

Table 4: Status output table

	STATUS	OUTPUT				
I/O 1	Pass/Fail	Pass: "0"	Fail: "1"			
I/O 2	Not Used	"0"				
I/O 3	Not Used	"0"				
1/0 4	Not Used	"0"				
I/O 5	Not Used	"0"				
I/O 6	Suspend	Suspended: "1"	Not Suspended: "0"			
1/07	Ready/Busy	Ready: "1"	Busy: "0"			
I/O 8	Write Protect	Protect:"0"	Not Protect: "1"			

The Pass/Fail status on I/O1 is only valid when the device is in the Ready state. The device will always indicate Pass status while in the Busy state in Read mode.

An application example with multiple devices is shown in Figure 7.

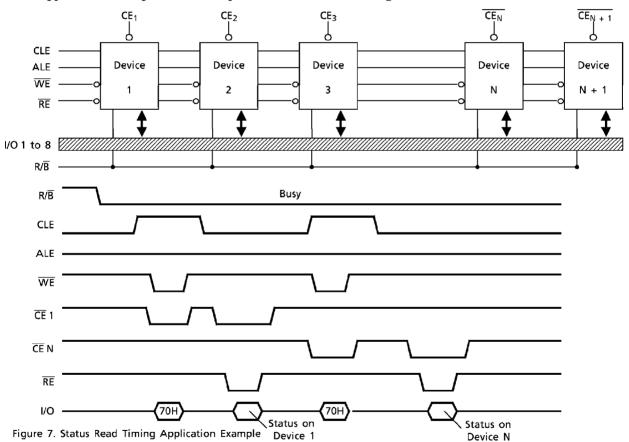

SYSTEM DESIGN NOTE: If the R/B pin signals of multiple devices are common-wired, as shown in the diagram, the Status Read Function can be used to determine the status of each individually selected device.

TC58V32FT-22
1996 - 08 - 19
TOSHIBA CORPORATION

#### Auto Page Program

The TC58V32FT implements the Automatic Page Program operation by receiving a "10H" Program command after the address and data have been input. The sequence of command, address and data input is shown below. (Refer to the detailed timing chart.)


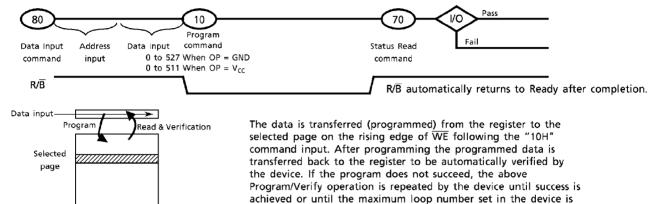


Figure 8. Auto Page Program operation

#### Auto Block Erase

The Auto Block Erase operation starts on the rising edge of WE after the Erase Execution command "D0H" which follows the Erase Set-Up command "60H". This two-cycle process for Erase operations acts as an extra layer of protection from accidental erasure of data due to external noise. The device automatically executes the Erase and Verify operations.


#### · Auto Block Erase



reached.

#### Suspend/Resume

The TC58V32FT has the ability to suspend the Erase operation to allow Program or Read operations to be performed on the device. The block diagram and command sequence for this operation are shown below. (Refer to the detailed timing chart)

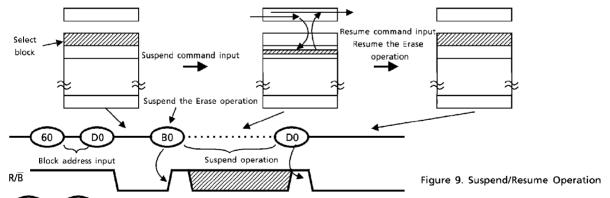

The B0 .... D0 Suspend/Resume cycle can be repeated up to 20 times during a Block Erase operation. After the Resume command has been input, the Erase operation continues from the point at which it left off and does not have to be restarted.

TC58V32FT-23
1996 - 08 - 19
TOSHIBA CORPORATION


#### Reset

The Reset mode stops all operations. For example, in the case of a Program or Erase operation the regulated voltage is discharged to 0 volts and the device will go into Wait state. The address and data registers are set as follows after a Reset:


Address Register: All "0"
Data Register : All "1"
Operation Mode : Wait State

The response after an "FFH" Reset command input during each operation is as follows:


· When a Reset (FFH) command is input during programming: Figure 10.

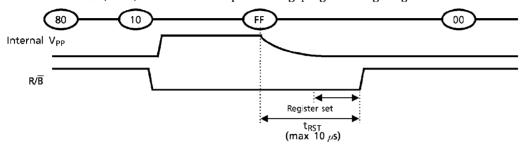


· When a Reset (FFH) command is input during erasing: Figure 11.

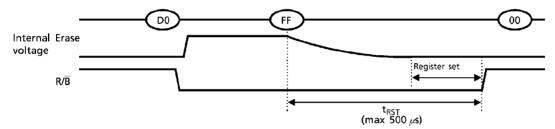

· When a Reset (FFH) command is input during a Read operation: Figure 12.



· When a Reset (FFH) command is input after Suspend: Figure 13.

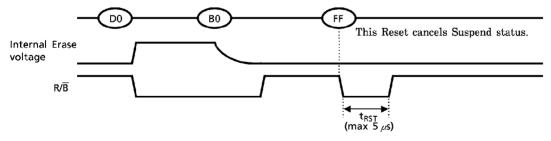

TC58V32FT-24
1996 - 08 - 19
TOSHIBA CORPORATION


# INTEGRATED CIRCUIT

# **TOSHIBA**

TECHNICAL DATA

TC58V32 FT


When a Status Read command (70H) is input after a Reset: Figure 14.



However, the following operation is prohibited. If the following operation is executed, correct resetting of the address and data registers cannot be guaranteed.



· When more than one Reset commands are input in succession: Figure 15.



#### **INTEGRATED CIRCUIT TOSHIBA**

**TECHNICAL** DATA **TC58V32 FT** 

## **ID READ**

The TC58V32FT contains an ID code to identify the device type and the manufacturer. The ID codes are Read out using the following timing conditions:

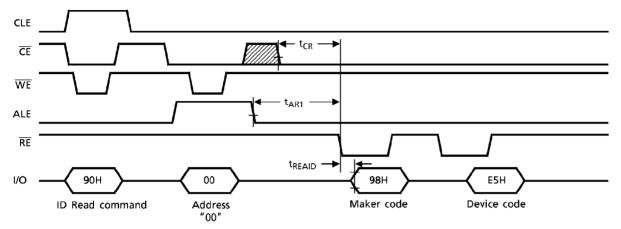


Figure 16.: ID Read timing

	I/O 8	1/07	I/O 6	I/O 5	I/O 4	I/O 3	1/0 2	I/O 1	HEX DATA
Maker code	1	0	0	1	1	0	0	0	98H
Device code	1	1	1	0	0	1	0	1	E5H

Refer to the specifications for the t<sub>REAID</sub>, t<sub>CR</sub> and t<sub>AR1</sub> timing valves.

Table 5: Code table

#### **DEVICE PHYSICS:**

#### **Program Operation**

Figure 17 shows the NAND memory cell level details of the programming mechanism. The Program operation is used to write "0" data into an erased memory cell ("1" data cell) using a tunneling mechanism. An example Program operation to program "0" data into TR1 and "1" data into TR2 is as follows:

- (1) A high level is applied to Select line 1 and a low level is applied to Select line 2 so that the device is connected to the Bit line and disconnected from the ground line.
- (2) Vpp (= 20 V) is applied to the selected word line and an inhibit voltage of VPI ( $\approx$  10 V) is applied to the unselected word lines.
- (3) 0 volts is applied to the bit line tied to cell transistor TR1 and the inhibit voltage VDPI (≈ 10 V) is applied to the bit line tied to TR2.
- (4) Vpp is applied between the control gate and the channel in TR1, as shown in Figure 17, which causes electrons to be injected from the channel to the floating gate by a tunneling mechanism.
- (5) The injected electrons are captured in the floating gate surrounded by an oxide layer and will remain, even after power is cut off, until they are removed by an Erase operation.
- (6) Although 20 volts is applied to the control gate of TR2, the voltage difference between the control gate and the channel is only 10 V because the voltage of the channel is 10 V. Therefore, tunneling does not take place. (i.e. the electron is not injected into the floating gate.)
- (7) Tunneling does not take place in the unselected pages because of the 10 V (VPI) applied to the unselected word lines which makes the voltage difference between the control gate and channel only 10 volts.

Thus the floating gate of the "0" cell is charged to "Minus" and that of the "1" cell is charged to "Plus".

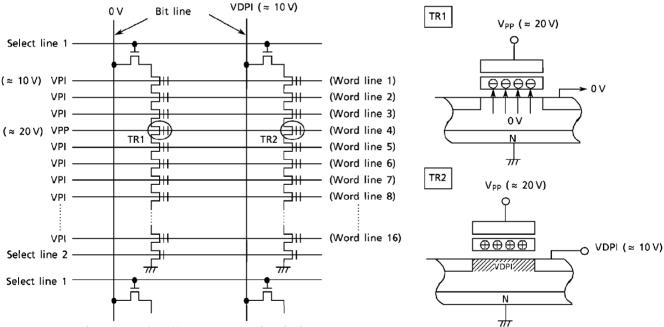



Figure 17. TC58V32FT Program Device Physics

TC58V32FT-27 1996 - 08 - 19 TOSHIBA CORPORATION

#### **Erase Operation**

Figure 18 shows the NAND memory cell level details of the Erase mechanism. The Erase operation is used to turn the "0" (programmed) cells back to "1" in a block. The captured electrons are pulled out from the floating gate to the substrate by a tunneling mechanism.

0 volts is applied to the control gate and Vpp ( $\approx 20 \, \text{V}$ ) is applied to the substrate so that a 20-volt potential is created and the electrons in the floating gate are pulled out by the tunneling mechanism.

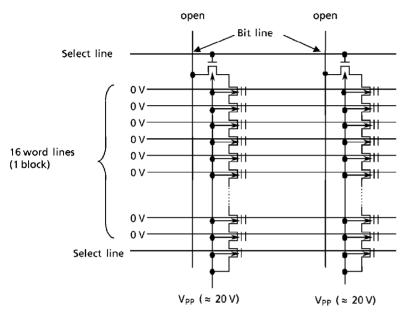

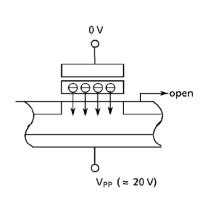


Figure 18. TC58V32FT Erase Device Physics

#### Read operation

After programming the state of the memory cell is either "0" (minus charge on the floating gate) or "1" (plus charge on the floating gate). Each state is indicated as the "threshold voltage (Vth)" which is a characterization parameter of the MOS transistor as shown in Figure 19. The threshold voltage of a transistor with data "0" is distributed in the "plus" region while a transistor with data "1" is distributed in the "minus" region. The distribution band depends on the fluctuation of the transistor.

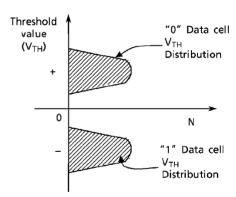


Figure 19.  $V_{\text{TH}}$  Distribution for "0" and "1" data cells

TC58V32FT — 28					
1996 - 08 - 19					
TOSHIBA CORPORATION					

Figure 20 shows memory cell level details of the Read operation mechanism:

- (1) A high voltage is applied to Select lines 1 and 2 in the block which includes the selected page, so that the 16 NAND memory cells are connected to the Bit line and ground.
- (2) 0 volts is applied to the control gates of the selected page and a high level voltage is applied to the control gates of the unselected pages.
- (3) In Figure 20, transistor TR2 with data "1" turns on, transistor TR1 with data "0" turns off, and all other unselected transistors turn on.
- (4) The precharged bit line tied to TR2 is discharged through TR2 as cell current flows to ground, while the precharged bit line tied to TR1 remains high because current does not flow. The sense amplifiers tied to the bit lines thus sense the voltage levels as "1" and "0" respectively.

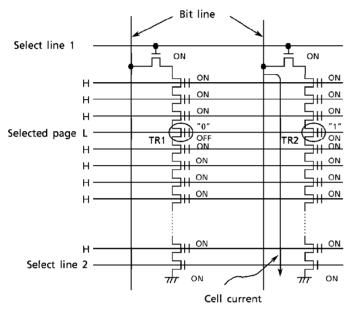


Figure 20. TC58V32FT Read Device Physics

### **APPLICATION NOTES AND COMMENTS**

#### (1) Prohibition of unspecified commands

The operation commands are listed in Table 2. Data input as a command other than the specified commands in Table 2 is prohibited. Stored data may be corrupted if an unspecified command is entered during the command cycle.

TC58V32FT-29
1996 - 08 - 19
TOSHIBA CORPORATION

# (2) Pointer control for "00H", "01H", "50H"

The TC58V32FT has three Read modes which set the destination of the pointer. Table 6 shows the destination of the pointer, and figure 21 shows a block diagram of the modes' operations.

READ MODE	COMMAND	POINTER
(1)	00Н	0 to 255
(2)	01H	256 to 511
(3)	50H	512 to 527

Table 6: Pointer Destination


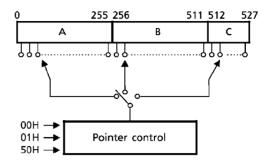


Figure 21. Pointer control

The pointer is set to region "A" by the "00H" command, to region "B" by the "01H" command, and to region "C" by the "50H" command.

#### (Example)

The "00H" command needs to be input to set the pointer back to region "A" when the pointer is in region "C".

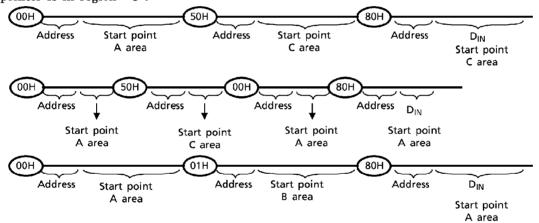

To program region "C" only, set the start point to region "C" using the "50H" command. If region "C" only is to be programmed, or if  $OP = V_{CC}$ , the contents of the data register must be set to "1" in advance using the "FFH" command.

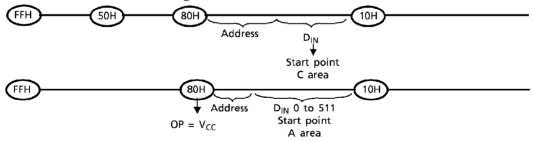



Figure 22. Example for Pointer Set

TC58V32FT — 30	
1996 - 08 - 19	
TOSHIBA CORPORAT	ION


**TECHNICAL** DATA

#### (3) Acceptable commands after Serial Input command "80H"

Once the Serial Input command ("80H") has been input, do not input any command other than the Program Execution command ("10H") or the Reset command ("FFH") during programming.

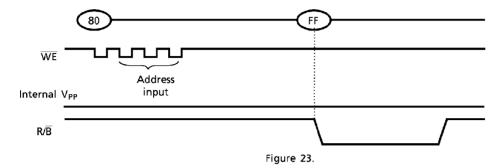

If a command other than "10H" or "FFH" is input, the Program operation is not performed.



#### Status Read during Read operation

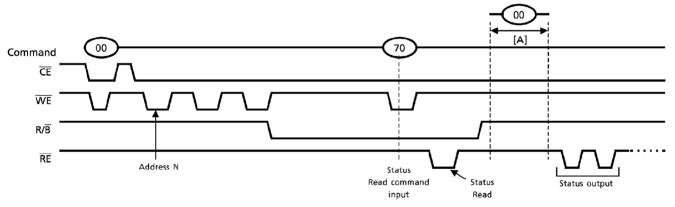


Figure 24.

The device status can be read out by inputting the Status Read command "70H" in Read mode. Once the device has been set to Status Read mode by a "70H" command, the device will not return to Read mode.

Therefore, Status Read during a Read operation is prohibited.

However, when the Read command "00H" is input during [A], Status mode is reset and then the device returns to Read mode. In this case, data output starts from address N without the need for address input.

TC58V32FT — 31						
1996 - 08 - 19						
TOSHIBA CORPORATION						
TOSHIBA CORPORATIO	N					

#### Suspend command "B0H"

The following issues need to be observed when the device is interrupted by a "B0H" command during block erasing.




Figure 25.

The device status changes from Busy to Ready when "B0H" is input. However, the following two cases cannot be distinguished from one another.

- After a "B0H" command input, Busy  $\rightarrow$  Ready
- After an Erase operation is completed with a "D0H" command, Busy → Ready


Therefore, the device status needs to be checked to see whether or not the "B0H" command has been accepted by issuing a "70H" command after the device goes to Ready.

The device responds as follows when a "D0H" command (Resume) is input instead of "70H".

- "B0H" has been accepted: Erase operation is executed. (The device is Busy.)
- "BOH" has not been accepted. (Erase operation has been completed)
  : "DOH" command cannot be accepted. (The device is Ready.)

The two cases above can be checked by monitoring the  $R/\overline{B}$  signal.

#### When auto programming fails.



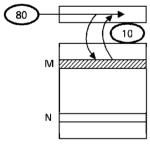


Figure 26.

If the programming result for page address M is "Fail", do not try to program the page to address N in another block. Because the previous input data is lost, the same sequence of "80H" command, address and data input is necessary.

TC58V32FT — 32	
1996 - 08 - 19	

# INTEGRATED CIRCUIT

# **TOSHIBA**

TECHNICAL DATA

**TC58V32 FT** 

#### (7) Data transfer

The data in page address M cannot be automatically transferred to page address N. If the following sequence is executed, the data will be inverted (i.e. "1" data will become "0" and "0" will become "1".


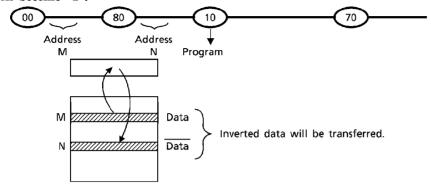


Figure 27.


#### (8) Block Erase after Suspend command "B0H"



A Block Erase command is prohibited when the device has been suspended by the input of a "B0H" command during a Block Erase operation. Only a Program or Read operation is allowed during this Erase Suspend interruption.


#### (9) Interruption of block erasure

After the input of a"B0H" command, neither a Program nor a Read operation is allowed for the block which is currently being erased




#### (10) $R/\overline{B}$ : Termination for the Ready/Busy pin $(R/\overline{B})$

A pull-up resistor must be used for termination because the  $R/\overline{B}$  buffer consists of an open drain circuit.

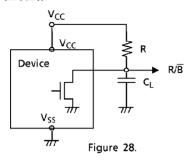

This data may vary from device to device. We recommend that you use this data as a reference when selecting a resistor value.

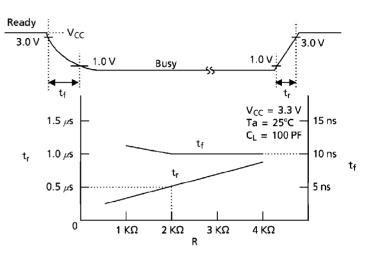

#### (11) Status after Power On

Although the device is set to Read mode after power-up, the following sequence is needed because all input signals may not be stable at power on.




Figure 29.

#### (12) Power On/Off Sequence:

The WP signal is useful for protecting against data corruption at power on/off. The following timing is necessary:

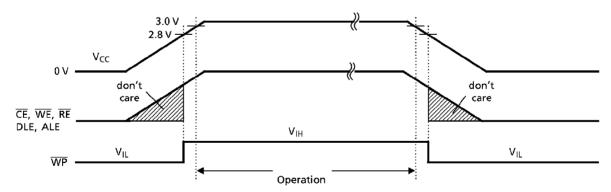



Figure 30. TC58V32FT Power On/Off Sequence

TC58V32FT — 34					
1996 - 08 - 19					
TOSHIBA CORPORATION					


# (13) Set-up for WP Signal

The Erase and Program operations are automatically reset when  $\overline{WP}$  goes low. The following conditions must be met:

## **Program**

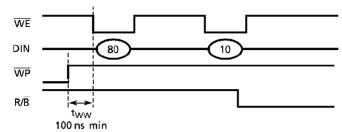

# <u>Erase</u>

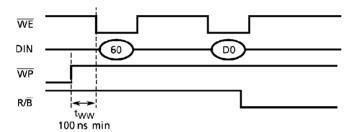


TC58V32FT — 35 1996 - 08 - 19

## (14) When four address cycles are input

Although the device may acquire the fourth address, it is ignored inside the chip.

#### Read operation:

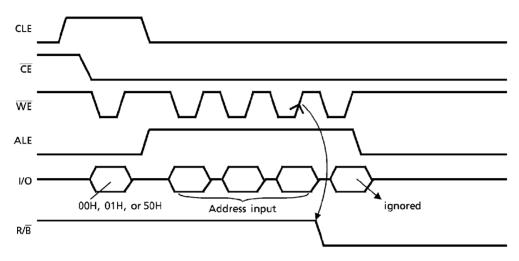

Internal read operation starts when WE goes high in the third cycle.

Figure 31.

## Programming operation:

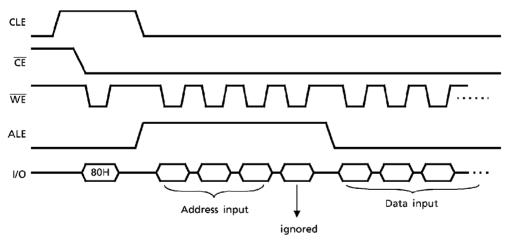


Figure 32.

TC58V32FT — 36					
1996 - 08 - 19					
TOSHIBA CORPORATION					

TECHNICAL DATA

#### (15) Number of programming cycle on the same page (Partial Page Program)

A page can be divided into two or three segments. Each segment can be programmed individually as shown below.

The first programming

Column A Column B

Page n Data Pattern 1 "1"

The second programming

Column C Column D

Page n "1" Data Pattern 2 "1"

The third programming

Page n Page

Result




Figure 33.

Note: The input data for unprogrammed or previously programmed page segments must be "1".

(i.e. set all page bytes outside the segment to be programmed to "1".)

#### (16) Note regarding the RE Signal

The internal column address counter is incremented synchronously with the  $\overline{RE}$  clock in Read mode. Therefore, once the device has been set to Read mode by the "00H", "01H" or "50H" command, the internal column address counter is incremented by the  $\overline{RE}$  clock independent of the timing of the address input. If the  $\overline{RE}$  clocks are input before address input and the pointer reaches the last column address, an internal read operation (array  $\rightarrow$  register) will occur and the device will be in the Busy state. (Refer to Figure 34)

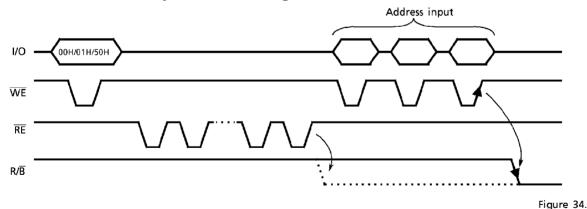

Hence the  $\overline{\text{RE}}$  clocks must be inputted after address input.


TC58V32FT — 37						
1996 - 08 - 19						
TOSHIBA CORPORATION						

TECHNICAL

TC58V32 FT

#### (17) Invalid block (bad block)

The TC58V32FT device occasionally contains unusable blocks. Therefore, the following issues must be recognized:

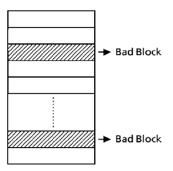

Check whether the device has any bad blocks after installation of the device in the system. Do not try to access bad blocks. A bad block does not affect the performance of good blocks as it is isolated from the Bit line by the Select gate. Valid numbers of blocks are as follows:


	MIN	TYP	MAX	UNIT
Valid Good Block Number	502	508	512	Block

Figure 37. shows the bad block test flow. Figure 35.

#### (18) Error in Program or Erase operation (failure of Status Read)

The device may fail during a Program or Erase operation due to, for example, to the Write/Erase cycle limits being exceeded. The following system architecture will ensure high system reliability if a failure occurs.

#### **Program**

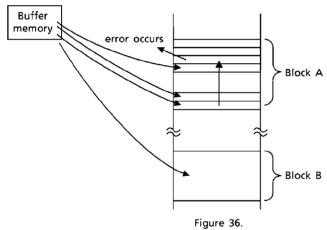

When an error occurs in Block A, try to reprogram the data into another block, Block B, by loading from an external buffer. Then, prevent further system accesses to Block A (by creating a "bad block" table or some other appropriate scheme.)

#### Erase

When an error occurs during an Erase operation, prevent future accesses to this bad block (again by creating a table within the system or some other appropriate scheme.)

TC58V32FT-38
1996 - 08 - 19
TOSHIBA CORPORATION

# **BAD BLOCK TEST FLOW**

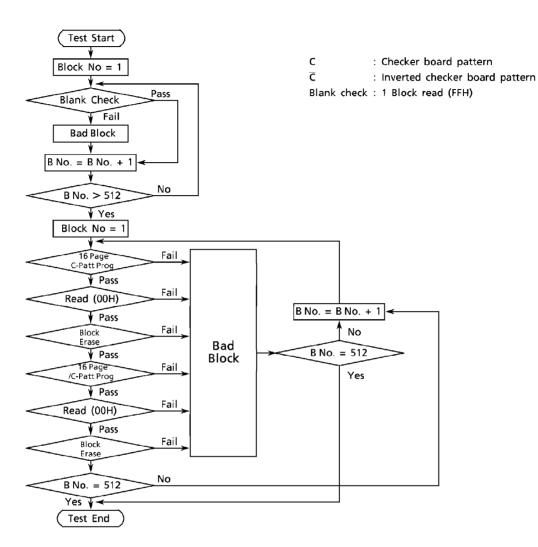


Figure 37.


TC58V32FT-39
1996 - 08 - 19
TOSHIBA CORPORATION


## **PACKAGE DIMENSIONS**


• Plastic TSOP


TSOP44-P-400B

UNITS: mm

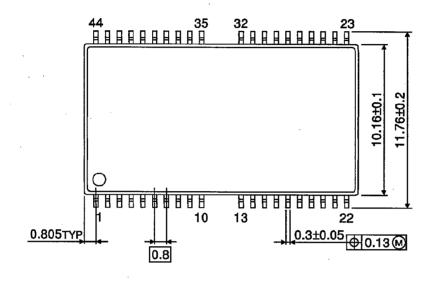



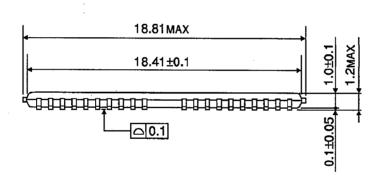



TC58V32FT-40\*
1996-08-19
TOSHIBA CORPORATION