BANTAM TYPE® JACKS


SWITCHCRAFT, INC. 5555 N. Elston Ave. • Chicago, IL 60630 • 773 792-2700 • FAX: 773 792-2129 • www.switchcraft.com

TT-JAX® (.173") TELEPHONE TRIPLE JACKS BANTAM TYPE®



FEATURES

- · Steel or die-cast frames.
- TT95 Tri-Jax® jacks: three, 3-conductor jacks on one frame. Twin jacks, (on .312 inch centers, LINE & EQUIPMENT functions), have strapped shunts installed. The third jack (MONITOR) is unwired. See TT95 schematic.
- TT96 Tri-Jax jacks: Same as TT95 jacks, except third jack (MONITOR) has tip and ring springs, respectively, jumpered to tip and ring springs of top (LINE) jack.
- Selection of solder lugs or wire-wrapping terminals.
- Palladium welded crossbar contact are standard in switching circuits.
- TT95, TT95DC, WTT95 and WTT95DC jacks mount in Series B1700 jack panels.
- TT95FM, TT95FMDC, TT96FM, TT96FMDC and wire-wrapping versions mount in Series TT53, TT54, TT57 and TT58 jack panels.

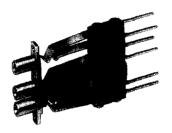

WTT95DC
DIE-CAST FRAME (Special order only)



TT95FM STEEL FRAME



TT95 SCHEMATIC



TT96 SCHEMATIC

Solder Lugs		Wire-Wrapping Terminals				Tuning Mating
Steel	Die Cast	Steel	Die Cast	Conductors	Schematic	Typical Mating Plug
TT95	♦TT95DC	WTT95	≎WTT95DC	3	TT95	TT253
TT95FM	♦TT95FMDC	WTT95FM	○WTT95FMDC	Plus	TT95	and
TT96FM	○TT96FMDC	WTT96FM	≎WTT96FMDC	Twin-3	TT96	TT263

[♦] Special order only

JACKS AND PLUGS

SPECIFICATIONS

Frame: Plated (steel or diecast)
Stack Screws: Stainless steel.


Bushings: Plated (steel or copper alloy).


Contact Springs: Copper alloy.

Contacts: Welded crossbar palladium. Other precious metal alloys in various sizes available on special order.

Mounting Hardware: #3-48 x 1/4 inch mounting screws, **P10834**, can be ordered separately for rear mount jacks. Two mounting screws, **P25424**, are supplied with front

mount jacks.

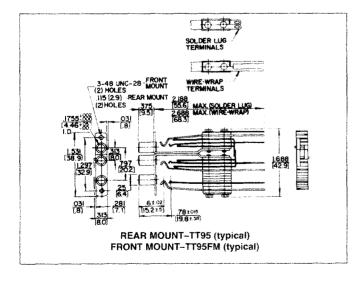

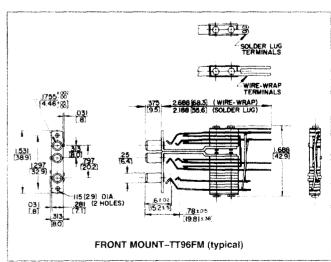

DIMENSIONS ARE FOR REFERENCE ONLY

(mm)

NOTE: Contact your Switchcraft Representative for price and delivery.