## TOSHIBA

### TENTATIVE TOSHIBA MOS DIGITAL INTEGRATED CIRCUIT SILICON GATE CMOS

## 2 GBIT (256M $\times$ 8 BIT/128M $\times$ 16 BIT) CMOS NAND $\text{E}^2\text{PROM}$

## **DESCRIPTION**

The TC58NVG1SxB is a single 3.3 V 2 Gbit (2,214,592,512 bits) NAND Electrically Erasable and Programmable Read-Only Memory (NAND  $E^2$ PROM) organized as (2048 + 64) bytes/(1024 + 32) words × 64 pages × 2048 blocks. The device has a 2112-byte/1056-word static register which allow program and read data to be transferred between the register and the memory cell array in 2112-byte increments. The Erase operation is implemented in a single block unit (128 Kbytes + 4 Kbytes: 2112 bytes × 64 pages).

The TC58NVG1SxB is a serial-type memory device which utilizes the I/O pins for both address and data input/output as well as for command inputs. The Erase and Program operations are automatically executed making the device most suitable for applications such as solid-state file storage, voice recording, image file memory for still cameras and other systems which require high-density non-volatile memory data storage.

## **FEATURES**

• Organization

	TC58NVG1S3B	TC58NVG1S8B
Memory cell array	$2112\times128K\times8$	$1056 \times 128K \times 16$
Register	2112 × 8	1056  imes 16
Page size	2112 bytes	1056 words
Block size	(128K + 4K) bytes	(64K + 2K) words

• Modes

Read, Reset, Auto Page Program, Auto Block Erase, Status Read

- Mode control Serial input/output Command control
- Number of valid blocks Max 2048 blocks Min 2008 blocks
- Power supply  $V_{CC} = 2.7 \ V \ to \ 3.6 \ V$
- Program/Erase Cycles 100000 Cycles (With ECC)

#### Access time Cell array to register 25 μs max Serial Read Cycle 50 ns min

- Program/Erase time Auto Page Program Auto Block Erase
  200 μs/page typ. 1.5 ms/block typ.
- Operating current Read (50 ns cycle) 10 mA typ.
  Program (avg.) 10 mA typ.
  Erase (avg.) 10 mA typ.
  Standby 50 μA max
- Package TC58NVG1S3BFT00 TSOP I 48-P-1220-0.50 TC58NVG1S8BFT00 TSOP I 48-P-1220-0.50 (Weight: 0.53 g typ.)


## PIN ASSIGNMENT (TOP VIEW)

			TC58NVG1S8BFT00			
			TC58NVG1S3BFT00			
×16	×8				×8	×16
NCCCCDDYEUCCCCSSCCEUM	R S S S S S S S S S S S S S S S S S S S	$ \begin{array}{c} 1 \\ 2 \\ 2 \\ 3 \\ 4 \\ 5 \\ 6 \\ 7 \\ 8 \\ 9 \\ 10 \\ 11 \\ 12 \\ 13 \\ 11 \\ 12 \\ 13 \\ 14 \\ 15 \\ 16 \\ 17 \\ 18 \\ 20 \\ 21 \\ 20 \\ 22 \\ 23 \\ 24 \\ 24 \\ \end{array} $		48 47 46 45 44 43 42 41 40 39 28 37 36 37 36 37 36 33 37 36 33 32 29 28 31 30 29 28 27 20 28 27 20 28 27 25 25	NC NC I/O8 I/O7 I/O6 I/O5 NC VCC VCC VCC VCC NC I/O4 I/O3 I/O2 I/O1 NC NC NC NC NC NC	Vss I/016 I/08 I/015 I/07 I/014 I/06 I/013 I/05 PSL NC Vcc NC NC NC NC NC NC NC I/012 I/04 I/011 I/03 I/010 I/02 I/09 I/01 Vss

## **PINNAMES**

I/O1 to I/O8	I/O port
I/O9 to I/O16	I/O port (×16)
CE	Chip enable
WE	Write enable
RE	Read enable
CLE	Command latch enable
ALE	Address latch enable
PSL	Power on select
WP	Write protect
RY/BY	Ready/Busy
GND	Ground
V <sub>CC</sub>	Power supply
V <sub>SS</sub>	Ground

## **BLOCK DIAGRAM**

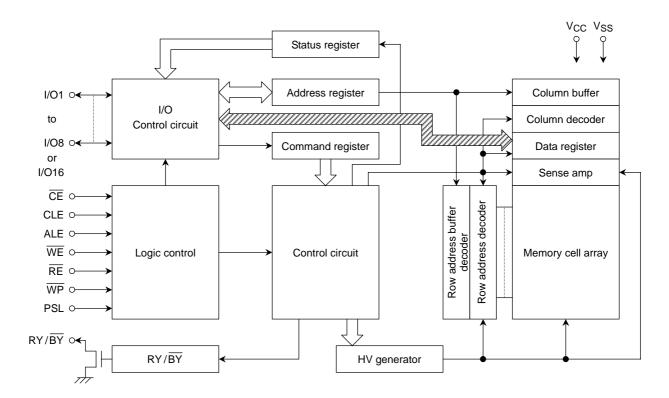

## **ABSOLUTE MAXIMUM RATINGS**

SYMBOL	RATING	VALUE	UNIT
V <sub>CC</sub>	Power Supply Voltage	-0.6 to 4.6	V
V <sub>IN</sub>	Input Voltage	-0.6 to 4.6	V
V <sub>I/O</sub>	Input /Output Voltage	–0.6 V to V <sub>CC</sub> + 0.3 V ( $\leq$ 4.6 V)	V
PD	Power Dissipation	0.3	W
T <sub>SOLDER</sub>	Soldering Temperature (10 s)	260	°C
T <sub>STG</sub>	Storage Temperature	-55 to 150	°C
T <sub>OPR</sub>	Operating Temperature	0 to 70	°C

## CAPACITANCE \*(Ta = 25°C, f = 1 MHz)

SYMBOL	PARAMETER	CONDITION	MIN	MAX	UNIT
C <sub>IN</sub>	Input	$V_{IN} = 0 V$	_	10	pF
C <sub>OUT</sub>	Output	V <sub>OUT</sub> = 0 V		10	pF

\* This parameter is periodically sampled and is not tested for every device.

## VALID BLOCKS

SYMBOL	PARAMETER	MIN	TYP.	MAX	UNIT
N <sub>VB</sub>	Number of Valid Blocks	2008	_	2048	Blocks

NOTE: The device occasionally contains unusable blocks. Refer to Application Note (13) toward the end of this document. The first block (Block 0) is guaranteed to be a valid block at the time of shipment. The minimum number of valid blocks is guaranteed over the lifetime.

## **RECOMMENDED DC OPERATING CONDITIONS**

SYMBOL	PAR	MIN	TYP.	MAX	UNIT	
Vcc	Power Supply Voltage	2.7 V	_	3.6 V	V	
VIH	High Level input Voltage	ut Voltage 2.7 V $\leq$ V <sub>CC</sub> $\leq$ 3.6 V		_	V <sub>CC</sub> + 0.3	V
V <sub>IL</sub>	Low Level Input Voltage	$2.7 \text{ V} \leq \text{V}_{CC} \leq 3.6 \text{ V}$	-0.3*	_	0.8	V

\* -2 V (pulse width lower than 20 ns)

## **DC CHARACTERISTICS** (Ta = 0 to 70 , $V_{CC} = 2.7$ V to 3.6 V)

SYMBOL	PARAMETER	CONDITION	MIN	TYP.	MAX	UNIT
IIL	Input Leakage Current	$V_{IN} = 0 V$ to $V_{CC}$		_	±10	μΑ
I <sub>LO</sub>	Output Leakage Current	$V_{OUT} = 0 V$ to $V_{CC}$	_	_	±10	μA
		PSL = GND or NC	_	10	30	
ICCO0*	Power On Reset Current	PSL = V <sub>CC</sub> , FFh command input after Power On	_	10	30	mA
I <sub>CCO1</sub>	Serial Read Current	$\overline{CE} = V_{IL}, I_{OUT} = 0 \text{ mA}, \text{ tcycle} = 50 \text{ ns}$	_	10	30	mA
I <sub>CCO2</sub>	Programming Current	_	_	10	30	mA
I <sub>CCO3</sub>	Erasing Current	_	_	10	30	mA
I <sub>CCS1</sub>	Standby Current	$\overline{CE} = V_{IH}, \overline{WP} = 0 V/V_{CC}$	_	_	1	mA
I <sub>CCS2</sub>	Standby Current	$\overline{\text{CE}} = \text{V}_{\text{CC}} - 0.2 \text{ V},  \overline{\text{WP}} = 0 \text{ V/V}_{\text{CC}}$	_	10	50	μΑ
V <sub>OH</sub>	High Level Output Voltage	$I_{OH} = -0.4 \text{ mA} (2.7 \text{ V} \le V_{CC} \le 3.6 \text{ V})$	2.4	_	_	V
V <sub>OL</sub>	Low Level Output Voltage	$I_{OL} = 2.1 \text{ mA} (2.7 \text{ V} \le V_{CC} \le 3.6 \text{ V})$	_	_	0.4	V
I <sub>OL</sub> (RY/ <del>B</del> Y)	Output current of RY/BY	$V_{OL} = 0.4 \text{ V} (2.7 \text{ V} \le V_{CC} \le 3.6 \text{ V})$	_	8	_	mA

\* Refer to application note (2) for detail

# $\frac{AC\ CHARACTERISTICS\ AND\ RECOMMENDED\ OPERATING\ CONDITIONS}{(Ta=0\ to\ 70\quad,\ V_{CC}=2.7\ V\ to\ 3.6\ V)}$

SYMBOL	PARAMETER	MIN	MAX	UNIT	NOTES
t <sub>CLS</sub>	CLE Setup Time	0	—	ns	
tCLH	CLE Hold Time	10	_	ns	
t <sub>CS</sub>	CE Setup Time	0	_	ns	
t <sub>CH</sub>	CE Hold Time	10		ns	
t <sub>WP</sub>	Write Pulse Width	25	_	ns	
t <sub>ALS</sub>	ALE Setup Time	0	_	ns	
t <sub>ALH</sub>	ALE Hold Time	10		ns	
t <sub>DS</sub>	Data Setup Time	20	_	ns	
t <sub>DH</sub>	Data Hold Time	10		ns	
t <sub>WC</sub>	Write Cycle Time	50		ns	
twH	WE High Hold Time	15	_	ns	
t <sub>WW</sub>	WP High to WE Low	100		ns	
t <sub>RR</sub>	Ready to RE Falling Edge	20		ns	
t <sub>RW</sub>	Ready to WE Falling Edge	20	_	ns	
t <sub>RP</sub>	Read Pulse Width	35	_	ns	
t <sub>RC</sub>	Read Cycle Time	50		ns	
t <sub>REA</sub>	RE Access Time	_	35	ns	
t <sub>CEA</sub>	CE Access Time	_	45	ns	
t <sub>CLEA</sub>	CLE Access Time	_	45	ns	
t <sub>ALEA</sub>	ALE Access Time	_	45	ns	
t <sub>OH</sub>	Data Output Hold Time	10	_	ns	
t <sub>RHZ</sub>	RE High to Output High Impedance	_	30	ns	
t <sub>CHZ</sub>	CE High to Output High Impedance	_	20	ns	
t <sub>REH</sub>	RE High Hold Time	15		ns	
t <sub>IR</sub>	Output-High-impedance-to- RE Falling Edge	0	_	ns	
t <sub>RHW</sub>	RE High to WE Low	30	_	ns	
t <sub>WHC</sub>	WE High to CE Low	30	—	ns	
t <sub>WHR</sub>	WE High to RE Low	30	_	ns	
t <sub>R</sub>	Memory Cell Array to Starting Address	_	25	μS	
t <sub>WB</sub>	WE High to Busy		200	ns	
t <sub>RST</sub>	Device Reset Time (Ready/Read/Program/Erase)		6/6/10/500	μs	

## TOSHIBA

## AC TEST CONDITIONS

PARAMETER	CONDITION
	$2.7 \text{ V} \leq \text{V}_{CC} \leq 3.6 \text{ V}$
Input level	2.4 V, 0.4 V
Input pulse rise and fall time	3ns
Input comparison level	1.5 V, 1.5 V
Output data comparison level	1.5 V, 1.5 V
Output load	C <sub>L</sub> (100 pF) + 1 TTL

Note: Busy to ready time depends on the pull-up resistor tied to the  $RY/\overline{BY}$  pin. (Refer to Application Note (9) toward the end of this document.)


# $\frac{PROGRAMMING \text{ AND ERASING CHARACTERISTICS}}{(Ta=0 \text{ to } 70 \quad , V_{CC}=2.7 \text{ V to } 3.6 \text{ V})}$

SYMBOL	PARAMETER		TYP.	MAX	UNIT	NOTES
t <sub>PROG</sub>	Average Programming Time		200	500	μS	
N	Number of Partial Program Cycles in the Same Page			8		(1)
t <sub>BERASE</sub>	Block Erasing Time		1.5	3	ms	


(1) Refer to Application Note (12) toward the end of this document.

## TIMING DIAGRAMS

## Latch Timing Diagram for Command/Address/Data

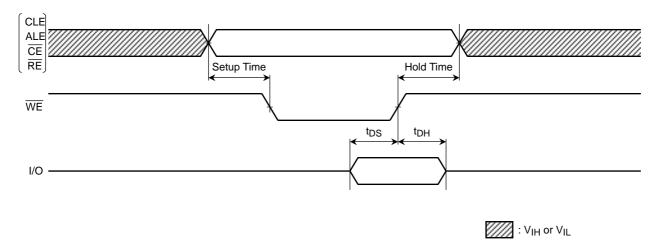


## Command Input Cycle Timing Diagram

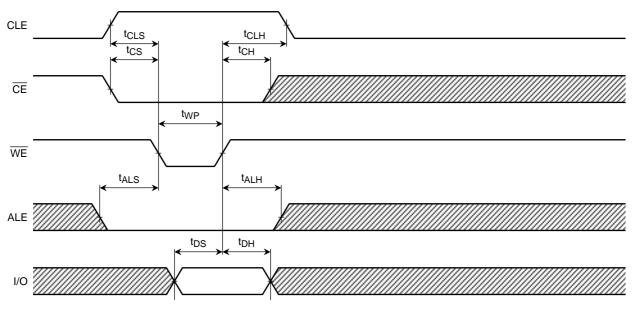


: VIH or VIL

### Address Input Cycle Timing Diagram

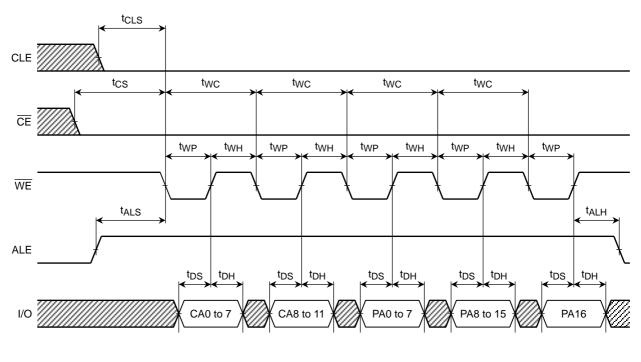





## Data Input Cycle Timing Diagram

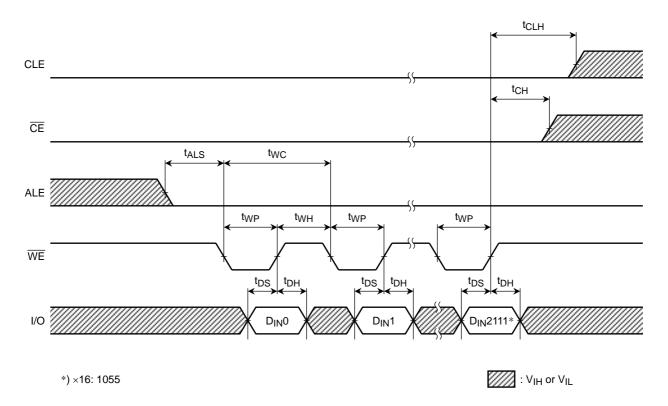

## Serial Read Cycle Timing Diagram

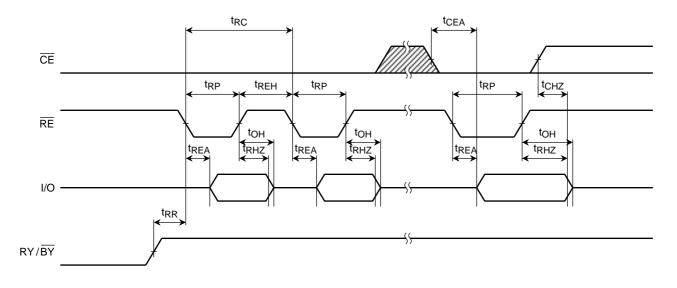

### Status Read Cycle Timing Diagram

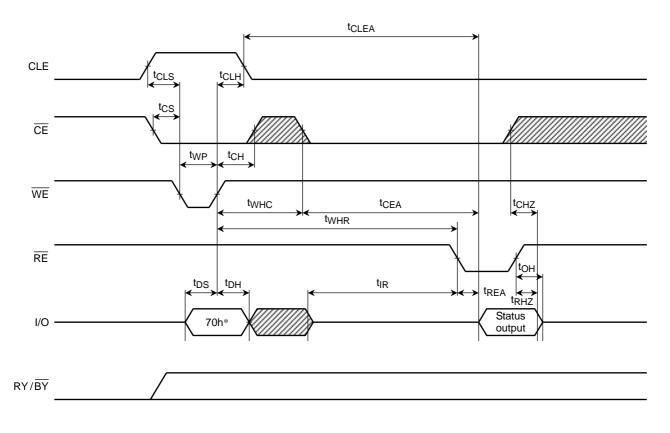


\*: 70h represents the hexadecimal number


: V<sub>IH</sub> or V<sub>IL</sub>




## Read Cycle Timing Diagram

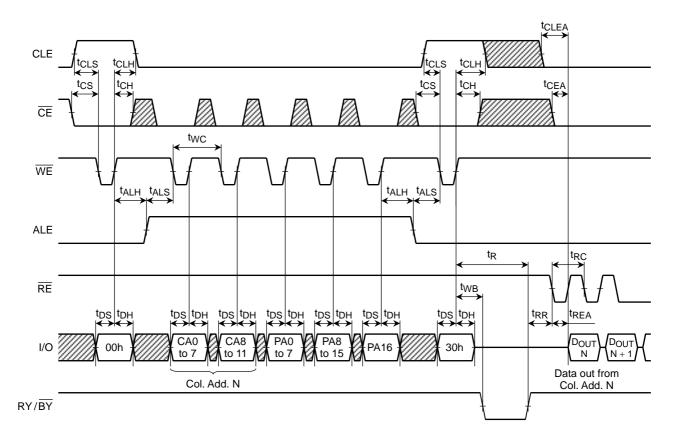

## Read Cycle Timing Diagram: When Interrupted by CE

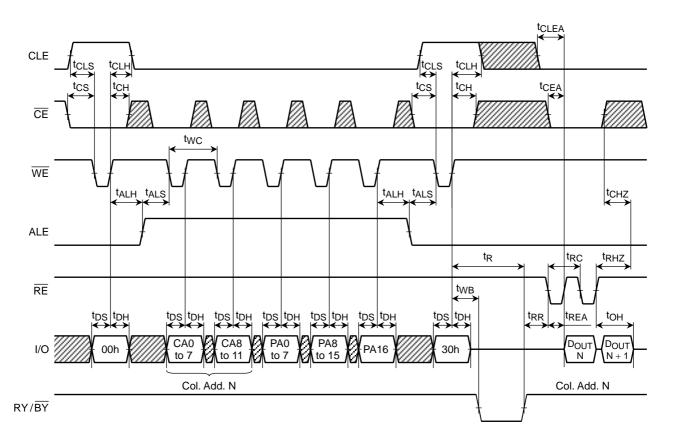


Column Address Change in Read Cycle Timing Diagram (1/2)

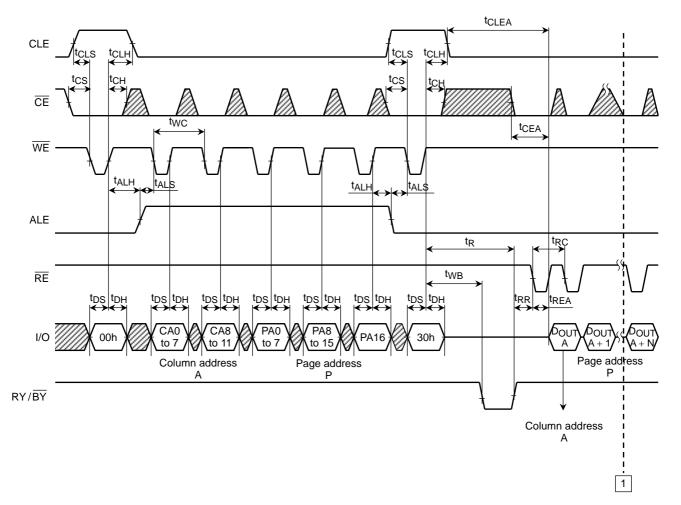


Continues from 1 of next page

Column Address Change in Read Cycle Timing Diagram (2/2)

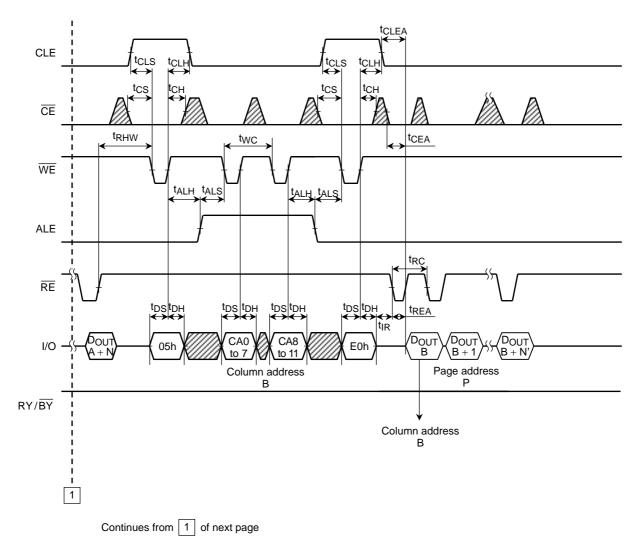


## Auto-Program Operation Timing Diagram

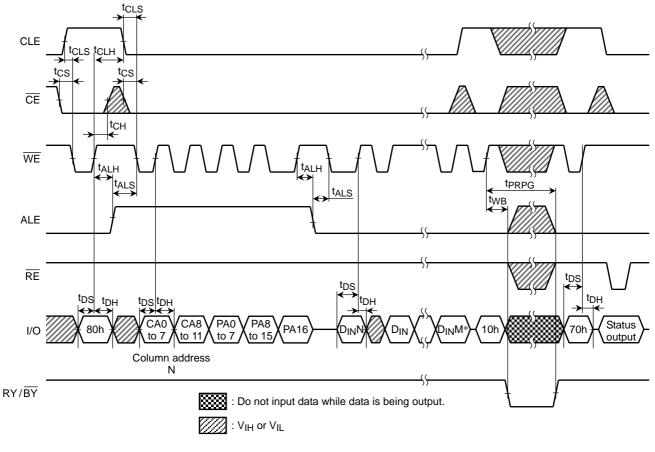


\*) M: up to 2112 (byte input data for ×8 device).
M: up to 1056 (word input data for ×16 device).

## Auto Block Erase Timing Diagram

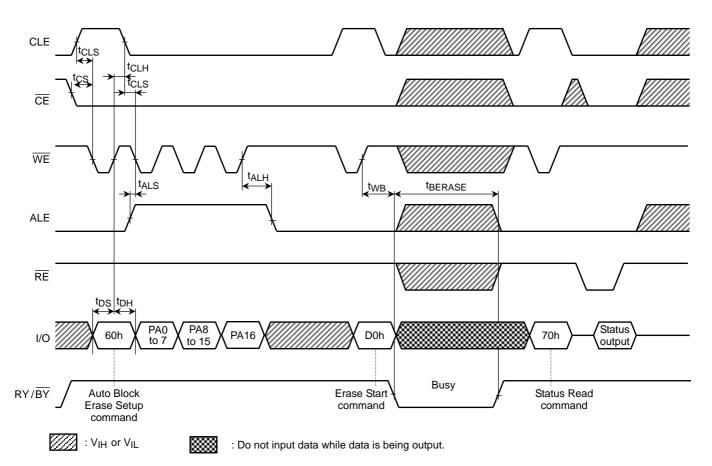

## ID Read Operation Timing Diagram

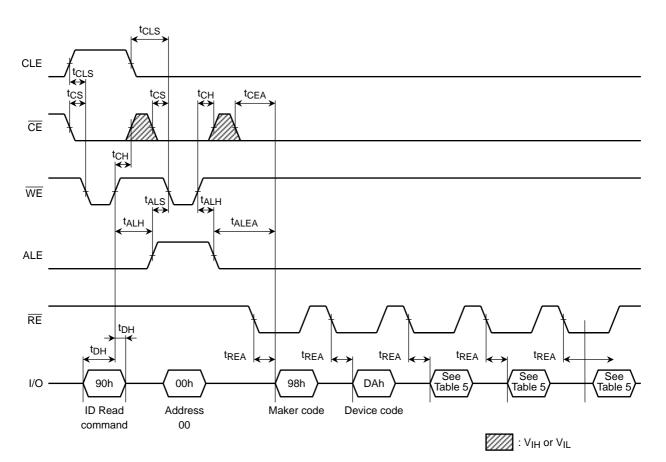

## TOSHIBA

## **PIN FUNCTIONS**

The device is a serial access memory which utilizes time-sharing input of address information.

#### Command Latch Enable: CLE

The CLE input signal is used to control loading of the operation mode command into the internal command register. The command is latched into the command register from the I/O port on the rising edge of the  $\overline{WE}$  signal while CLE is High.

#### Address Latch Enable: ALE

The ALE signal is used to control loading address information into the internal address register. Address information is latched into the address register from the I/O port on the rising edge of  $\overline{WE}$  while ALE is High.

#### Chip Enable: CE

The device goes into a low-power Standby mode when  $\overline{CE}$  goes High during the device is in Ready state. The  $\overline{CE}$  signal is ignored when device is in Busy state (RY /  $\overline{BY}$  = L), such as during a Program or Erase or Read operation, and will not enter Standby mode even if the  $\overline{CE}$  input goes High.

#### Write Enable: WE

The WE signal is used to control the acquisition of data from the I/O port.

#### Read Enable: RE

The  $\overline{RE}$  signal controls serial data output. Data is available t<sub>REA</sub> after the falling edge of  $\overline{RE}$ . The internal column address counter is also incremented (Address = Address + I) on this falling edge.

#### I/O Port: I/O1 to 8

The I/O1 to 8 pins are used as a port for transferring address, command and input/output data to and from the device.

#### I/O Port: I/O9 to 16 (×16 device)

The I/O9 to 16 pins are used as a port for transferring input/output data to and from the device. I/O9 to 16 pins must be low level (VIL) when address and command are input.

#### Write Protect: WP

The  $\overline{WP}$  signal is used to protect the device from accidental programming or erasing. The internal voltage regulator is reset when  $\overline{WP}$  is Low. This signal is usually used for protecting the data during the power-on/off sequence when input signals are invalid.

#### Ready/Busy: RY/BY

The  $RY/\overline{BY}$  output signal is used to indicate the operating condition of the device. The  $RY/\overline{BY}$  signal is in Busy state ( $RY/\overline{BY} = L$ ) during the Program, Erase and Read operations and will return to Ready state ( $RY/\overline{BY} = H$ ) after completion of the operation. The output buffer for this signal is an open drain and has to be pulled-up to Vccq with an appropriate resister.


#### Power on Select: PSL

The PSL signal is used to select whether the device initialization should take place during the device power on or during the first Reset. Please refer to the application note (2) for details.

Table 1. Addressing

### Schematic Cell Layout and Address Assignment


The Program operation works on page units while the Erase operation works on block units.

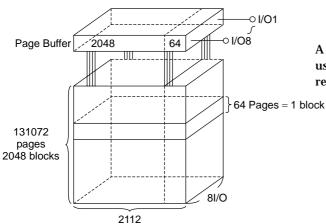

A page consists of 2112 bytes in which 2048 bytes are used for main memory storage and 64 bytes are for redundancy or for other uses.

1 page = 2112 bytes

1 block = 2112 bytes  $\times$  64 pages = (128K + 4K) bytes Capacity = 2112 bytes  $\times$  64 pages x 2048blocks

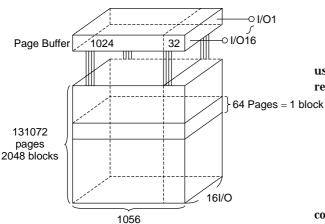

A page consists of 1056 words in which 1024 words are used for main memory storage and 32 words are for redundancy or for other uses.

1 page = 1056 words

1 block = 1056 words  $\times$  64 pages = (64K + 2K) words Capacity = 1056 words  $\times$  64 pages  $\times$  2048 blocks

An address is read in via the I/O port over three consecutive clock cycles, as shown in Table 1.

	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
First cycle	CA7	CA6	CA5	CA4	CA3	CA2	CA1	CA0
Second cycle	L	L	L	L	CA11	CA10	CA9	CA8
Third cycle	PA7	PA6	PA5	PA4	PA3	PA2	PA1	PA0
Fourth cycle	PA15	PA14	PA13	PA12	PA11	PA10	PA9	PA8
Fifth cycle	L	L	L	L	L	L	L	PA16

CA0 to CA11: Column address PA0 to PA16: Page address

PA6 to PA16: Block address PA0 to PA5: NAND address in block

Note) I/O9 – 16 must be held low when address is input (×16 device).

#### Operation Mode: Logic and Command Tables

The operation modes such as Program, Erase, Read and Reset are controlled by command operations shown in Table 3. Address input, command input and data input/output are controlled by the CLE, ALE,  $\overline{CE}$ ,  $\overline{WE}$ ,  $\overline{RE}$  and  $\overline{WP}$  signals, as shown in Table 2.

#### Table 2. Logic Table

	CLE	ALE	CE	WE	RE	WP <sup>*1</sup>
Command Input	Н	L	L		Н	*
Data Input	L	L	L		Н	Н
Address input	L	Н	L		Н	*
Serial Data Output	L	L	L	Н		*
During Program (Busy)	*	*	*	*	*	н
During Erase (Busy)	*	*	*	*	*	Н
	*	*	Н	*	*	*
During Read (Busy)	*	*	L	H (*2)	H (*2)	*
Program, Erase Inhibit	*	*	*	*	*	L
Standby	*	*	Н	*	*	0 V/V <sub>CC</sub>

H: VIH, L: VIL, \*: VIH or VIL

\*1: Refer to Application Note (10) toward the end of this document regarding the WP signal when Program or Erase Inhibit

\*2: If  $\overline{CE}$  is low during read busy,  $\overline{WE}$  and  $\overline{RE}$  must be held High to avoid unintended command/address input to the device or read to device. Reset or Status Read command can be input during Read Busy.

## TOSHIBA

Table 3. Command table (HEX)


	First Cycle	Second Cycle	Acceptable while Busy
Serial Data Input	80	_	
Read	00	30	
Column Address Change in Serial Data Output	05	E0	
Auto Page Program	80	10	
Column Address Change in Serial Data Input	85	_	
Auto Block Erase	60	D0	
ID Read	90	—	
Status Read	70	—	0
Reset	FF	—	0

#### Table 4 shows the operation states for Read mode.

Table 4. Read mode operation states

	CLE	ALE	CE	WE	RE	I/O1 to I/O8 (I/O16)	Power
Output select	L	L	L	н	L	Data output	Active
Output Deselect	L	L	L	Н	н	High impedance	Active


H: VIH, L: VIL, \*: VIH or VIL



## **DEVICE OPERATION**


#### Read Mode


Read mode is set when the "00h" and "30h" commands are issued to the Command register. Between the two commands, a start address for the Read mode needs to be issued. Refer to the figures below for the sequence and the block diagram (Refer to the detailed timing chart.).

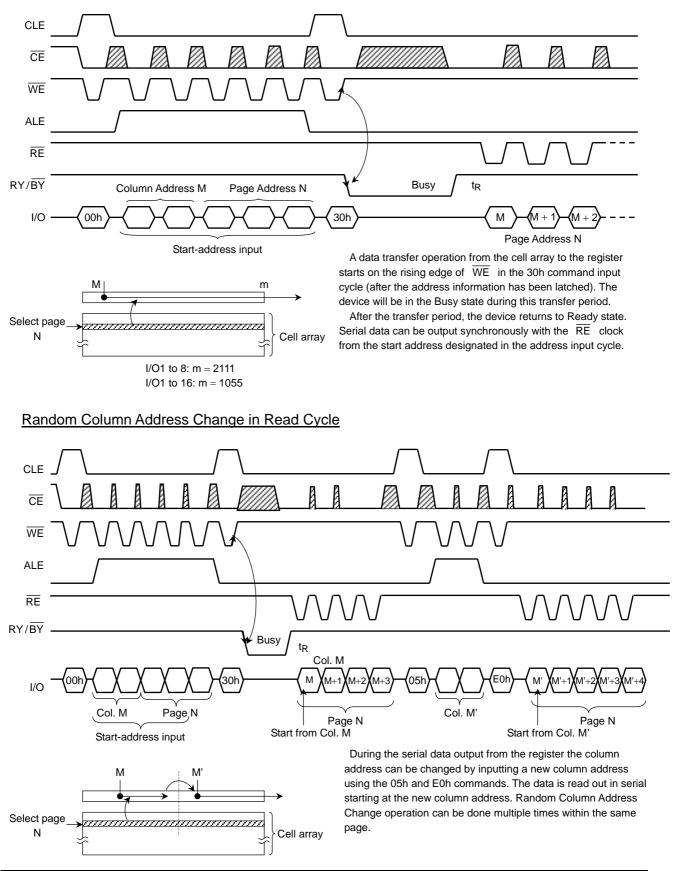

## Auto Page Program Operation

The device carries out an Automatic Page Program operation when it receives a "10h" Program command after the address and data have been input. The sequence of command, address and data input is shown below. (Refer to the detailed timing chart.)

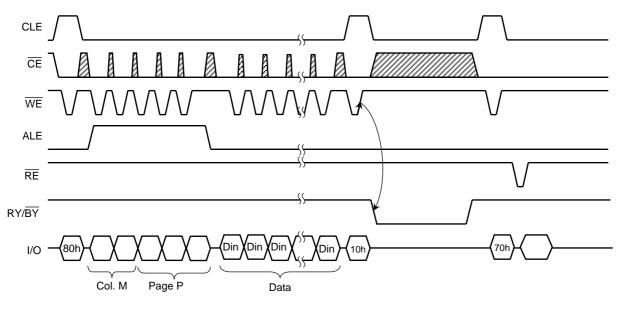

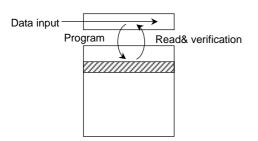


The data is transferred (programmed) from the register to the selected page on the rising edge of  $\overline{\text{WE}}$  following input of the "10h" command. After programming, the programmed data is transferred back to the register to be automatically verified by the device. If the programming does not succeed, the Program/Verify operation is repeated by the device until success is achieved or until the maximum loop number set in the device is reached.

#### Random Column Address Change in Auto Page Program Operation


The column address can be changed by the 85h command during the data input sequence of the Auto Page Program operation.

Two address input cycles after the 85h command are recognized as a new column address for the data input. After the new data is input to the new column address, the 10h command initiates the actual data program into the selected page automatically. The Random Column Address Change operation can be repeated multiple times within the same page.

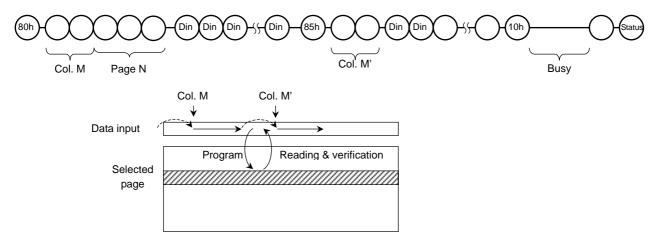


#### Auto Block Erase

The Auto Block Erase operation starts on the rising edge of  $\overline{WE}$  after the Erase Start command "D0h" which follows the Erase Setup command "60h". This two-cycle process for Erase operations acts as an extra layer of protection from accidental erasure of data due to external noise. The device automatically executes the Erase and Verify operations.



#### ID Read

The device contains ID codes which can be used to identify the device type, the manufacturer, and features of the device. The ID codes can be read out under the following timing conditions:

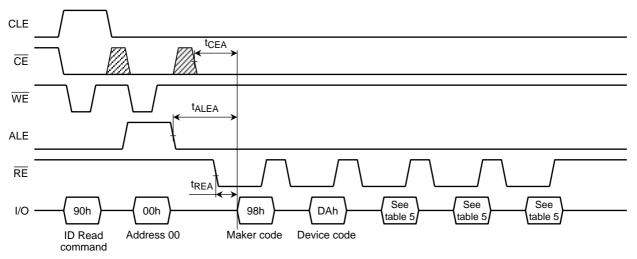

For the specifications of the access times  $t_{\mbox{\scriptsize REAI}}, t_{\mbox{\scriptsize CEA}}$  and  $t_{\mbox{\scriptsize ALEA}}$  refer to the AC Characteristics.

Table 5. Co	Table 5. Code table									
	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1	Hex Data
1st Data	Maker Code	1	0	0	1	1	0	0	0	98h
2nd Data	Device Code	1	1	0	1	1	0	1	0	DAh
3rd Data	Chip Number, Cell Type, PGM Page	0 or 1	0	0	0	0	0	0	0	00h or 80h
4th Data	Page Size, Block Size, Redundant Size, Organization	0 or 1	0 or 1	0	1	0	1	0	1	×8) 15h or 95h ×16) 55h or D5h
5th Data	Plane Number, Plane Size	0 or 1	1	0	0	0	1	0	0	44h or C4h

#### 3rd Data

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
Internal Chip Number	1 2 4 8							0 0 1 1	0 1 0 1
Cell Type	2 level cell 4 level cell 8 level cell 16 level cell					0 0 1 1	0 1 0 1		
Number of simultaneously programmed pages	1 2 4 8			0 0 1 1	0 1 0 1				
Reserved		0 or 1	0						

## **TOSHIBA**

## TC58NVG1S3BFT00/TC58NVG1S8BFT00

#### 4th Data

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
Page Size (without redundant area)	1 KB 2 KB 4K KB 8 KB							0 0 1 1	0 1 0 1
Block Size (without redundant area)	64 KB 128 KB 256 KB 512 KB			0 0 1 1	0 1 0 1				
Redundant area size (byte/512byte)	8 16 Reserved Reserved					0 0 1 1	0 1 0 1		
Organization	×8 ×16		0 1						
Reserved		0 or 1							

#### 5th Data

	Description	I/O8	I/07	I/O6	I/O5	I/O4	I/O3	I/O2	I/O1
Plane Number	1 2 4 8					0 0 1 1	0 1 0 1		
Plane Size	64 Mbit 128 Mbit 256 Mbit 512 Mbit 1 Gbit 2 Gbit 4 Gbit 8 Gbit		0 0 0 1 1 1	0 0 1 1 0 0 1 1	0 1 0 1 0 1 0				
Power Supply	3 V only 1.8 V & 3.3 V dual								0 1
Reserved		0 or 1						0	

#### Status Read


The device automatically implements the execution and verification of the Program and Erase operations. The Status Read function is used to monitor the Ready/Busy status of the device, determine the result (pass /fail) of a Program or Erase operation, and determine whether the device is in Protect mode. The device status is output via the I/O port using  $\overline{RE}$  after a "70h" command input. The Status Read can also be used during a Read operation to find out the Ready/Busy status.

The resulting information is outlined in Table 6.

Table	6.	Status	output	table
-------	----	--------	--------	-------

	Definit	tion	Page Program Block Erase	Read	
I/O1	Chip Status1 Pass: 0	Fail: 1	Pass/Fail	Invalid	
I/O2	Not Used		Invalid	Invalid	
I/O3	Not Used		0	0	
I/O4	Not Used		0	0	
I/O5	Not Used		0	0	
I/O6	Ready/Busy Ready: 1	Busy: 0	Ready/Busy	Ready/Busy	
I/O7	Ready/Busy Ready: 1	Busy: 0	Ready/Busy	Ready/Busy	
I/O8	Write Protect Not Protected :0	Protected: 1	Write Protect	Write Protect	
I/O9 to 16	Not used		Not used	Not used	

The Pass/Fail status on I/O1 is only valid during a Program/Erase operation when the device is in the Ready state.

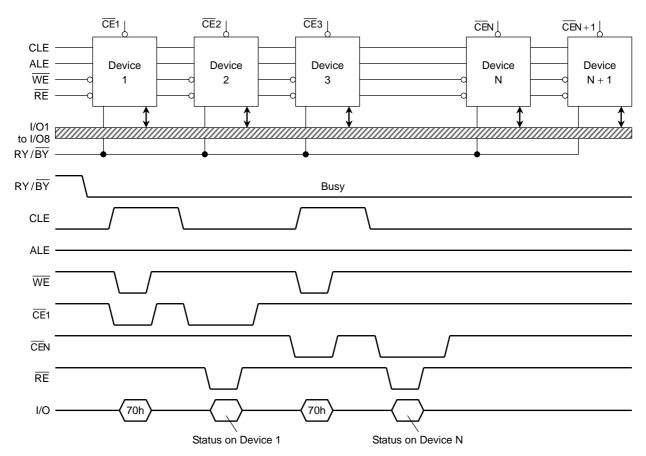

An application example with multiple devices is shown in the figure below.


System Design Note: If the  $RY/\overline{BY}$  pin signals from multiple devices are wired together as shown in the diagram, the Status Read function can be used to determine the status of each individual device.

#### **Reset**


The Reset mode stops all operations. For example, in case of a Program or Erase operation, the internally generated voltage is discharged to 0 volt and the device enters the Wait state.

The response to a "FFh" Reset command input during the various device operations is as follows:

When a Reset (FFh) command is input during programming

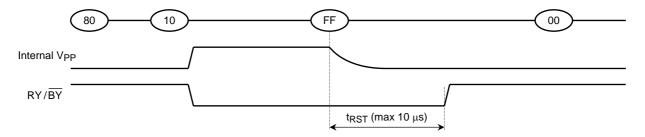



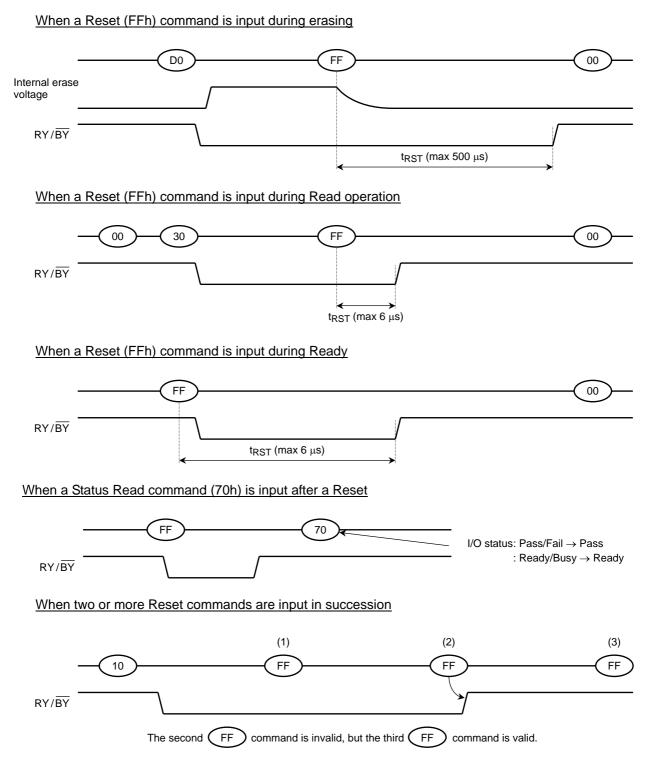


## **APPLICATION NOTES AND COMMENTS**

#### (1) Power-on/off sequence:

The timing sequence shown in the figure below is necessary for the power-on/off sequence.


The device internal initialization starts after the power supply reaches an appropriate level in the power on sequence. During the initialization the device Ready/Busy signal indicates the Busy state as shown in the figure below. In this time period, the acceptable commands are FFh or 70h.

The  $\overline{WP}$  signal is useful for protecting against data corruption at power-on/off.

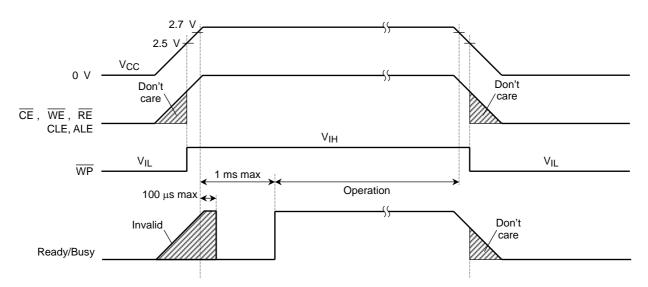

(2) Power-on Reset

The device goes into automatic self initialization during power on if PSL is tied either to GND or NC. During the initialization process, the device consumes a maximum current of 30 mA (I<sub>CCO0</sub>). If PSL is tied to VCC, the device will not complete its self initialization during power on and will not consume I<sub>CCO0</sub>, and completes the initialization process with the first Reset command input after power on. During the first FFh reset Busy period, the device consumes a maximum current of 30 mA (I<sub>CCO0</sub>). In either case (PSL = GND/ NC or V<sub>CC</sub>), the following sequence is necessary because some input signals may not be stable at power-on.



(3) Prohibition of unspecified commands


The operation commands are listed in Table 3. Input of a command other than those specified in Table 3 is prohibited. Stored data may be corrupted if an unknown command is entered during the command cycle.

(4) Restriction of commands while in the Busy state


During the Busy state, do not input any command except 70h and FFh.

#### (5) Acceptable commands after Serial Input command "80h"

Once the Serial Input command "80h" has been input, do not input any command other than the Column Address Change in Serial Data Input command "85h", Auto Program command "10h", or the Reset command "FFh".




If a command other than "85h", "10h" or "FFh" is input, the Program operation is not performed and the device operation is set to the mode which the input command specifies.



(6) Addressing for program operation


Within a block, the pages must be programmed consecutively from the LSB (least significant bit) page of the block to MSB (most significant bit) page of the block. Random page address programming is prohibited.

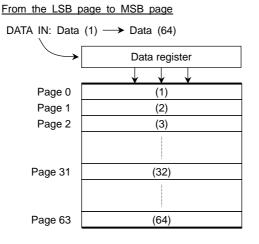

Ex.) Random page program (Prohibition)


DATA IN: Data (1) $\longrightarrow$ Data (64)								
$\searrow$	Data register							
	$\downarrow \downarrow \downarrow$							
Page 0	(2)							
Page 1	(32)							
Page 2	(3)							
Page 31	(1)							
Page 63	(64)							

#### (7) Status Read during a Read operation

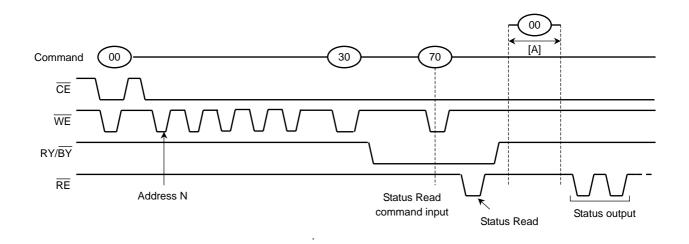


The device status can be read out by inputting the Status Read command "70h" in Read mode. Once the device has been set to Status Read mode by a "70h" command, the device will not return to Read mode unless the Read command "00h" is input during [A]. In this case, data output starts automatically from address N and address input is unnecessary

#### (8) Auto programming failure

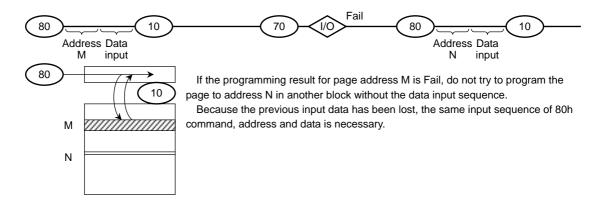

(9)  $RY / \overline{BY}$ : termination for the Ready/Busy pin  $(RY / \overline{BY})$ 


A pull-up resistor needs to be used for termination because the  $\,RY/\,\overline{BY}\,$  buffer consists of an open drain circuit.

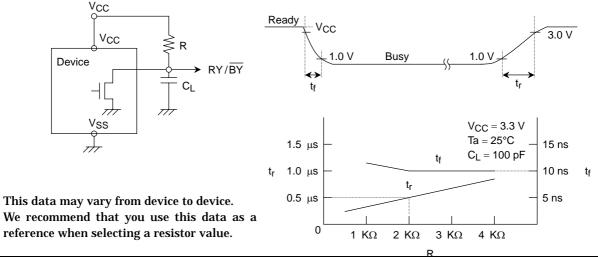


#### (10) Note regarding the $\overline{WP}$ signal

The Erase and Program operations are automatically reset when  $\overline{WP}$  goes Low. The operations are enabled and disabled as follows:


Enable Programming

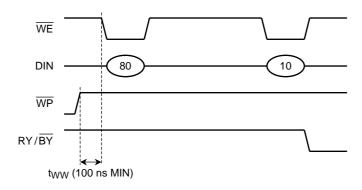


Disable Programming

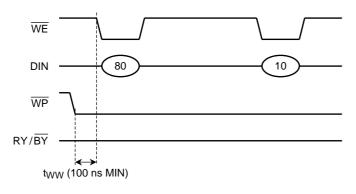

Enable Erasing

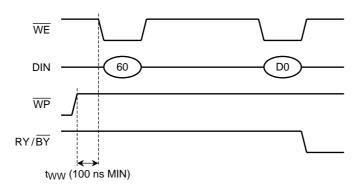


Disable Erasing

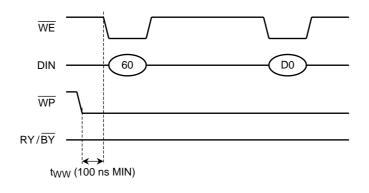

#### (11) When six address cycles are input

Although the device may read in a sixth address, it is ignored inside the chip.

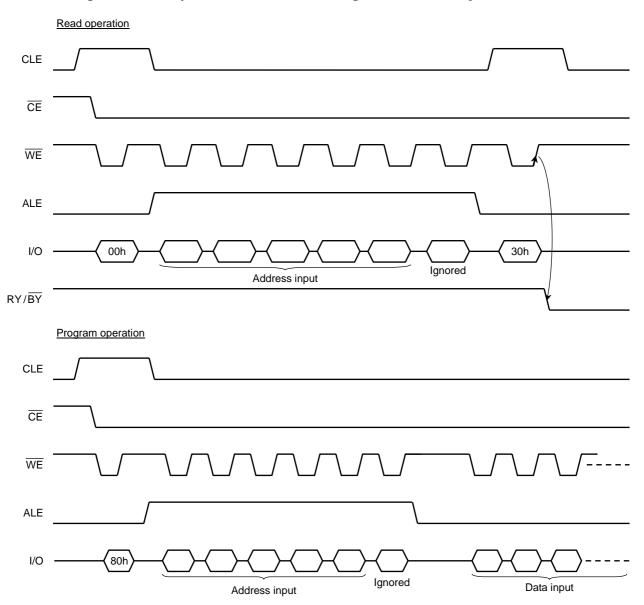

#### (12) Several programming cycles on the same page (Partial Page Program)

A page can be divided into up to 8 segments as follows:


Data area (column address 0 to 2047)	: 512 bytes × 4 segments
1st segment: column address 0 to 511	
2nd segment: column address 512 to 102	23
3rd segment: column address 1024 to 15	535
4th segment: column address 1536 to 20	)47
Redundant area (column address 2048 to 2111) 1st segment: column address 2048 to 20 2nd segment: column address 2064 to 20 3rd segment: column address 2080 to 20 4th segment: column address 2096 to 21	63 079 095

Each segment can be programmed individually as follows:

1st programming	Data Pattern 1		All 1 s		
2nd programming	All 1 s	Data Pattern 2		All 1 s	
8th programming		All 1 s	6		Data Pattern 8
Result	Data Pattern 1	Data Pattern 2			Data Pattern 8

### (13) Invalid blocks (bad blocks)

The device occasionally contains unusable blocks. Therefore, the following issues must be recognized:

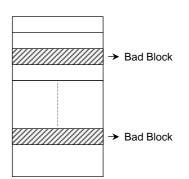

At the time of shipment, all data bytes in a valid block are FFh. For bad blocks, all bytes are not in the FFh state. Please do not perform an erase operation to bad blocks. It may be impossible to recover the bad block information if the information is erased.


Check if the device has any bad blocks after installation into the system. Refer to the test flow for bad block detection. Bad blocks which are detected by the test flow must be managed as unusable blocks by the system.

A bad block does not affect the performance of good blocks because it is isolated from the bit lines by select gates.

The number of valid blocks at the time of shipment is as follows:
---

	MIN	TYP.	MAX	UNIT
Valid (Good) Block Number	2008	—	2048	Block

## Bad Block Test Flow

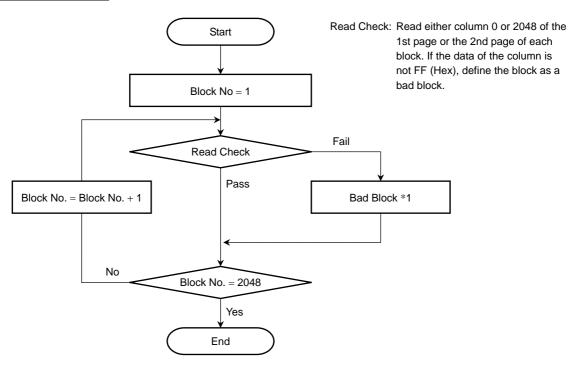

\*1: No erase operation is allowed to detected bad blocks

#### (14) Failure phenomena for Program and Erase operations

The device may fail during a Program or Erase operation.

The following possible failure modes should be considered when implementing a highly reliable system.


FAILURE MODE		DETECTION AND COUNTERMEASURE SEQUENCE		
Block	Erase Failure	Status Read after Erase $\rightarrow$ Block Replacement		
Page	Programming Failure	Status Read after Program $\rightarrow$ Block Replacement		
Single Bit	Programming Failure "1 to 0"	ECC		

• ECC: Error Correction Code. 2 bits per page is necessary.

In case the 2 Kbyte page is divided into segments of 512 bytes, 1 bit correction per segment is necessary.

Block Replacement

Program

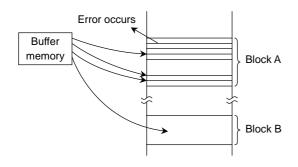


When an error happens in Block A, try to reprogram the data into another Block (Block B) by loading from an external buffer. Then, prevent further system accesses to Block A ( by creating a bad block table or by using another appropriate scheme).

#### Erase

When an error occurs during an Erase operation, prevent future accesses to this bad block (again by creating a table within the system or by using another appropriate scheme).

(15) Do not turn off the power before write/erase operation is complete. Avoid using the device when the battery is low. Power shortage and/or power failure before write/erase operation is complete will cause loss of data and/or damage to data.

## Package Dimensions

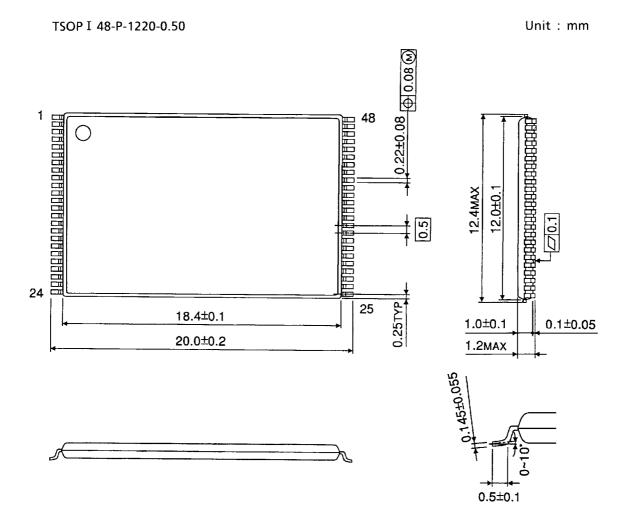

Weight: 0.53 g (typ.)

## **RESTRICTIONS ON PRODUCT USE**

030619EBA

- The information contained herein is subject to change without notice.
- The information contained herein is presented only as a guide for the applications of our products. No responsibility is assumed by TOSHIBA for any infringements of patents or other rights of the third parties which may result from its use. No license is granted by implication or otherwise under any patent or patent rights of TOSHIBA or others.
- TOSHIBA is continually working to improve the quality and reliability of its products. Nevertheless, semiconductor devices in general can malfunction or fail due to their inherent electrical sensitivity and vulnerability to physical stress. It is the responsibility of the buyer, when utilizing TOSHIBA products, to comply with the standards of safety in making a safe design for the entire system, and to avoid situations in which a malfunction or failure of such TOSHIBA products could cause loss of human life, bodily injury or damage to property.

In developing your designs, please ensure that TOSHIBA products are used within specified operating ranges as set forth in the most recent TOSHIBA products specifications. Also, please keep in mind the precautions and conditions set forth in the "Handling Guide for Semiconductor Devices," or "TOSHIBA Semiconductor Reliability Handbook" etc..

- The TOSHIBA products listed in this document are intended for usage in general electronics applications (computer, personal equipment, office equipment, measuring equipment, industrial robotics, domestic appliances, etc.). These TOSHIBA products are neither intended nor warranted for usage in equipment that requires extraordinarily high quality and/or reliability or a malfunction or failure of which may cause loss of human life or bodily injury ("Unintended Usage"). Unintended Usage include atomic energy control instruments, airplane or spaceship instruments, transportation instruments, traffic signal instruments, combustion control instruments, medical instruments, all types of safety devices, etc.. Unintended Usage of TOSHIBA products listed in this document shall be made at the customer's own risk.
- The products described in this document are subject to the foreign exchange and foreign trade laws.
- TOSHIBA products should not be embedded to the downstream products which are prohibited to be produced and sold, under any law and regulations.