

# ROITHNER LASERTECHNIK GIRDH

WIEDNER HAUPTSTRASSE 76 IO40 VIENNA AUSTRIA TEL. +43 I 586 52 43 -0, FAX. -44, OFFICE@ROITHNER-LASER.COM



## LD635-C220



## **TECHNICAL DATA**

## **Red Laser Diode**

### **Features**

Lasing Mode Structure: multi mode
Peak Wavelength: typ. 633 nm
Optical Ouput Power: 220 mW, CW

Package: 9.0 mm, flat window



### **Electrical Connection**

Pin Configuration			Bottom View
10 03 LD 2	PIN 1 2 3	Function  LD Cathode  LD Anode  (PD on request)	2 2 3

## Absolute Maximum Ratings ( $T_C=15^{\circ}C$ )

Item	Symbol	Value	Unit
CW Output Power	Po	220	mW
LD Reverse Voltage	$V_{\rm r}$	0	V
LD Forward Current	l <sub>op</sub>	500	mA
Operating Case Temperature	T <sub>C</sub>	5 +20	°C
Storage Temperature	T <sub>sta</sub>	-40 +85	°C


## Specifications ( $T_C$ =15°C)

Item	Symbol	Min.	Тур.	Max.	Unit			
Optical Specifications								
CW Output Power	Po	-	220	-	mW			
Center Wavelength	$\lambda_{C}$	631	633	635	nm			
Spectral Width (FWHM)	Δλ	-	1	-	nm			
Wavelength Temperature Coefficient	Δλ / ΔΤ	-	0.2	-	nm/K			
FWHM Beam Divergence	ΘΙ	-	3	-	deg			
FWI IWI Bealti Divergence	ΘΪ	-	38	-	deg			
Emitting Area Width	$W_{E}$	-	50	-	μm			
Electrical Specifications								
Threshold Current	I <sub>th</sub>	-	160	-	mA			
Operating Current	l <sub>op</sub>	-	400	-	mA			
Slope Efficiency	η	-	0.92	-	mW/mA			
Operating Voltage	V <sub>op</sub>	-	2.3	-	V			

The above specifications are for reference purpose only and subjected to change without prior notice.



### Package Dimensons

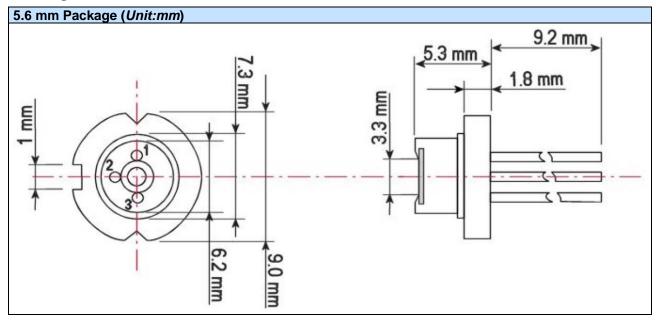

## Safety of Laser light

Laser Light can damage the human eyes and skin. Do not expose the
eye or skin directly to any laser light and/or through optical lens. When
handling the LDs, wear appropriate safety glasses to prevent laser
light, even any reflections from entering to the eye. Focused laser
beam through optical instruments will increase the chance of eye
hazard.



#### **Cautions**

### 1. Operating methode

- This LD shall change its forward voltage requirement and optical ouput power according to temperature change. Also, the LD will require more operation current to maintain same ouput power as it degrades. In order to maintain output power, use of APC (Automatic Power Control) is recommended. Which use monitor feedback to adjust the operation current.
- Confirm that electrical spike current generated by switching on and off does not exceed the
  maximum operating current level specified herein above as absolute maximum rating. Also,
  employ appropriat countermeasures to reduce chattering and/or overshooting in the circuit.

#### 2. Static Electricity

• Static electricity or electrical surges will reduce and degrade the reliability of the LDs. It is recommended to use a wrist trap or anti-electrostatic glove when handeling the product.

### 3. Absolute Maximum Rating

Active layer of LDs shall have high current density and generate high electric field during its operation. In order to prevent excessive damage, the LD must be operated strictly below absolute maximum rating.

NOTE

LASERDIODE MUST BE COOLED