


650mA High Efficiency Synchronous Buck with Dual Channel LDO

General Description

The LP78086 are PMU, and contain a 650mA Buck DC/DC and dual channel 350mA Linear Regulator. Buck DC/DC is a constant frequency, current mode, PWM step-down converter. The device integrates a main switch and a synchronous rectifier for high efficiency. The 2.1V to 6.5V input voltage range makes the LP78086 is ideally suited for portable electronic devices that are powered from 1-cell Li-ion battery or from other power sources within the range such as cellular phones, PDAs and handy-terminals. Internal synchronous rectifier with low RDS(ON) dramatically reduces conduction loss at PWM mode. The internal synchronous switch increases efficiency while eliminate the need for an external Schottky diode. The switching ripple is easily smoothed-out by small package filtering elements due to a fixed operation frequency of 1.5MHz. This along with small TDFN-10 package provide small PCB area application. Other features include soft start, lower internal reference voltage with 2% accuracy, over temperature protection, and over current protection.

Ordering Information

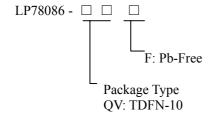


Applications

- ♦ Portable Media Players/MP3 players
- ♦ Cellular and Smart mobile phone
- ♦ PDA
- ♦ DSC
- ♦ Wireless Card

Features

- ♦ 650mA Buck High Efficiency: 93%
- ♦ 1.5MHz Fixed-Frequency PWM Operation
- ♦ Adjustable Output From 0.6V to VIN.
- ♦ Dual Channel 350mA LDO
- ♦ 100% Duty Cycle Low Dropout Operation
- ♦ Available in TDFN-10 Package
- ♦ Low than 1µA Shutdown Current

Pin Configurations



PIN NO	Function
1	VDD
2	SW
3	GND
4	OUT2
5	FB2
6	VINL
7	OUT3
8	FB3
9	EN
10	FB1

Marking Information

Please see website.



Typical Application Circuit

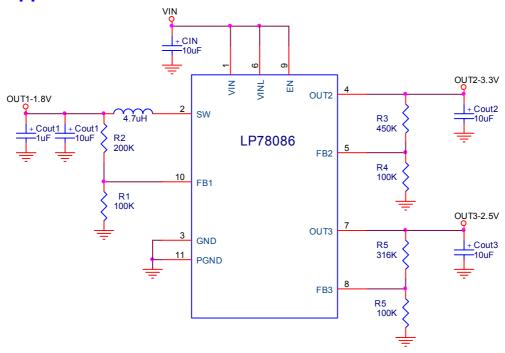



Figure 1. LP78086 High Efficiency Step-Down Converter

Functional Pin Description

Pin Number	Pin Name	Pin Function
1	VDD	Chip Power Input.
2	SW	Pin For Switching.
3	GND	Ground.
4	OUT2	Output2,LDO output.
5	FB2	Feedback2(OUT2) Input Pin, Reference voltage is 1.21V.
6	VINL	LDO2,LDO3 Power Input.
7	OUT3	Output3,LDO output LDO Chip Enable(Active High).
8	FB3	Feedback3(OUT3) Input Pin, Reference voltage is 1.21V.
9	EN	Chip Enable(Active High).
10	FB1	Feedback1(OUT1) Input Pin, Reference voltage is 0.6V.
11	PGND	Power Ground.



Function Block Diagram

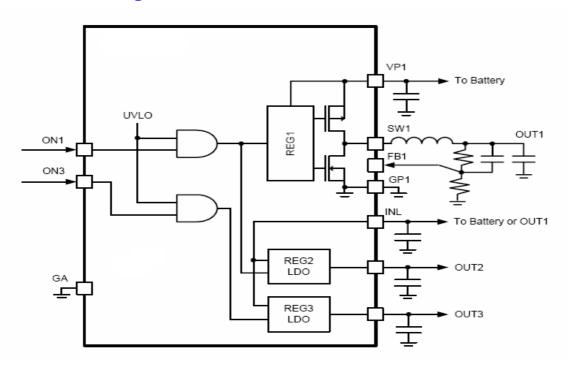

Absolute Maximum Ratings

Input Supply Voltage	-0.3V to 6V
■ LDO Current	400mA
■ P-Channel Switch Source Current(DC) —	800mA
N-Channel Switch Current(DC)	800mA
Peak SW Sink and Source Current	1100mA
 Operation Temperature Range 	40°C to 85°C
Junction Temperature	125°C
Storage Temperature	65°C to 150°C
■ Lead Temp(Soldering, 10sec) —	260℃
■ ESD Rating(HBM)	2KV



Preliminary Datasheet

LP78086


Electrical Characteristics


(VIN = 3.6V, VOUT1 = 2.5V, VREF = 0.6V, L = 2.2 μ H, CIN= 4.7 μ F, COUT= 10 μ F, TA= 25°C, IMAX = 600mA unless otherwise specified)


Parameter		Symbol	Test Conditions	Min	Тур	Max	Units
Input Voltage Range		VIN		2.5		5.5	V
Quiescent Current		IQ	IOUT = 0mA, VFB =0.5V IOUT = 0mA, VFB =0.7V		270 25	350 35	uA
Shutdown Current		ISHDN	EN = GND		0.1	1	uA
Reference Voltage		VFB1	For DC/DC adjustable output voltage	0.588	0.60	0.612	V
		VFB2	For LDO2 adjustable output voltage	1.18	1.21	1.24	V
		VFB3	For LDO3 adjustable output voltage	1.18	1.21	1.24	V
Adjustable Output Range		VOUT		VREF		VIN - 0.2	V
Output Voltage Accuracy	Fixed	∆ VOUT	VIN = 2.2 to 5.5V, VOUT = 1.2V 0A < IOUT < 650mA	-3		+3	%
		∆ VOUT	VIN = 2.2 to 5.5V, VOUT = 1.5V 0A < IOUT < 650mA	-3		+3	%
		∆ VOUT	VIN = 2.2 to 5.5V, VOUT = 1.8V 0A < IOUT < 650mA	-3		+3	%
		∆ VOUT	VIN = 2.8 to 5.5V, VOUT = 2.5V 0A < IOUT < 650mA	-3		+3	%
		∆ VOUT	VIN = 3.5 to 5.5V, VOUT = 3.3V 0A < IOUT < 650mA	-3		+3	%
	Adjustable	∆ VOUT	VIN = VOUT + 0.2V to 5.5V, VIN \geq 3.5V 0A < IOUT < 650mA	-3		+3	%
		∆ VOUT	VIN = VOUT + 0.4V to 5.5V, VIN ≧ 2.2V 0A < IOUT < 650mA	-3		+3	%
LDO Output current	Ildo			300	350	400	mA
PMOSFET RON	PRDS(ON)	IOUT = 200mA	VIN = 3.6V		0.45	0.53	Ω
NMOSFET RON	NRDS(ON)	IOUT = 200mA	VIN = 3.6V		0.45		Ω
P-Channel Current Limit	IP(LM)	VIN =2.2 to 5.5V	•	600	800	1000	mA
EN Threshold	VEN			0.8	1.2	1.5	V
EN Leakage Current	VENL				2		uA





Typical Operating Characteristics

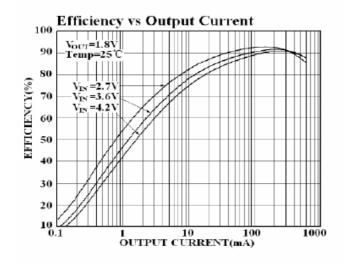


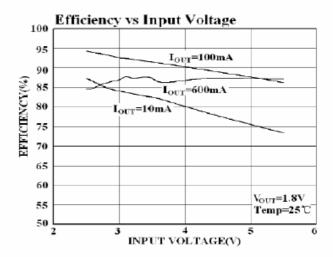

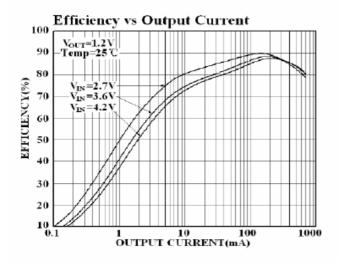

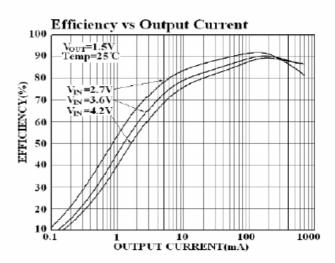

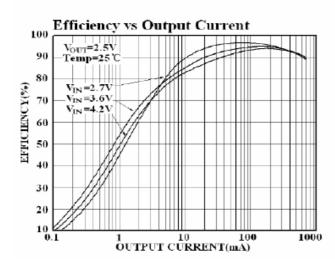

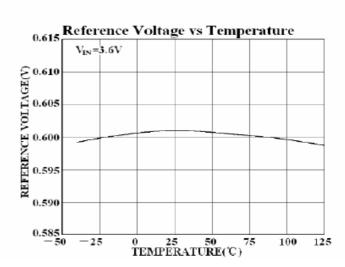

Applications Information

The basic LP78086 application circuit is shown in Typical Application Circuit. External component selection is determined by the maximum load current and begins with the selection of the inductor value and operating frequency followed by CIN and COUT.

Inductor selection

The output inductor is selected to limit the ripple current to some predetermined value, typically 20%~40% of the full load current at the maximum input voltage. Large value inductors lower ripple currents. Higher Vin or V_{OUT} also increases the ripple current as shown in equation. A reasonable starting point for setting ripple current is $\triangle I_L$ =180mA(40% of 650mA).

$$\Delta I_{L} = \frac{1}{(f)(L)} V_{OUT} \left(1 - \frac{V_{OUT}}{V_{IN}} \right)$$

The DC current rating of the inductor should be at least equal to the maximum load current plus half the ripple current to prevent core saturation. Thus, a 720Ma rated Inductor should be enough for most applications (650mA+120mA). For better efficiency, choose a low DC-resistance inductor.

CIN and COUT Selection

The input capacitance, C_{IN} ,is needed to filter the trapezoidal current at the source of the top MOSFET. To prevent large ripple voltage, a low ESR input capacitor Sized for the maximum RMS current should be used. RMS current is given by:

$$I_{RMS} = I_{OUT(MAX)} \frac{V_{OUT}}{V_{IN}} \sqrt{\frac{V_{IN}}{V_{OUT}} - 1}$$

This formula has a maximum at V_{IN}=2V_{OUT}, where I_{RMS}=I_{OUT}/2.this simple worst-case condition is commonly. Used for design because even significant deviations do not offer much relief. Note that ripple current ratings from capacitor manufacturers are often based on only 2000 hours of life which makes it advisable to further derate the Capacitor, or choose a capacitor rated at a higher temperature Than required. Several capacitors may also be paralleled to meet size or height requirements in the design.

The selection of C_{OUT} is determined by the effective

series resistance(ESR) that is required to minimize voltage ripple and load step transients, an well as the amount or bulk capacitance that is necessary to ensure that the control loop is stable. Loop stability can be checked by viesing the load transient response as described in later section.the output ripple, $\triangle V_{OUT}$, is determined by:

$$\Delta V_{OUT} \le \Delta I_L \left[ESR + \frac{1}{8fC_{OUT}} \right]$$

Using ceramic input and output capacitors

Higher values, lower cost ceramic capacitors are now becoming .Available in smaller case sizes ,their high ripple current ,high voltage rating and low ESR make them ideal for switching regulator applications. however care must be taken when these capacitors are used at the input and output. When a ceramic capacitor is use at input and the power is supplied by a wall adapter through long wires, a load step at the output can induce ringing at the input ,V_{IN}, At worst,a sudden inrush of current through the long wires can potentially cause a voltage spike at V_{IN} large enough to damage the part.

Output voltage programming

The output voltage is set by a resistive divider according to the

Following formula:

Vout=VFB X (1+R2/R1)

The external resistive divider is connected to the output, allowing Remote voltage sensing as shown in figure 3.

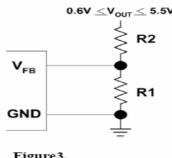


Figure3.

Efficiency considerations

The efficiency of a switching regulator is equal to the output Power divided by the input power times 100% it is often useful to analyze individual losses to determine what is limiting the

efficiency and which change would produce the most improvement efficiency can be expressed as :

Efficiency= 100%- (L1+L2+L3...)

Where L1 \, L2, etc. are the individual losses as a percentage of Input power .although all dissipative elements in the for most of losses: VIN quiescent current and 1²R loss dominates the efficiency loss at medium to high load currents. In a typical efficiency plot, the efficiency curve at very low load currents can be misleading since the actual power lost is of no consequence.

1.The VIN quiescent current is due to two components: the DC Bias current as given in the electrical characteristics and the Internal main switch and synchronous switch gate charge currents. the gate charge current results from switching the gate capacitance of the internal power MOSFET switches .Each time the gate charge current.results from switching the gate capacitance of the internal power MOSFET switches. Each time the gate is switches from high to low to high again, a packet of charge $\triangle Q$ moves from V_{IN} to ground.

The resulting $\triangle Q/\triangle t$ is the current out of V_{IN} that is typically larger than the DC bias current. In continuous mode.

$$L_{GATCHG} = f(Q_T + Q_B)$$

Where Q_T and Q_B are the gate charges of the internal top and bottom switches. Both the DC bias and gate charge losses are proportional to $V_{\rm IN}$ and thus their effects will be more pronounced at higher supply voltages.

2. 1^2 Rlosses tae calculated from the resistances of the internal switches, R_{SW} and external inductor R_L . in continuous mode the average output current flowing through inductor L is "chopped" between the main switch and the synchronous switch. Thus, the series resistance looking into the LX pin is a function of both top and bottom MOSFER $R_{DS(ON)}$ and the duty cycle (DC) as follows:

$$R_{SW} = R_{DS(ON)TOP} \times DC + R_{DS(ON)BOT} \times (1-DC)$$

The $R_{DS(ON)}$ for both the top and bottom MOSFETS can be obtained from the typical performance characteristics curves. thus, to obtain 1^2R losses, simply add R_{SW} to R_L and multiply the square of the average output current.

Other losses including $C_{\rm IN}$ and $C_{\rm OUT}$ ESR dissipative losses and inductor core losses generally account for less than 2% of the total loss.



Preliminary Datasheet

LP78086

Checking Transient Response

The regulator loop response can be checked by looking at the load transient response. Switching regulators take several cycles to respond to a step in load current. When a load step occurs, VOUT immediately shifts by an amount equal to Δ ILOAD (ESR), where ESR is the effective series resistance of COUT. Δ ILOAD also begins to charge or discharge COUT generating a feedback error signal used by the regulator to return VOUT to its steady-state value. During this recovery time, VOUT can be monitored for overshoot or ringing that would indicate a stability problem.


Layout Considerations

- → Follow the PCB layout guidelines for optimal performance of LP78086.
- ♦ For the main current paths as indicated in bold lines, keep their traces short and wide.
- ♦ Put the input capacitor as close as possible to the device pins (VIN and GND).
- ♦ Connect feedback network behind the output capacitors. Keep the loop area small. Place the feedback components near the LP78086.
- ♦ Connect all analog grounds to a command node and then connect the command node to the power ground behind the output capacitors.





Packaging Information

DFN3*3-10L Package Outline Dimension

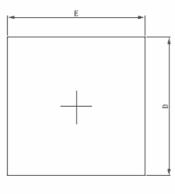



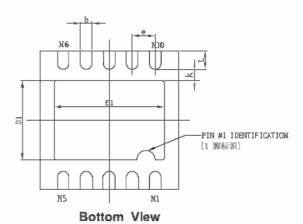



Symbol	Dimensions In Millimeters		Dimensions In Inches		
Symbol	Min	Max	Min	Max	
Α	0.700/0.800	0.800/0.900	0.028/0.031	0.031/0.035	
A1	0.000	0.050	0.000	0.002	
A2	0.153	0.253	0.006	0.010	
D	2.900	3.100	0.114	0.122	
E	2.900	3.100	0.114	0.122	
D1	1.600	1.800	0.063	0.071	
E1	2.300	2.500	0.091	0.098	
k	0.200MIN		0.008MIN		
b	0.200	0.300	0.008	0.012	
е	0.500TYP		0.020TYP		
L	0.300	0.500	0.012	0.020	