# HV738 ±65V 0.75A Ultrasound Pulser Demo Board

#### Introduction

The HV738 is a monolithic four channel, high speed, high voltage, ultrasound transmitter pulser. This integrated, high performance circuit is in a single 7x7mm, 48-lead QFN package.

The HV738 can deliver up to ±0.75A source and sink current to a capacitive transducer. It is designed for medical ultrasound imaging and ultrasound material NDT applications. It can also be used as a high voltage driver for other piezoelectric or capacitive MEMS transducers, or for ATE systems and pulse signal generators as a signal source.

HV738's circuitry consists of controller logic circuits, level translators, gate driving buffers and a high current and high voltage MOSFET output stage. The output stages of each channel are designed to provide peak output currents over  $\pm 1.1 A$  for pulsing, when MC0=1 and MC1=1, with up to  $\pm 65 V$  swings. When in mode 1, all the output stages drop the peak current to  $\pm 140 mA$  for low-voltage CW mode operation to save power. Two floating 8VDC power supplies, referenced to  $V_{\rm PP}$  and  $V_{\rm NN}$ , supply the P- and N-type power FET gate drivers. This pulser waveform's frequency upper limit is 20 MHz depending on the load capacitance. One HV738 can also be used as four damping circuits to generate fast return-to-zero waveforms by working with another HV738 as four pulsing circuits. It also has built-in under-voltage and over-temperature protection functions.

# Designing a Pulser with HV738


This demo board data sheet describes how to use the HV738DB1 to generate the basic high voltage pulse waveform as an ultrasound transmitting pulser.

The HV738 circuit uses the DC coupling method in all level translators. There are no external coupling capacitors needed. The  $V_{\rm PP}$  and  $V_{\rm NN}$  rail voltages can be changed rather quickly, compared to a high voltage capacitor gate coupled driving pulser. This direct coupling topology of the gate drivers not only saves two high voltage capacitors per channel, but also makes the PCB layout easier.

The input stage of the HV738 has high-speed level translators that are able to operate with logic signals of 1.2V to 5.0V and are optimized at 2.5V to 3.3V. In this demo board, the control logic signals are connected to a high-speed ribbon cable connector. The control signal logic-high voltage should be the same as the  $V_{\rm CC}$  voltage of the demo board, and the logic-low should be reference to GND.

The HV738DB1 output waveforms can be displayed by using an oscilloscope probe directly connected to the test point TX1~4 and GND. The soldering jumper can select whether or not to connect the on-board equivalent-load, a 330pF, 200V capacitor, parallel with a  $2.5k\Omega,\,1W$  resistor. Also, a coaxial cable can be used to connect the user's transducer to easily drive and evaluate the HV738 transmitter pulser.

# **Application Circuit**

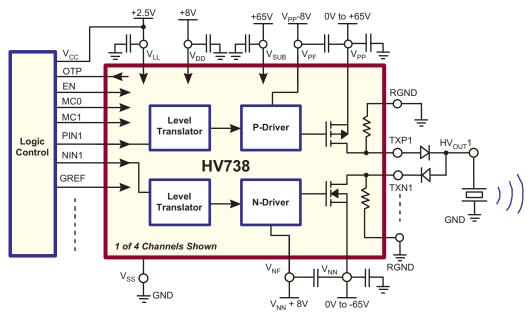

# The PCB Layout Techniques

The large thermal pad at the bottom of the HV738 package is connected to the  $V_{SUB}$  pins to ensure that it always has the highest potential of the chip, in any condition.  $V_{SUB}$  is the connection of the IC's substrate. PCB designers need to pay attention to the connecting traces as the output TXP1~4, TXN1~4 high-voltage and high-speed traces. In particular, low capacitance to the ground plane and more trace spacing need to be applied in this situation.

High-speed PCB trace design practices that are compatible with about 50 to 100MHz operating speeds are used for the demo board PCB layout. The internal circuitry of the HV738 can operate at quite a high frequency, with the primary speed limitation being load capacitance. Because of this high speed and the high transient currents that result when driving capacitive loads, the supply voltage bypass capacitors and the driver to the FET's gate-coupling capacitors should be as close to the pins as possible. The  $\rm V_{\rm ss}$  pin pads should have low inductance feed-through connections that are connected directly to a solid ground plane. The  $V_{DD}$ ,  $V_{PP}$ ,  $V_{PP}$  $V_{NF}$  and  $V_{NN}$  supplies can draw fast transient currents of up to ±1.5A, so they should be provided with a low-impedance bypass capacitor at the chip's pins. A ceramic capacitor of up to 0.22 to 1.0µF may be used. Minimize the trace length to the ground plane, and insert a ferrite bead in the power supply lead to the capacitor to prevent resonance in the power supply lines. For applications that are sensitive to jitter and noise and using multiple HV738 ICs, insert another ferrite bead between  $V_{DD}$  and decouple each chip supply separately.

Pay particular attention to minimizing trace lengths and using sufficient trace width to reduce inductance. Surface mount components are highly recommended. Since the output impedance of HV738's high voltage power stages are very low, in some cases it may be desirable to add a small value resistor in series with the output TXP1~4 and TXN1~4 to obtain better waveform integrity at the load terminals. This will, of course, reduce the output voltage slew rate at the terminals of a capacitive load. Be aware of the parasitic coupling from the outputs to the input signal terminals of HV738. This feedback may cause oscillations or spurious waveform shapes on the edges of signal transitions. Since the input operates with signals down to 1.2V, even small coupling voltages may cause problems. Use of a solid ground plane and good power and signal layout practices will prevent this problem. Also ensure that the circulating ground return current from a capacitive load cannot react with common inductance to create noise voltages in the input logic circuitry.

### **Testing the Integrated Pulser**

This HV738 pulser demo board should be powered up with multiple lab DC power supplies with current limiting functions. The following power supply voltages and current limits have been used in the testing:  $\rm V_{pp}{=}0$  to +65V 5.0mA,  $\rm V_{NN}{=}0$  to -65V 5.0mA,  $\rm V_{DD}{=}{+}8V$  10mA,  $\rm (V_{NF}{-}V_{NN}){=}{+}8V$  10mA,  $\rm V_{CC}{=}{+}2.5V$  5.0mA for HV738  $\rm V_{LL}$  does not include the user's logic circuits.

The power-up or down sequences of the voltage supply ensure that the HV738 chip substrate  $V_{\text{SUB}}$  is always at the highest potential of all the voltages supplied to the IC.

The  $(V_{PP}-V_{PF})$  and  $(V_{NF}-V_{NN})$  are the two floating power supplies. They are only 8V, but floating with  $V_{PP}$  and  $V_{NN}$ . The floating voltages can be trimmed within the range of +7.5 to +10V to match the rising and falling time of the output pulses for the best HD2. Do not exceed the maximum voltage of +10V. The  $V_{PP}$  and  $V_{NN}$  are the positive and negative high voltages. They can be varied from 0 to +/-65V maximum. Note when the  $V_{PP}=V_{NN}=0$ , the  $V_{PF}$  and  $V_{NF}$  in respect to the ground voltage is -8V and +8V.


The on-board dummy load  $330 pF//2.5 k\Omega$  should be connected to the high voltage pulser output through the solder jumper when using an oscilloscope's high impedance probe to meet the typical loading conditions. To evaluate different loading conditions, one may change the values of RC within the current and power limit of the device.

In order to drive piezo transducers with a cable, one should match the output load impendence properly to avoid cable and transducer reflections. A 70 to  $75\Omega$  coaxial cable is recommended. The coaxial cable end should be soldered to the TX1~4 and GND directly with very short leads. If a user's load is being used, the on board dummy load should be disconnected by cutting the small shorting copper trace in between the zero ohm resistors R7, R8, R9 or R10 pads. They are shorted by factory default.


All the on-board test points are designed to work with the high impedance probe of the oscilloscope. Some probes may have limited input voltage. When using the probe on these high voltage test-points, make sure that  $V_{\rm pp}/V_{\rm NN}$  voltages do not exceed the probe limit. Using the high impendence oscilloscope probe for the on-board test points, it is important to have short ground leads to the circuit board ground plane.

Precautions need to be applied to not overlap the logic-high time periods of the control signals. Otherwise, permanent damage to the device may occur when cross-conduction or shoot-through current exceed the device's maximum limits.

## **HV738DB1**

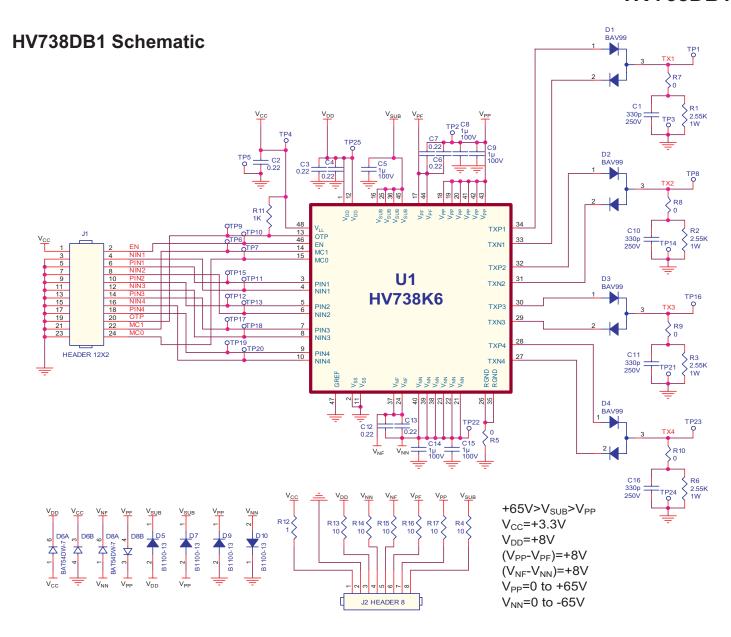

#### HV738DB1 PCB

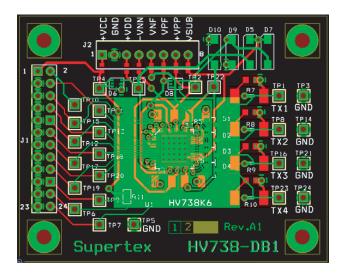

# **Board Voltage Supply Power-Up Sequence**

1	V <sub>SUB</sub>	+65V>V <sub>SUB</sub> /V <sub>PP</sub> positive bias voltages
2	V <sub>cc</sub>	+1.2 to 5.0V positive logic supply voltage
3	V <sub>DD</sub>	+8V positive drive supply voltage
4	$V_{_{\mathrm{PF}}}$ and $V_{_{\mathrm{NF}}}$	Floating supply voltages, $(V_{PP}-V_{PF})=+8V$ and $(V_{NF}-V_{NN})=+8V$
5	V <sub>PP</sub> / V <sub>NN</sub>	0 to +/-65V positive and negative high voltages
6	Logic Active	Any logic control active high signals

# **Connector and Test Pin Description Logic Control Signal Input Connector**


1	V <sub>cc</sub>	Logic-high reference voltage input, V <sub>LL</sub> , +1.2 to 5.0V, normally from control circuit.
2	EN	Pulser output enable logic signal input, active high.
3	GND	Logic signal ground, 0V (2).
4	NIN1	Logic signal input for CH1 negative pulse output, active high. (1)
5	GND	Logic signal ground, 0V.
6	PIN1	Logic signal input for CH1 positive pulse output, active high. (1)
7	GND	Logic signal ground, 0V.
8	NIN2	Logic signal input for CH2 negative pulse output, active high. (1)
9	GND	Logic signal ground, 0V.
10	PIN2	Logic signal input for CH2 positive pulse output, active high. (1)
11	GND	Logic signal ground, 0V.
12	NIN3	Logic signal input for CH3 negative pulse output, active high. (1)
13	GND	Logic signal ground, 0V.
14	PIN3	Logic signal input for CH3 positive pulse output, active high. (1)
15	GND	Logic signal ground, 0V.
16	NIN4	Logic signal input for CH4 negative pulse output, active high. (1)
17	GND	Logic signal ground, 0V.
18	PIN4	Logic signal input for CH4 positive pulse output, active high. (1)
19	GND	Logic signal ground, 0V.
20	OTP	Over temperature protection open drain output, active low, 1k pull up to V <sub>cc</sub> .
21	GND	Logic signal ground, 0V.
22	MC1	Logic signal input of mode control MSB.
23	GND	Logic signal ground, 0V.
24	MC0	Logic signal input of mode control LSB.

#### **Power Supply Connector**


	· · · · · · · · · · · · · · · · · · ·				
1	V <sub>cc</sub>	Logic-high reference voltage supply, +1.2 to 5.0V current limit 5.0mA (if for V <sub>LL</sub> only).			
2	GND	Low voltage power supply ground, 0V			
3	V <sub>DD</sub>	+8V positive driver voltage supply with current limit to 10mA.			
4	V <sub>NN</sub>	0 to -65V Negative high voltage supply with current limit to 5.0mA			
5	V <sub>NF</sub>	Floating voltage supply (V <sub>NF</sub> -V <sub>NN</sub> )=+8V with current limit to 10mA. (3)			
6	V <sub>PF</sub>	Floating voltage supply (V <sub>PP</sub> -V <sub>PF</sub> )=+8V with current limit to 10mA. (3)			
7	V <sub>PP</sub>	0 to +65V positive high voltage supply with current limit to 2.0mA			
8	V <sub>SUB</sub>	Chip substrate bias voltage, must be (+65V>V <sub>SUB</sub> /V <sub>PP</sub> ) with limit to 5.0mA			

- (1). Overlap control signals logic-high periods of PIN and NIN may cause the device permanent damage.
- (2). Due to the speed of logic control signal, every GND wire in the ribbon cable must connect to signal source ground.
- (3).  $(V_{PP}-V_{PF})$  and  $(V_{NF}-V_{NN})$  floating voltage can be trimmed from +7.5V to +10V for tr/tf time matching. Do not exceed the maximum +10V.


### **HV738DB1 Waveforms**

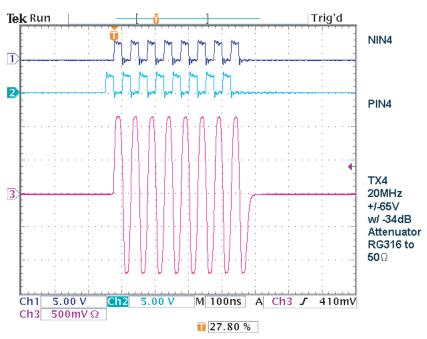


**Figure 1:** Output waveform of 20MHz,  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}$ - $V_{PF}$ )=+8V,  $(V_{NF}$ - $V_{NN}$ )=+8V,  $V_{PP}$ / $V_{NN}$ =+/-65V, MC0=MC1=1, HV738 TX4 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

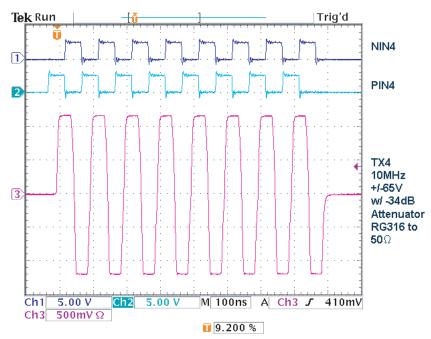


**Figure 2:** Output waveform of 10MHz  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}-V_{PF})$ =+8V,  $(V_{NF}-V_{N}N)$ =+8V,  $V_{PP}/V_{NN}$ =+/-65V, MC0=MC1=1, TX4 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

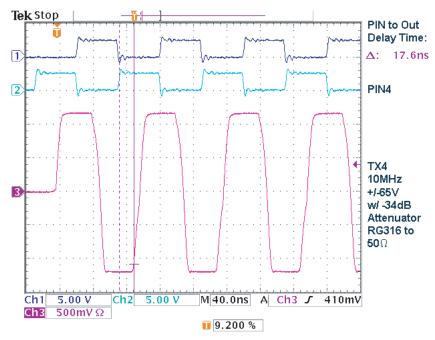


**Figure 3:** Input to output propagation delay on rise is 17.6ns  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}$ - $V_{PF}$ )=+8V,  $(V_{NF}$ - $V_{NN}$ )=+8V,  $V_{PP}$ / $V_{NN}$ =+/-65V, MC0=MC1=1, TX4 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

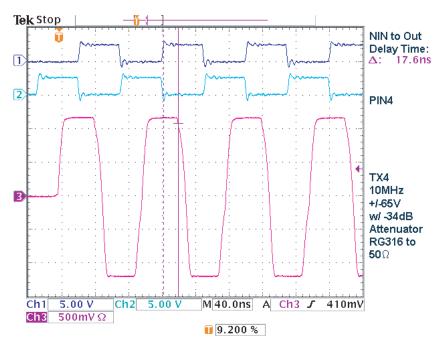


**Figure 4:** Input to output propagation delay on fall is 17.6ns.  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}$ - $V_{PF}$ )=+8V,  $(V_{NF}$ - $V_{NN}$ )=+8V,  $V_{PP}$ / $V_{NN}$ =+/-65V, MC0=MC1=1, TX4 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

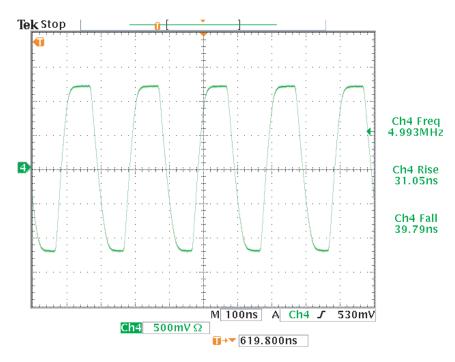


**Figure 5**: Output rise and fall time is 31ns and 40ns.  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}$ - $V_{PF}$ )=+8V,  $(V_{NF}$ - $V_{NN}$ )=+8V,  $V_{PP}$ / $V_{NN}$ =+/-65V, MC0=MC1=1, with load of 330pF//2.5kΩ. TX1 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

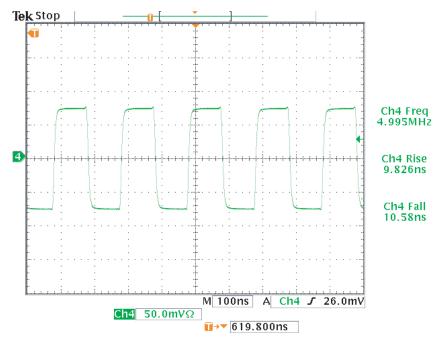


**Figure 6:** Output waveform of 5MHz,  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}$ - $V_{PF}$ )=+8V,  $(V_{NF}$ - $V_{NN}$ )=+8V,  $V_{PP}$ / $V_{NN}$ =+/-5.0V, MC0=MC1=1, with load of 330pF//2.5kΩ. HV738 TX1 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

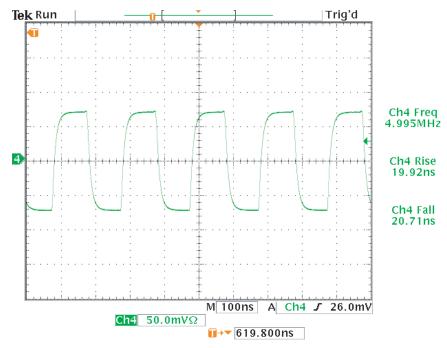


**Figure 7:** Output waveform of 5MHz,  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}-V_{PF})$ =+8V,  $(V_{NF}-V_{NN})$ =+8V,  $V_{PP}/V_{NN}$ =+/-5.0V, MC0=0, MC1=1, with load of 330pF//2.5kΩ. TX1 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

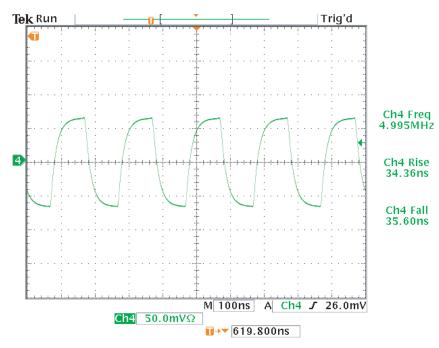

**Figure 8:** Output waveform of 5MHz,  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}-V_{PF})$ =+8V,  $(V_{NF}-V_{NN})$ =+8V,  $V_{PP}/V_{NN}$ =+/-5.0V, MC0=1, MC1=0, with load of 330pF//2.5kΩ. TX1 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

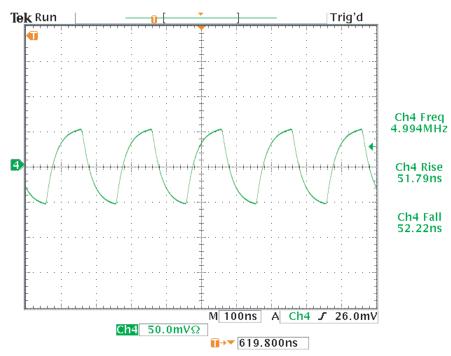

**Figure 9:** Output waveform of 5MHz,  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}$ - $V_{PF})$ =+8V,  $(V_{NF}$ - $V_{NN})$ =+8V,  $V_{PP}$ / $V_{NN}$ =+/-5.0V, MC0=0, MC1=0, with load of 330pF//2.5kΩ. TX1 via 200Ω and 20dB attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

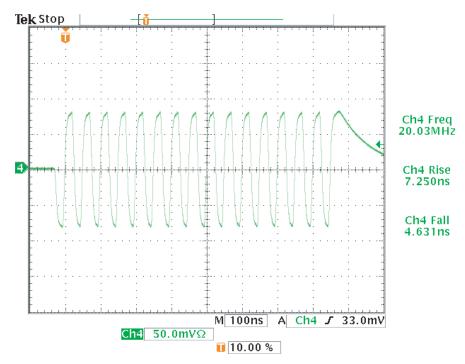

**Figure 10:** Output waveform of 20MHz,  $V_{LL}$ =2.5V,  $V_{DD}$ =+8V,  $(V_{PP}-V_{PF})$ =+8V,  $(V_{NF}-V_{NN})$ =+8V,  $V_{PP}/V_{NN}$ =+/-5.0V, MC0=1, MC1=1, with load of 330pF//2.5kΩ. TX1 via 200Ω and 20dB Attenuator & SMA-BNC RG316 cable to Ch4 50Ω oscilloscope input.

**Supertex inc.** does not recommend the use of its products in life support applications, and will not knowingly sell its products for use in such applications, unless it receives an adequate "product liability indemnification insurance agreement". **Supertex** does not assume responsibility for use of devices described and limits its liability to the replacement of the devices determined defective due to workmanship. No responsibility is assumed for possible omissions or inaccuracies. Circuitry and specifications are subject to change without notice. For the latest product specifications, refer to the **Supertex** website: http://www.supertex.com.

©2007 Supertex inc. All rights reserved. Unauthorized use or reproduction is prohibited.

www.supertex.com