

# 82596CA **HIGH-PERFORMANCE 32-BIT LOCAL** AREA NETWORK COPROCESSOR

- Performs Complete CSMA/CD Medium Access Control (MAC) Functions-Independently of CPU
  - IEEE 802.3 (EOC) Frame Delimiting
- Supports Industry Standard LANs
  - IEEE TYPE 10BASE-T, IEEE TYPE 10BASE5 (Ethernet\*), IEEE TYPE 10BASE2 (Cheapernet), IEEE TYPE 1BASE5 (StarLAN), and the Proposed Standard 10BASE-F
  - Proprietary CSMA/CD Networks Up to 20 Mb/s
- **■** On-Chip Memory Management
  - Automatic Buffer Chaining
  - Buffer Reclamation after Receipt of **Bad Frames; Optional Save Bad**
  - 32-Bit Segmented or Linear (Flat) **Memory Addressing Formats**
- Network Management and Diagnostics
  - Monitor Mode
  - 32-Bit Statistical Counters
- 82586 Software Compatible
- Self-Test Diagnostics

- Optimized CPU Interface
  - Optimized Bus Interface to Intel's i486TMDX, i486TMSX, i487TMSX and 80960CA Processors
  - 33 MHz, 25 MHz, 20 MHz and 16 MHz **Clock Frequencies**
  - Supports Big Endian and Little **Endian Byte Ordering**
- 32-Bit Bus Master Interface
  - 106 MB/s Bus Bandwidth
  - Burst Bus Transfers
  - Bus Throttle Timers
  - Transfers Data at 100% of Serial **Bandwidth**
  - 128-Byte Receive FIFO, 64-Byte **Transmit FIFO**
- Configurable Initialization Root for Data **Structures**
- High-Speed, 5V, CHMOS\*\* IV Technology
- 132-Pin Plastic Quad Flat Pack (PQFP) and PGA Package

(See Packaging Spec Order No. 240800-001, Package Type KU and A)

i486 is a trademark of Intel Corporation.

\*Ethernet is a registered trademark of Xerox Corporation.
\*\*CHMOS is a patented process of Intel Corporation.

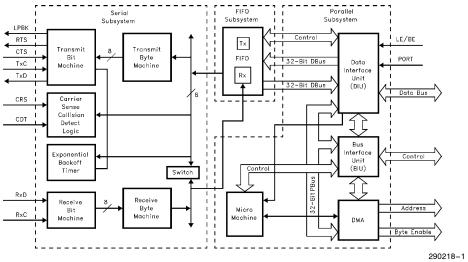


Figure 1. 82596CA Block Diagram

\*Other brands and names are the property of their respective owners.

Information in this document is provided in connection with Intel products. Intel assumes no liability whatsoever, including infringement of any patent or copyright, for sale and use of Intel products except as provided in Intel's Terms and Conditions of Sale for such products. Intel retains the right to make changes to these specifications at any time, without notice. Microcomputer Products may have minor variations to this specification known as errata. COPYRIGHT © INTEL CORPORATION, 1996 Order Number: 290218-006 October 1995



# 82596CA High-Performance 32-Bit Local Area Network Coprocessor

CONTENTS	PAGE	CONTENTS	PAGE
INTRODUCTION	3	SYSTEM CONTROL BLOCK (SCB)	27
PIN DESCRIPTIONS	7	SCB OFFSET ADDRESSES	30
82596 AND HOST CPU		CBL Offset (Address)	
INTERACTION	11	RFA Offset (Address)	30
82596 BUS INTERFACE	11	SCB STATISTICAL COUNTERS	31
82596 MEMORY ADDRESSING	11	Statistical Counter Operation	31
82596 SYSTEM MEMORY STRUCTURE	13	ACTION COMMANDS AND OPERATING MODES	
TRANSMIT AND RECEIVE MEMO	DRY	NOPIndividual Address Setup	33
TRANSMITTING FRAMES		Configure	
RECEIVING FRAMES		Multicast-Setup  Transmit	
		Jamming Rules	
82596 NETWORK MANAGEMEN DIAGNOSTICS		TDR	
NETWORK PLANNING AND		Dump	
MAINTENANCE	20	Diagnose	49
STATION DIAGNOSTICS AND SI		RECEIVE FRAME DESCRIPTOR	50
TEST	21	Simplified Memory Structure	
82586 SOFTWARE COMPATIBIL	ITY 21	Flexible Memory Structure	
INITIALIZING THE 82596	21	Receive Buffer Descriptor (RBD)	52
SYSTEM CONFIGURATION POIN (SCP)		PGA PACKAGE THERMAL SPECIFICATIONS	57
Writing the Sysbus	22	ELECTRICAL AND TIMING CHARACTERISTICS	57
INTERMEDIATE SYSTEM		Absolute Maximum Ratings	
CONFIGURATION POINTER (ISCP)	23	DC Characteristics	
INITIALIZATION PROCESS		AC Characteristics	58
CONTROLLING THE 82596CA		82596CA C-Step Input/Output System Timings	า 58
82596 CPU ACCESS INTERFACE		Transmit/Receive Clock Parameters	
(PORT)	<u>.</u> 24	82596CA BUS Operation	66
MEMORY ADDRESSING FORMA	<b>TS</b> 24	System Interface AC Timing Characteristics	67
LITTLE ENDIAN AND BIG ENDIA BYTE ORDERING		Input Waveforms	
		Serial AC Timing Characteristics	
COMMAND UNIT (CU)		OUTLINE DIAGRAMS	72
RECEIVE UNIT (RU)	26	REVISION HISTORY	76



#### INTRODUCTION

The 82596CA is an intelligent, high-performance 32-bit Local Area Network coprocessor. The 82596CA implements the CSMA/CD access method and can be configured to support all existing IEEE 802.3 standards—TYPEs 10BASE-T, 10BASE5, 10BASE2, 1BASE5, and 10BROAD36. It can also be used to implement the proposed standard TYPE 10BASE-F. The 82596CA performs high-level commands, command chaining, and interprocessor communications via shared memory, thus relieving the host CPU of many tasks associated with network control. All time-critical functions are performed independently of the CPU, this increases network performance and efficiency. The 82596CA bus interface is optimized for Intel's i486TMSX, i486TMDX, i487TMSX, 80960CA, and 80960KB processors.

The 82596CA implements all IEEE 802.3 Medium Access Control and channel interface functions, these include framing, preamble generation and stripping, source address generation, destination address checking, short-frame detection, and automatic length-field handling. Data rates up to 20 Mb/s are supported.

The 82596CA provides a powerful host system interface. It manages memory structures automatically, with command chaining and bidirectional data chaining. An on-chip DMA controller manages four channels, this allows autonomous transfer of data blocks (buffers and frames) and relieves the CPU of byte transfer overhead. Buffers containing errored or collided frames can be automatically recovered without CPU intervention. The 82596CA provides an upgrade path for existing 82586 software drivers by providing an 82586-software-compatible mode that supports the current 82586 memory structure. The 82586CA also has a Flexible memory structure and a Simplified memory structure. The 82596CA can address up to 4 gigabytes of memory. The 82596CA supports Little Endian and Big Endian byte ordering.

The 82596CA bus interface can achieve a burst transfer rate of 106 MB/s at 33 MHz. The bus interface employs bus throttle timers to regulate 82596CA bus use. Two large, independent FIFOs—128 bytes for Receive and 64 bytes for Transmit—tolerate long bus latencies and provide programmable thresholds that allow the user to optimize bus overhead for any worst-case bus latency. The high-performance bus is capable of back-to-back transmission and reception during the IEEE 802.3 9.6- $\mu s$  Interframe Spacing (IFS) period.

The 82596CA provides a wide range of diagnostics and network management functions, these include internal and external loopback, exception condition

tallies, channel activity indicators, optional capture of all frames regardless of destination address (promiscuous mode), optional capture of errored or collided frames, and time domain reflectometry for locating fault points on the network cable. The statistical counters, in 32-bit segmented and linear modes, are 32-bits each and include CRC errors, alignment errors, overrun errors, resource errors, short frames, and received collisions. The 82596CA also features a monitor mode for network analysis. In this mode the 82596CA can capture status bytes, and update statistical counters, of frames monitored on the link without transferring the contents of the frames to memory. This can be done concurrently while transmitting and receiving frames destined for that station.

The 82596CA can be used in both baseband and broadband networks. It can be configured for maximum network efficiency (minimum contention overhead) with networks of any length. Its highly flexible CSMA/CD unit supports address field lengths of zero through six bytes for IEEE 802.3/Ethernet frame delimitation. It also supports 16- or 32-bit cyclic redundancy checks. The CRC can be transferred directly to memory for receive operations, or dynamically inserted for transmit operations. The CSMA/CD unit can also be configured for full duplex operation for high throughput in point-to-point connections.

The 82596 C-step incorporates several new features not found in previous steppings. The following is a summary of the 82596 C-step's new features.

- The 82596 C-step fixes Errata found in the A1 and B steppings.
- The 82596 C-step has improved AC timings over both the A and B steppings.
- The 82596 C-step has a New Enhanced Big Endian Mode where in Linear Addressing Mode, true 32-bit Big Endian functionality is achieved. New Enhanced Big Endian Mode is enabled by setting bit 7 of the SYSBUS byte. This mode is software compatible with the big endian mode of the B-step with one exception—no 32-bit addresses need to be swapped by software in the C-step. In this new mode, the 82596 C-step treats 32-bit address pointers as true 32-bit entities and the SCB absolute address and statistical counters are still treated as two 16-bit big endian entities. Not setting this mode will configure the 82596 C-step to be 100% compatible to the A1-step big endian mode.
- The 82596 C-step is hardware and software compatible to both the A1 and B steppings allowing for easy "drop-in" to current designs. Pinout and control structures remain unchanged.



The 82596CA is fabricated with Intel's reliable, 5-V, CHMOS IV (process 648.8) technology. It is available in a 132-pin PQFP or PGA package.

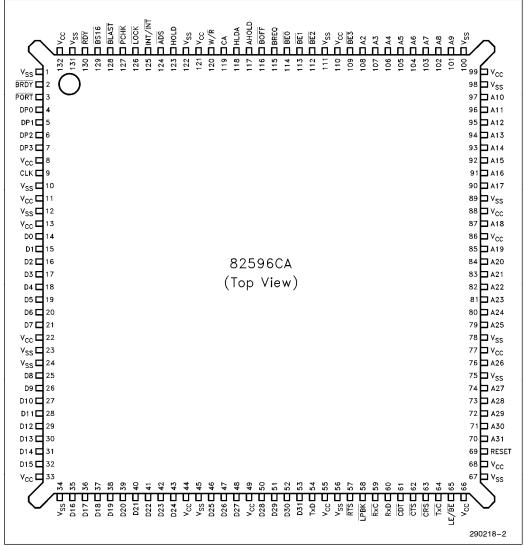


Figure 2. 82596CA PQFP Pin Configuration



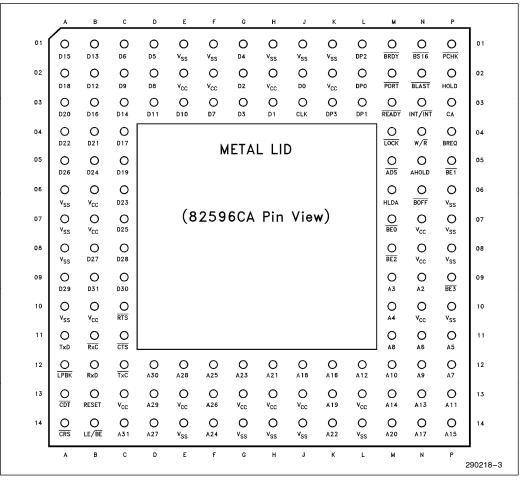


Figure 3. 82596CA PGA Pinout

5



# 82596CA PGA Cross Reference by Pin Name

62596CA PGA Cross Reference by Pin Name												
Add	Iress	D	ata	Con	trol		rial rface	V <sub>CC</sub>	V <sub>SS</sub>			
Signal	Pin No.	Signal	Pin No.	Signal	Pin No.	Signal	Pin No.	Pin No.	Pin No.			
A2	N9	D0	J2	ADS	M5	CDT	A13	B6	A6			
A3	M9	D1	H3	AHOLD	N5	CRS	A14	B7	A7			
A4	M10	D2	G2	BE0	M7	CTS	C11	B10	A8			
A5	P11	D3	G3	BE1	P5	LPBK	A12	C13	A10			
A6	N11	D4	G1	BE2	M8	RTS	C10	E2	E1			
A7	P12	D5	D1	BE3	P9	RxC	B11	E13	E14			
A8	M11	D6	C1	BLAST	N2	RxD	B12	F2	F1			
A9	N12	D7	F3	BOFF	N6	TxC	C12	G13	G14			
A10	M12	D8	D2	BRDY	M1	TxD	A11	H2	H1			
A11	P13	D9	C2	BREQ	P4			H13	H14			
A12	L12	D10	E3	BS16	N1			J13	J1			
A13	N13	D11	D3	CA	P3			K2	J14			
A14	M13	D12	B2	CLK	J3			L13	K1			
A15	P14	D13	B1	DP0	L2			N7	L14			
A16	K12	D14	C3	DP1	L3			N8	P6			
A17	N14	D15	A1	DP2	L1			N10	P7			
A18	J12	D16	B3	DP3	K3				P8			
A19	K13	D17	C4	HLDA	M6				P10			
A20	M14	D18	A2	HOLD	P2							
A21	H12	D19	C5	INT <u>/INT</u>	N3							
A22	K14	D20	A3	LE/BE	B14							
A23	G12	D21	B4	LOCK	M4							
A24	F14	D22	A4	PCHK	P1							
A25	F12	D23	C6	PORT	M2							
A26	F13	D24	B5	READY	M3							
A27	D14	D25	C7	RESET	B13							
A28	E12	D26	A5	W/R	N4							
A29	D13	D27	B8									
A30	D12	D28	C8									
A31	C14	D29	A9									
		D30	C9									
		D31	B9									



# PIN DESCRIPTIONS

Symbol	PQFP Pin No.	Туре	Name and Function										
CLK	9	I	the 8	32596. ires TT	It is a 1 L level	X CLK s. All e	input used to	ides the fundamental o generate the 82596 g parameters are spe	clock and				
D0-D31	14–53	1/0	provide the general purpose data path between the 82596 and memory. With the 82596 the bus can be either 16 or 32 bits will is determined by the BS16 signal. The 82596 always drives all lines during Write operations, even with a 16-bit bus. D31 – D0 floated after a Reset or when the bus is not acquired. These lines are inputs during a CPU Port access; in this mode writes the next address to the 82596 through the data lines. DPORT commands (Relocatable SCP, Self-Test, Reset and Du address must be aligned to a 16-byte boundary. This frees the lines so they can be used to distinguish the commands. The fois a summary of the decoding data.										
			D0	D1	D2	D3	D31-D4	Function					
			0 0 1 1	0 1 0 1	0 0 0 0	0 0 0 0	0000 ADDR ADDR ADDR	Reset Relocatable SCP Self-Test Dump Command					
DP0-DP3	4–7	1/0	parity even as da as re to er	DATA PARITY. These are tri-stated data parity pins. There is one parity line for each byte of the data bus. The 82596 drives them with even-parity information during write operations having the same timing as data writes. Likewise, even-parity information, with the same timing as read information, must be driven back to the 82596 over these pins to ensure that the correct parity check status is indicated by the 82596.									
PCHK	127	0	Read previous data bytes PCH	d operatious clo has be s, whic K is on	ations of ock cyclen san h are in ly valid	of the parties. When pled. Indicate for on	arity status o en driven lov It only check d by the Byte	gh one clock after RE of data sampled at the of it indicates that inco of the parity status of of Enable and Bus Size after data read is retu her times.	end of the rrect parity enabled signals.				
A31-A2	70–108	0	addr	ess bit	s requir	ed for		d Address lines outpu ration. These lines ar cquired.					
BE3-BE0	109–114	0	bytes Byte being  BE  BE  BE	BYTE ENABLE. These tri-stated signals are used to indicate which bytes are involved with the current memory access. The number of Byte Enable signals asserted indicates the physical size of the data being transferred (1, 2, 3, or 4 bytes).  • BEO indicates D7-D0  • BEI indicates D15-D8  • BE2 indicates D23-D16  • BE3 indicates D31-D24 These lines are floated after a Reset or when the bus is not acquired.									
W/R	120	0		d cycle				is used to distinguish a Reset or when the I					

7



# PIN DESCRIPTIONS (Continued)

Symbol	PQFP Pin No.	Туре	Name and Function
ADS	124	0	ADDRESS STATUS. The 82596 uses this tri-state pin to indicate to indicate that a valid bus cycle has begun and that A31–A2, \$\overline{BE3}\$-\$\overline{BE0}\$, and W/\$\overline{R}\$ are being driven. It is asserted during t1 bus states. This line is floated after a Reset or when the bus is not acquired.
RDY	130	I	<b>READY.</b> Active low. This signal is the acknowledgment from addressed memory that the transfer cycle can be completed. When high, it causes wait states to be inserted. It is ignored at the end of the first clock of the bus cycle's data cycle. This active-low signal does not have an internal pull-up resistor. This signal must meet the setup and hold times to operate correctly.
BRDY	2	I	BURST READY. Active low. Burst Ready, like \$\overline{RDY}\$, indicates that the external system has presented valid data on the data pins in response to a Read, or that the external system has accepted the 82596 data in response to a Write request. Also, like \$\overline{RDY}\$, this signal is ignored at the end of the first clock in a bus cycle. If the 82596 can still receive data from the previous cycle, ADS will not be asserted in the next clock cycle; however, Address and Byte Enable will change to reflect the next data item expected by the 82596. \$\overline{BRDY}\$ will be sampled during each succeeding clock and if active, the data on the pins will be strobed to the 82596 or to external memory (read/write). \$\overline{BRDY}\$ operates exactly like READY during the last data cycle of a burst sequence and during nonburstable cycles.
BLAST	128	0	BURST LAST. A signal (active low) on this tri-state pin indicates that the burst cycle is finished and when \$\overline{BRDY}\$ is next returned it will be treated as a normal ready; i.e., another set of addresses will be driven with \$\overline{ADS}\$ or the bus will go idle. \$\overline{BLAST}\$ is not asserted if the bus is not acquired.
AHOLD	117	I	ADDRESS HOLD. This hold signal is active high, it allows another bus master to access the 82596 address bus. In a system where an 82596 and an i486 processor share the local bus, AHOLD allows the cache controller to make a cache invalidation cycle while the 82596 holds the address lines. In response to a signal on this pin, the 82596 immediately (i.e. during the next clock) stops driving the entire address bus (A31–A2); the rest of the bus can remain active. For example, data can be returned for a previously specified bus cycle during Address Hold. The 82596 will not begin another bus cycle while AHOLD is active.
BOFF	116	I	BACKOFF. This signal is active low, it informs the 82596 that another bus master requires access to the bus before the 82596 bus cycle completes. The 82596 immediately (i.e. during the next clock) floats its bus. Any data returned to the 82596 while BOFF is asserted is ignored. BOFF has higher priority than RDY or BRDY; if two such signals are returned in the same clock period, BOFF is given preference. The 82596 remains in Hold until BOFF goes high, then the 82596 resumes its bus cycle by driving out the address and status, and asserting ADS.
LOCK	126	0	LOCK. This tri-state pin is used to distinguish locked and unlocked bus cycles. LOCK generates a semaphore handshake to the CPU. LOCK can be active for several memory cycles, it goes active during the first locked memory cycle (t1) and goes inactive at the last locked cycle (t2). This line is floated after a Reset or when the bus is not acquired. LOCK can be disabled via the sysbus byte in software.



# PIN DESCRIPTIONS (Continued)

Symbol	PQFP Pin No.	Туре	Name and Function
BS16	129	I	BUS SIZE. This signal allows the 82596CA to work with either 16- or 32-bit bytes. Inserting BS16 low causes the 82596 to perform two 16-bit memory accesses when transferring 32-bit data. In little endian mode the D15–D0 lines are driven when BS16 is inserted, in Big Endian mode the D31–D16 lines are driven.
HOLD	123	0	<b>HOLD.</b> The HOLD signal is active high, the 82596 uses it to request local bus mastership. In normal operation HOLD goes inactive before HLDA. The 82596 can be forced off the bus by deasserting HLDA or if the bus throttle timers expire.
HLDA	118	I	HOLD ACKNOWLEDGE. The HLDA signal is active high, it indicates that bus mastership has been given to the 82596. HLDA is internally synchronized; after HOLD is detected low, the CPU drives HLDA low.  NOTE:
			Do not connect HLDA to V <sub>CC</sub> —it will cause a deadlock. A user wanting to give the 82596 permanent access to the bus should connect HLDA to HOLD. If HLDA goes inactive before HOLD, the 82596 will release the bus (by deasserting HOLD) within a maximum of within a specified number of bus cycles as specified in the 82596 User's Manual.
BREQ	115	I	BUS REQUEST. This signal, when configured to an externally activated mode, is used to trigger the bus throttle timers.
PORT	3	I	PORT. When this signal is received, the 82596 latches the data on the data bus into an internal 32-bit register. When the CPU is asserting this signal it can write into the 82596 (via the data bus). This pin must be activated twice during all CPU Port access commands.
RESET	69	I	RESET. This active high, internally synchronized signal causes the 82596 to terminate current activity. The signal must be high for at leas five system clock cycles. After five system clock cycles and four TxC clock cycles the 82596 will execute a Reset when it receives a high RESET signal. When RESET returns to low the 82596 waits for the first CA signal and then begins the initialization sequence.
LE/BE	65	I	<b>LITTLE ENDIAN/BIG ENDIAN.</b> This dual-function pin is used to select byte ordering. When LE/BE is high, little endian byte ordering is used; when low, big endian byte ordering is used for data in frames (bytes) and for control (SCB, RFD, CBL, etc).
CA	119	I	CHANNEL ATTENTION. The CPU uses this pin to force the 82596 to begin executing memory resident Command blocks. The CA signal is internally synchronized. The signal must be high for at least one system clock. It is latched internally on the high to low edge and then detected by the 82596.  The first CA after a Reset forces the 82596 into the initialization sequence beginning at location 00FFFFF6h or an SCP address writter to the 82596 using CPU Port access. All subsequent CA signals cause the 82596 to begin executing new command sequences from the SCE
INT/ĪNT	125	0	INTERRUPT. A high signal on this pin notifies the CPU that the 82596 is requesting an interrupt. This signal is an edge triggered interrupt signal, and can be configured to be active high or low.



# PIN DESCRIPTIONS (Continued)

Symbol	PQFP Pin No.	Туре	Name and Function
V <sub>CC</sub>	17 Pins		<b>POWER.</b> +5 V ±10%.
V <sub>SS</sub>	17 Pins		GROUND. 0 V.
TxD	54	0	<b>TRANSMIT DATA.</b> This pin transmits data to the serial link. It is high when not transmitting.
TxC	64	I	TRANSMIT CLOCK. This signal provides the fundamental timing for the serial subsystem. The clock is also used to transmit data synchronously on the TxD pin. For NRZ encoding, data is transferred to the TxD pin on the high to low clock transition. For Manchester encoding, the transmitted bit center is aligned with the low to high transition. Transmit clock must always be running for proper device operation.
LPBK	58	0	LOOPBACK. This TTL-level control signal enables the loopback mode. In this mode serial data on the TxD input is routed through the 82C501 internal circuits and back to the RxD output without driving the transceiver cable. To enable this signal, both internal and external loopback need to be set with the Configure command.
RxD	60	I	RECEIVE DATA. This pin receives NRZ serial data only. It must be high when not receiving.
RxC	59	I	RECEIVE CLOCK. This signal provides timing information to the internal shifting logic. For NRZ data the state of the RxD pin is sampled on the high to low transition of the clock.
RTS	57	0	REQUEST TO SEND. When this signal is low the 82596 informs the external interface that it has data to transmit. It is forced high after a Reset or when transmission is stopped.
CTS	62	I	CLEAR TO SEND. An active-low signal that enables the 82596 to send data. It is normally used as an interface handshake to RTS. Asserting CTS high stops transmission. CTS is internally synchronized. If CTS goes inactive, meeting the setup time to the TxC negative edge, the transmission will stop and RTS will go inactive within, at most, two TxC cycles.
CRS	63	I	CARRIER SENSE. This signal is active low, it is used to notify the 82596 that traffic is on the serial link. It is only used if the 82596 is configured for external Carrier Sense. In this configuration external circuitry is required for detecting traffic on the serial link. CRS is internally synchronized. To be accepted, the signal must remain active for at least two serial clock cycles (for CRSF=0).
CDT	61	I	COLLISION DETECT. This active-low signal informs the 82596 that a collision has occurred. It is only used if the 82596 is configured for external Collision Detect. External circuitry is required for collision detection. CDT is internally synchronized. To be accepted, the signal must remain active for at least two serial clock cycles (for CDTF = 0).



#### 82596 AND HOST CPU INTERACTION

The 82596CA and the host CPU communicate through shared memory. Because of its on-chip DMA capability, the 82596 can make data block transfers (buffers and frames) independently of the CPU; this greatly reduces the CPU byte transfer overhead

The 82596 is a multitasking coprocessor that comprises two independent logical units—the Command Unit (CU) and the Receive Unit (RU). The CU executes commands from shared memory. The RU handles all activities related to frame reception. The independence of the CU and RU enables the 82596 to engage in both activities simultaneously—the CU can fetch and execute commands from memory while the RU is storing received frames in memory. The CPU is only involved with this process after the CU has executed a sequence of commands or the RU has finished storing a sequence of frames.

The CPU and the 82596 use the hardware signals Interrupt (INT) and Channel Attention (CA) to initiate communication with the System Control Block (SCB), see Figure 4. The 82596 uses INT to alert the CPU of a change in the contents of the SCB, the CPU uses CA to alert the 82596.

The 82596 has a CPU Port Access state that allows the CPU to execute certain functions without accessing memory. The 82596 PORT pin and data bus pins are used to enable this feature. The CPU can directly activate four operations when the 82596 is in this state.

- Write an alternative System Configuration Pointer (SCP). This can be used when the 82596 cannot use the default SCP address space.
- Write a different Dump Command Pointer and execute Dump. This can be used for troubleshooting No Response problems.
- The CPU can reset the 82596 via software without disturbing the rest of the system.
- A self-test can be used for board testing; the 82596 will execute a self-test and write the results to memory.

#### 82596 BUS INTERFACE

The 82596CA has bus interface timings and pin definitions that are compatible with Intel's 32-bit i486™SX and i486™DX microprocessors. This eliminates the need for additional bus interface logic. Operating at 33 MHz, the 82596's bus bandwidth can be as high as 106 MB/s. Since Ethernet only requires 1.25 MB/s, this leaves a considerable amount of bandwidth for the CPU. The 82596 also has a bus throttle to regulate its use of the bus. Two timers can be programmed through the SCB: one controls the maximum time the 82596 can remain on the bus, the other controls the time the 82596 must stay off the bus (see Figure 5). The bus throttle can be programmed to trigger internally with HLDA or externally with BREQ. These timers can restrict the 82596 HOLD activation time and improve bus utiliza-

#### 82596 MEMORY ADDRESSING

The 82596 has a 32-bit memory address range, which allows addressing up to four gigabytes of memory. The 82596 has three memory addressing modes (see Table 1).

- 82586 Mode. The 82596 has a 24-bit memory address range. The System Control Block, Command List, Receive Descriptor List, and Buffer Descriptors must reside in one 64-KB memory segment. Transmit and Receive buffers can reside in a 24-bit address space.
- 32-Bit Segmented Mode. The 82596 has a 32-bit memory address range. The System Control Block, Command List, Receive Descriptor List, and Buffer Descriptors must reside in one 64-KB memory segment. Transmit and Receive buffers can reside in a 32-bit address space.
- Linear Mode. The 82596 has a 32-bit memory address range. Any memory structure can reside anywhere within the 32-bit memory address range.



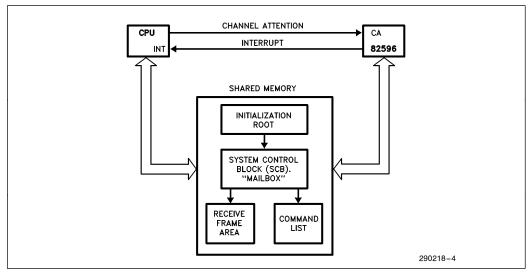


Figure 4. 82596 and Host CPU Intervention

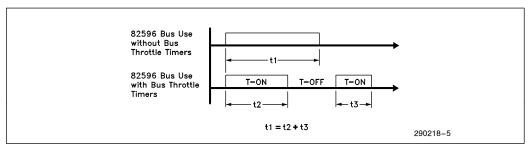


Figure 5. Bus Throttle Timers

Table 1. 82596 Memory Addressing Formats

	Operation Mode									
Pointer or Offset	82586	32-Bit Segmented	Linear							
ISCP Address	24-Bit Linear	32-Bit Linear	32-Bit Linear							
SCB Address	Base (24) + Offset (16)	Base (32) + Offset (16)	32-Bit Linear							
Command Block Pointers	Base (24) + Offset (16)	Base (32) + Offset (16)	32-Bit Linear							
Rx Frame Descriptors	Base (24) + Offset (16)	Base (32) + Offset (16)	32-Bit Linear							
Tx Frame Descriptors	Base (24) + Offset (16)	Base (32) + Offset (16)	32-Bit Linear							
Rx Buffer Descriptors	Base (24) + Offset (16)	Base (32) + Offset (16)	32-Bit Linear							
Tx Buffer Descriptors	Base (24) + Offset (16)	Base (32) + Offset (16)	32-Bit Linear							
Rx Buffers	24-Bit Linear	32-Bit Linear	32-Bit Linear							
Tx Buffers	24-Bit Linear	32-Bit Linear	32-Bit Linear							



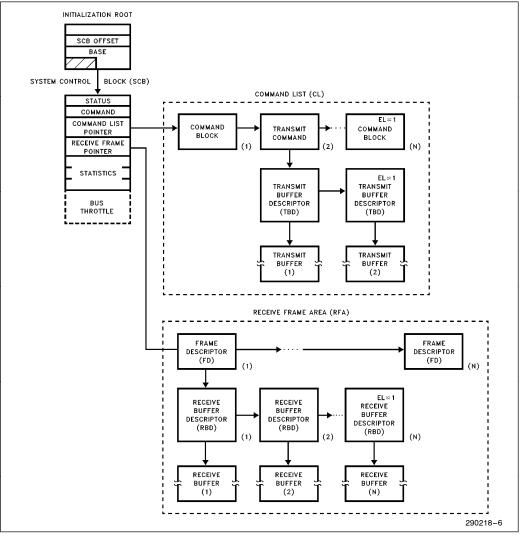


Figure 6. 82596 Shared Memory Structure

### 82596 SYSTEM MEMORY STRUCTURE

The Shared Memory structure consists of four parts: the Initialization Root, the System Control Block, the Command List, and the Receive Frame Area (see Figure 6).

The Initialization Root is in an established location known to the host CPU and the 82596 (00FFFFF6h). However, the CPU can establish the Initialization Root in another location by using the CPU Port access. This root is accessed during initialization, and points to the System Control Block.

The System Control Block serves as a bidirectional mail drop for the host CPU and the 82596 CU and RU. It is the central point through which the CPU and the 82596 exchange control and status information. The SCB has two areas. The first contains instructions from the CPU to the 82596. These include: control of the CU and RU (Start, Abort, Suspend, and Resume), a pointer to the list of CU commands, a pointer to the Receive Frame Area, a set of Interrupt Acknowledge bits, and the T-ON and T-OFF timers for the bus throttle. The second area contains status information the 82596 is sending to the CPU. Such as, the CU and RU states (Idle, Active



Ready, Suspended, No Receive Resources, etc.), interrupt bits (Command Completed, Frame Received, CU Not Ready, and RU Not Ready), and statistical counters

The Command List functions as a program for the CU; individual commands are placed in memory units called Command Blocks (CBs). These CBs contain the parameters and status of specific high-level commands called Action Commands; e.g., Transmit or Configure.

Transmit causes the 82596 to transmit a frame. The Transmit CB contains the destination address, the length field, and a pointer to a list of linked buffers holding the frame that is to be constructed from several buffers scattered throughout memory. The Command Unit operates without CPU intervention; the DMA for each buffer, and the prefetching of references to new buffers, is performed in parallel. The CPU is notified only after a transmission is complete.

The Receive Frame Area is a list of Free Frame Descriptors (descriptors not yet used) and a list of userprepared buffers. Frames arrive at the 82596 unsolicited; the 82596 must always be ready to receive and store them in the Free Frame Area. The Receive Unit fills the buffers when it receives frames, and reformats the Free Buffer List into received-frame structures. The frame structure is, for all practical purposes, identical to the format of the frame to be transmitted. The first Frame descriptor is referenced by the SCB. Unless the 82596 is configured to Save Bad Frames, the frame descriptor, and the associated buffer descriptor, which is wasted when a bad frame is received, are automatically reclaimed and returned to the Free Buffer List.

Receive buffer chaining (storing incoming frames in a linked buffer list) significantly improves memory utilization. Without buffer chaining, the user must allocate consecutive blocks of memory, each capable of containing a maximum frame (for Ethernet, 1518 bytes). Since an average frame is about 200 bytes, this is very inefficient. With buffer chaining, the user can allocate small buffers and the 82596 will only use those that are needed.

Figure 7 A-D illustrates how the 82596 uses the Receive Frame Area. Figure 7A shows an unused Receive Frame Area composed of Free Frame Descriptors and Free Receive Buffers prepared by the user. The SCB points to the first Frame Descriptor of the Frame Descriptor List. Figure 7B shows the same Receive Frame Area after receiving one frame. This first frame occupies two Receive Buffers and one Frame Descriptor—a valid received frame will only occupy one Frame Descriptor. After receiv-

ing this frame the 82596 sets the next Free Frame Descriptor RBD pointer to the next Free RBD. Figure 7C shows the RFA after receiving a second frame. In this example the second frame occupies only one Receive Buffer and one RFD. The 82596 again sets the RBD pointer. This process is repeated again in Figure 7D, showing the reception of another frame using one Receive Buffer; in this example there is an extra Frame Descriptor.

# TRANSMIT AND RECEIVE MEMORY STRUCTURES

There are three memory structures for reception and transmission. The 82586 memory structure, the Flexible memory structure, and the Simplified memory structure. The 82586 mode is selected by configuring the 82596 during initialization. In this mode all the 82596 memory structures are compatible with the 82586 memory structures.

When the 82596 is not configured to the 82586 mode, the other two memory structures, Simplified and Flexible, are available for transmitting and receiving. These structures are selected by setting the S/F bit in the Transmit Command and/or the Receive Frame Descriptor (see Figures 29, 30, 41, and 42). It is recommended that any linked list of buffers be relegated to a single type—either simplified or flexible. The Simplified memory structure offers a simple structure for ease of programming (see Figure 8). All information about a frame is contained in one structure; for example, during reception the RFD and data field are contained in one structure.

The Flexible memory structure (see Figure 9) has a control field that allows the programmer to specify the amount of receive data the RFD will contain for receive operations and the amount of transmit data the Transmit Command Block will contain for transmit operations. For example, when the control field in the RFD is set to 20 bytes during a reception, the first 20 bytes of the data field are stored in the RFD (6 bytes of destination address, 6 bytes of source address, 2 bytes of length field, and 6 bytes of data) and the remainder of the data field is stored in the Receive Data Buffers. This is useful for capturing frame headers when header information is contained in the data field. The header information can then be automatically stored in the RFD partitioned from the Receive Data Buffer.

The control field can also be used for the Transmit Command when the Flexible memory structure is used. The quantity of data field bytes to be transmitted from the Transmit Command Block is specified by the variable control field.



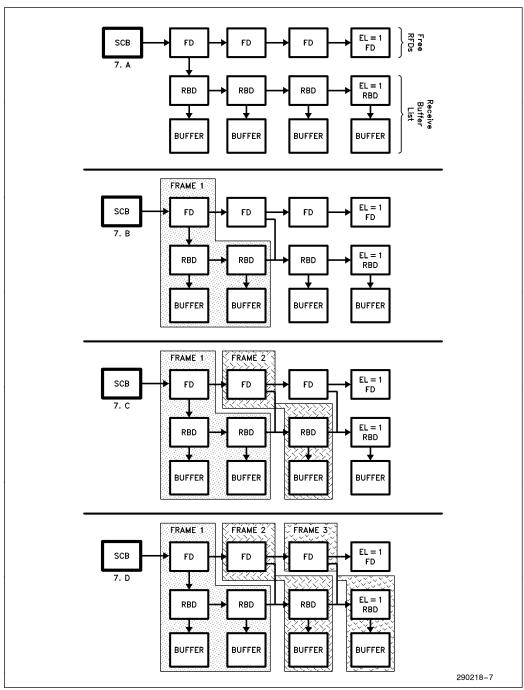


Figure 7. Frame Reception in the RFA



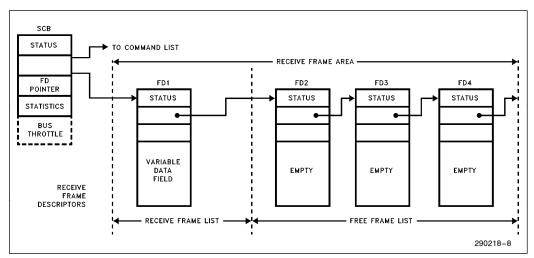


Figure 8. Simplified Memory Structure

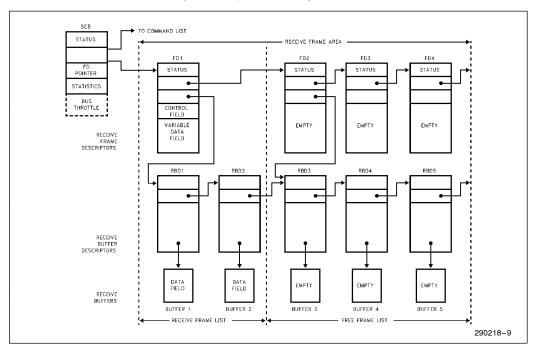


Figure 9. Flexible Memory Structure



#### TRANSMITTING FRAMES

The 82596 executes high-level Action Commands from the Command List in system memory. Action Commands are fetched and executed in parallel with the host CPU operation, thereby significantly improving system performance. The format of the Action Commands is shown in Figure 10. Figure 28 shows the 82586 mode, and Figures 29 and 30 show the command formats of the Linear and 32-bit Segmented modes.

A single Transmit command contains, as part of the command-specific parameters, the destination address and length field of the transmitted frame and a pointer to buffer area in memory containing the data portion of the frame. The data field is contained in a memory data structure consisting of a buffer descriptor (BD) and a data buffer—or a linked list of buffer descriptors and buffers—as shown in Figure 11

Multiple data buffers can be chained together using the BDs. Thus, a frame with a long data field can be transmitted using several (shorter) data buffers chained together. This chaining technique allows the system designer to develop efficient buffer management.

The 82596 automatically generates the preamble (alternating 1s and 0s) and start frame delimiter, fetches the destination address and length field from the Transmit command, inserts its unique address as the source address, fetches the data field specified by the Transmit command, and computes and appends the CRC to the end of the frame (see Figure 12). In the Linear and 32-bit Segmented mode the CRC can be optionally inserted on a frame-byframe basis by setting the NC bit in the Transmit Command Block (see Figures 29 and 30).

The 82596 generates the standard End Of Carrier (EOC) start and end frame delimiters. In EOC, the

start frame delimiter is 10101011 and the end frame delimiter is indicated by the lack of a signal after the last bit of the frame check sequence field has been transmitted. In EOC, the 82596 can be configured to extend short frames by adding pad bytes (7Eh) during transmission, according to the length field.

When a collision occurs, the 82596 manages the jam, random wait, and retry processes, reinitializing DMA pointers without CPU intervention. Multiple frames can be sent by linking the appropriate number of Transmit commands together. This is particularly useful when transmitting a message larger than the maximum frame size (1518 bytes for Ethernet).

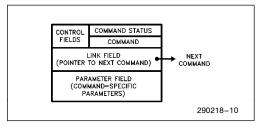


Figure 10. Action Command Format

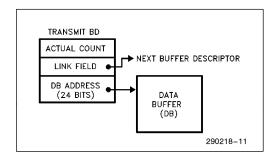


Figure 11. Data Buffer Descriptor and Data Buffer Structure

PREAMBLE FRAME DESTINATION SOURCE LENGTH DATA CHECK FR. ADDRESS ADDRESS FIELD FIELD SEQUENCE DELI
---

Figure 12. Frame Format

17



#### **RECEIVING FRAMES**

To reduce CPU overhead, the 82596 is designed to receive frames without CPU supervision. The host CPU first sets aside an adequate receive buffer space and then enables the 82596 Receive Unit. Once enabled, the RU watches for arriving frames and automatically stores them in the Receive Frame Area (RFA). The RFA contains Receive Frame Descriptors, Receive Buffer Descriptors, and Data Buffers (see Figure 13). The individual Receive Frame Descriptors make up a Receive Descriptor List (RDL) used by the 82596 to store the destination and source addresses, the length field, and the status of each frame received (see Figure 14).

Once enabled, the 82596 checks each passing frame for an address match. The 82596 will recognize its own unique address, one or more multicast addresses, or the broadcast address. If a match is found the 82596 stores the destination and source addresses and the length field in the next available RFD. It then begins filling the next available Data Buffer on the FBL, which is pointed to by the current RFD, with the data portion of the incoming frame. As one Data Buffer is filled, the 82596 automatically fetches the next DB on the FBL until the entire frame is received. This buffer chaining technique is particularly memory efficient because it allows the system designer to set aside buffers to fit frames much shorter than the maximum allowable frame length. If AL-LOC = 1, or if the flexible memory structure is used, the addresses and length field can be placed in the Receive Buffer.

Once the entire frame is received without error, the 82596 does the following housekeeping tasks.

- The actual count field of the last Buffer Descriptor used to hold the frame just received is updated with the number of bytes stored in the associated Data Buffer.
- The next available Receive Frame Descriptor is fetched.
- The address of the next available Buffer Descriptor is written to the next available Receive Frame Descriptor.
- A frame received interrupt status bit is posted in the SCB.
- An interrupt is sent to the CPU.

If a frame error occurs, for example a CRC error, the 82596 automatically reinitializes its DMA pointers and reclaims any data buffers containing the bad

frame. The 82596 will continue to receive frames without CPU help as long as Receive Frame Descriptors and Data Buffers are available.

# 82596 NETWORK MANAGEMENT AND DIAGNOSTICS

The behavior of data communication networks is normally very complex because of their distributed and asynchronous nature. It is particularly difficult to pinpoint a failure when it occurs. The 82596 has extensive diagnostic and network management functions that help improve reliability and testability. The 82596 reports on the following events after each frame is transmitted.

- · Transmission successful.
- Transmission unsuccessful. Lost Carrier Sense.
- Transmission unsuccessful. Lost Clear to Send.
- Transmission unsuccessful. A DMA underrun occurred because the system bus did not keep up with the transmission.
- Transmission unsuccessful. The number of collisions exceeded the maximum allowed.
- Number of Collisions. The number of collisions experienced during transmission of the frame.
- Heartbeat Indicator. This indicates the presence of a heartbeat during the last Interframe Spacing (IFS) after transmission.

When configured to Save Bad Frames the 82596 checks each incoming frame and reports the following errors.

- CRC error. Incorrect CRC in a properly aligned frame.
- Alignment error. Incorrect CRC in a misaligned frame.
- Frame too short. The frame is shorter than the value configured for minimum frame length.
- Overrun. Part of the frame was not placed in memory because the system bus did not keep up with incoming data.
- Out of buffer. Part of the frame was discarded because of insufficient memory storage space.
- Receive collision. A collision was detected during reception and the destination address of the incoming frame matches the 82596 individual address. Collisions in the preamble are not counted.
- Length error. A frame not matching the frame length parameter was detected.



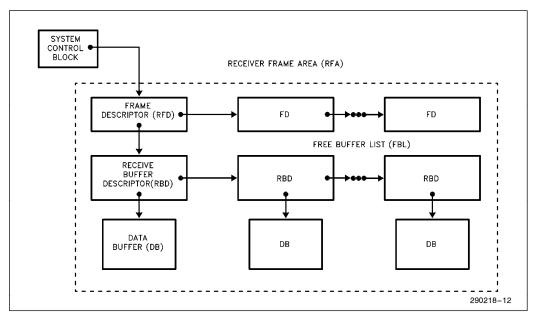


Figure 13. Receive Frame Area Diagram

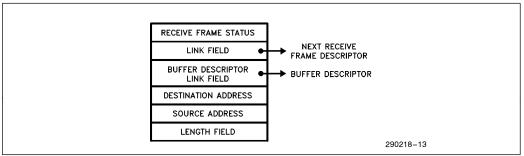


Figure 14. Receive Frame Descriptor



# NETWORK PLANNING AND MAINTENANCE

To properly plan, operate, and maintain a communication network, the network management entity must accumulate information on network behavior. The 82596 provides a rich set of network-wide diagnostics that can serve as the basis for a network management entity.

Information on network activity is provided in the status of each frame transmitted. The 82596 reports the following activity indicators after each frame.

- Number of collisions. The number of collisions the 82596 experienced while attempting to transmit the frame.
- Deferred transmission. During the first transmission attempt the 82596 had to defer to traffic on the link.

The 82596 updates its 32-bit statistical counters after each received frame that both passes address filtering and is longer than the Minimum Frame Length configuration parameter. The 82596 reports the following statistics.

- CRC errors. The number of well-aligned frames that experienced a CRC error.
- Alignment errors. The number of misaligned frames that experienced a CRC error.
- No resources. The number of frames that were discarded because of insufficient resources for reception.
- Overrun errors. The number of frames that were not completely stored in memory because the system bus did not keep up with incoming data.
- Receive Collision counter. The number of collisions detected during receive. Collisions occurring before the minimum frame length will be counted as short frames. Collisions in the preamble will not be counted at all.
- Short Frame counter. The number of frames that were discarded because they were shorter than the configured minimum frame length.

Once again, these counters are not updated until the 82596 decodes a destination address match.

The 82596 can be configured to Promiscuous mode. In this mode it captures all frames transmitted on the network without checking the Destination Address. This is useful when implementing a monitoring station to capture all frames for analysis.

A useful method of capturing frame headers is to use the Simplified memory mode, configure the 82596 to Save Bad Frames, and configure the 82596 to Promiscuous mode with space in the RFD allocated for specific number of receive data bytes.

The 82596 will receive all frames and put them in the RFD. Frames that exceed the available space in the RFD will be truncated, the status will be updated, and the 82596 will retrieve the next RFD. This allows the user to capture the initial data bytes of each frame (for instance, the header) and discard the remainder of the frame.

The 82596 also has a monitor mode for network analysis. During normal operation the receive function enables the 82596 to receive frames that pass address filtering. These frames must have the Start of Frame Delimiter (SFD) field and must be longer than the absolute minimum frame length of 5 bytes (6 bytes in case of Multicast address filtering). Contents and status of the received frames are transferred to memory. The monitor function enables the 82596 to simply evaluate the incoming frames. The 82596 can monitor the frames that pass or do not pass the address filtering. It can also monitor frames which do not have the SFD fields. The 82596 can be configured to only keep statistical information about monitor frames. Three options are available in the Monitor mode. These options are selected by the two monitor mode configuration bits available in the configuration command.

When the first option is selected, the 82596 receives good frames that pass address filtering and transfers them to memory while monitoring frames that do not pass address filtering or are shorter than the minimum frame size (these frames are not transferred to memory). When this option is used the 82596 updates six counters: CRC errors, alignment errors, no resource errors, overrun errors, short frames and total good frames received.

When the second option is selected, the receive function is completely disabled. The 82596 monitors only those frames that pass address filterings and meet the minimum frame length requirement. When this option is used the 82596 updates six counters: CRC errors, alignment errors, total frames (good and bad), short frames, collisions detected and total good frames.

When the third option is selected, the receive function is completely disabled. The 82596 monitors all frames, including frames that do not have a Start Frame Delimiter. When this option is used the 82596 updates six counters: CRC errors, alignment errors, total frames (good and bad), short frames, collisions detected and total good frames.



# STATION DIAGNOSTICS AND SELF-TEST

The 82596 provides a large set of diagnostic and network management functions. These include internal and external loopback and time domain reflectometry for locating fault points in the network cable. The 82596 ensures software reliability by dumping the contents of the 82596 internal registers into system memory. The 82596 has a self-test mode that enables it to run an internal self-test and place the results in system memory.

#### 82586 SOFTWARE COMPATIBILITY

The 82596 has a software-compatible state in which all its memory structures are compatible with the 82586 memory structure. This includes all the Action Commands, the Receive Frame Area (including the RFD, Buffer Descriptors, and Data Buffers), the System Control Block, and the initialization procedures. There are two minor differences between the 82596 in the 82586-Compatible memory structure and the 82586.

- When the internal and external loopback bits in the Configure command are set to 11 the 82596 is in external loopback and the LPBK pin is activated; in the 82586 this situation would produce internal loopback.
- During a Dump command both the 82596 and 82586 dump the same number of bytes; however, the data format is different.

#### **INITIALIZING THE 82596**

A Reset command is issued to the 82596 to prepare it for normal operation. The 82596 is initialized through two data structures that are addressed by two pointers, the System Configuration Pointer (SCP) and the Intermediate System Configuration Pointer (ISCP). The initialization procedure begins when a Channel Attention signal is asserted after RESET. The 82596 uses the address of the double word that contains the SCP as a default-00FFFFF4h. Before the CA signal is asserted this default address can be changed to any other available address by asserting the PORT pin and providing the desired address over the D31-D4 pins of the address bus. Pins D<sub>3</sub>-D<sub>0</sub> must be 0010; i.e., any alternative address must be aligned to 16-byte boundaries. All addresses sent to the 82596 must be word aligned, which means that all pointers and memory structures must start on an even address  $(A_0 = zero)$ .

# SYSTEM CONFIGURATION POINTER (SCP)

The SCP contains the sysbus byte and the location of the next structure of the initialization process, the ISCP. The following parameters are selected in the SYSBUS

- The 82596 operation mode.
- The Bus Throttle timer triggering method.
- Lock enabled.
- · Interrupt polarity.
- Big Endian 32-bit entity mode.

Byte ordering is determined by the LE/ $\overline{BE}$  pin. LE/ $\overline{BE}$ =1 selects Little Endian byte ordering and LE/ $\overline{BE}$ =0 selects Big Endian byte ordering.

#### NOTE:

In the following, X indicates a bit not checked 82586 mode. This bit must be set to 0 in all other modes.



The following diagram illustrates the format of the SCP.

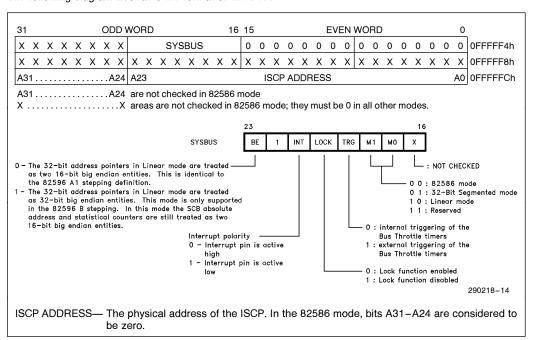


Figure 15. The System Configuration Pointer

### **Writing the Sysbus**

When writing the sysbus byte it is important to pay attention to the byte order.

- When a Little Endian processor is used, the sysbus byte is located at byte address 00FFFF6h (or address n+2 if an alternative SCP address n was programmed).
- When a processor using Big Endian byte ordering is used, the sysbus, alternative SCP, and ISCP addresses
  will be different.
  - The sysbus byte is located at 00FFFFF5h.
  - If an alternative SCP address is programmed, the sysbus byte should be at byte address n+1.



### INTERMEDIATE SYSTEM CONFIGURATION POINTER (ISCP)

The ISCP indicates the location of the System Control Block. Often the SCP is in ROM and the ISCP is in RAM. The CPU loads the SCB address (or an equivalent data structure) into the ISCP and asserts CA. This Channel Attention signal causes the 82596 to begin its initialization procedure and to get the SCB address from the ISCP and SCP. In 82586 and 32-bit Segmented modes the SCP base address is also the base address of all Command Blocks, Frame Descriptors, and Buffer Descriptors (but not buffers). All these data structures must reside in one 64-KB segment; however, in Linear mode no such limitation is imposed.

The following diagram illustrates the ISCP format.

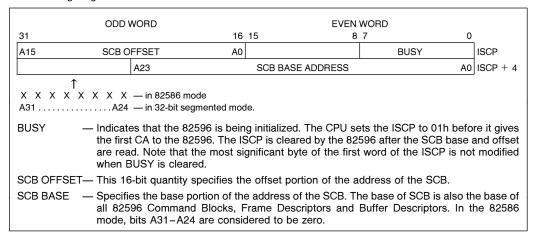


Figure 16. The Intermediate System Configuration Pointer—82586 and 32-Bit Segmented Modes

	ODD WORD			EVE	EN V	VORD				
31		16 15			8	7	0			
0 0 0			0	0	0	BUSY		ISCP		
A31	SC	CB ABSOLUTE ADDRESS					A0	ISCP + 4		
BUSY — Indicates that the 82596 is being initialized. The ISCP is set to 01h by the CPU before its first CA to the 82596. It is cleared by the 82596 after the SCB address is read.										
SCB ADDRESS	— This 32-bit quantity	specifies the physical	addr	ess	of t	he SCB.				

Figure 17. The Intermediate System Configuration Pointer—Linear Mode.

# **INITIALIZATION PROCESS**

The CPU sets up the SCP, ISCP, and the SCB structures, and, if desired, an alternative SCP address. It also sets BUSY to 01h. The 82596 is initialized when a Channel Attention signal follows a Reset signal, causing the 82596 to access the System Configuration Pointer. The sysbus byte, the operational mode, the bus throttle timer triggering method, the interrupt polarity, and the state of LOCK are read. After reset the Bus Throttle timers are essentially disabled—the T-ON value is infinite, the T-OFF value is zero. After the SCP is read, the 82596 reads the ISCP and saves the SCB address. In 82586 and 32-bit Segmented modes this address is represented as a base address plus the offset (this base address is also the base address of all the control blocks). In Linear mode the base address is also an absolute address. The 82596 clears BUSY, sets CX and CNR to equal 1 in the SCB, clears the SCB command word, sends an interrupt to the CPU, and awaits another Channel Attention signal. RESET configures the 82596 to its default state before CA is asserted.



#### **CONTROLLING THE 82596CA**

The host CPU controls the 82596 with the commands, data structures, and methods described in this section. The CPU and the 82596 communicate through shared memory structures. The 82596 contains two independent units: the Command Unit and the Receive Unit. The Command Unit executes commands from the CPU, and the Receive Unit handles frame reception. These two units are controlled and monitored by the CPU through a shared memory structure called the System Control Block (SCB). The CPU and the 82596 use the CA and INT signals to communicate with the SCB.

# 82596 CPU ACCESS INTERFACE (PORT)

The 82596 has a CPU access interface that allows the host CPU to do four things.

- Write an alternative System Configuration Pointer address.
- Write an alternative Dump area pointer and perform Dump.
- Execute a software reset.
- Execute a self-test.

The following events initiate the CPU access state.

- Presence of an address on the D<sub>31</sub>-D<sub>4</sub> data bus pins.
- The D<sub>3</sub>-D<sub>0</sub> pins are used to select one of the four functions.
- The PORT input pin is asserted, as in a regular write cycle.

#### NOTE.

The SCP Dump and Self-Test addresses must be 16-byte aligned.

The 82596 requires two 16-bit write cycles for a port command. The first write holds the internal machines and reads the first 16 bits; the second activates the PORT command and reads the second 16 bits.

The PORT Reset is useful when only the 82596 needs to be reset. The CPU must wait for 10-system and 5-serial clocks before issuing another CA to the 82596; this new CA begins a new initialization process.

The Dump function is useful for troubleshooting No Response problems. If the chip is in a No Response state, the  $\overline{\text{PORT}}$  Dump operation can be executed and a  $\overline{\text{PORT}}$  Reset can be used to reinitialize the 82596 without disturbing the rest of the system.

The Self-Test function can be used for board testing; the 82596 will execute a self-test and write the results to memory.

	D31	D31D4												
Function		Addresses and Results	D3	D2	D1	D0								
Reset	A31	Don't Care	A4	0	0	0	0							
Self-Test	A31	Self-Test Results Address	A4	0	0	0	1							
SCP	A31	Alternative SCP Address	A4	0	0	1	0							
Dump	A31	Dump Area Pointer	A4	0	0	1	1							

Table 2. PORT Function Selection

#### **MEMORY ADDRESSING FORMATS**

The 82596 accesses memory by 32-bit addresses. There are two types of 32-bit addresses: linear and segmented. The type of address used depends on the 82596 operating mode and the type of memory structure it is addressing. The 82596 has three operating modes.



- 82586 Mode
  - A Linear address is a single 24-bit entity. Address pins A<sub>31</sub>-A<sub>24</sub> are always zero.
  - A Segmented address uses a 24-bit base and a 16-bit offset.
- 32-bit Segmented Mode
  - A Linear address is a single 32-bit entity.
  - A Segmented address uses a 32-bit base and a 16-bit offset.

#### NOTE:

In the previous two memory addressing modes, each command header (CB, TBD, RFD, RBD, and SCB) must wholly reside within one segment. If the 82596 encounters a memory structure that does not follow this restriction, the 82596 will fetch the next contiguous location in memory (beyond the segment).

- Linear Mode
  - A Linear address is a single 32-bit entity.
  - · There are no Segmented addresses.

Linear addresses are primarily used to address transmit and receive data buffers. In the 82586 and 32-bit Segmented modes, segmented addresses (base plus offset) are used for all Command Blocks, Buffer Descriptors, Frame Descriptors, and System Control Blocks. When using Segmented addresses, only the offset portion of the entity being addressed is specified in the block. The base for all offsets is the same—that of the SCB. See Table 1.

#### LITTLE ENDIAN AND BIG ENDIAN BYTE ORDERING

The 82596 supports both Little Endian and Big Endian byte ordering for its memory structures.

The 82596 A1 stepping supports Big Endian byte ordering for word and byte entities. Dword entities are not supported with 82596 A1 Big Endian byte ordering. This results in slightly different 82596A1 memory structures for Big Endian operation. These structures are defined in the 32-Bit LAN Components User's Manual.

The 82596 B stepping supports Big Endian byte ordering for Linear mode only. All 82596 B 32-bit address pointers are treated as 32-bit Big Endian entities, however, the SCB absolute address and statistical counters are treated as two 16-bit Big Endian entities. This 32-bit Big Endian entity support is configured through bit 7 in the SYSBUS byte.

The 82596 C-step has a New Enhanced Big Endian Mode where in Linear Addressing mode, true 32-bit Big Endian functionality is achieved. New Enhanced Big Endian Mode is enabled exactly the same as the B-step, by setting bit 7 of the SYSBUS byte. This mode is software compatible with the big endian mode of the B-step with one exception—no 32-bit addresses need to be swapped by software in the C-step. In this new mode, the 82596 C-step treats 32-bit address pointers as true 32-bit entities and the SCB absolute address and statistical counters are still treated as two 16-bit big endian entities. Not setting this mode will configure the 82596 C-step to be 100% compatible to the A1-step big endian mode.

#### NOTE:

All 82596 memory entities must be word or dword aligned, except the transmit buffers can be byte aligned for the 82596 B or C-steppings.

An example of a dword entity is a frame descriptor command/status dword, whereas the raw data of the frame are byte entities. Both 32- and 16-bit buses are supported. When a 16-bit bus is used with Big Endian memory organization, data lines  $D_{15}$ – $D_0$  are used. The 82596 has an internal crossover that handles these swap operations.



#### **COMMAND UNIT (CU)**

The Command Unit is the logical unit that executes Action Commands from a list of commands very similar to a CPU program. A Command Block is associated with each Action Command. The CU is modeled as a logical machine that takes, at any given time, one of the following states.

- Idle. The CU is not executing a command and is not associated with a CB on the list. This is the initial state.
- Suspended. The CU is not executing a command; however, it is associated with a CB on the list.
- Active. The CU is executing an Action Command and pointing to its CB.

The CPU can affect CU operation in two ways: by issuing a CU Control Command or by setting bits in the Command word of the Action Command.

When programming the 82596 CU, it is important to consider the asynchronous way the 82596 processes commands. If a command is issued to the 82596 CU, it may be busy processing other commands. In order to avoid asynchronous race conditions, the following guidelines are recommended to the 82596 programmer:

- If the CU is already in the Active state, and another command needs to be executed, it is unwise to
  immediately issue another CU Start command. If a new command (or list of commands) needs to be
  started, first issue a CU Suspend command, wait for the CU to become Suspended, then issue the new CU
  Start. This will insure that all commands are processed correctly.
- In general, it is a good idea to make sure any CU command has been accepted and executed before issuing a new control command to the CU.

# **RECEIVE UNIT (RU)**

The Receive Unit is the logical unit that receives frames and stores them in memory. The RU is modeled as a logical machine that takes, at any given time, one of the following states.

- Idle. The RU has no memory resources and is discarding incoming frames. This is the initial state.
- No Resources. The RU has no memory resources and is discarding incoming frames. This state differs
  from Idle in that the RU accumulates statistics on the number of discarded frames.
- Suspended. The RU has memory available for storing frames, but is discarding them. The suspend state can only be reached if the CPU forces this through the SCB or sets the suspend bit in the RFD.
- Ready. The RU has memory available and is storing incoming frames.

The CPU can affect RU operation in three ways: by issuing an RU Control Command, by setting bits in the Frame Descriptor Command word of the frame being received, or by setting the EL bit of the current buffer's Buffer Descriptor.

When programming the 82596 RU, it is important to consider the asynchronous way the 82596 processes receive frames. If an RU Start is issued to the 82596 RU, it may be busy processing other incoming packets. In order to avoid asynchronous race conditions, the following guidelines are recommended to the 82596 programmer:

- If the RU is already in the Ready state, and a new RFA is required to be started, it is unwise to immediately
  issue another RU Start command. If the new RFA needs to be started, first issue an RU Suspend command, wait for the RU to become Suspended, then issue the new RU Start. This will insure that all incoming
  frames are received correctly.
- In general, it is a good idea to make sure any RU command has been accepted and executed before issuing a new control command to the RU.



# SYSTEM CONTROL BLOCK (SCB)

The SCB is a memory block that plays a major role in communications between the CPU and the 82596. Such communications include the following.

- · Commands issued by the CPU
- Status reported by the 82596

Control commands are sent to the 82596 by writing them into the SCB and then asserting CA. The 82596 examines the command, performs the required action, and then clears the SCB command word. Control commands perform the following types of tasks.

- Operation of the Command Unit (CU). The SCB controls the CU by specifying the address of the Command Block List (CBL) and by starting, suspending, resuming, or aborting execution of CBL commands.
- Operation of the Bus Throttle. The SCB controls the Bus Throttle timers by providing them with new values
  and sending the Load and Start timer commands. The timers can be operated in both the 32-bit Segmented
  and Linear modes.
- Reception of frames by the Receive Unit (RU). The SCB controls the RU by specifying the address of the Receive Frame Area and by starting, suspending, resuming, or aborting frame reception.
- · Acknowledgment of events that cause interrupts.
- · Resetting the chip.

The 82596 sends status reports to the CPU via the System Control Block. The SCB contains four types of status reports.

- The cause of the current interrupts. These interrupts are caused by one or more of the following 82596 events.
  - The Command Unit completes an Action Command that has its I bit set.
  - The Receive Unit receives a frame.
  - The Command Unit becomes inactive.
  - The Receive Unit becomes not ready.
- The status of the Command Unit.
- The status of the Receive Unit.
- Status reports from the 82596 regarding reception of corrupted frames.



Events can be cleared only by CPU acknowledgment. If some events are not acknowledged by the ACK field the Interrupt signal (INT) will be reissued after Channel Attention (CA) is processed. Furthermore, if a new event occurs while an interrupt is set, the interrupt is temporarily cleared to trigger edge-triggered interrupt controllers.

The CPU uses the Channel Attention line to cause the 82596 to examine the SCB. This signal is trailing-edge triggered—the 82596 latches CA on the trailing edge. The latch is cleared by the 82596 before the SCB control command is read.

31 ODD WORD	16	15	15 EVEN WORD				0		
ACK X CUC R RUC	x x x x	STAT 0	ÇU\$ 0	ŖUŚ	0 (	0 0	0	SCB	
RFA OFFSET		CBL OFFSET						SCB + 4	
ALIGNMENT ERRORS		CRC ERRORS						SCB + 8	
OVERRUN ERRORS		RESOURCE ERRORS						SCB + 12	

Figure 18. SCB-82586 Mode

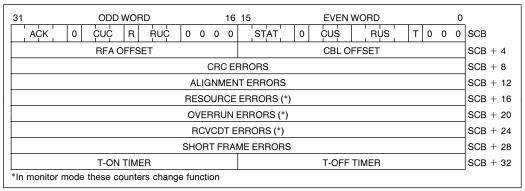


Figure 19. SCB-32-Bit Segmented Mode

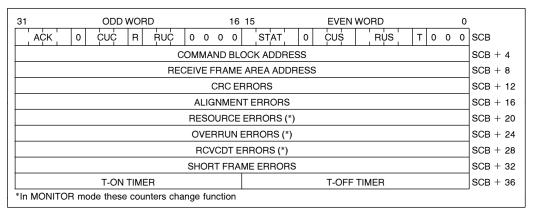


Figure 20. SCB-Linear Mode



#### **Command Word**

31											16	
	AÇK	1	0	CUC	ı	R	RUC	0	0	0	0	SCB + 2

These bits specify the action to be performed as a result of a CA. This word is set by the CPU and cleared by the 82596. Defined bits are:

Bit 31 ACK-CX — Acknowledges that the CU completed an Action Command.

Bit 30 ACK-FR — Acknowledges that the RU received a frame.

Bit 29 ACK-CNA — Acknowledges that the Command Unit became not active.

Bit 28 ACK-RNR — Acknowledges that the Receive Unit became not ready.

Bits 24-26 CUC — (3 bits) This field contains the command to the Command Unit. Valid values are:

- 0 NOP (does not affect current state of the unit).
- Start execution of the first command on the CBL. If a command is executing, complete it before starting the new CBL. The beginning of the CBL is in CBL OFFSET (address).
- 2 Resume the operation of the Command Unit by executing the next command. This operation assumes that the Command Unit has been previously suspended.
- 3 Suspend execution of commands on CBL after current command is complete.
- 4 Abort current command immediately.
- 5 Loads the Bus Throttle timers so they will be initialized with their new values after the active timer (T-ON or T-OFF) reaches Terminal Count. If no timer is active new values will be loaded immediately. This command is not valid in 82586 mode.
- 6 Loads and immediately restarts the Bus Throttle timers with their new values. This command is not valid in 82586 mode.
- 7 Reserved.

Bit 23 RESET

- Reset chip (logically the same as hardware RESET).
- Bits 20-22 RUC (3 bits) This field contains the command to the Receive Unit. Valid values are:
  - NOP (does not alter current state of unit).
     Start reception of frames. The beginning of the RFA is contained in the RFA OFFSET (address). If a frame is being received complete reception before starting.
  - 2 Resume frame reception (only when in suspended state).
  - 3 Suspend frame reception. If a frame is being received complete its reception before suspending.
  - 4 Abort receiver operation immediately.
  - 5-7 Reserved.

#### 82596CA

**Status Word** 



15								0	
STAT	0	cus	0	RUS		) (	0	0	SCB
82586 mode									
15								0	_
STAT	0	CUS		RUS		г	0	0	SCB
32-Bit Segmented	and Linear mod	de.							
Indicates the status	s of the 82596.	This word is n	nodified	only by the 8	32596. De	fined b	oits are:		
Bit 15 CX	— The CU fi	nished executi	ng a cor	mmand with i	its / (inter	rupt) bi	it set.		
Bit 14 FR	— The RU fi	nished receivir	ng a fran	ne.					
Bit 13 CNA	— The Comi	mand Unit left	the Activ	ve state.					
Bit 12 RNR	— The Rece	ive Unit left th	e Ready	state.					
Bits 8-10 CUS	— (3 bits) Th	nis field contair	ns the st	tatus of the c	ommand	unit. V	alid valu	es are:	
	0 — Id	le							
	1 — Su	ıspended							
	2 — Ad	ctive							
	3-7 — No	ot used							
Bits 4-7 RUS	— This field	contains the s	tatus of	the receive u	unit. Valid	values	are:		
	0h (0000)	— Idle							
	1h (0001)	— Suspende	ed						
	2h (0010)	— No Resou	urces. T	his bit indica	ates both	no re	sources	due to	lack of

**SCB OFFSET ADDRESSES** 

4h (0100) — Ready

### **CBL Offset (Address)**

Bit 3 T

In 82586 and 32-bit Segmented modes this 16-bit quantity indicates the offset portion of the address for the first Command Block on the CBL. In Linear mode it is a 32-bit linear address for the first Command Block on the CBL. It is accessed only if CUC equals Start.

Ch (1100) — No more RBDs (not in 82586 mode)

- Bus Throttle timers loaded (not in 82586 mode).

No other combinations are allowed

RFDs in the RDL and no resources due to lack of RBDs in the FBL.

Ah (1010) - No resources due to no more RBDs (not in the 82586 mode).

# **RFA Offset (Address)**

In 82586 and 32-bit Segmented modes this 16-bit quantity indicates the offset portion of the address for the Receive Frame Area. In Linear mode it is a 32-bit linear address for the Receive Frame Area. It is accessed only if RUC equals Start.



#### SCB STATISTICAL COUNTERS

#### **Statistical Counter Operation**

- The CPU is responsible for clearing all error counters before initializing the 82596. The 82596 updates these counters by reading them, adding 1, and then writing them back to the SCB.
- The counters are wraparound counters. After reaching FFFFFFFh the counters wrap around to zero.
- The 82596 updates the required counters for each frame. It is possible for more than one counter to be updated; multiple errors will result in all affected counters being updated.
- The 82596 executes the read-counter/increment/write-counter operation without relinquishing the bus (locked operation). This is to ensure that no logical contention exists between the 82596 and the CPU due to both attempting to write to the counters simultaneously. In the dual-port memory configuration the CPU should not execute any write operation to a counter if LOCK is asserted.
- The counters are 32-bits wide and their behavior is fully compatible with the IEEE 802.3 standard. The 82596 supports all relevant statistics (mandatory, optional, and desired) through the status of the transmit and receive header and directly through SCB statistics.

#### **CRCERRS**

This 32-bit quantity contains the number of aligned frames discarded because of a CRC error. This counter is updated, if needed, regardless of the RU state.

#### **ALNERRS**

This 32-bit quantity contains the number of frames that both are misaligned (i.e., where  $\overline{\text{CRS}}$  deasserts on a nonoctet boundary) and contain a CRC error. The counter is updated, if needed, regardless of the RU state.

#### **SHRTFRM**

This 32-bit quantity contains the number of received frames shorter than the minimum frame length.

The last three counters change function in monitor mode.

### **RSCERRS**

This 32-bit quantity contains the number of good frames discarded because there were no resources to contain them. Frames intended for a host whose RU is in the No Receive Resources state, fall into this category. This counter is updated only if the RU is in the No Resources state. When in Monitor mode this counter counts the total number of frames—good and bad.



#### **OVRNERRS**

This 32-bit quantity contains the number of frames known to be lost because the local system bus was not available. If the traffic problem lasts longer than the duration of one frame, the frames that follow the first are lost without an indicator, and they are not counted. This counter is updated, if needed, regardless of the RU state.

This 32-bit counter contains the number of collisions detected during frame reception. This counter will only be updated if at least 64 bytes of data are received before the collision occurs. If a collision occurs before 64 bytes of data are received, the frame is counted as a short frame. If the collision occurs in the preamble, no counters are incremented.

#### **ACTION COMMANDS AND OPERATING MODES**

This section lists all the Action Commands of the Command Unit Command Block List (CBL). Each command contains the Command field, the Status and Control fields, the link to the next Action Command, and any command-specific parameters. There are three basic types of action commands: 82596 Configuration and Setup, Transmission, and Diagnostics. The following is a list of the actual commands.

NOP

• Individual Address Setup

Configure

MC Setup

• Transmit

• TDR

Dump

Diagnose

The 82596 has three addressing modes. In the 82586 mode all the Action Commands look exactly like those of the 82586.

- 82586 Mode. The 82596 software and memory structure is compatible with the 82586.
- 32-Bit Segmented Mode. The 82596 can access the entire system memory and use the two new memory structures—Simplified and Flexible—while still using the segmented approach. This does not require any significant changes to existing software.
- Linear Mode. The 82596 operates in a flat, linear, 4 gigabyte memory space without segmentation. It can also use the two new memory structures.

In the 32-bit Segmented mode there are some differences between the 82596 and 82586 action commands, mainly in programming and activating new 82596 features. Those bits marked "don't care" in the compatible mode are not checked; however, we strongly recommend that those bits all be zeroes; this will allow future enchancements and extensions.

In the Linear mode all of the address offsets become 32-bit address pointers. All new 82596 features are accessible in this mode, and all bits previously marked "don't care" must be zeroes.

The Action Commands, and all other 82596 memory structures, must begin on even byte boundaries, i.e., they must be word aligned.



This command results in no action by the 82596 except for those performed in the normal command processing. It is used to manipulate the CBL manipulation. The format of the NOP command is shown in Figure 21.

	NOP—82586 and 32-Bit Segmented Modes																														
31						O	DD \	NOF	RD						16	15						ΕV	EN	wo	RD						0
EL	s	ı	Х	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	0	0	0	С	В	ОК	0	0	0	0	0	0	0	0	0	0	0	0	0 0
Х	Х	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	A1	5					LIN	ΚC	FFS	SET						A0 4
													NO	)P-	–Li	nea	ar N	/lode	•												
31						0[	DD \	NOI	RD						16	15						ΕV	EN	WO	RD						0
EL	s	Ι	0	0	0	0	0	0	0	0	0	0	0	0	0	С	В	ОК	0	0	0	0	0	0	0	0	0	0	0	0	0 0
A3	A31 LINK ADDRESS														A0 4																

Figure 21

۱۸/	he	rဝ

В

OK

LINK POINTER — In the 82586 or 32-bit Segmented modes this is a 16-bit offset to the next Command Block. In the Linear mode this is the 32-bit address of the next Command Block.

EL If set, this bit indicates that this command block is the last on the CBL.

S - If set to one, suspend the CU upon completion of this CB.

- If set to one, the 82596 will generate an interrupt after execution of the command is

complete. If I is not set to one, the CX bit will not be set.

CMD (bits 16-18) — The NOP command. Value: 0h.

Bits 19-28 Reserved (zero in the 32-bit Segmented and Linear modes).

— This bit indicates the execution status of the command. The CPU initially resets it to zero С

when the Command Block is placed on the CBL. Following a command Completion, the

82596 will set it to one.

- This bit indicates that the 82596 is currently executing the NOP command. It is initially

reset to zero by the CPU. The 82596 sets it to one when execution begins and to zero when execution is completed. This bit is also set when the 82596 prefetches the com-

mand.

#### NOTE:

The C and B bits are modified in one operation.

- Indicates that the command was executed without error. If set to one no error occurred (command executed OK). If zero an error occured.

### **Individual Address Setup**

This command is used to load the 82596 with the Individual Address. This address is used by the 82596 for inserting the Source Address during transmission and recognizing the Destination Address during reception. After RESET, and prior to Individual Address Setup Command execution, the 82596 assumes the Broadcast Address is the Individual Address in all aspects, i.e.:

- This will be the Individual Address Match reference.
- This will be the Source Address of a transmitted frame (for AL-LOC=0 mode only).



The format of the Individual Address Setup command is shown in Figure 22.

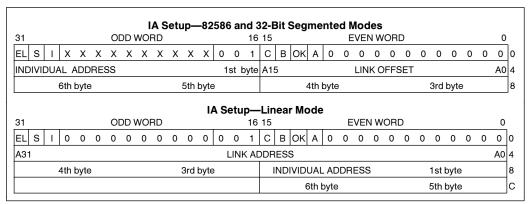


Figure 22

where:

LINK ADDRESS, — As per standard Command Block (see the NOP command for details)

EL, B, C, I, S

A — Indicates that the command was abnormally terminated due to CU Abort control

command. If one, then the command was aborted, and if necessary it should be

repeated. If this bit is zero, the command was not aborted.

Bits 19–28 — Reserved (zero in the 32-bit Segmented and Linear modes).

CMD (bits 16–18) — The Address Setup command. Value: 1h.

INDIVIDUAL ADDRESS — The individual address of the node, 0 to 6 bytes long.

The least significant bit of the Individual Address must be zero for Ethernet (see the Command Structure). However, no enforcement of 0 is provided by the 82596. Thus, an Individual Address with 1 as its least significant bit is a valid Individual Address in all aspects.

The default address length is 6 bytes long, as in 802.3. If a different length is used the IA Setup command should be executed after the Configure command.

### Configure

The Configure command loads the 82596 with its operating parameters. It allows changing some of the parameters by specifying a byte count less than the maximum number of configuration bytes (11 in the 82586 mode, 14 in the 32-Bit Segmented and Linear modes). The 82596 configuration depends on its mode of operation. When configuring the 12th byte (Byte 11 undefined) in 82586 mode this byte should be all ones.

- In the 82586 mode the maximum number of configuration bytes is 12. Any number larger than 12 will be reduced to 12 and any number less than 4 will be increased to 4.
- The additional features of the serial side are disabled in the 82586 mode.
- In both the 32-Bit Segmented and Linear modes there are four additional configuration bytes, which hold parameters for additional 82596 features. If these parameters are not accessed, the 82596 will follow their default values.
- For more detailed information refer to the 32-Bit LAN Components User's Manual.



The format of the Configure command is shown in Figure 23, 24 and 25.

31 ODD WORD										16 15							EVEN WORD												
EL S I	ΧХ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	0	1	0	С	В	ОК	Α	0	0	0	0	0	0	0	0	0	0	0	0	0
	Byte 1 Byte 0										A15 LINK OFFSET							AC					4						
	Byte 5							By	te 4	Byte 3							Byte 2					8							
Byte 9 Byte 8													Byt	e 7				Byte 6							12				
X X X	X							Χ	Х	Χ	Χ	Χ	Χ	Χ	Χ	Χ				Byte	e 10	)			16				

Figure 23. CONFIGURE—82586 Mode

31 ODD \	WORD 16	15 EVEN	WORD	0
EL S I 0 0 0 0 0	0 0 0 0 0 0 1 0	C B OK A 0 0 0 0	0 0 0 0 0 0	0 0 0
Byte 1	Byte 0	A15 LINK C	FFSET	A0 4
Byte 5	Byte 4	Byte 3	Byte 2	8
Byte 9	Byte 8	Byte 7	Byte 6	12
Byte 13	Byte 12	Byte 11	Byte 10	16

Figure 24. CONFIGURE—32-Bit Segmented Mode

WORD 16	15 EVEN W	ORD	0									
0 0 0 0 0 0 1 0	C B OK A 0 0 0 0	0 0 0 0 0 0	0 0									
A31 LINK ADDRESS A0												
Byte 2	Byte 1 By											
Byte 6	Byte 5	Byte 4	12									
Byte 10	Byte 9	Byte 8	16									
x x x x x x x x	Byte 13	Byte 12	20									
	0 0 0 0 0 0 0 1 0  LINK AD  Byte 2  Byte 6  Byte 10	0 0 0 0 0 0 0 1 0 C B OK A 0 0 0 0 0  LINK ADDRESS  Byte 2 Byte 1  Byte 6 Byte 5  Byte 9	O         O         O         O         I         O         C         B         OK         A         O									

Figure 25. CONFIGURE—Linear Mode

LINK ADDRESS,  $\,$  — As per standard Command Block (see the NOP command for details) EL, B, C, I, S

Α.

Indicates that the command was abnormally terminated due to a CU Abort control command. If 1, then the command was aborted and if necessary it should be repeated. If this bit is 0, the command was not aborted.

Bits 19–28 — Reserved (zero in the 32-Bit Segmented and Linear Modes)

CMD (bits 16-18) — The CONFIGURE command. Value: 2h.

The interpretation of the fields follows:

7	6	5	4	3	2	1	0
Р	Х	Х	Х		BYTE	COUNT	

BYTE 0

BYTE CNT (Bits 0-3) Byte Count. Number of bytes, including this one, that hold pa-

rameters to be configured.

PREFETCHED (Bit 7) Enable the 82596 to write the prefetched bit in all prefetch


RBDs.

35



#### NOTE:

The P bit is valid only in the new memory structure modes. In 82586 mode this bit is disabled (i.e., no prefetched mark).

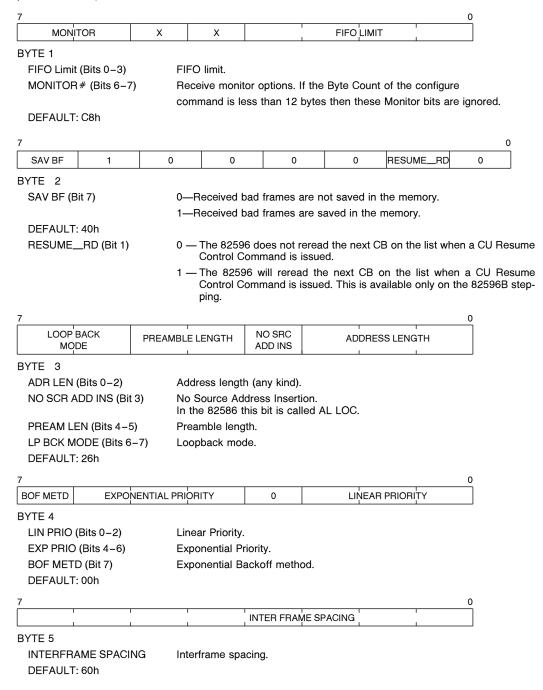

### 82596CA



7 SLOT TIME - LOW

BYTE 6

SLOT TIME (L) Slot time, low byte.

DEFAULT: 00h

7 MAXIMUM RETRY NUMBER 0 SLOT TIME - HIGH

BYTE 7

SLOT TIME (H)

Slot time, high part.

(Bits 0-2)

RETRY NUM (Bits 4-7) Number of transmission retries on collision.

DEFAULT: F2h

7 0

| PAD | BIT | CRC16/ | NO CRC | TONO | MAN/ | BC | PRM |
| STUFF | CRC32 | INSER | CRS | NRZ | DIS | MODE |

BYTE 8

PRM (Bit 0) Promiscuous mode.
BC DIS (Bit 1) Broadcast disable.

MANCH/NRZ (Bit 2) Manchester or NRZ encoding. See specific timing require-

ments for TXC in Manchester mode.

TONO CRS (Bit 3) Transmit on no CRS. NOCRC INS (Bit 4) No CRC insertion.

CRC-16/CRC-32 (Bit 5) CRC type.
BIT STF (Bit 6) Bit stuffing.
PAD (Bit 7) Padding.

DEFAULT: 00h

CDT SRC COLLISION DETECT FILTER CRS SRC CARRIER SENSE FILTER

BYTE 9

CRSF (Bits 0–2) Carrier Sense filter (length).
CRS SRC (Bit 3) Carrier Sense source.

CDTF (Bits 4–6) Collision Detect filter (length).

CDT SRC (Bit 7) Collision Detect source.

DEFAULT: 00h

## 82596CA



7							0
	1	l	MINIMUM FR	AME LENGTH		l	
BYTE 10 MIN FRAM DEFAULT:		Minimu	m frame leng	th.			
7							0
10M	VITOR	MC_ALL	CDBSAC	AUTOTX	CRCINM	LNGFLD	PRECRS
BYTE 11							
PRECRS (	Bit 0)	Preamb	ole until Carrie	er Sense			
LNGFLD (	Bit 1)	Length	field. Enables	s padding at th	ne End-of-Car	rier framing (8	02.3).
CRCINM (	Bit 2)	Rx CR	C appended to	o the frame in	memory.		
AUTOTX (	Bit 3)	Auto re	etransmit wher	n a collision o	ccurs during t	he preamble.	
CDBSAC (	Bit 4)	Collisio	n Detect by s	ource address	recognition.		
MC_ALL	(Bit 5)	Enable	to receive all	MC frames.			
MONITOR	(Bits 6-7)	Receiv	e monitor opti	ons.			
DEFAULT:	: FFH						
7							0
0	FDX	0	0	0	0	0	0
BYTE 12							
FDX (Bit 6)	)	Enable	s Full Duplex	operation.			
DEFAULT:	: 00h						
7							0
DIS_BOF	MULT_IA	1	1	1	1	1	1
BYTE 13							
MULT_IA	(Bit 6)	Multiple	e individual ad	ldress.			
DIS_BOF	(Bit 7)	Disable	the backoff a	algorithm.			
DEFAULT:	: 3Fh						



A reset (hardware or software) configures the 82596 according to the following defaults.

**Table 4. Configuration Defaults** 

	Table 4. CC	ontiguration De	iauits
	Parameter	Default Value	Units/Meaning
	ADDRESS LENGTH	**6	Bytes
	A/L FIELD LOCATION	0	Located in FD
*	AUTO RETRANSMIT	1	Auto Retransmit Enable
	BITSTUFFING/EOC	0	EOC
	BROADCAST DISABLE	0	Broadcast Reception Enabled
*	CDBSAC	1	Disabled
	CDT FILTER	0	Bit Times
	CDT SRC	0	External Collision Detection
*	CRC IN MEMORY	1	CRC Not Transferred to Memory
	CRC-16/CRC-32	**0	CRC-32
	CRS FILTER	0	0 Bit Times
	CRS SRC	0	External CRS
*	DISBOF	0	Backoff Enabled
	EXT LOOPBACK	0	Disabled
	EXPONENTIAL PRIORITY	**0	802.3 Algorithm
	EXPONENTIAL BACKOFF METHOD	**0	802.3 Algorithm
*	FULL DUPLEX (FDX)	0	CSMA/CD Protocol (No FDX)
	FIFO THRESHOLD	8	TX: 32 Bytes, RX: 64 Bytes
	INT LOOPBACK	0	Disabled
	INTERFRAME SPACING	**96	Bit Times
	LINEAR PRIORITY	**0	802.3 Algorithm
*	LENGTH FIELD	1	Padding Disabled
	MIN FRAME LENGTH	**64	Bytes
*	MC ALL	1	Disabled
*	MONITOR	11	Disabled
	MANCHESTER/NRZ	0	NRZ
*	MULTI IA	0	Disabled
	NUMBER OF RETRIES	**15	Maximum Number of Retries
	NO CRC INSERTION	0	CRC Appended to Frame
	PREFETCH BIT IN RBD	0	Disabled (Valid Only in New Modes)
	PREAMBLE LENGTH	**7	Bytes
*	Preamble Until CRS	1	Disabled
	PROMISCUOUS MODE	0	Address Filter On
	PADDING	0	No Padding
	SLOT TIME	**512	Bit Times
	SAVE BAD FRAME	0	Discards Bad Frames
	TRANSMIT ON NO CRS	0	Disabled

- 1. This configuration setup is compatible with the IEEE 802.3 specification.
  2. The Asterisk "\*" signifies a new configuration parameter not available in the 82586.
  3. The default value of the Auto retransmit configuration parameter is enabled(1).
  4. Double Asterisk "\*\*" signifies IEEE 802.3 requirements.



#### **Multicast-Setup**

This command is used to load the 82596 with the Multicast-IDs that should be accepted. As noted previously, the filtering done on the Multicast-IDs is not perfect and some unwanted frames may be accepted. This command resets the current filter and reloads it with the specified Multicast-IDs. The format of the Multicast-addresses setup command is:

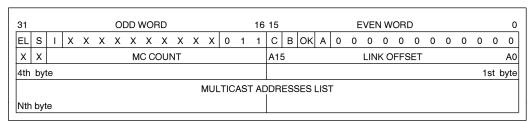


Figure 26. MC Setup-82586 and 32-Bit Segmented Modes




Figure 27. MC Setup—Linear Mode

where:

MC-CNT

Α

LINK ADDRESS, EL, B, C, I, S

As per standard Command Block (see the NOP command for details)

 Indicates that the command was abnormally terminated due to a CU Abort control command. If one, then the command was aborted and if necessary it should be

repeated. If this bit is zero, the command was not aborted.

Bits 19–28 — Reserved (0 in both the 32-Bit Segmented and Linear Modes).

CMD (bits 16–18) — The MC SETUP command value: 3h.

This 14-bit field indicates the number of bytes in the MC LIST field. The MC CNT must be a multiple of the ADDR LEN; otherwise, the 82596 reduces the MC CNT to

the nearest ADDR LEN multiple. MC CNT=0 implies resetting the Hash table which is equivalent to disabling the Multicast filtering mechanism.

MC LIST — A list of Multicast Addresses to be accepted by the 82596. The least significant bit

of each MC address must be 1.

#### NOTE:

The list is sequential; i.e., the most significant byte of an address is immediately followed by the least significant byte of the next address.

 When the 82596 is configured to recognize multiple Individual Address (Multi-IA), the MC-Setup command is also used to set up the Hash table for the individual address.

The least significant bit in the first byte of each IA address must be 0.



#### **Transmit**

This command is used to transmit a frame of user data onto the serial link. The format of a Transmit command is as follows.

31		OI	DD V	NOI	RD						16	15		EVEN WORD	)	0
EL S I	ХХ	ХХ	Χ	Χ	Х	Χ	Х	Χ	1	0	0	С	В	STATUS BITS	MAXCOLL	0
A15		ТВ	DΟ	FFS	SET						A0	A15		LINK OFFS	ET	A0 4
4th byte												DES <sup>®</sup>	TIN	ATION ADDRESS	1s	t byte 8
		LEN	IGTI	H FI	EL	)						6th b	yte			12

Figure 28. TRANSMIT—82586 Mode

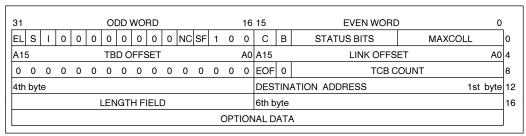


Figure 29. TRANSMIT—32-Bit Segmented Mode


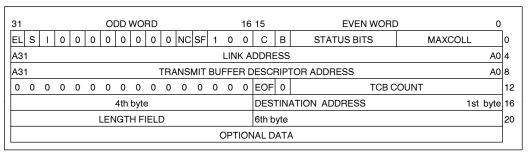


Figure 30. TRANSMIT—Linear Mode



#### 82596CA

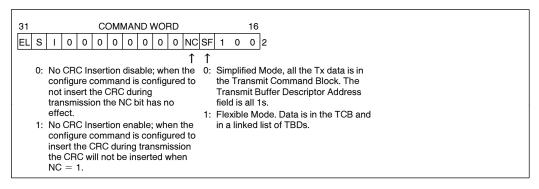

۱۸/	n	Δ	r	_	•

EL, B, C, I, S - As per standard Command Block (see the NOP command for details).

OK (Bit 13) Error free completion.

A (Bit 12) - Indicates that the command was abnormally terminated due to CU Abort control command. If 1, then the command was aborted, and if necessary it should be

repeated. If this bit is 0, the command was not aborted.

Bits 19-28 - Reserved (0 in the 32-bit Segmented and Linear modes).

CMD (Bits 16-18) - The transmit command: 4h.

Status Bit 11 Late collision. A late collision (a collision after the slot time is elapsed) is detected.

- No Carrier Sense signal during transmission. Carrier Sense signal is monitored Status Bit 10 from the end of Preamble transmission until the end of the Frame Check Sequence for TONOCRS = 1 (Transmit On No Carrier Sense mode) it indicates that transmission has been executed despite a lack of CRS. For TONOCRS = 0 (Ethernet

when lack of Carrier Sense has been detected).

Status Bit 9 Transmission unsuccessful (stopped) due to Loss of CTS.

Status Bit 8 - Transmission unsuccessful (stopped) due to DMA Underrun; i.e., the system did

not supply data for transmission.

Status Bit 7 - Transmission Deferred, i.e., transmission was not immediate due to previous link

activity.

Status Bit 6 - Heartbeat Indicator, Indicates that after a previously performed transmission, and

before the most recently performed transmission, (Interframe Spacing) the CDT signal was monitored as active. This indicates that the Ethernet Transceiver Collision Detect logic is performing properly. The Heartbeat is monitored during the

mode), this bit also indicates unsuccessful transmission (transmission stopped

Interframe Spacing period.

Status Bit 5 Transmission attempt was stopped because the number of collisions exceeded the

maximum allowable number of retries.

Status Bit 4 — 0 (Reserved).

MAX-COL — The number of Collisions experienced during this frame. Max Col = 0 plus S5 = 1(Bits 3-0)

indicates 16 collisions.

LINK OFFSET As per standard Command Block (see the NOP Command for details)

**TBD POINTER** - In the 82586 and 32-bit Segmented modes this is the offset of the first Tx Buffer Descriptor containing the data to be transmitted. In the Linear mode this is the 32-

bit address of the first Tx Buffer Descriptor on the list. If the TBD POINTER is all 1s

it indicates that no TBD is used.

**DEST ADDRESS** - Contains the Destination Address of the frame. The least significant bit (MC) indi-

cates the address type.

MC = 0: Individual Address.

MC = 1: Multicast or Broadcast Address.

If the Destination Address bits are all 1s this is a Broadcast Address.

**LENGTH FIELD** — The contents of this 2-byte field are user defined. In 802.3 it contains the length of

the data field. It is placed in memory in the same order it is transmitted; i.e., most

significant byte first, least significant byte second.

**TCB COUNT** This 14-bit counter indicates the number of bytes that will be transmitted from the Transmit Command Block, starting from the third byte after the TCB COUNT field

(address n+12 in the 32-bit Segmented mode, N+16 in the Linear mode). The TCB COUNT field can be any number of bytes (including an odd byte), this allows the user to transmit a frame with a header having an odd number of bytes. The

TCB COUNT field is not used in the 82586 mode.

**EOF Bit** Indicates that the whole frame is kept in the Transmit Command Block. In the

Simplified memory model it must be always asserted.



The interpretation of what is transmitted depends on the No Source Address insertion configuration bit and the memory model being used.

#### NOTES:

- The Destination Address and the Length Field are sequential. The Length Field immediately follows the most significant byte of the Destination Address.
- 2. In case the 82596 is configured with No Source Address insertion bit equal to 0, the 82596 inserts its configured Source Address in the transmitted frame.
- In the 82586 mode, or when the Simplified memory model is used, the Destination and Length fields of the transmitted frame are taken from the Transmit Command Block.
- If the FLEXIBLE memory model is used, the Destination and Length fields of the transmitted frame can be found either in the TCB or TBD, depending on the TCB COUNT.
- 3. If the 82596 is configured with the Address/Length Field Location equal to 1, the 82596 does not insert its configured Source Address in the transmitted frame. The first (2 × Address Length) + 2 bytes of the transmitted frame are interpreted as Destination Address, Source Address, and Length fields respectively. The location of the first transmitted byte depends on the operational mode of the 82596:
- In the 82586 mode, it is always the first byte of the first Tx Buffer.
- In both the 32-bit Segmented and Linear modes it depends on the SF bit and TCB COUNT:
  - In the Simplified memory mode the first transmitted byte is always the third byte after the TCB COUNT field.
  - In the Flexible mode, if the TCB COUNT is greater than 0 then it is the third byte after the TCB COUNT field. If TCB COUNT equals 0 then it is first byte of the first Tx Buffer.
- Transmit frames shorter than six bytes are invalid. The transmission will be aborted (only in 82586 mode) because of a DMA Underrun.
- 4. Frames which are aborted during transmission are jammed. Such an interruption of transmission can be caused by any reason indicated by any of the status bits 8, 9, 10 and 12.

### **Jamming Rules**

- 1. Jamming will not start before completion of preamble transmission.
- 2. Collisions detected during transmission of the last 11 bits will not result in jamming.

The format of a Transmit Buffer Descriptor is:

											;	825	58	6 Mc	ode	•		
31			OE	DD V	VOF	RD						1	16	15		13	EVEN WORD	0
		NE	XT	TBI	OF	FS	ΕT							EOF	Х		SIZE (ACT COUNT)	(
x x x	ХХ	Χ	Χ	Χ									Т	ΓRΑΝ	SM	IT BUF	FFER ADDRESS	4
									3	2-E	3it	Se	ıp	men	ted	Mod	e	
31			OE	DD V	VOF	RD							_	15		13	EVEN WORD	0
	NEXT TBD OFFSET EOF 0 SIZE (ACT COUNT)														(			
									TRA	NS	MI	ТВ	BUF	FFER	AC	DRES	SS	4
											ı	Lin	ea	ar Mo	ode	)		
31			OE	DD V	VOF	RD						1	16	15		13	EVEN WORD	0
0 0 0	0 0	0	0	0	0	0	0	0	0	0	0	) (	0	EOF	0		SIZE (ACT COUNT)	(
										NE	ΞX	T TE	BD	) ADE	RE	SS		
									TR/	NS	MI	ТВ	BUE	FFER	AC	DRES	SS	

Figure 31

#### 82596CA



where:

**EOF** - This bit indicates that this TBD is the last one associated with the frame being

transmitted. It is set by the CPU before transmit.

SIZE (ACT COUNT) - This 14-bit quantity specifies the number of bytes that hold information for the

current buffer. It is set by the CPU before transmission.

NEXT TBD ADDRESS — In the 82586 and 32-bit Segmented modes, it is the offset of the next TBD on the list. In the Linear mode this is the 32-bit address of the next TBD on the list. It is

meaningless if EOF = 1.

**BUFFER ADDRESS** - The starting address of the memory area that contains the data to be sent. In the

82586 mode, this is a 24-bit address (A31-A24 are considered to be zero). In the 32-bit Segmented and Linear modes this is a 32-bit address. This buffer can be

byte aligned for the 82596 B step.

### **TDR**

This operation activates Time Domain Reflectomet, which is a mechanism to detect open or short circuits on the link and their distance from the diagnosing station. The TDR command has no parameters. The TDR transmit sequence was changed, compared to the 82586, to form a regular transmission. The TDR command is designed to be used statically. Make sure that both the CU and RU are idle before attempting a TDR command. The TDR bit stream is as follows.

- Preamble
- Source address
- Another Source address (the TDR frame is transmitted back to the sending station, so DEST ADR = SRC ADR).
- Data field containing 7Eh patterns.
- Jam Pattern, which is the inverse CRC of the transmitted frame.

Maximum length of the TDR frame is 2048 bits. If the 82596 senses collision while transmitting the TDR frame it transmits the jam pattern and stops the transmission. The 82596 then triggers an internal timer (STC); the timer is reset at the beginning of transmission and reset if CRS is returned. The timer measures the time elapsed from the start of transmission until an echo is returned. The echo is indicated by Collision Detect going active or a drop in the Carrier Sense signal. The following table lists the possible cases that the 82596 is able to analyze.

#### Conditions of TDR as Interpreted by the 82596

Transceiver Type Condition	Ethernet	Non Ethernet
Carrier Sense was inactive for 2048-bit-time periods	Short or Open on the Transceiver Cable	NA
Carrier Sense signal dropped	Short on the Ethernet cable	NA
Collision Detect went active	Open on the Ethernet cable	Open on the Serial Link
The Carrier Sense Signal did not drop or the Collision Detect did not go active within 2048-bit time period	No Problem	No Problem

An Ethernet transceiver is defined as one that returns transmitted data on the receive pair and activates the Carrier Sense Signal while transmitting. A Non-Ethernet Transceiver is defined as one that does not do so.



The format of the Time Domain Reflectometer command is:

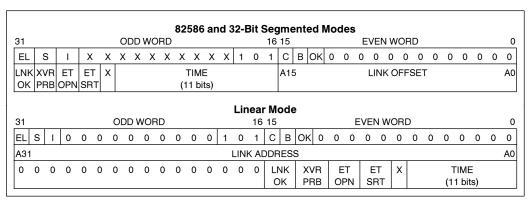


Figure 32. TDR

14/	h۸	re

Α

LINK ADDRESS,

- As per standard Command Block (see the NOP command for details).

EL, B, C, I, S

— Indicates that the command was abnormally terminated due to CU Abort control command. If one, then the command was aborted, and if necessary it should be repeated. If this bit is zero, the command was not aborted.

Bits 19-28

- Reserved (0 in the 32-bit Segmented and Linear Modes).

CMD (Bits 16-18)

— The TDR command. Value: 5h.

TIME

— An 11-bit field that specifies the number of TxC cycles that elapsed before an echo was observed. No echo is indicated by a reception consisting of "1s" only. Because the network contains various elements such as transceiver links, transceivers, Ethernet, repeaters etc., the TIME is not exactly proportional to the problems

distance.

LNK OK (Bit 15)

— No link problem identified. TIME = 7FFh.

XCVR PRB (Bit 14)

Indicates a Transceiver problem. Carrier Sense was inactive for 2048-bit time period. LNK OK = 0. TIME = 7FFh.

ET OPN (Bit 13)

- The transmission line is not properly terminated. Collision Detect went active and

LNK OK = 0.

ET SRT (Bit 12)

 There is a short circuit on the transmission line. Carrier Sense Signal dropped and LNK OK = 0.



#### **DUMP**

This command causes the contents of various 82596 registers to be placed in a memory area specified by the user. It is supplied as a 82596 self-diagnostic tool, and to provide registers of interest to the user. The format of the DUMP command is:

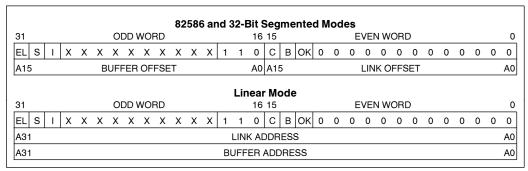


Figure 33. Dump

where:

LINK ADDRESS,

- As per standard Command Block (see the NOP command for details).

EL, B, C, I, S

OK — Indicates error free completion.

Bits 19-28 — Reserved (0 in the 32-bit Segmented and Linear Modes).

CMD (Bits 16–18) — The Dump command. Value: 6h.

BUFFER POINTER — In the 82586 and 32-bit Segmented modes this is the 16-bit-offset portion of the

dump area address. In the Linear mode this is the 32-bit linear address of the dump

area.

#### **Dump Area Information Format**

- The 82596 is not Dump compatible with the 82586 because of the 32-bit internal architecture. In 82586 mode the 82596 will dump the same number of bytes as the 82586. The compatible data will be marked with an asterisk.
- In 82586 mode the dump area is 170 bytes.
- The DUMP area format of the 32-bit Segmented and Linear modes is described in Figure 35.
- The size of the dump area of the 32-bit Segmented and Linear modes is 304 bytes.
- When the Dump is executed by the Port command an extra word will be appended to the Dump Area. The
  extra word is a copy of the Dump Area status word (containing the C, B, and OK Bits). The C and OK Bits
  are set when the 82596 has completed the Port Dump command.



45 44 40 40 41 40 0 0 7 0 5 4 0 0 4	
15 14 13 12 11 10 9 8 7 6 5 4 3 2 1  DMA CONTROL REGISTER	<u> </u>
CONFIGURE BYTES* 3, 2	$\exists$
CONFIGURE BYTES* 5, 4	
CONFIGURE BYTES* 7, 6	
CONFIGURE BYTES* 9, 8	
CONFIGURE BYTES* 10	
I.A. BYTES 1, 0*	
I.A. BYTES 3, 2*	C
I.A. BYTES 5, 4*	1
LAST T.X. STATUS*	1
T.X. CRC BYTES 1, 0*	1
T.X. CRC BYTES 3, 2*	1
R.X. CRC BYTES 1, 0*	1
R.X. CRC BYTES 3, 2*	1
R.X. TEMP MEMORY 1, 0*	1
R.X. TEMP MEMORY 3, 2*	1
R.X. TEMP MEMORY 5, 4*	2
LAST RECEIVED STATUS*	2
HASH REGISTER BYTES 1, 0*	-
HASH REGISTER BYTES 3, 2*	-
HASH REGISTER BYTES 5, 4*	-
HASH REGISTER BYTES 7, 6*	-
SLOT TIME COUNTER*	_ 2
WAIT TIME COUNTER*	-
MICRO MACHINE**	3
REGISTER FILE	[:
CO DVTEC	:
60 BYTES	-
MICRO MACHINE LFSR**  MICRO MACHINE**	-
MICHO MACI IINE	Ι.
FLAG ARRAY	-
14 BYTES	7
QUEUE MEMORY**	<b>−</b>  ′ <sub>7</sub>
GOLDE MEMOTT	[.
CUPORT	-  -
8 BYTES	8
MICRO MACHINE ALU**	8
RESERVED**	8
M.M. TEMP A ROTATE R**	8
M.M. TEMP A**	8
T.X. DMA BYTE COUNT**  M.M. INPUT PORT ADDRESS**	8
T.X. DMA ADDRESS	
M.M. OUTPUT PORT**	
R.X. DMA BYTE COUNT**	
M.M. OUTPUT PORT ADDRESS REGISTER**	-
R. DMA ADDRESS**	$\exists$
RESERVED**	
BUS THROTTLE TIMERS	
DIU CONTROL REGISTER**	
RESERVED**	$\dashv$
DMA CONTROL REGISTER**	- i
BIU CONTROL REGISTER**	- i
M.M. DISPATCHER REG.**	
M.M. STATUS REGISTER**	

Figure 34. Dump Area Format—82586 Mode

<sup>\*</sup>The 82596 is not Dump compatible with the 82586 because of the 32-bit internal architecture. In 82586 mode the 82596 will dump the same number of bytes as the 82586.
\*\*These bytes are not user defined, results may vary from Dump command to Dump command.



1	0
CONFIGURE B	
CONFIGURE B	
CONFIGURE BYT	
I.A. BYTES 1, 0	X X X X X X X X
I.A. BYT	,
TX CRC BYTES 0, 1	LAST T.X. STATUS
RX CRC BYTES 0, 1	TX CRC BYTES 3, 2
RX TEMP MEMORY 1, 0	RX CRC BYTES 3, 2
R.X. TEMP M	IEMORY 5, 2
HASH REGISTERS 1, 0	LAST R.X. STATUS
HASH REGIST	ER BYTES 5, 2
SLOT TIME COUNTER	HASH REGISTERS 7, 6
RECEIVE FRAME LENGTH	WAIT-TIME COUNTER
MICRO MA	ACHINE**
REGIST	ER FILE
128 B	YTES
	HINE LFSR**
MICRO MA	ACHINE**
FLAG A	ARRAY
28 B)	YTES
M.M. INPU 16 B)	
MICRO MAC	
RESER	
M.M. TEMP A	
M.M. TE	
T.X. DMA BY	
M.M. INPUT PORT AD	DRESS REGISTER**
T.X. DMA A	.DDRESS**
M.M. OUTPUT PC	
R.X. DMA BY	
M.M. OUTPUT PORT A	DDRESS REGISTER**
R.X. DMA ADDRE	ESS REGISTER**
RESER	RVED**
BUS THROT	TLE TIMERS
DIU CONTROL	REGISTER**
RESER	₹VED**
DMA CONTRO	L REGISTER**
BIU CONTROL	REGISTER**
M.M. DISPATO	CHER REG.**
M.M. STATUS	REGISTER**

The 82596 is not Dump compatible with the 82586 because of the 32-bit internal architecture. In 82586 mode the 82596 will dump the same number of bytes as the 82586. \*\*These bytes are not user defined, results may vary from Dump command to Dump command.

Figure 35. Dump Area Format—Linear and 32-Bit Segmented Mode



#### Diagnose

The Diagnose Command triggers an internal self-test procedure that checks internal 82596 hardware, which includes:

- Exponential Backoff Random Number Generator (Linear Feedback Shift Register).
- Exponential Backoff Timeout Counter.
- Slot Time Period Counter.
- Collision Number Counter.
- Exponential Backoff Shift Register.
- Exponential Backoff Mask Logic.
- Timer Trigger Logic.

This procedure checks the operation of the Backoff block, which resides in the serial side and is not easily controlled. The Diagnose command is performed in two phases.

The format of the 82596 Diagnose command is:

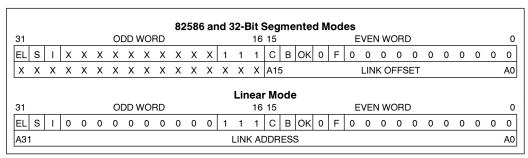


Figure 36. Diagnose

where:

LINK ADDRESS, — As per standard Command Block (see the NOP command for details).

EL, B, C, I, S

Bits 19–28 — Reserved (0 in the 32-bit Segmented and Linear Modes).

CMD (bits 16–18) — The Diagnose command. Value: 7h.

OK (bit 13) — Indicates error free completion.

F (bit 11) — Indicates that the self-test procedure has failed.



### RECEIVE FRAME DESCRIPTOR

Each received frame is described by one Receive Frame Descriptor (see Figure 37). Two new memory structures are available for the received frames. The structures are available only in the Linear and 32-bit Segmented modes.

## **Simplified Memory Structure**

The first is the Simplified memory structure, the data section of the received frame is part of the RFD and is located immediately after the Length Field. Receive Buffer Descriptors are not used with the Simplified structure, it is primarily used to make programming easier. If the length of the data area described in the Size Field is smaller than the incoming frame, the following happens.

- 1. The received frame is truncated.
- 2. The No Resource error counter is updated.
- 3. If the 82596 is configured to Save Bad Frames the RFD is not reused; otherwise, the same RFD is used to hold the next received frame, and the only action taken regarding the truncated frame is to update the counter.
- 4. The 82596 continues to receive the next frame in the next RFD.

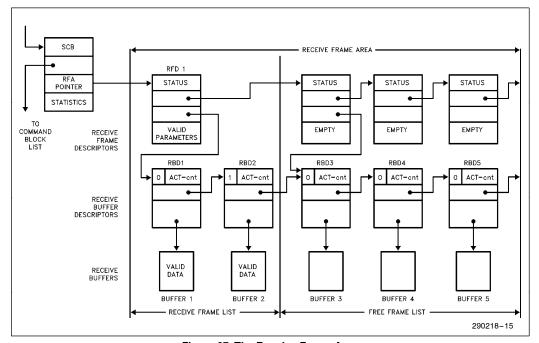


Figure 37. The Receive Frame Area



Note that this sequence is very useful for monitoring. If the 82596 is configured to Save Bad Frames, to receive in Promiscuous mode, and to use the Simplified memory structure, any programmed length of received data can be saved in memory.

The Simplified memory structure is shown in Figure 38.

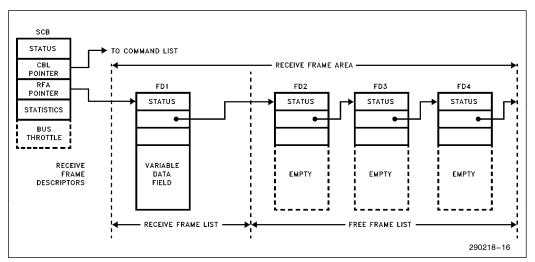


Figure 38. RFA Simplified Memory Structure

## **Flexible Memory Structure**

The second structure is the Flexible memory structure, the data structure of the received frame is stored in both the RFD and in a linked list of Receive Buffers—Receive Buffer Descriptors. The received frame is placed in the RFD as configured in the Size field. Any remaining data is placed in a linked list of RBDs.

The Flexible memory structure is shown in Figure 39.



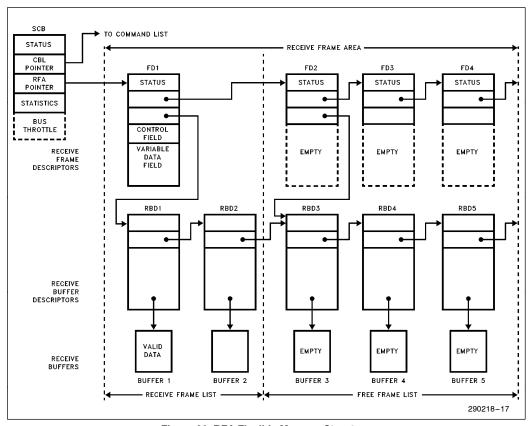


Figure 39. RFA Flexible Memory Structure

Buffers on the receive side can be different lengths. The 82596 will not place more bytes into a buffer than indicated in the associated RBD. The 82596 will fetch the next RBD before it is needed. The 82596 will attempt to receive frames as long as the FBL is not exhausted. If there are no more buffers, the 82596 Receive Unit will enter the No Resources state. Before starting the RU, the CPU must place the FBL pointer in the RBD pointer field of the first RFD. All remaining RBD pointer fields for subsequent RFDs should be "1s." If the Receive Frame Descriptor and the associated Receive Buffers are not reused (e.g., the frame is properly received or the 82596 is configured to Save Bad Frames), the 82596 writes the address of the next free RBD to the RBD pointer field of the next RFD.

### **Receive Buffer Descriptor (RBD)**

The RBDs are used to store received data in a flexible set of linked buffers. The portion of the frame's data field that is outside the RFD is placed in a set of buffers chained by a sequence of RBDs. The RFD points to the first RBD, and the last RBD is flagged with an EOF bit set to 1. Each buffer in the linked list of buffers related to a particular frame can be any size up to  $2^{14}$  bytes but must be word aligned (begin on an even numbered byte). This ensures optimum use of the memory resources while maintaining low overhead. All buffers in a frame are filled with the received data except for the last, in which the actual count can be smaller than the allocated buffer space.



31				OE	DD V	VOF	RD						16	15				EVEN WORD						0	
EL S X	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	С	В	ОК	0	STATUS BITS	0	0	0	0	0	0	0
A15				RB	DΟ	FFS	SET						Α0	A1:	5			LINK OFFSET					A	٠ ٥٧	4
4th byte														DE	STI	NAT	ON	ADDRESS				1	st by	te	8
SOURCE A	ADD	RES	SS								1	lst b	oyte	6th	byt	e									12
6th byte														4th	byt	e									16
x x x	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ					LENGTH FIELD	)					_]:	20

Figure 40. Receive Frame Descriptor—82586 Mode

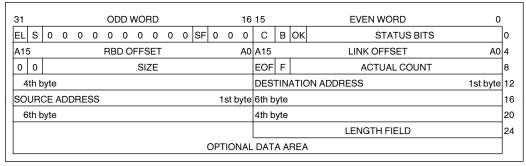


Figure 41. Receive Frame Descriptor—32-Bit Segmented Mode

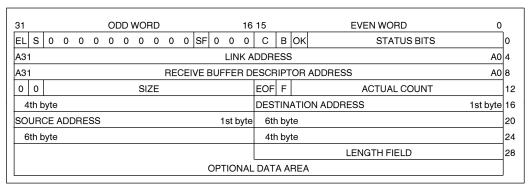


Figure 42. Receive Frame Descriptor—Linear Mode

#### 82596CA



where:	
where. EL	— When set, this bit indicates that this RFD is the last one on the RDL.
S	- When set, this bit mucates that this Hi D is the last one on the HDL.  - When set, this bit suspends the RU after receiving the frame.
SF	,
3F	— This bit selects between the Simplified or the Flexible mode.
	0 — Simplified mode, all the RX data is in the RFD. RBD ADDRESS field is all "1s."
	<ol> <li>Flexible mode. Data is in the RFD and in a linked list of Receive Buffer De- scriptors.</li> </ol>
С	<ul> <li>This bit indicates the completion of frame reception. It is set by the 82596.</li> </ul>
В	— This bit indicates that the 82596 is currently receiving this frame, or that the 82596 is ready to receive the frame. It is initially set to 0 by the CPU. The 82596 sets it to 1 when reception set up begins, and to 0 upon completion. The C and B bits are set during the same operation.
OK (bit 13)	— Frame received successfully, without errors. RFDs with bit 13 equal to 0 are possible only if the save bad frames, configuration option is selected. Otherwise all frames with errors will be discarded, although statistics will be collected on them.
STATUS	<ul> <li>The results of the Receive operation. Defined bits are,</li> </ul>
	Bit 12: Length error if configured to check length
	Bit 11: CRC error in an aligned frame
	Bit 10: Alignment error (CRC error in misaligned frame)
	Bit 9: Ran out of buffer space—no resources
	Bit 8: DMA Overrun failure to acquire the system bus.
	Bit 7: Frame too short.
	Bit 6: No EOP flag (for Bit stuffing only)
	Bit 5: When the SF bit equals zero, and the 82596 is configured to save bad frames, this bit signals that the receive frame was truncated. Otherwise it is zero.
	Bits 2-4: Zeros
	Bit 1: When it is zero, the destination address of the received frame matches the IA address. When it is a 1, the destination address of the received frame did not match the individual address. For example, a multicast address or broadcast address will set this bit to a 1.
	Bit 0: Receive collision. A collision is detected during reception and the collision occurred after the destination address was received.
LINK ADDRESS	<ul> <li>A 16-bit offset (32-bit address in the Linear mode) to the next Receive Frame Descriptor. The Link Address of the last frame can be used to form a cyclical list.</li> </ul>
RBD POINTER	<ul> <li>The offset (address in the Linear mode) of the first RBD containing the received frame data. An RBD pointer of all ones indicates no RBD.</li> </ul>
EOF	— These fields are for the Simplified and Flexible memory models. They are exactly
F	the same as the respective fields in the Receive Buffer Descriptor. See the next section for detailed explanation of their functions.
SIZE ACT COUNT	Social for detailed explanation of their fullictions.
MC	— Multicast bit.
DESTINATION	— The contents of the destination address of the receive frame. The field is 0 to 6

— The contents of the Source Address field of the received frame. It is 0 to 6 bytes

 The contents of this 2-byte field are user defined. In 802.3 it contains the length of the data field. It is placed in memory in the same order it is received, i.e., most

significant byte first, least significant byte second.

ADDRESS

SOURCE ADDRESS

LENGTH FIELD

bytes long.



#### NOTES

- 1. The Destination address, Source address and Length fields are packed, i.e., one field immediately follows the next.
- 2. The affect of Address/Length Location (No Source Address Insertion) configuration parameter while receiving is as follows:
- 82586 Mode: The Destination address, Source address and Length field are not used, they are placed in the RX data buffers.
- 32-Bit Segmented and Linear Modes: when the Simplified memory model is used, the Destination address, Source address and Length fields reside in their respective fields in the RFD. When the Flexible memory structure is used the Destination address, Source address, and Length field locations depend on the SIZE field of the RFD. They can be placed in the RFD, in the RX data buffers, or partially in the RFD and the rest in the RX data buffers, depending on the SIZE field value.

														8	258	86 Mc	ode	•	
31						O	DD \	NOF	RD						16	15		EVEN WORD	0
Α1	5				NE	XT	RBI	0 0	FFS	EΤ					A0	EOF	F	ACTUAL COUNT	
Х	Χ	Χ	Χ	Χ	Χ	Χ	Χ	A23	3							REC	EIV	E BUFFER ADDRESS	A0
Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	Χ	EL	Х	SIZE	
												3	2-B	it S	Seq	men	ted	Mode	
31						O	DD V	NOF	RD						_	15		EVEN WORD	0
A1	5				NE	XT	RBI	0 0	FFS	ET					A0	EOF	F	ACTUAL COUNT	
АЗ	1											RE	CEI	۷E	BUF	FER	ADI	DRESS	A0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	EL	Р	SIZE	
														Li	ine	ar Mo	ode	<b>)</b>	
31						0[	DD V	NOF	RD						16	15		EVEN WORD	0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	EOF	F	ACTUAL COUNT	
А3	1												NE	XT	RBI	D ADI	DRE	SS	A0
АЗ	1											RE	CEI	VE	BUF	FER	ADI	DRESS	A0
0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	EL	Р	SIZE	

Figure 43. Receive Buffer Descriptor

#### 82596CA



where:

**EOF** 

 Indicates that this is the last buffer related to the frame. It is cleared by the CPU before starting the RU, and is written by the 82596 at the end of reception of the frame.

F

— Indicates that this buffer has already been used. The Actual Count has no meaning unless the F bit equals one. This bit is cleared by the CPU before starting the RU, and is set by the 82596 after the associated buffer has been. This bit has the same meaning as the Complete bit in the RFD and CB.

**ACT COUNT** 

— This 14-bit quantity indicates the number of meaningful bytes in the buffer. It is cleared by the CPU before starting the RU, and is written by the 82596 after the associated buffer has already been used. In general, after the buffer is full, the Actual Count value equals the size field of the same buffer. For the last buffer of the frame, Actual Count can be less than the buffer size.

**NEXT BD ADDRESS** 

— The offset (absolute address in the Linear mode) of the next RBD on the list. It is meaningless if EL = 1.

**BUFFER ADDRESS** 

— The starting address of the memory area that contains the received data. In the 82586 mode, this is a 24-bit address (with pins A24-A31=0). In the 32-bit Segmented and Linear modes this is a 32-bit address.

EL

Indicates that the buffer associated with this RBD is last in the FBL.

Ρ

— This bit indicates that the 82596 has already prefetched the RBDs and any change in the RBD data will be ignored. This bit is valid only in the new 82596 memory modes, and if this feature has been enabled during configure command. The 82596 Prefetches the RBDs in locked cycles; after prefetching the RBD the 82596 performs a write cycle where the P bit is set to one and the rest of the data remains unchanged. The CPU is responsible for resetting it in all RBDs. The 82596 will not check this bit before setting it.

SIZE

This 14-bit quantity indicates the size, in bytes, of the associated buffer. This quantity must be an even number.



# PGA PACKAGE THERMAL SPECIFICATION

Parameter	Thermal Resistance
$ heta_{\sf JC}$	3°C/W
$\theta_{JA}$	24°C/W

NOTICE: This is a production data sheet. The specifications are subject to change without notice.

\*WARNING: Stressing the device beyond the "Absolute Maximum Ratings" may cause permanent damage. These are stress ratings only. Operation beyond the "Operating Conditions" is not recommended and extended exposure beyond the "Operating Conditions" may affect device reliability.

# ELECTRICAL AND TIMING CHARACTERISTICS

## **Absolute Maximum Ratings**

- Storage Temperature . . . . . . -65°C to +150°C
- $\bullet\,$  Case Temperature under Bias  $\,-65^{\circ}\text{C}$  to  $\,+\,110^{\circ}\text{C}$
- Supply Voltage
   with Respect to V<sub>SS</sub>.....-0.5V to +6.5V
- $\bullet~$  Voltage on Other Pins  $\,\ldots\,-$  0.5V to V\_CC  $\,+\,$  0.5V

## **DC Characteristics**

 $T_C=0^{\circ}C-85^{\circ}C,\,V_{CC}=5V$   $\pm10\%$  LE/ $\overline{BE}$  have MOS levels (see  $V_{MIL},\,V_{MIH}).$  All other signals have TTL levels (see  $V_{IL},\,V_{IH},\,V_{OL},\,V_{OH}).$ 

Symbol	Parameter	Min	Max	Units	Notes
V <sub>IL</sub>	Input Low Voltage (TTL)	-0.3	+0.8	V	
V <sub>IH</sub>	Input High Voltage (TTL)	2.0	V <sub>CC</sub> + 0.3	V	
V <sub>MIL</sub>	Input Low Voltage (MOS)	-0.3	+0.8	V	
V <sub>MIH</sub>	Input High Voltage (MOS)	3.7	V <sub>CC</sub> + 0.3	V	
V <sub>OL</sub>	Output Low Voltage (TTL)		0.45	V	$I_{OL} = 4.0 \text{ mA}$
V <sub>CIL</sub>	RXC, TXC Input Low Voltage	-0.5	0.6	V	
V <sub>CIH</sub>	RXC, TXC Input High Voltage	3.3	V <sub>CC</sub> +0.5	V	
V <sub>OH</sub>	Output High Voltage (TTL)	2.4		V	$I_{OH} = 0.9 \text{ mA} - 1 \text{ mA}$
I <sub>LI</sub>	Input Leakage Current		± 15	μΑ	$0 \leq V_{IN} \leq V_{CC}$
I <sub>LO</sub>	Output Leakage Current		± 15	μΑ	0.45 < V <sub>OUT</sub> < V <sub>CC</sub>
C <sub>IN</sub>	Capacitance of Input Buffer		10	pF	FC = 1 MHz
C <sub>OUT</sub>	Capacitance of Input/Output Buffer		12	pF	FC = 1 MHz
C <sub>CLK</sub>	CLK Capacitance		20	pF	FC = 1 MHz
Icc	Power Supply		200	mA	At 25 MHz I <sub>CC</sub> Typical = 100 mA
Icc	Power Supply		300	mA	At 33 MHz I <sub>CC</sub> Typical = 150 mA



## **AC Characteristics**

## 82596CA C-STEP INPUT/OUTPUT SYSTEM TIMINGS

 $T_C=0^{\circ}C-+85^{\circ}C$ ,  $V_{CC}=5V\pm10\%$ . These timing assume the  $C_L$  on all outputs is 50 pF unless otherwise specified.  $C_L$  can be 20 pF to 120 pF however timings must be derated. All timing requirements are given in nanoseconds.

		16 N	lHz	Neter	
Symbol	Parameter	Min	Max	Notes	
	Operating Frequency	12.5 MHz	16 MHz	1X CLK Input	
T1	CLK Period	62.5	80		
T1a	CLK Period Stability		0.1%	Adjacent CLK Δ	
T2	CLK High	20		2.0V	
T3	CLK Low	20		0.8V	
T4	CLK Rise Time		8	0.8V to 2.0V	
T5	CLK Fall Time		8	2.0V to 0.8V	
T6	BEn, LOCK, and A2-A31 Valid Delay	3	23		
T6a	BLAST, PCHK Valid Delay	3	32		
T7	BEn, LOCK, BLAST, A2-A31 Float Delay	3	39		
T8	W∕R and ADS Valid Delay	3	23		
Т9	W∕R and ADS Float Delay	3	39		
T10	D0-D31, DPn Write Data Valid Delay	3	27		
T11	D0-D31, DPn Write Data Float Delay	3	39		
T12	HOLD Valid Delay	2	30		
T13	CA and BREQ Setup Time	11		1, 2	
T14	CA and BREQ Hold Time	6		1, 2	
T15	BS16 Setup Time	12		2	
T16	BS16 Hold Time	5		2	
T17	BRDY, RDY Setup Time	12		2	
T18	BRDY, RDY Hold Time	5		2	
T19	D0-D31, DPn READ Setup Time	10		2	
T20	D0-D31, DPn READ Hold Time	6		2	
T21	AHOLD and HLDA Setup Time	15		1, 2	
T22	AHOLD Hold Time	5		1, 2	
T22a	HLDA Hold Time	5		1, 2	
T23	RESET Setup Time	14		1, 2	
T24	RESET Hold Time	5		1, 2	
T25	INT/INT Valid Delay	1	23		
T26	CA and BREQ, PORT Pulse Width	2 T1		1, 2, 3	
T27	D0-D31 CPU PORT Access Setup Time	10		2	
T28	D0-D31 CPU PORT Access Hold Time	6		2	
T29	PORT Setup Time	11		2	
T30	PORT Hold Time	5		2	
T31	BOFF Setup Time	12		2	
T32	BOFF Hold Time	5		2	

<sup>\*</sup>Timings shown are for the 82596CA C-Stepping. For information regarding timings for the 82596CA A1 or B-Step, contact your local Intel representative.



## 82596CA C-STEP INPUT/OUTPUT SYSTEM TIMINGS

 $T_C=0^{\circ}C_-+85^{\circ}C$ ,  $V_{CC}=5V\pm10\%$ . These timing assume the  $C_L$  on all outputs is 50 pF unless otherwise specified.  $C_L$  can be 20 pF to 120 pF however timings must be derated. All timing requirements are given in nanoseconds.

0	Burnatur	20 N	lHz	Neter	
Symbol	Parameter	Min	Max	Notes	
	Operating Frequency	12.5 MHz	20 MHz	1X CLK Input	
T1	CLK Period	50	80		
T1a	CLK Period Stability		0.1%	Adjacent CLK Δ	
T2	CLK High	16		2.0V	
T3	CLK Low	16		0.8V	
T4	CLK Rise Time		6	0.8V to 2.0V	
T5	CLK Fall Time		6	2.0V to 0.8V	
T6	BEn, LOCK, and A2-A31 Valid Delay	3	20		
T6a	BLAST, PCHK Valid Delay	3	25		
T7	BEn, LOCK, BLAST, A2-A31 Float Delay	3	34		
T8	W∕R and ADS Valid Delay	3	20		
Т9	W∕R and ADS Float Delay	3	34		
T10	D0-D31, DPn Write Data Valid Delay	3	23		
T11	D0-D31, DPn Write Data Float Delay	3	34		
T12	HOLD Valid Delay	2	25		
T13	CA and BREQ Setup Time	10		1, 2	
T14	CA and BREQ Hold Time	6		1, 2	
T15	BS16 Setup Time	12		2	
T16	BS16 Hold Time	4		2	
T17	BRDY, RDY Setup Time	12		2	
T18	BRDY, RDY Hold Time	4		2	
T19	D0-D31, DPn READ Setup Time	6		2	
T20	D0-D31, DPn READ Hold Time	5		2	
T21	AHOLD and HLDA Setup Time	15		1, 2	
T22	AHOLD Hold Time	4		1, 2	
T22a	HLDA Hold Time	5		1, 2	
T23	RESET Setup Time	12		1, 2	
T24	RESET Hold Time	4		1, 2	
T25	INT/INT Valid Delay	1	23		
T26	CA and BREQ, PORT Pulse Width	2 T1		1, 2, 3	
T27	D0-D31 CPU PORT Access Setup Time	6		2	
T28	D0-D31 CPU PORT Access Hold Time	5		2	
T29	PORT Setup Time	10		2	
T30	PORT Hold Time	5		2	
T31	BOFF Setup Time	12		2	
T32	BOFF Hold Time	4		2	

<sup>\*</sup>Timings shown are for the 82596CA C-Stepping. For information regarding timings for the 82596CA A1 or B-Step, contact your local Intel representative.



## 82596CA C-STEP INPUT/OUTPUT SYSTEM TIMINGS

 $T_C=0^{\circ}C-+85^{\circ}C$ ,  $V_{CC}=5V\pm10\%$ . These timing assume the  $C_L$  on all outputs is 50 pF unless otherwise specified.  $C_L$  can be 20 pF to 120 pF however timings must be derated. All timing requirements are given in nanoseconds.

Symbol	Parameter		lHz	Notes	
1	r dramotor	Min	Max	Notes	
	Operating Frequency	12.5 MHz	25 MHz	1X CLK Input	
T1	CLK Period	40	80		
T1a	CLK Period Stability		0.1%	Adjacent CLK Δ	
T2	CLK High	14		2.0V	
Т3	CLK Low	14		0.8V	
T4	CLK Rise Time		4	0.8V to 2.0V	
T5	CLK Fall Time		4	2.0V to 0.8V	
T6	BEn Valid Delay	3	17		
T6a	BLAST Valid Delay	3	20		
T6b	LOCK Valid Delay	3	18		
T6c	A2-A31 Valid Delay	3	18		
T6d	PCHK Valid Delay	3	24		
T7	BEn, LOCK, BLAST, A2-A31 Float Delay	3	30		
Т8	W∕R and ADS Valid Delay	3	19		
T9	W/R and ADS Float Delay	3	30		
T10	D0-D31, DPn Write Data Valid Delay	3	20		
T11	D0-D31, DPn Write Data Float Delay	3	30		
T12	HOLD Valid Delay	3	19		
T13	CA and BREQ Setup Time	7		1, 2	
T14	CA and BREQ Hold Time	3		1, 2	
T15	BS16 Setup Time	8		2	
T16	BS16 Hold Time	3		2	
T17	BRDY Setup Time	9		2	
T17a	RDY Setup Time	8		2	
T18	BRDY, RDY Hold Time	3		2	
T19	D0-D31, DPn READ Setup Time	6		2	
T20	D0-D31, DPn READ Hold Time	4.5		2	
T21	AHOLD and HLDA Setup Time	10		1, 2	
T22	AHOLD Hold Time	3		1, 2	
T22a	HLDA Hold Time	3		1, 2	
T23	RESET Setup Time	10		1, 2	
T24	RESET Hold Time	3		1, 2	
T25	INT/INT Valid Delay	1	20		

<sup>\*</sup>Timings shown are for the 82596CA C-Stepping. For information regarding timings for the 82596CA A1 or B-Step, contact your local Intel representative.



## 82596CA C-STEP INPUT/OUTPUT SYSTEM TIMINGS

 $T_C=0^{\circ}C-+85^{\circ}C$ ,  $V_{CC}=5V\pm10\%$ . These timing assume the  $C_L$  on all outputs is 50 pF unless otherwise specified.  $C_L$  can be 20 pF to 120 pF however timings must be derated. All timing requirements are given in nanoseconds.

Crombal	Dovernator	25	25 MHz		
Symbol	Parameter	Min	Max	Notes	
T26	CA and BREQ, PORT Pulse Width	2 T1		1, 2, 3	
T27	D0-D31 CPU PORT Access Setup Time		2		
T28	D0-D31 CPU PORT Access Hold Time	4.5		2	
T29	PORT Setup Time	7		2	
T30	PORT Hold Time	3		2	
T31	BOFF Setup Time	10		2	
T32	BOFF Hold Time	3		2	

<sup>\*</sup>Timings shown are for the 82596CA C-Stepping. For information regarding timings for the 82596CA A1 or B-Step, contact your local Intel representative.



## 82596CA C-STEP INPUT/OUTPUT SYSTEM TIMINGS

 $T_C = 0^{\circ}C$  to  $+85^{\circ}C$ ,  $V_{CC} = 5V \pm 5\%$ . These timing assume the  $C_L$  on all outputs is 50 pF unless otherwise specified.  $C_L$  can be 20 pF to 120 pF, however timings must be derated. All timing requirements are given in nanoseconds.

0	B	33 M	lHz	Notes	
Symbol	Parameter	Min	Max	Notes	
	Operating Frequency	12.5 MHz	33 MHz	1X CLK Input	
T1	CLK Period	30	80		
T1a	CLK Period Stability		0.1%	Adjacent CLK Δ	
T2	CLK High	11		2.0V	
T3	CLK Low	11		0.8V	
T4	CLK Rise Time		3	0.8V to 2.0V	
T5	CLK Fall Time		3	2.0V to 0.8V	
T6	BEn Valid Delay	3	17		
T6a	BLAST Valid Delay	3	20		
T6b	LOCK Valid Delay	3	16		
T6c	A2-A31 Valid Delay	3	18		
T6d	PCHK Valid Delay	3	23		
T7	BEn, LOCK, BLAST, A2-A31 Float Delay	3	20		
T8	W∕R and ADS Valid Delay	3	16		
Т9	W∕R and ADS Float Delay	3	20		
T10	D0-D31, DPn Write Data Valid Delay	3	19		
T11	D0-D31, DPn Write Data Float Delay	3	20		
T12	HOLD Valid Delay	3	19		
T13	CA and BREQ Setup Time	7		1, 2	
T14	CA and BREQ Hold Time	3		1, 2	
T15	BS16 Setup Time	7		2	
T16	BS16 Hold Time	3		2	
T17	BRDY Setup Time	9		2	
T17a	RDY Setup Time	8		2	
T18	BRDY, RDY Hold Time	3		2	
T19	D0-D31, DPn READ Setup Time	6		2	
T20	D0-D31, DPn READ Hold Time	4.5		2	
T21	AHOLD Setup Time	10		1, 2	
T21a	HLDA Setup Time	8		1, 2	
T22	AHOLD Hold Time	3		1, 2	

<sup>\*</sup>Timings shown are for the 82596CA C-Stepping. For information regarding timings for the 82596CA A1 or B-Step, contact your local Intel representative.



### 82596CA C-STEP INPUT/OUTPUT SYSTEM TIMINGS

 $C_L$  on all outputs is 50 pF unless otherwise specified. All timing requirements are given in nanoseconds.

Ol	Down or other	33	Mada		
Symbol	Parameter	Min	Max	Notes	
T22a	HLDA Hold Time	3		1, 2	
T23	RESET Setup Time	9		1, 2	
T24	RESET Hold Time	3	3		
T25	INT/INT Valid Delay	1	1 20		
T26	CA and BREQ, PORT Pulse Width	dth 2T1			
T27	D0-D31 CPU PORT Access Setup Time	Setup Time 6			
T28	D0-D31 CPU PORT Access Hold Time	4.5		2	
T29	PORT Setup Time	7		2	
T30	PORT Hold Time	3		2	
T31	BOFF Setup Time	10		2	
T32	BOFF Hold Time	3		2	

#### NOTES

Tderated = (Fmax/Fopr) × T

where:

Tderate = Specifies the value to derate the specification.

Fmax = Maximum operating frequency.

Fopr = Actual operating frequency.

T = Specification at maximum frequency.

This calculation only provides a rough estimate for derating the frequency. For more detailed information, contact your Intel Sales Office for the data sheet supplement.

3. CA pulse width need only be 1 T1 wide if the set up and hold times are met; BREQ must meet setup and hold times and need only be 1 T1 wide.

### TRANSMIT/RECEIVE CLOCK PARAMETERS

Symbol	Parameter	20	MHz	Notes
Oy20.	T didiliotoi	Min	Max	110100
T36	TxC Cycle	50		1, 3
T38	TxC Rise Time		5	1
T39	TxC Fall Time		5	1
T40	TxC High Time	19		1, 3
T41	TxC Low Time	18		1, 3
T42	TxD Rise Time		10	4
T43	TxD Fall Time		10	4
T44	TxD Transition	20		2, 4
T45	TxC Low to TxD Valid		25	4, 6
T46	TxC Low to TxD Transition		25	2, 4
T47	TxC High to TxD Transition		25	2, 4
T48	TxC Low to TxD High (At End of Transition)		25	4

<sup>\*</sup>Timings shown are for the 82596CA C-stepping. For information regarding timings for the 82596CA A1 or B-step, contact your local Intel representative.

<sup>1.</sup> RESET, HLDA, and CA are internally synchronized. This timing is to guarantee recognition at next clock for RESET, HLDA and CA.

<sup>2.</sup> All set-up, hold and delay timings are at maximum frequency specification Fmax, and must be derated according to the following equation for operation at lower frequencies:



## TRANSMIT/RECEIVE CLOCK PARAMETERS (Continued)

Symbol	Parameter	20	MHz	Notes
Syllibol	raiametei	Min	Max	Notes
RTS AND C	TS PARAMETERS	•		
T49	TxC Low to RTS Low, Time to Activate RTS		25	5
T50	CTS Low to TxC Low, CTS Setup Time	Time 20		
T51	TxC Low to CTS Invalid, CTS Hold Time	10		7
T52	TxC Low to RTS High		25	5
RECEIVE C	LOCK PARAMETERS			
T53	RXC Cycle	50		1, 3
T54	RXC Rise Time		5	1
T55	RXC Fall Time		5	1
T56	RXC High Time	19		1
T57	RXC Low Time	18		1
RECEIVED	DATA PARAMETERS			
T58	RXD Setup Time 20			6
T59	RXD Hold Time	10		6
T60	RXD Rise Time	RXD Rise Time 10		
T61	RXD Fall Time		10	
$\overline{\text{CRS}}$ and $\overline{\text{C}}$	DT PARAMETERS			
T62	CDT Low to TXC HIGH External Collision Detect Setup Time	20		
T63	TXC High to CDT Inactive, CDT Hold Time	10		
T64	CDT Low to Jam Start			10
T65	CRS Low to TXC High, Carrier Sense Setup Time	20		
T66	TXC High to CRS Inactive, CRS Hold Time (Internal Collision Detect)	10		
T67	CRS High to Jamming Start,			12
T68	Jamming Period			11
T69	CRS High to RXC High, CRS Inactive Setup Time	30		
T70	RXC High to CRS High, CRS Inactive Hold Time	10		



## TRANSMIT/RECEIVE CLOCK PARAMETERS (Continued)

Symbol	Parameter	20	Notes	
- Cymiles	r arameter	Min	Max	110100
INTERFRAME SPACING PARAMETERS				
T71	Interframe Delay			9
EXTERNAL L	OOPBACK-PIN PARAMETERS			
T72	TXC Low to LPBK Low		T36	4
T73	TXC Low to LPBK High		T36	4

#### NOTES:

- NOTES:

  1. Special MOS levels. V<sub>CIL</sub> = 0.9V and V<sub>CIH</sub> = 3.0V.

  2. Manchester only.

  3. Manchester. Needs 50% duty cycle.

  4. 1 TTL load + 50 pF.

  5. 1 TTL load + 100 pF.

  6. NRZ only.

  7. Abnormal end of transmission—CTS expires before RTS.

  8. Normal end to transmission.

- Normal end to transmission.
  Programmable value:
  T71 = N<sub>IFS</sub> T36 where: N<sub>IFS</sub> = the IFS configuration value (if N<sub>IFS</sub> is less than 12 then N<sub>IFS</sub> is forced to 12).
- 10. Programmable value:  $T64 = (N_{CDF} \bullet T36) + x \bullet T36$ 
  - (If the collision occurs after the preamble)

  - N<sub>CDF</sub> = the collision detect filter configuration value, and
- x = 12, 13, 14, or 1511. T68 = 32 T36

- 12. Programmable value:  $T67 = (N_{CSF} \bullet T36) + x \bullet T36$ 
  - where:  $N_{CSF}$  = the Carrier Sense Filter configuration
  - value, and
- x = 12, 13, 14, or 15
- 13. To guarantee recognition on the next clock.



## 82596CA BUS OPERATION

The following figures show the 82596CA basic bus cycle and basic burst cycle.

Please refer to the 32-Bit LAN Component User's Manual.

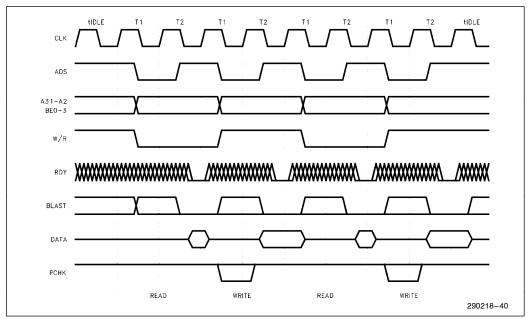


Figure 44. Basic 82596CA Bus Cycle

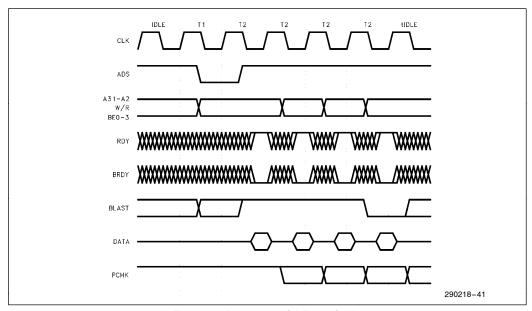


Figure 45. Basic 82596CA Burst Cycle



### SYSTEM INTERFACE A.C. TIMING CHARACTERISTICS

The measurements should be done at:

- $T_C = 0$ °C to +85°C,  $V_{CC} = 5V \pm 10$ %, C = 50 pF unless otherwise specified.
- A.C. testing inputs are driven at 2.4V for a logic "1" and 0.45V for a logic "0".
- Timing measurements are made at 1.5V for both logic "1" and "0".
- Rise and Fall time of inputs and outputs signals are measured between 0.8V and 2.0V respectively unless otherwise specified.
- All timings are relative to CLK crossing the 1.5V level.
- All A.C. parameters are valid only after 100  $\mu s$  from power up.

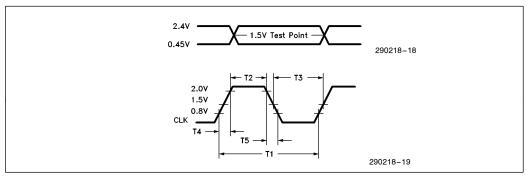


Figure 46. CLK Timings

Two types of timing specifications are presented below:

- 1. Input Timing-minimum setup and hold times.
- 2. Output Timings—output delays and float times from CLK rising edge.

Figure 47 defines how the measurements should be done:

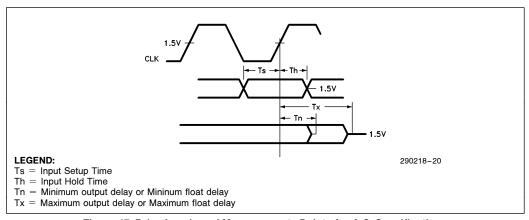


Figure 47. Drive Levels and Measurements Points for A.C. Specifications

 $\begin{array}{l} Ts = T13,\,T15,\,T17,\,T19,\,T21,\,T23,\,T27,\,T29,\,T31\\ Th = T14,\,T16,\,T18,\,T20,\,T22,\,T22a,\,T24,\,T28,\,T30,\,T32\\ Tn = T6,\,T6a,\,T7,\,T8,\,T9,\,T10,\,T11,\,T12,\,T25\\ Tx = T6,\,T6a,\,T7,\,T8,\,T9,\,T10,\,T11,\,T12,\,T25 \end{array}$ 



## INPUT WAVEFORMS

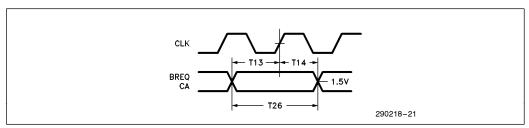


Figure 48. CA and BREQ Input Timing




Figure 49. INT/INT Output Timing

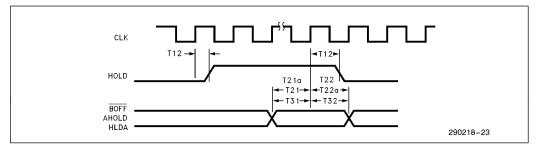


Figure 50. HOLD/HLDA Timings

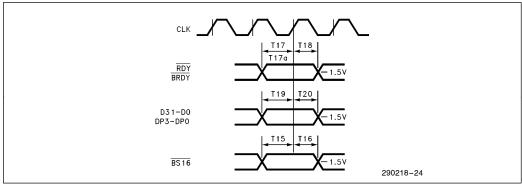


Figure 51. Input Setup and Hold Time



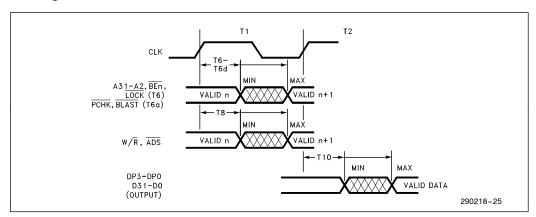


Figure 52. Output Valid Delay Timing

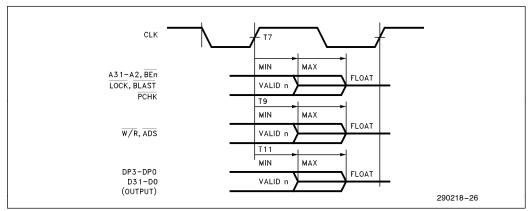


Figure 53. Output Float Delay Timing

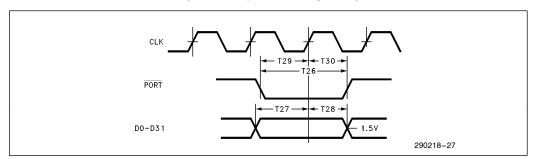


Figure 54. PORT Setup and Hold Time

## 82596CA



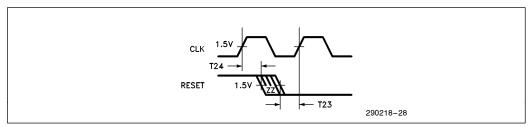


Figure 55. RESET Input Timing

### **SERIAL AC TIMING CHARACTERISTICS**

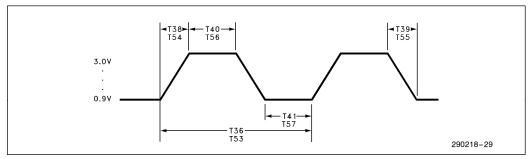


Figure 56. Serial Input Clock Timing

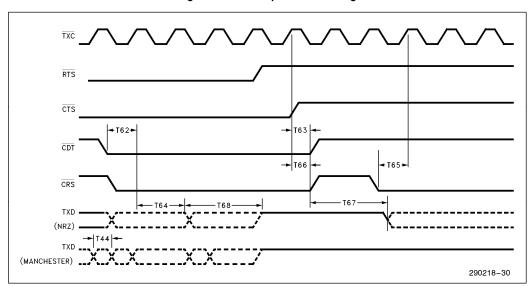


Figure 57. Transmit Data Waveforms



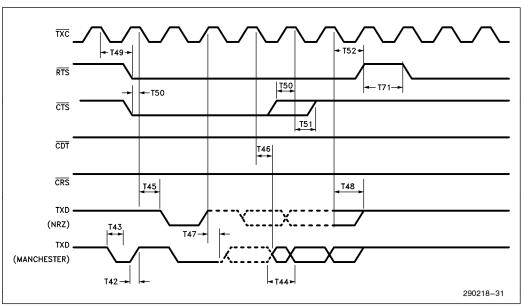


Figure 58. Transmit Data Waveforms




Figure 59. Receive Data Waveforms (NRZ)





Figure 60. Receive Data Waveforms (CRS)



## **OUTLINE DIAGRAMS**

## 132 LEAD CERAMIC PIN GRID ARRAY PACKAGE INTEL TYPE A

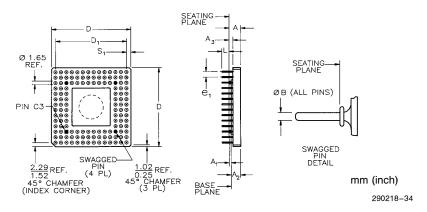

	Family: Ceramic Pin Grid Array Package						
Symbol		Millimeters	<b>;</b>		Inches		
Cymbol	Min	Max	Notes	Min	Max	Notes	
Α	3.56	4.57		0.140	0.180		
A <sub>1</sub>	0.76	1.27	Solid Lid	0.030	0.050	Solid Lid	
A <sub>2</sub>	2.67	3.43	Solid Lid	0.105	0.135	Solid Lid	
A <sub>3</sub>	1.14	1.40		0.045	0.055		
В	0.43	0.51		0.017	0.020		
D	36.45	37.21		1.435	1.465		
D <sub>1</sub>	32.89	33.15		1.295	1.305		
e <sub>1</sub>	2.29	2.79		0.090	0.110		
L	2.54	3.30		0.100	0.130		
N		132			132		
S <sub>1</sub>	1.27	2.54		0.050	0.100		
ISSUE	IWS 10	/12/88					



## Intel Case Outline Drawings Plastic Quad Flat Pack (PQFP) 0.025 Inch (0.635mm) Pitch

Symbol	Description	Min	Max										
N	Leadcount	68		84		100		132		164		196	
Α	Package Height	0.160	0.170	0.160	0.170	0.160	0.170	0.160	0.170	0.160	0.170	0.160	0.170
A1	Standoff	0.020	0.030	0.020	0.030	0.020	0.030	0.020	0.030	0.020	0.030	0.020	0.030
D, E	Terminal Dimension	0.675	0.685	0.775	0.785	0.875	0.885	1.075	1.085	1.275	1.285	1.475	1.485
D1, E1	Package Body	0.547	0.553	0.647	0.653	0.747	0.753	0.947	0.953	1.147	1.153	1.347	1.353
D2, E2	Bumper Distance	0.697	0.703	0.797	0.803	0.897	0.903	1.097	1.103	1.297	1.303	1.497	1.503
D3, E3	Lead Dimension	0.400 REF		0.500 REF		0.600 REF		0.800 REF		1.000 REF		1.200 REF	
D4, E4	Foot Radius Location	0.623	0.637	0.723	0.737	0.823	0.837	1.023	1.037	1.223	1.237	1.423	1.437
L1	Foot Length	0.020	0.030	0.020	0.030	0.020	0.030	0.020	0.030	0.020	0.030	0.020	0.030
Issue	IWS Preliminary 12/12/88 INCH												

Symbol	Description	Min	Max										
N	Leadcount	68		84		100		132		164		196	
Α	Package Height	4.06	4.32	4.06	4.32	4.06	4.32	4.06	4.32	4.06	4.32	4.06	4.32
A1	Standoff	0.51	0.76	0.51	0.76	0.51	0.76	0.51	0.76	0.51	0.76	0.51	0.76
D, E	Terminal Dimension	17.15	17.40	19.69	19.94	22.23	22.48	27.31	27.56	32.39	32.64	37.47	37.72
D1, E1	Package Body	13.89	14.05	16.43	16.59	18.97	19.13	24.05	24.21	29.13	29.29	34.21	34.37
D2, E2	Bumper Distance	17.70	17.85	20.24	20.39	22.78	22.93	27.86	28.01	32.94	33.09	38.02	38.18
D3, E3	Lead Dimension	10.16 REF		12.70 REF		15.24 REF		20.32 REF		25.40 REF		30.48 REF	
D4, E4	Foot Radius Location	15.82	16.17	18.36	18.71	21.25	21.25	25.89	26.33	31.06	31.41	36.14	36.49
L1	Foot Length	0.51	0.76	0.51	0.76	0.51	0.76	0.51	0.76	0.51	0.76	0.51	0.76
Issue	IWS Preliminary 12/12/88 mm												



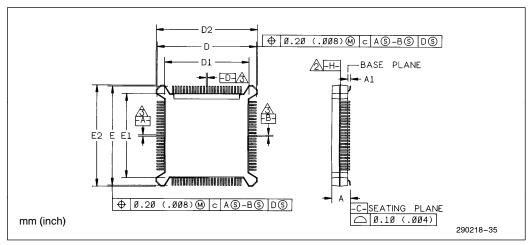


Figure 61. Principal Dimensions and Datums

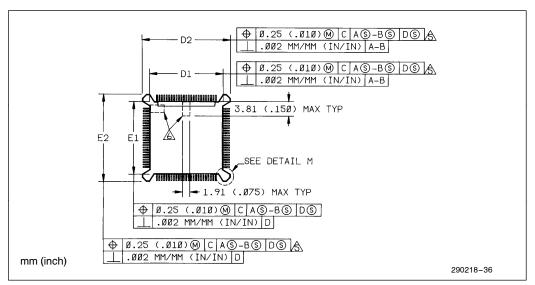


Figure 62. Molded Details



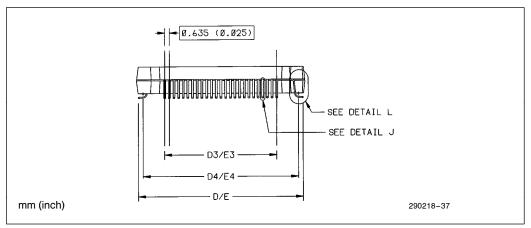


Figure 63. Terminal Details

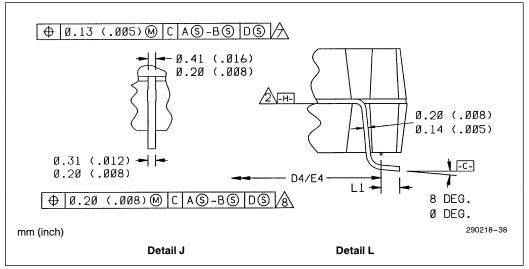


Figure 64. Typical Lead



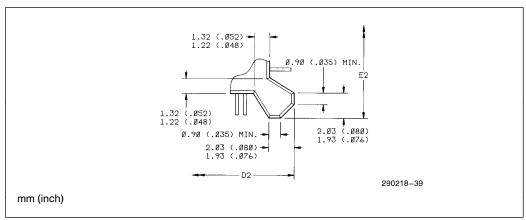


Figure 65. Detail M

### **REVISION SUMMARY**

The following represents the key differences between version 004 and version 005 of the 82596CA Data Sheet.

1. Timings added for -16 MHz and -20 MHz specfications.

The following represents the key differences between version 005 and version 006 of the 82596CA Data Sheet.

- A description of the 82596CA C-stepping enhancements was added and the 82596CA B-step information was removed.
- 2. Description of BOFF pin changed. BOFF may be asserted in T1 in the 82596 C-step.

- Recommendation to use only one type of buffer (either Simplified or Flexible) in any given linked list.
- Added detailed description regarding operation or RCVCDT counter.
- Added New Enhanced Big Endian Mode section. The New Enhanced Big Endian Mode applies only to the 82596 C-stepping.
- Added programming recommendations regarding RU and CU Start commands. These warn against Starting the CU while it is Active and Starting the RU while it is Ready.
- Emphasized that the TDR command is a static command and should not be used in an active network
- 8. Improved 82596CA C-step timings were added for all speeds.

This datasheet has been download from:

www.datasheetcatalog.com

Datasheets for electronics components.