

# HT6010/HT6012/HT6014 3<sup>12</sup> Series of Encoders

# Features

- Operating voltage: 2.4V~12V
- Low power and high noise immunity CMOS technology
- Low standby current
- Minimum transmission word
  - Four words for TE trigger
  - One word for Data trigger

- Built-in oscillator needs only 5% resistor
- Easy interface with an RF or an infrared transmission medium
- Minimal external components
- Pair with Holtek's 3<sup>12</sup> series of decoders
- 18-pin DIP, 20-pin SOP package

## **Applications**

- Burglar alarm system
- Smoke and fire alarm system
- Garage door controllers
- Car door controllers

- Car alarm systemSecurity system
- Cordless telephones
- Other remote control systems

# **General Description**

The 3<sup>12</sup> encoders are a series of CMOS LSIs for remote control system applications. They are capable of encoding 12 bits of information which consists of N address bits and 12–N data bits. Each address/data input is externally trinary programmable if bonded out. They are otherwise set floating internally. Various packages of the 3<sup>12</sup> encoders offer flexible combinations of programmable address/data which meet various applications. The programmable address/data is transmitted together with the header bits via an RF or an infrared transmission medium upon receipt of a trigger signal. A  $\overline{\text{TE}}$ (HT6010) or a DATA (HT6012/HT6014) trigger can be selected for application flexibility.

# Selection Table


Function Part No.	Address No.	Address/ Data No.	Data No.	Oscillator	Trigger	LED Indicator	Package
HT6010	8	4	0	RC oscillator	TE	No	18DIP, 20SOP
HT6012	10	0	2	RC oscillator	D10~D11	Yes	18DIP, 20SOP
HT6014	8	0	4	RC oscillator	D8~D11	Yes	18DIP, 20SOP

Note: Address/Data represents pins that can be either address or data according to the application requirement.




# **Block Diagram**

TE Trigger HT6010

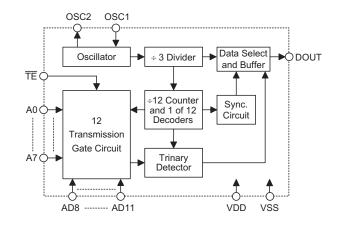

# DATA Trigger HT6012/HT6014

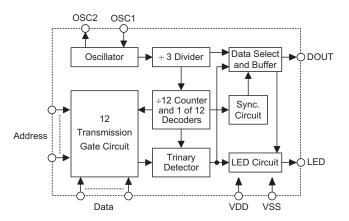

Note: The address/data pins are available in various combinations (refer to the address/data table).



# **Pin Assignment**

# TE Trigger Type

8-Address 4-Address/Data				
	1	$\overline{\mathbf{O}}$	18	
A1 🗆	2		17	
A2 🗆	3		16	□ OSC2
A3 🗖	4		15	

HT6010 				
VSS□	9	10	D AD8	
A7 🗆	8	11	🗆 AD9	
A6 🗆	7	12	D AD10	
A5 🗆	6	13	D AD11	
A4 🗆	5	14		
A3 🗆	4	15	OSC1	
	0	10		

8-Address 4-Address/Data				
NC 🗆	1	20	⊔ мс	
A0 🗆	2	19		
A1 🗆	3	18	🗅 DOUT	
A2 🗆	4	17	🗆 OSC2	
A3 🗆	5	16		
A4 🗆	6	15	D TE	
A5 🗆	7	14	AD11	
A6 🗆	8	13	AD10	
A7 🗆	9	12	D AD9	
VSS	10	11	D AD8	
HT6010 - 20 SOP-A				

## DATA Trigger Type

10-Address 2-Data

A0	1	18	
A1	2	17	DOUT
A2	3	16	⊐ osc2
A3 🗆	4	15	□ OSC1
A4 🗆	5	14	LED
A5 🗆	6	13	🗆 D11
A6 🗆	7	12	🗆 D10
A7 🗆	8	11	🗆 A9
vss⊏	9	10	🗆 A8
HT6012 			

### 8-Address 4-Data

-Data			
NC	1	20	
A0 🗆	2	19	
A1 🗆	3	18	
A2 🗆	4	17	□ osc2
A3 🗆	5	16	OSC1
A4 🗆	6	15	LED 🗆
A5 🗆	7	14	🗆 D11
A6 🗆	8	13	🗆 D10
A7 🗆	9	12	🗆 D9
VSS 🗆	10	11	🗆 D8
HT6014 - 20 SOP-A			

10-Addı 2-Data	ress			
	1	20	ЫNC	
A0 🗆	2	19		
A1 🗆	3	18	🗆 ропт	
A2 🗆	4	17	□osc2	
A3 🗆	5	16	□osc1	
A4 🗆	6	15		
A5 🗆	7	14	D11	
A6 🗆	8	13	D10	
A7 🗆	9	12	🗆 A9	
VSS 🗆	10	11	🗆 A8	
HT6012 -20 SOP-A				

8-Address	
4-Data	

A0 🗆	1	18		
A1	2	17		
A2 🗆	3	16	□ OSC2	
A3 🗆	4	15	OSC1	
A4 🗆	5	14	LED	
A5 🗆	6	13	🗆 D11	
A6 🗆	7	12	🗆 D10	
A7 🗆	8	11	🗆 D9	
VSS□	9	10	🗆 D8	
HT6014 				




## **Pin Description**

Pin Name	I/O	Internal Connection	Description
A0~A9	I	TRANSMISSION GATE	Input pins for address A0~A9 setting They can be externally set to VDD or VSS or left open.
AD8~AD11	I	TRANSMISSION GATE	Input pins for address/data (AD8~AD11) setting They can be externally set to VDD or VSS or left open.
D8~D11	I	CMOS IN Pull-high	Input pins for data (D8~D11) setting and transmission enable (active low) They can be externally set to VSS or left open (see Note).
DOUT	0	CMOS OUT	Encoder data serial transmission output
LED	0	NMOS OUT	Transmission enable indicator, active low
TE	I	CMOS IN Pull-high	Transmission enable, active low (see Note)
OSC1	I	OSCILLATOR	Oscillator input pin
OSC2	0	OSCILLATOR	Oscillator output pin
VSS	_		Negative power supply, ground
VDD			Positive power supply

Note: D8~D11 are data input and transmission enable pins of the HT6012/HT6014.

 $\overline{\text{TE}}$  is the transmission enable pin of the HT6010.

### **Approximate Internal Connections**

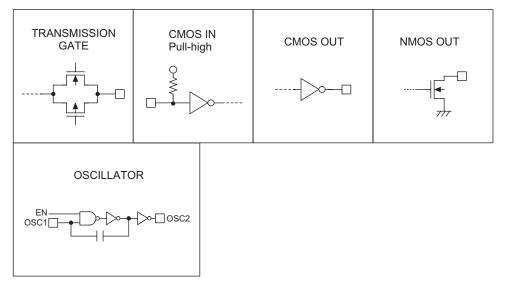

## **Absolute Maximum Ratings**

Supply VoltageV_SS-0.3V to V_SS+13V	Stora
Input VoltageV <sub>SS</sub> -0.3 to V <sub>DD</sub> +0.3V	Oper

Storage Temperature	–50°C to 125°C
Operating Temperature	–20°C to 75°C

Note: These are stress ratings only. Stresses exceeding the range specified under "Absolute Maximum Ratings" may cause substantial damage to the device. Functional operation of this device at other conditions beyond those listed in the specification is not implied and prolonged exposure to extreme conditions may affect device reliability.



# **Electrical Characteristics**


#### Ta=25°C

Cumula al	Devementer		Test Conditions	Min.	Turn	Maria	11
Symbol	Parameter	$V_{DD}$	Conditions		Тур.	Max.	Unit
V <sub>DD</sub>	Operating Voltage	_		2.4	5	12	V
		3V	On all atom atoms	_	0.1	1	μA
I <sub>STB</sub>	Standby Current	12V	Oscillator stops		2	4	μA
		3V		_	250	500	μA
I <sub>DD</sub>	Operating Current	12V	No load, f <sub>OSC</sub> =3kHz		600	1200	μA
I <sub>LED</sub>	LED Sink Current	5V	5V V <sub>LED</sub> =0.5V		3	_	mA
1	OUT Output Drive Current		V <sub>OH</sub> =0.9V <sub>DD</sub> (Source)	-0.6	-1.2	_	mA
DOUT			V <sub>OL</sub> =0.1V <sub>DD</sub> (Sink)	0.6	1.2	_	mA
V <sub>IH</sub>	"H" Input Voltage	_		0.8V <sub>DD</sub>		V <sub>DD</sub>	V
V <sub>IL</sub>	"L" Input Voltage	_		0		0.2V <sub>DD</sub>	V
f <sub>OSC</sub>	Oscillator Frequency	5V	R <sub>OSC</sub> =1MΩ	_	3	_	kHz
$R_{TE}$	TE Pull-high Resistance	5V	V <sub>TE</sub> =0V	_	1.5	3	MΩ
R <sub>DATA</sub>	D8~D11 Pull-high Resistance	5V	V <sub>DATA</sub> =0V		1.5	3	MΩ

# **Functional Description**

# Operation


The  $3^{12}$  series of encoders begin with a four (HT6010) or a one (HT6012/HT6014) word transmission cycle upon receipt of a transmission enable (TE for the HT6010 or D8~D11 for the HT6012/HT6014, active low). This cycle will repeat itself as long as the transmission enable (TE or D8~D11) is held low. Once the transmission enable returns high the encoder output completes its final cycle and then stops as shown below.






### Information Word

An information word is composed of four periods as shown:








#### Address/Data Waveform

Each programmable address/data pin can be externally set to one of the following three logic states:

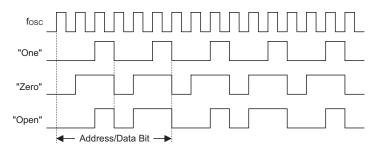

#### Address/Data Bit Waveform

The "Open" state data input is interpreted as logic high by the decoder since its output has only two states.

#### Address/Data Programming (Preset)

The status of each address/data pin can be individually preset to a logic "high", "low", or "floating". If a transmission enable signal is applied, the encoder scans and transmits the status of the 12 bits of address/data serially in the order A0 to AD11 for the HT6010 and A0 to D11 for the HT6012/HT6014.

If the trigger signal is not applied, the chip only consumes a standby current which is less than  $1\mu A$  (for V<sub>DD</sub>=5V).

The address pins are usually preset so as to transmit data codes with their own particular security codes by the DIP switches or PCB wiring, while data is selected using push button or electronic switches.

#### Address/Data Sequence

The following table provides the position of the address/data sequence for various models of the 3<sup>12</sup> series encoders.


Part No.	Address/Data Bits											
Part No.	0	1	2	3	4	5	6	7	8	9	10	11
HT6010	A0	A1	A2	A3	A4	A5	A6	A7	AD8	AD9	AD10	AD11
HT6012	A0	A1	A2	A3	A4	A5	A6	A7	A8	A9	D10	D11
HT6014	A0	A1	A2	A3	A4	A5	A6	A7	D8	D9	D10	D11

### **Transmission Enable**

For the  $\overline{\text{TE}}$  trigger type of encoders, transmission is enabled by applying a low signal to the  $\overline{\text{TE}}$  pin. But for the Data trigger type, it is enabled by applying a low signal to one of the data pins D8~D11.





Flowchart

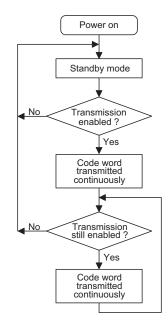

Note: D8~D11 are transmission enable of the HT6012/HT6014.


 $\overline{\text{TE}}$  is the transmission enable of the HT6010.




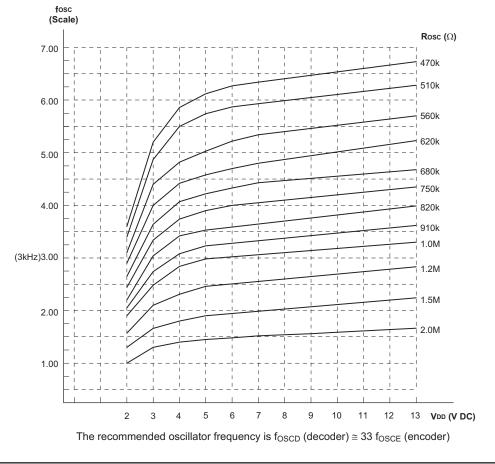




# **Application Circuits**

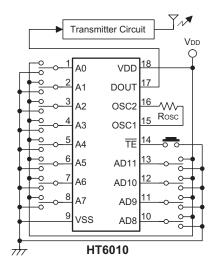

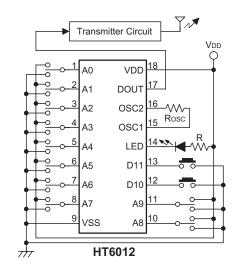


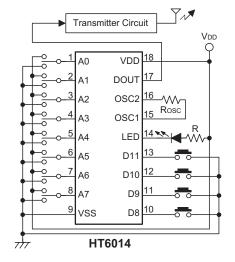



# **Package Information**

18-pin DIP (300mil) Outline Dimensions

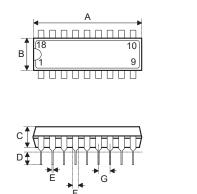




Symbol	Dimensions in mil					
Symbol	Min.	Nom.	Max.			
A	895	—	915			
В	240	—	260			
С	125		135			
D	125		145			
E	16		20			
F	50		70			
G	_	100	_			
Н	295		315			
1	335		375			
α	0°		15°			



# 20-pin SOP (300mil) Outline Dimensions

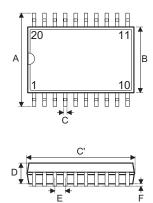




Symbol	Dimensions in mil					
Symbol	Min. Nom.		Max.			
А	394	—	419			
В	290	_	300			
С	14		20			
C'	490	_	510			
D	92		104			
E	_	50	_			
F	4		_			
G	32		38			
Н	4	_	12			
α	0°		10°			



# **Product Tape and Reel Specifications**

# **Reel Dimensions**

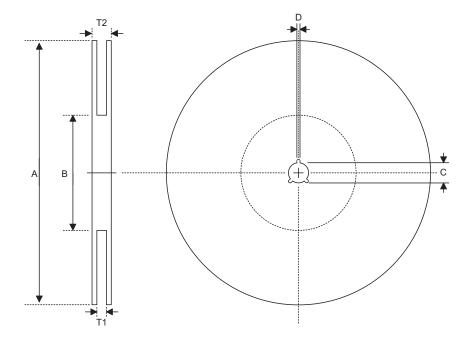


## SOP 20W

Symbol	Description	Dimensions in mm
А	Reel Outer Diameter	330±1.0
В	Reel Inner Diameter	62±1.5
с	Spindle Hole Diameter	13.0+0.5 0.2
D	Key Slit Width	2.0±0.5
T1	Space Between Flange	24.8+0.3 0.2
T2	Reel Thickness	30.2±0.2



## **Carrier Tape Dimensions**

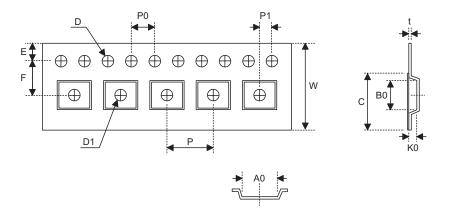

## SOP 20W

Symbol	Description	Dimensions in mm
W	Carrier Tape Width	24.0+0.3 0.1
Р	Cavity Pitch	12.0±0.1
E	Perforation Position	1.75±0.1
F	Cavity to Perforation (Width Direction)	11.5±0.1
D	Perforation Diameter	1.5+0.1
D1	Cavity Hole Diameter	1.5+0.25
P0	Perforation Pitch	4.0±0.1
P1	Cavity to Perforation (Length Direction)	2.0±0.1
A0	Cavity Length	10.8±0.1
В0	Cavity Width	13.3±0.1
K0	Cavity Depth	3.2±0.1
t	Carrier Tape Thickness	0.3±0.05
С	Cover Tape Width	21.3



Holtek Semiconductor Inc. (Headquarters) No.3, Creation Rd. II, Science Park, Hsinchu, Taiwan

Tel: 886-3-563-1999 Fax: 886-3-563-1189 http://www.holtek.com.tw

#### Holtek Semiconductor Inc. (Taipei Sales Office)

4F-2, No. 3-2, YuanQu St., Nankang Software Park, Taipei 115, Taiwan Tel: 886-2-2655-7070 Fax: 886-2-2655-7373 Fax: 886-2-2655-7383 (International sales hotline)

#### Holtek Semiconductor Inc. (Shanghai Sales Office)

7th Floor, Building 2, No.889, Yi Shan Rd., Shanghai, China 200233 Tel: 021-6485-5560 Fax: 021-6485-0313 http://www.holtek.com.cn

#### Holtek Semiconductor Inc. (Shenzhen Sales Office)

5/F, Unit A, Productivity Building, Cross of Science M 3rd Road and Gaoxin M 2nd Road, Science Park, Nanshan District, Shenzhen, China 518057 Tel: 0755-8616-9908, 8616-9308 Fax: 0755-8616-9533

#### Holtek Semiconductor Inc. (Beijing Sales Office)

Suite 1721, Jinyu Tower, A129 West Xuan Wu Men Street, Xicheng District, Beijing, China 100031 Tel: 010-6641-0030, 6641-7751, 6641-7752 Fax: 010-6641-0125

#### Holtek Semiconductor Inc. (Chengdu Sales Office)

709, Building 3, Champagne Plaza, No.97 Dongda Street, Chengdu, Sichuan, China 610016 Tel: 028-6653-6590 Fax: 028-6653-6591

#### Holmate Semiconductor, Inc. (North America Sales Office)

46729 Fremont Blvd., Fremont, CA 94538 Tel: 510-252-9880 Fax: 510-252-9885 http://www.holmate.com

#### Copyright © 2003 by HOLTEK SEMICONDUCTOR INC.

The information appearing in this Data Sheet is believed to be accurate at the time of publication. However, Holtek assumes no responsibility arising from the use of the specifications described. The applications mentioned herein are used solely for the purpose of illustration and Holtek makes no warranty or representation that such applications will be suitable without further modification, nor recommends the use of its products for application that may present a risk to human life due to malfunction or otherwise. Holtek's products are not authorized for use as critical components in life support devices or systems. Holtek reserves the right to alter its products without prior notification. For the most up-to-date information, please visit our web site at http://www.holtek.com.tw.