#### **Features**

- 16-channel GPS Correlator
  - 8192 Search Bins with GPS Acquisition Accelerator
  - Accuracy: 2.5m CEP (2D, Stand Alone)
  - Time to First Fix: 34s (Cold Start)
  - Acquisition Sensitivity: -142 dBm (Cold Start, With External LNA)
  - Tracking Sensitivity: -158 dBm (With External LNA)
- Utilizes the ARM7TDMI<sup>®</sup> ARM<sup>®</sup> Thumb<sup>®</sup> Processor Core
  - High-performance 32-bit RISC Architecture
  - EmbeddedICE<sup>™</sup> (In-Circuit Emulation)
- 128 Kbytes Internal RAM
- 384 Kbytes Internal ROM with u-blox GPS Firmware SuperSense<sup>®</sup>
- 1.5-bit ADC On-chip
- Single IF Architecture
- 2 External Interrupts
- 24 User-programmable I/O Lines
- 1 USB Device Port
  - Universal Serial Bus (USB) 2.0 Full-speed Device
  - Embedded USB V2.0 Full-speed Transceiver
- 2 USARTs
- Master/Slave SPI Interface
  - 4 External Slave Chip Selects
- Programmable Watchdog Timer
- Advanced Power Management Controller (APMC)
  - Geared Master Clock to Reduce Power Consumption
  - Sleep State with Disabled Master Clock
  - Hibernate State with 32.768 kHz Master Clock
- Real Time Clock (RTC)
- 1.8V to 3.3V User-definable IO Voltage for Several GPIOs with 5V Tolerance
- 4 KBytes of Battery Backup Memory
- 7 mm imes 10 mm 96 Pin BGA Package, 0.8 mm Pitch, Pb-free, RoHS-compliant

#### **Benefits**

- Fully Integrated Design With Low BOM
- No External Flash Memory Required
- Supports NMEA<sup>®</sup>, UBX Binary and RTCM Protocol for DGPS
- Supports SBAS (WAAS, EGNOS, MSAS)
- Up to 4 Hz Update Rate
- Supports A-GPS (Aiding)
- Excellent Noise Performance



# ANTARIS4 Single-chip GPS Receiver SuperSense

# ATR0635P1 Automotive





## 1. Description

The ATR0635P1 is a low-power, single-chip GPS receiver, especially designed to meet the requirements of mobile applications. It is based on  $Atmel^{\otimes}$ 's ANTARIS $^{\otimes}$ 4 technology and integrates an RF front-end, filtering, and a baseband processor in a single, tiny 7 mm  $\times$  10 mm 96 pin BGA package. Providing excellent RF performance with low noise figure and low power consumption.

Due to the fully integrated design, just an RF SAW filter, a GPS TCXO and blocking capacitors are required to realize a stand-alone GPS functionality.

The ATR0635P1 includes a complete GPS firmware, licensed from u-blox AG, which performs the GPS operation, including tracking, acquisition, navigation and position data output. For normal PVT (Position/Velocity/Time) applications, there is no need for external Flash- or ROM-memory.

The firmware supports e.g. the NMEA protocol (2.1 and 2.3), a binary protocol for PVT data, configuration and debugging, the RTCM protocol for DGPS, SBAS (WAAS, EGNOS and MSAS) and A-GPS (aiding). It is also possible to store the configuration settings in an optional external EEPROM.

Due to the integrated ARM7TDMI processor and an intelligent radio architecture, the ATR0635P1 operates in a complete autonomous mode, utilizing on chip AGC in closed loop operation.


For maximum performance, we recommend to use the ATR0635P1 together with a low noise amplifier (e.g. ATR0610).

The ATR0635P1 supports assisted GPS.

## 2. Architectural Overview

## 2.1 Block Diagram

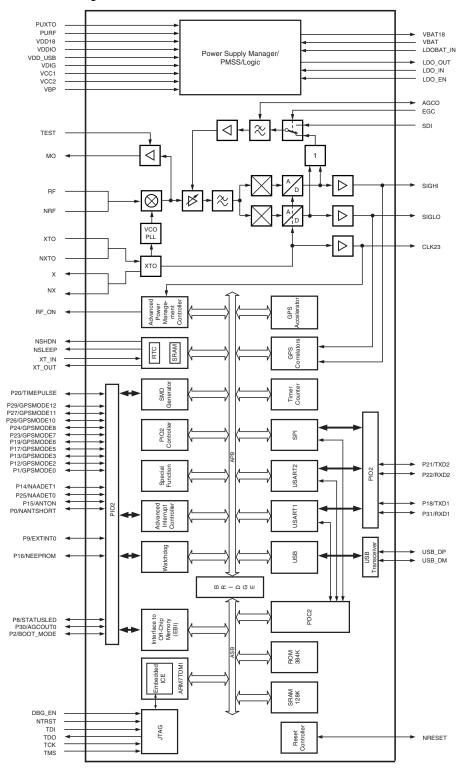Figure 2-1. ATR0635P1 Block Diagram







#### 2.2 General Description

The ATR0635P1 has been designed especially for mobile applications. It provides high isolation between GPS and cellular bands, as well as very low power consumption.

ATR0635P1 is based on the successful ANTARIS4 technology which includes the ANTARIS high performance SuperSense software in ROM, developed by u-blox AG, Switzerland. ANTARIS provides a proven navigation engine which is used in high-end car navigation systems, automatic vehicle location (AVL), security and surveying systems, traffic control, road pricing, and speed camera detectors, and provides location-based services (LBS) worldwide.

The ANTARIS4 chipset has a very low power consumption and comes with a very low BoM for the passive components. Also, as the high performance software SuperSense is available in ROM, no external flash memory is needed.

The L1 input signal ( $f_{RF}$ ) is a Direct Sequence Spread Spectrum (DSSS) signal with a center frequency of 1575.42 MHz. The digital modulation scheme is Bi-Phase-Shift-Keying (BPSK) with a chip rate of 1.023 Mbps.

#### 2.3 PMSS Logic

The power management, startup and shutdown (PMSS) logic ensures reliable operation within the recommended operating conditions. The external power control signals PUrf and PUxto are passed through Schmitt trigger inputs to eliminate voltage ripple and prevent undesired behavior during start-up and shut-down. Digital and analog supply voltages are analyzed by a monitoring circuit, enabling the startup of the IC only when it is within a safe operating range.

#### 2.4 VCO/PLL

The frequency synthesizer features a balanced VCO and a fully integrated loop filter, thus no external components are required. The VCO combines very good phase noise behavior and excellent spurious suppression. The relation between the reference frequency ( $f_{TCXO}$ ) and the VCO center frequency ( $f_{TCXO}$ ) is given by:

 $f_{VCO} = f_{TCXO} \times 64 = 23.104 \text{ MHz} \times 64 = 1478.656 \text{ MHz}.$ 

#### 2.5 RF Mixer/Image Filter

Combined with the antenna, an external LNA provides a first band-path filtering of the signal. Atmel's ATR0610 is recommended for the LNA due to its low noise figure, high linearity and low power consumption. The output of the LNA drives a SAW filter, which provides image rejection for the mixer and the required isolation to all GSM bands. The output of the SAW filter is fed into a highly linear mixer with high conversion gain and excellent noise performance.

#### 2.6 VGA/AGC

The on-chip automatic gain control (AGC) stage sets the gain of the VGA in order to optimally load the input of the following analog-to-digital converter. The AGC control loop can be selected for on-chip closed-loop operation or for baseband controlled gain mode.

#### 2.7 Analog-to-digital Converter

The analog-to-digital converter stage has a total resolution of 1.5 bits. It comprises balanced comparators and a sub-sampling unit, clocked by the reference frequency ( $f_{TCXO}$ ). The frequency spectrum of the digital output signal ( $f_{OUT}$ ), present at the data outputs SIGLO and SIGH1, is 4.348 MHz.

#### 2.8 Baseband

The GPS baseband core includes a 16-channel correlator and is based on an ARM7TDMI ARM processor core with very low power consumption. It has a high-performance 32 bit RISC architecture, uses a high-density 16-bit instruction set. The ARM standard In-Circuit Emulation debug interface is supported via the JTAG/ICE port of the ATR0635P1.

The ATR0635P1 architecture consists of two main buses, the Advanced System Bus (ASB) and the Advanced Peripheral Bus (APB). The ASB is designed for maximum performance. It interfaces the processor with the on-chip 32-bit memories and the external memories and devices by means of the External Bus Interface (EBI). The APB is designed for accesses to on-chip peripherals and is optimized for low power consumption. The AMBA<sup>™</sup> Bridge provides an interface between the ASB and the APB.

An on-chip Peripheral Data Controller (PDC2) transfers data between the on-chip USARTs/SPI and the on- and off-chip memories without processor intervention. Most importantly, the PDC2 removes the processor interrupt handling overhead and significantly reduces the number of clock cycles required for a data transfer. It can transfer up to 64K contiguous bytes without reprogramming the starting address. As a result, the performance of the microcontroller is increased and the power consumption reduced.

All of the external signals of the on-chip peripherals are under the control of the Parallel I/O Controller (PIO2). The PIO2 Controller can be programmed to insert an input filter on each pin or generate an interrupt on a signal change. After reset, the user must carefully program the PIO2 Controller in order to define which peripheral signals are connected with off-chip logic.

The ATR0635P1 features a Programmable Watchdog Timer.

An Advanced Power Management Controller (APMC) allows for the peripherals to be deactivated individually. Automatic master clock gearing reduces power consumption. A Sleep Mode is available with disabled 23.104 MHz master clock, as well as a Back-up Mode operating 32.768 kHz master clock.

A 32.768 kHz Real Time Clock (RTC), together with a buit-in battery back-up SRAM, allows for storage of Almanac, Ephemeris, software configurations to make quick hot- and warm starts.

The ATR0635P1 includes the full high performance firmware (SuperSense), licensed from u-blox AG, Switzerland. Features of the ROM firmware are described in a software documentation available from u-blox AG, Switzerland.





## 3. Pin Configuration

#### 3.1 Pinout

Figure 3-1. Pinning BGA96 (Top View)

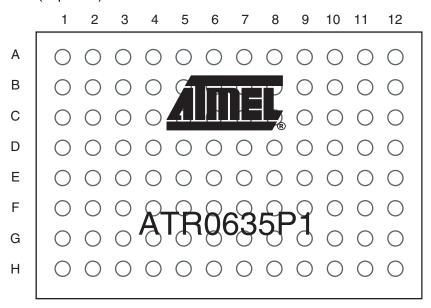


Table 3-1. ATR0635P1 Pinout

			Pull Resistor		PIO B	ank A
Pin Name	BGA 96	Pin Type	(Reset Value) <sup>(1)</sup>	Firmware Label	I	0
AGCO	A4	Analog I/O				
CLK23	A8	Digital OUT				
DBG_EN	E8	Digital IN	PD			
EGC	D4	Digital IN				
GDIG	C5	Supply				
GND	A6	Supply				
GND	A9	Supply				
GND	B11	Supply				
GND	F5	Supply				
GND	H8	Supply				
GND	H12	Supply				
GNDA	А3	Supply				
GNDA	B1	Supply				

Notes: 1. PD = internal pull-down resistor, PU = internal pull-up resistor, OH = switched to Output High at reset

- 2. VBAT18 represent the internal power supply of the backup power domain, see section "Power Supply" on page 20.
- 3. VDD\_USB is the supply voltage for following the USB pins: USB\_DM and USB\_DP, see section "Power Supply" on page 20. For operation of the USB interface, supply of 3.0V to 3.6V is required.
- 4. VDDIO is the supply voltage for the following GPIO pins: P1, P2, P8, P12, P14, P16, P17, P18, P19, P20, P21, P23, P24, P25, P26, P27 and P29, see section "Power Supply" on page 20.

 Table 3-1.
 ATR0635P1 Pinout (Continued)

			Pull Resistor		PIO Ba	PIO Bank A		
Pin Name	BGA 96	Pin Type	(Reset Value) <sup>(1)</sup>	Firmware Label	I	0		
GNDA	B4	Supply						
GNDA	D2	Supply						
GNDA	E1	Supply						
GNDA	E2	Supply						
GNDA	E3	Supply						
GNDA	F1	Supply						
GNDA	F2	Supply						
GNDA	F3	Supply						
GNDA	G1	Supply						
GNDA	H1	Supply						
_DOBAT_IN	D11	Supply						
LDO_EN	C11	Digital IN						
LDO_IN	E11	Supply						
LDO_OUT	E12	Supply						
MO	C3	Analog OUT						
NRESET	A7	Digital I/O	Open Drain PU					
NRF	C1	Analog IN						
NSHDN	E9	Digital OUT						
NSLEEP	E10	Digital OUT						
NTRST	H11	Digital IN	PD					
NX	B2	Analog OUT						
NXTO	В3	Analog IN						
P0	C8	Digital I/O	PD	NANTSHORT				
P1	D8	Digital I/O	Configurable (PD)	GPSMODE0				
P2	C6	Digital I/O	Configurable (PD)	BOOT_MODE		'0'		
P8	D7	Digital I/O	Configurable (PD)	STATUSLED		'0'		
P9	A11	Digital I/O	PU to VBAT18	EXTINT0	EXTINT0			
P12	D6	Digital I/O	Configurable (PU)	GPSMODE2		NPCS2		
P13	B10	Digital I/O	PU to VBAT18	GPSMODE3	EXTINT1			
P14	G6	Digital I/O	Configurable (PD)	NAADET1		<b>'</b> 0'		
P15	F11	Digital I/O	PD	ANTON				
P16	G8	Digital I/O	Configurable (PU)	NEEPROM				
P17	H6	Digital I/O	Configurable (PD)	GPSMODE5	SCK1	SCK1		
P18	C7	Digital I/O	Configurable (PU)	TXD1		TXD1		
P19	F6	Digital I/O	Configurable (PU)	GPSMODE6				

Notes: 1. PD = internal pull-down resistor, PU = internal pull-up resistor, OH = switched to Output High at reset

- 2. VBAT18 represent the internal power supply of the backup power domain, see section "Power Supply" on page 20.
- 3. VDD\_USB is the supply voltage for following the USB pins: USB\_DM and USB\_DP, see section "Power Supply" on page 20. For operation of the USB interface, supply of 3.0V to 3.6V is required.
- 4. VDDIO is the supply voltage for the following GPIO pins: P1, P2, P8, P12, P14, P16, P17, P18, P19, P20, P21, P23, P24, P25, P26, P27 and P29, see section "Power Supply" on page 20.





 Table 3-1.
 ATR0635P1 Pinout (Continued)

			Pull Resistor		PIO B	ank A
Pin Name	BGA 96	Pin Type	(Reset Value) <sup>(1)</sup>	Firmware Label	I	0
P20	G7	Digital I/O	Configurable (PD)	TIMEPULSE	SCK2	SCK2
P21	E6	Digital I/O	Configurable (PU)	TXD2		TXD2
P22	D10	Digital I/O	PU to VBAT18	RXD2	RXD2	
P23	F8	Digital I/O	Configurable (PU)	GPSMODE7	SCK	SCK
P24	H7	Digital I/O	Configurable (PU)	GPSMODE8	MOSI	MOSI
P25	G5	Digital I/O	Configurable (PD)	NAADET0	MISO	MISO
P26	B6	Digital I/O	Configurable (PU)	GPSMODE10	NSS	NPCS0
P27	F7	Digital I/O	Configurable (PU)	GPSMODE11		NPCS1
P28	E7	Digital I/O	ОН			
P29	D5	Digital I/O	Configurable (PU)	GPSMODE12		NPCS3
P30	G12	Digital I/O	PD	AGCOUT0		AGCOUT0
P31	C10	Digital I/O	PU to VBAT18	RXD1	RXD1	
PURF	G4	Digital IN				
PURF	H4	Digital IN				
PUXTO	F4	Digital IN				
RF	D1	Analog IN				
RF_ON	F10	Digital OUT	PD			
SDI	C4	Digital IN				
SIGHI0	B8	Digital OUT				
SIGLO0	В7	Digital OUT				
TCK	G9	Digital IN	PU			
TDI	H10	Digital IN	PU			
TDO	F9	Digital OUT				
TEST	D3	Analog IN				
TMS	G10	Digital IN	PU			
USB_DM	D9	Digital I/O				
USB_DP	C9	Digital I/O				
VBAT	D12	Supply				
VBAT18 <sup>(2)</sup>	C12	Supply				
VBP	G2	Supply				
VBP	G3	Supply				
VBP	H2	Supply				
VBP	Н3	Supply				
VCC1	C2	Supply				
VCC2	E4	Supply				

Notes: 1. PD = internal pull-down resistor, PU = internal pull-up resistor, OH = switched to Output High at reset

- 2. VBAT18 represent the internal power supply of the backup power domain, see section "Power Supply" on page 20.
- 3. VDD\_USB is the supply voltage for following the USB pins: USB\_DM and USB\_DP, see section "Power Supply" on page 20. For operation of the USB interface, supply of 3.0V to 3.6V is required.
- 4. VDDIO is the supply voltage for the following GPIO pins: P1, P2, P8, P12, P14, P16, P17, P18, P19, P20, P21, P23, P24, P25, P26, P27 and P29, see section "Power Supply" on page 20.

 Table 3-1.
 ATR0635P1 Pinout (Continued)

			Pull Resistor		PIO Ba	ank A
Pin Name	BGA 96	Pin Type	(Reset Value) <sup>(1)</sup>	Firmware Label	I	0
VDD_USB <sup>(3)</sup>	A10	Supply				
VDD18	H9	Supply				
VDD18	G11	Supply				
VDD18	F12	Supply				
VDD18	B9	Supply				
VDD18	E5	Supply				
VDDIO <sup>(4)</sup>	B5	Supply				
VDDIO	H5	Supply				
VDIG	A5	Supply				
Х	A2	Analog OUT				
XT_IN	A12	Analog IN				
XT_OUT	B12	Analog OUT				
XTO	A1	Analog Input				

Notes:

- 1. PD = internal pull-down resistor, PU = internal pull-up resistor, OH = switched to Output High at reset
- 2. VBAT18 represent the internal power supply of the backup power domain, see section "Power Supply" on page 20.
- 3. VDD\_USB is the supply voltage for following the USB pins: USB\_DM and USB\_DP, see section "Power Supply" on page 20. For operation of the USB interface, supply of 3.0V to 3.6V is required.
- 4. VDDIO is the supply voltage for the following GPIO pins: P1, P2, P8, P12, P14, P16, P17, P18, P19, P20, P21, P23, P24, P25, P26, P27 and P29, see section "Power Supply" on page 20.

## 3.2 Signal Description

Table 3-2. Signal Description

Pin Number	Pin Name	Туре	Active Level	Pin Description/Comment
RF Section		•		
D1	RF	ANALOG IN	-	Input from SAW filter
C1	NRF	ANALOG IN	-	Inverted input from SAW filter
GPS XTAL Se	ection			
A1	XTO	ANALOG IN	-	TCXO input (23.104 MHz)
В3	NXTO	ANALOG IN	-	Inverted TCXO input (23.104 MHz)
A2	Х	ANALOG OUT	-	XTO interface (capacitor)
B2	NX	ANALOG OUT	-	Inverted XTO interface (capacitor)
RTC Section				
A12	XT_IN	ANALOG IN	-	Oscillator input (32.768 kHz)
B12	XT_OUT	ANALOG OUT	-	Oscillator output (32.768 kHz)
Automatic Ga	ain Control, ban	dwidth setting		
A4	AGCO	ANALOG IO	-	Automatic gain control analog voltage, connect shunt capacitor to GND
D4	EGC	DIGITAL IN	-	Enable external gain control (high = software gain control, low = automatic gain control)
G12	AGCOUT0	DIGITAL OUT	-	Software gain control
C4	SDI	DIGITAL IN	-	Software gain control





 Table 3-2.
 Signal Description (Continued)

Table 3-2.		olion (Conlinue	,	
Pin Number	Pin Name	Туре	Active Level	Pin Description/Comment
<b>Boot Section</b>	1			
C6	BOOT_MODE	DIGITAL IN	-	Leave open, internal pull down
Reset				
A7	NRESET	DIGITAL IN	Low	Reset input; open drain with internal pull-up resistor
APMC/Power	Management			
E9	NSHDN	DIGITAL OUT	Low	Shutdown output, connect to LDO_EN (C11)
C11	LDO_EN	DIGITAL IN	-	Enable LDO18
E10	NSLEEP	DIGITAL OUT	Low	Power-up output for GPS XTAL, connect to PUXTO (F4)
F4	PUXTO	DIGITAL IN	-	Power-up input for GPS XTAL
G4, H4	PURF	DIGITAL IN	-	Power-up input for GPS radio
F10	RF_ON	DIGITAL OUT	-	Power-up output for GPS radio, connect to PURF (G4, H4)
Advanced Int	terrupt Controlle	r (AIC)		
A11, B10	EXTINT0-1	DIGITAL IN	High/Low/ Edge	External interrupt request
USART	I			
C10, D10	RXD1/RXD2	DIGITAL IN	-	USART receive data
C7, E6	TXD1/TXD2	DIGITAL OUT	-	USART transmit data
H6, G7	SCK1/SCK2	DIGITAL I/O	-	External synchronous serial clock
USB				
C9	USB_DP	DIGITAL I/O	-	USB data (D+)
D9	USB_DM	DIGITAL I/O	-	USB data (D-)
SPI Interface				
F8	SCK	DIGITAL I/O	-	SPI clock
H7	MOSI	DIGITAL I/O	-	Master out slave in
G5	MISO	DIGITAL I/O	-	Master in slave out
B6	NSS/NPCS0	DIGITAL I/O	Low	Slave select
F7, D6, D5	NPCS1/NPCS2 /NPCS3	DIGITAL OUT	Low	Slave select
PIO				
A11, B[6,10], C[6-8,10], D[5-8,10], E[6,7], F[6-8], G[5-8], H[6,7]	P0 to P31	DIGITAL I/O	-	Programmable I/O ports
Configuration	n			
B[6,10], D[5,6,8],	GPSMODE0-12	DIGITAL IN	-	GPS mode pins
F[6-8], H[6,7]	NEEDBOA	DIOITAL IN	1	Frankla FERROM averaget
G8	NEEPROM	DIGITAL IN	Low	Enable EEPROM support
GPS	<b>07.7</b> 1.51.75			
D7	STATUSLED	DIGITAL OUT	-	Status LED
G7	TIMEPULSE	DIGITAL OUT	-	GPS synchronized time pulse

 Table 3-2.
 Signal Description (Continued)

	` `	,	Pin Description/Comment
	Type	Active Level	i iii bescription/comment
•	DIGITAL IN	Low	Active antenna short detection Input
NAADET0/		_	Active antenna short detection input
			·
	DIGITAL OUT	-	Active antenna power-on Output
	T		I
		-	Debug enable
		-	Test data out
		-	Test clock
TMS	DIGITAL IN	-	Test mode select
TDI		-	Test data in
NTRST	DIGITAL IN	Low	Test reset input
MO	ANALOG OUT	-	IF output buffer
TEST	ANALOG IN	1	Enable IF output buffer
SIGLO	DIGITAL OUT	-	Digital IF (data output "Low")
SIGHI	DIGITAL OUT	-	Digital IF (data output "High")
CLK23	DIGITAL OUT	-	Digital IF (sample clock)
g Part			
VCC1	SUPPLY	-	Analog supply 3V
VCC2	SUPPLY	-	Analog supply 3V
VBP	SUPPLY	-	Analog supply 3V
GNDA	SUPPLY	-	Analog Ground
Part			
VDIG	SUPPLY	-	Digital supply (radio) 1.8V
VDD18	SUPPLY	-	Core voltage 1.8V
VDD_USB	SUPPLY	-	USB transceiver supply voltage (3.0V to 3.6V (USB enabled) or 0 to 2.0V (USB disabled))
VDDIO	SUPPLY	-	Variable I/O voltage 1.65V to 3.6V
GDIG	SUPPLY	-	Digital ground (radio)
GND	SUPPLY	-	Digital ground
	ı		
LDO_IN	SUPPLY	-	2.3V to 3.6V
LDO_OUT	SUPPLY	-	1.8V LDO18 output, max. 80 mA
	ı	<u> </u>	1
LDOBAT_IN	SUPPLY	-	2.3V to 3.6V
VBAT	SUPPLY	-	1.5V to 3.6V
VBAT18	SUPPLY	-	1.8V LDOBAT Output
	Pin Name na Supervision NANTSHORT NAADETO/ NAADET1 ANTON ne DBG_EN TDO TCK TMS TDI NTRST  MO TEST SIGLO SIGHI CLK23 G Part VCC1 VCC2 VBP  GNDA  Part VDIG VDD18 VDD18 VDD_USB VDD_USB VDD_USB VDDO GDIG GND LDO_IN LDO_OUT  LDO_OUT	NANTSHORT DIGITAL IN NAADET10/ NAADET11 DIGITAL IN NAADET11 DIGITAL IN ANTON DIGITAL OUT  BE  DBG_EN DIGITAL OUT TCK DIGITAL IN TMS DIGITAL IN TMS DIGITAL IN TMS DIGITAL IN TMS DIGITAL IN NTRST DIGITAL IN NTRST DIGITAL IN SIGLO DIGITAL OUT SIGHI DIGITAL OUT SIGHI DIGITAL OUT CLK23 DIGITAL OUT CLK23 DIGITAL OUT SIGHI DIGITAL OUT CLK23 DIGITAL OUT CLK23 DIGITAL OUT VCC2 SUPPLY VCC2 SUPPLY VBP SUPPLY  VBP SUPPLY  VBP SUPPLY  VDD18 SUPPLY  VDD_USB SUPPLY  VDD_USB SUPPLY  VDD_USB SUPPLY  GDIG SUPPLY  GDIG SUPPLY  LDO_IN SUPPLY  LDO_OUT SUPPLY  LDO_OUT SUPPLY  LDOBAT_IN	Pin Name   Type   Active Level   na Supervision





## 3.3 Setting GPSMODE0 to GPSMODE12

The start-up configuration of this ROM-based system without external non-volatile memory is defined by the status of the GPSMODE pins after system reset. Alternatively, the system can be configured through message commands passed through the serial interface after start-up. This configuration of the ATR0635P1 can be stored in an external non-volatile memory like EEPROM. *Default* designates settings used by ROM firmware if GPSMODE configuration is disabled (GPSMODE0 = 0).

Table 3-3. GPSMODE Functions

Pin	Function		
GPSMODE0 (P1)	Enable configuration with GPSMODE pins		
GPSMODE1 (P9)	This pin (EXTINT0) is used for FixNOW <sup>™</sup> functionality and not used for GPSMODE configuration.		
GPSMODE2 (P12)	GPS sensitivity settings		
GPSMODE3 (P13)	GES Sensitivity Settings		
GPSMODE4 (P14)	This pin (NAADET1) is used as active antenna supervisor input and not used for GPSMODE configuration. This is the default selection if GPSMODE configuration is disabled.		
GPSMODE5 (P17)	Sovial I/O configuration		
GPSMODE6 (P19)	Serial I/O configuration		
GPSMODE7 (P23)	USB power mode		
GPSMODE8 (P24)	General I/O configuration		
GPSMODE9 (P25)	This pin (NAADET0) is used as an active Antenna Supervisor input and not used for GPSMODE configuration		
GPSMODE10 (P26)	Canada I / Canada in wation		
GPSMODE11 (P27)	General I/O configuration		
GPSMODE12 (P29)	Serial I/O configuration		

In the case that GPSMODE pins with internal pull-up or pull-down resistors are connected to GND/VDD18, additional current is drawn over these resistors. Especially GPSMODE3 can impact the back-up current.

#### 3.3.1 Enable GPSMODE Pin Configuration

**Table 3-4.** Enable Configuration With GPSMODE Pins

GPSMODE0 (Reset = PD)	Description
0 <sup>(1)</sup>	Ignore all GPSMODE pins. The default settings as indicated below are used.
1	Use settings as specified with GPSMODE[2, 3, 5 to 8, 10 to 12]

Note: 1. Leave open

If the GPSMODE configuration is enabled (GPSMODE0 = 1) and the other GPSMODE pins are not connected externally, the reset default values of the internal pull-down and pull-up resistors will be used.

#### 3.3.2 Sensitivity Settings

Table 3-5. GPS Sensitivity Settings

GPSMODE3 (Fixed PU)	GPSMODE2 (Reset = PU)	Description
O <sup>(1)</sup>	0	Auto mode (Default ROM value)
0 <sup>(1)</sup>	1 <sup>(2)</sup>	Fast mode
1 <sup>(2)</sup>	0	Normal mode
1 <sup>(2)</sup>	1 <sup>(2)</sup>	High sensitivity

Notes:

1. Increased back-up current

2. Leave open

For all GPS receivers the sensitivity depends on the integration time of the GPS signals. Therefore there is a trade-off between sensitivity and the time to detect the GPS signal (Time to first fix). The three modes, "Fast Acquisition", "Normal" and "High Sensitivity", have a fixed integration time. The "Normal" mode, recommended for the most applications, is a trade off between the sensitivity and TTFF. The "Fast Acquisition" mode is optimized for fast acquisition, at the cost of a lower sensitivity. The "High Sensitivity" mode is optimized for higher sensitivity, at the cost of longer TTFF. The "Auto" mode adjusts the integration time (sensitivity) automatically according to the measured signal levels. That means the receiver with this setting has a fast TTFF at strong signals, a high sensitivity to acquire weak signals but some times at medium signal level a higher TTFF as the "Normal" mode. These sensitivity settings affect only the startup performance not the tracking performance.

#### 3.4 Serial I/O Configuration

The ATR0635P1 features a two-stage I/O-message and protocol-selection procedure for the two available serial ports. At the first stage, a certain protocol can be enabled or disabled for a given USART port or the USB port. Selectable protocols are RTCM, NMEA and UBX. At the second stage, messages can be enabled or disabled for each enabled protocol on each port. In all configurations described below, all protocols are enabled on all ports, but output messages are enabled in a way that ports appear to communicate at only one protocol. However, each port will accept any input message in any of the three implemented protocols

Table 3-6. Serial I/O Configuration

GPSMODE12 (Reset = PU)	GPSMODE6 (Reset = PU)	GPSMODE5 (Reset = PD)	USART1/USB (Output Protocol/ Baud Rate (kBaud))	USART2 (Output Protocol/ Baud Rate (kBaud))	Messages <sup>(1)</sup>	Information Messages
0	0	0 <sup>(2)</sup>	UBX/57.6	NMEA/19.2	High	User, Notice, Warning, Error
0	0	1	UBX/38.4	NMEA/9.6	Medium	User, Notice, Warning, Error
0	1 <sup>(2)</sup>	0 <sup>(2)</sup>	UBX/19.2	NMEA/4.8	Low	User, Notice, Warning, Error
0	1 <sup>(2)</sup>	1	-/Auto	-/Auto	Off	None
1 <sup>(2)</sup>	0	0 <sup>(2)</sup>	NMEA/19.2	UBX/57.6	High	User, Notice, Warning, Error
1 <sup>(2)</sup>	0	1	NMEA/4.8	UBX/19.2	Low	User, Notice, Warning, Error
1 <sup>(2)</sup>	1 <sup>(2)</sup>	0 <sup>(2)</sup>	NMEA/9.6	UBX/38.4	Medium	User, Notice, Warning, Error
1 <sup>(2)</sup>	1 <sup>(2)</sup>	1	UBX/115.2	NMEA/19.2	Debug	All

Notes: 1. See Table 3-7 to Table 3-10 on page 14, the messages are described in the ANTARIS4 protocol specification

2. Leave open





Both USART ports accept input messages in all three supported protocols (NMEA, RTCM and UBX) at the configured baud rate. Input messages of all three protocols can be arbitrarily mixed. Response to a query input message will always use the same protocol as the query input message. The USB port does only accept NMEA and UBX as input protocol by default. RTCM can be enabled via protocol messages on demand.

In Auto mode, no output message is sent out by default, but all input messages are accepted at any supported baud rate. Again, USB is restricted to only NMEA and UBX protocols. Response to query input commands will be given by the same protocol and baud rate as it was used for the query command. Using the respective configuration commands, periodic output messages can be enabled.

The following message settings are used in the tables below:

**Table 3-7.** Supported Messages at Setting *Low* 

NMEA Port	Standard	GGA, RMC
UBX Port	NAV	SOL, SVINFO
	MON	EXCEPT

**Table 3-8.** Supported Messages at Setting *Medium* 

NMEA Port	Standard	GGA, RMC, GSA, GSV, GLL, VTG, ZDA
UBX Port	INAV	SOL, SVINFO, POSECEF, POSLLH, STATUS, DOP, VELECEF, VELNED, TIMEGPS, TIMEUTC, CLOCK

**Table 3-9.** Supported Messages at Setting *High* 

NMEA Port	Standard	GGA, RMC, GSA, GSV, GLL, VTG, ZDA, GRS, GST
INIVILA FOIL	Proprietary	PUBX00, PUBX03, PUBX04
UBX Port	ΙΝΙΔΙ	SOL, SVINFO, POSECEF, POSLLH, STATUS, DOP, VELECEF, VELNED, TIMEGPS, TIMEUTC, CLOCK
	MON	SCHD, IO, IPC, EXCEPT

**Table 3-10.** Supported Messages at Setting *Debug* (Additional Undocumented Message May be Part of Output Data)

NMEA Port	Standard	GGA, RMC, GSA, GSV, GLL, VTG, ZDA, GRS, GST	
INVILA FOIL	Proprietary	PUBX00, PUBX03, PUBX04	
UDV D	NAV	SOL, SVINFO, POSECEF, POSLLH, STATUS, DOP, VELECEF, VELNED, TIMEGPS, TIMEUTC, CLOCK	
UBX Port	MON	SCHD, IO, IPC, EXCEPT	
	RXM	RAW (RAW message support requires an additional license)	

The following settings apply if GPSMODE configuration is not enabled, that is, GPSMODE = 0 (*ROM defaults*):

**Table 3-11.** Serial I/O Default Setting if GPSMODE Configuration is Deselected (GPSMODE0 = 0)

	USB NMEA	USART1 NMEA	USART2 UBX
Baud rate (kBaud)		57.6	57.6
Input protocol	UBX, NMEA	UBX, NMEA, RTCM	UBX, NMEA, RTCM
Output protocol	NMEA	NMEA	UBX
Messages	GGA, RMC, GSA, GSV	GGA, RMC, GSA, GSV	NAV: SOL, SVINFO MON: EXCEPT
Information messages (UBX INF or NMEA TXT)	User Notice, Warning, Error	User, Notice, Warning, Error	User, Notice, Warning, Error

#### 3.4.1 USB Power Mode

For correct response to the USB host queries, the device has to know its power mode. This is configured via GPSMODE7. If set to *bus powered*, an upper current limit of 100 mA is reported to the USB host; that is, the device classifies itself as a "low-power bus-powered function" with no more than one USB power unit load.

Table 3-12. USB Power Modes

GPSMODE7 (Reset = PU)	Description
0	USB device is bus-powered (maximum current limit 100 mA)
1 <sup>(1)</sup>	USB device is self-powered (default ROM value)

Note: 1. Leave open

#### 3.4.2 Active Antenna Supervisor

The two pins P0/NANTSHORT and P15/ANTON plus one pin of P25/NAADET0/MISO or P14/NAADET1 are always initialized as general purpose I/Os and used as follows:

- P15/ANTON is an output which can be used to switch on and off antenna power supply.
- Input P0/NANTSHORT will indicate an antenna short circuit, i.e. zero DC voltage at the antenna, to the firmware. If the antenna is switched off by output P15/ANTON, it is assumed that also input P0/NANTSHORT will signal zero DC voltage, i.e. switch to its active low state.
- Input P25/NAADET0/MISO or P14/NAADET1 will indicate a DC current into the antenna. In case of short circuit, both P0 and P25/P14 will be active, i.e. at low level. If the antenna is switched off by output P15/ANTON, it is assumed that also input P25/NAADET0/MISO will signal zero DC current, i.e. switch to its active low state. Which pin is used as NAADET (P14 or P25) depends on the settings of GPSMODE11 and GPSMODE10 (see Table 3-14 on page 16).





Table 3-13. Pin Usage of Active Antenna Supervisor

Pin	Usage	Meaning
P0/NANTSHORT	NANTSHORT	Active antenna short circuit detection High = No antenna DC short circuit present Low = Antenna DC short circuit present
P25/NAADET0/ MISO or P14/NAADET1	NAADET	Active antenna detection input High = No active antenna present Low = Active antenna is present
P15/ANTON	ANTON	Active antenna power on output High = Power supply to active antenna is switched on Low = Power supply to active antenna is switched off

Table 3-14. Antenna Detection I/O Settings

GPSMODE11 (Reset = PU)	GPSMODE10 (Reset = PU)	GPSMODE8 (Reset = PU)	Location of NAADET	Comment
0	0	0	P25/NAADET0/MISO	
0	0	1 <sup>(1)</sup>	P25/NAADET0/MISO	
0	1 <sup>(1)</sup>	0	P14/NAADET1	Reserved for further use. Do not use this setting.
0	1 <sup>(1)</sup>	1 <sup>(1)</sup>	P14/NAADET1 (Default ROM value)	
1 <sup>(1)</sup>	0	0	P14/NAADET1	Reserved for further use. Do not use this setting.
1 <sup>(1)</sup>	0	1 <sup>(1)</sup>	P14/NAADET1	Reserved for further use. Do not use this setting.
1 <sup>(1)</sup>	1 <sup>(1)</sup>	0	P25/NAADET0/MISO	
<b>1</b> <sup>(1)</sup>	1 <sup>(1)</sup>	1 <sup>(1)</sup>	P25/NAADET0/MISO	

Note: 1. Leave open

The Antenna Supervisor Software will be configured as follows:

- 1. Enable Control Signal
- 2. Enable Short Circuit Detection (power down antenna via ANTON if short is detected via NANTSHORT)
- 3. Enable Open Circuit Detection via NAADET

The antenna supervisor function may not be disabled by GPSMODE pin selection.

If the antenna supervisor function is not used, please leave open ANTON, NANTSHORT and NAADET.

#### 3.4.3 External Connections for a Working GPS System

Figure 3-2. Example of an External Connection (ATR0635P1)

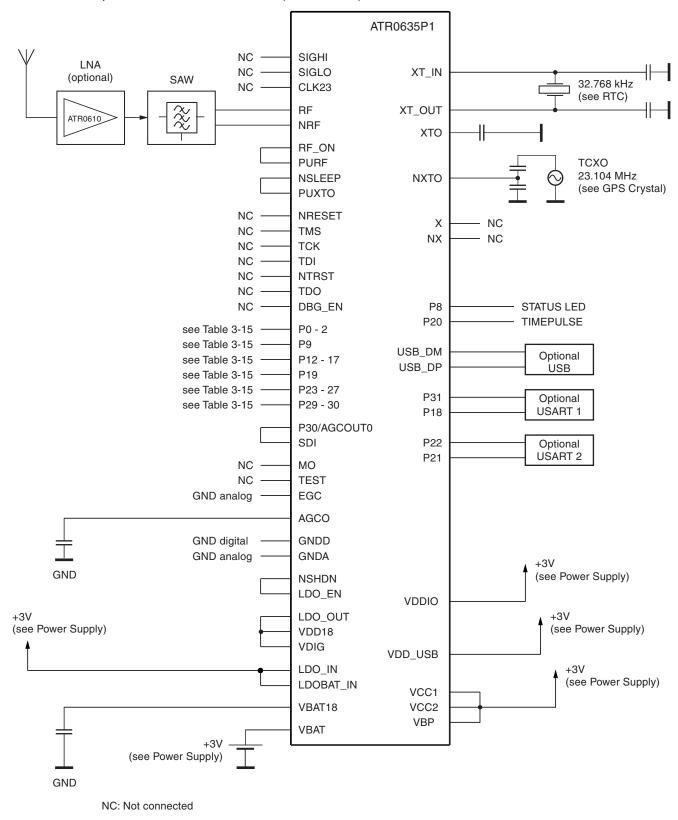


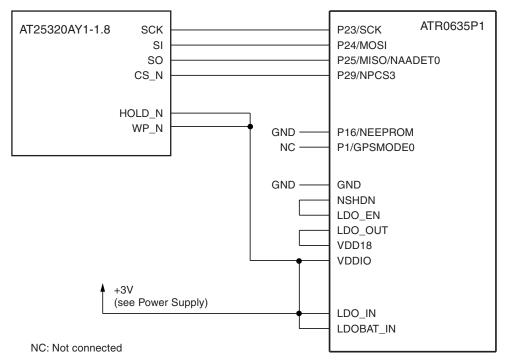


Table 3-15. Recommended Pin Connections

Pin Name	Recommended External Circuit
P0/NANTSHORT	Internal pull-down resistor; leave open if Antenna Supervision functionality is unused.
P1/GPSMODE0	Internal pull-down resistor; leave open in order to disable the GPSMODE pin configuration feature. Connect to VDD18 to enable the GPSMODE pin configuration feature. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P2/BOOT_MODE	Internal pull-down resistor; leave open.
P8/STATUSLED	Output in default ROM firmware: leave open if not used
P9/EXTINT0	Internal pull-up resistor; leave open if unused.
P12/GPSMODE2/NPCS2	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P13/GPSMODE3/ EXTINT1	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P14/NAADET1	Internal pull-down resistor; leave open if Antenna Supervision functionality is unused.
P15/ANTON	Internal pull-down resistor; leave open if Antenna Supervision functionality is unused.
P16/NEEPROM	Internal pull-up resistor; leave open if no serial EEPROM is connected. Otherwise connect to GND.
	Internal pull-down resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P18/TXD1	Output in default ROM firmware: leave open if serial interface is not used.
P19/GPSMODE6/SIGLO1	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P20/TIMEPULSE/SCK2	Output in default ROM firmware: leave open if time pulse feature is not used.
P21/TXD2	Output in default ROM firmware: leave open if serial interface not used.
P22/RXD2	Internal pull-up resistor; leave open if serial interface is not used.
P23/GPSMODE7/SCK	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P24/GPSMODE8/MOSI	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P25/NAADET0/MISO	Internal pull-down resistor; leave open if Antenna Supervision functionality is unused.
	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P27/GPSMODE11/NPCS1	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
	Internal pull-up resistor; can be left open if the GPSMODE feature is not used. Refer to GPSMODE definitions in "Setting GPSMODE0 to GPSMODE12" on page 12.
P30/AGCOUT0	Internal pull-down resistor; leave open.
P31/RXD1	Internal pull-up resistor; leave open if serial interface is not used.

## 3.5 Connecting an Optional Serial EEPROM

The ATR0635P1 offers the possibility of connecting an external serial EEPROM. The internal ROM firmware supports storing the configuration of the ATR0635P1 in serial EEPROM. The pin P16/NEEPROM signals the firmware that a serial EEPROM is connected to the ATR0635P1. The ATR0635P1's 32-bit RISC processor accesses the external memory via SPI (serial peripheral interface). For best results, use a 32-Kbit 1.8V serial EEPROM such as Atmel's AT25320AY1-1.8. Figure 3-3 shows an example of the serial EEPROM connection.



**Figure 3-3.** Example of a Serial EEPROM Connection

Note: The GPSMODE pin configuration feature can be disabled, because the configuration can be stored in the serial EEPROM. VDDIO is the supply voltage for the pins: P23, P24, P25 and P29.





## 4. Power Supply

The ATR0635P1 is supplied with six distinct supply voltages:

- The power supplies for the RF part (VCC1, VCC2, VBP) within 2.7V to 3.3V.
- VDIG, the 1.8V supply of the digital pins of the RF part (SIGHI, SIGLO and CLK23). VDIG should be connected to VDD18.
- VDD18, the nominal 1.8V supply voltage for the core, the I/O pins, the memory interface and the test pins and all GPIO pins not mentioned in next item.
- VDDIO, the variable supply voltage within 1.8V to 3.6V for the following GPIO pins: P1, P2, P8, P12, P14, P16, P17, P18, P19, P20, P21, P23, P24, P25, P26, P27 and P29. In input mode, these pins are 5V input tolerant.
- VDD\_USB, the power supply of the USB pins: USB\_DM and USB\_DP.
- VBAT18 to supply the backup domain: RTC, backup SRAM and the pins NSLEEP, NSHDN, LDO\_EN, VBAT18, P9/EXTINO, P13/EXTINT1, P22/RXD2 and P31/RXD1 and the 32kHz oscillator. In input mode, the four GPIO-pins are 5V input tolerant.

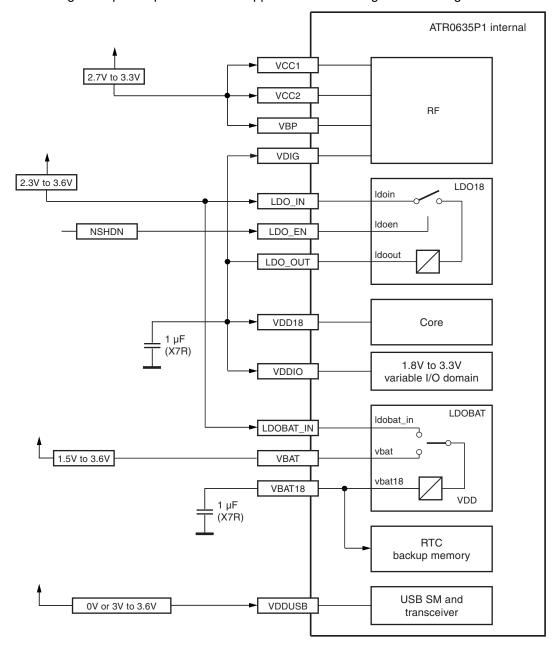


Figure 4-1. Connecting Example: Separate Power Supplies for RF and Digital Part Using the Internal LDOs

The ATR0635P1 contains a built in low dropout voltage regulator LDO18. This regulator can be used if the host system does not provide the core voltage VDD18 of 1.8V nominal. In such case, LDO18 will provide a 1.8V supply voltage from any input voltage VDD between 2.3V and 3.6V. The LDO\_EN input can be used to shut down VDD18 if the system is in standby mode.

If the host system does supply a 1.8V core voltage directly, this voltage has to be connected to the VDD18 supply pins of the Core. LDO\_EN must be connected to GND. LDO\_IN can be connected to GND. LDO\_OUT must not be connected.


A second built in low dropout voltage regulator LDOBAT provides the supply voltage for the RTC and backup SRAM from any input voltage VBAT between 1.5V and 3.6V. The backup battery delivers the supply current if LDOBAT\_IN is not powered.





The RTC section will be initialized properly if VDD18 is supplied first to the ATR0635P1. If VBAT is applied first, the current consumption of the RTC and backup SRAM is undetermined.

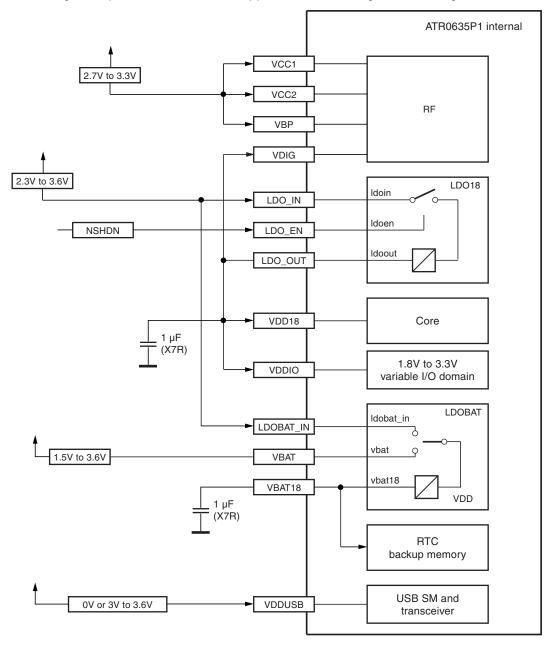Figure 4-2. Connecting Example: Common Power Supplies for RF and Digital Part Using the Internal LDOs



The USB Transceiver is disabled if VDD\_USB < 2.0V. In this case the pins USB\_DM and USB\_DP are connected to GND (internal pull-down resistors). The USB Transceiver is enabled if VDD\_USB within 3.0V and 3.6V.


ATR0635P1 internal VCC1 2.7V to 3.3V VCC2 RF VBP VDIG LDO18 ldoin LDO\_IN ldoen LDO\_EN Idoout LDO\_OUT 1.65V to 1.95V VDD18 Core 1.8V to 3.3V VDDIO variable I/O domain 1 μF (X7R) LDOBAT ldobat\_in LDOBAT\_IN 2.3V to 3.6V vbat 1.5V to 3.6V VBAT vbat18 VBAT18 VDD 1 μF (X7R) RTC backup memory USB SM and 0V or 3V to 3.6V VDDUSB transceiver

Figure 4-3. Connecting Example: Separate Power Supplies for RF and Digital Part Using 1.8V from Host System





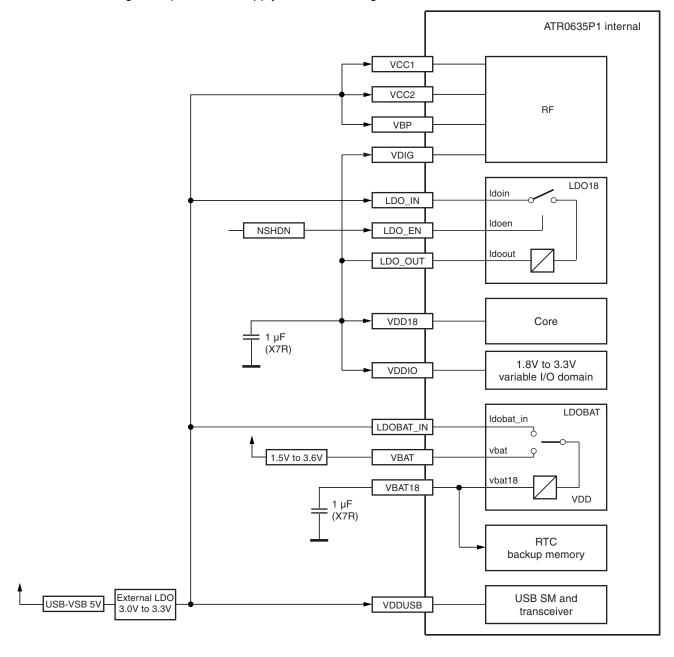Figure 4-4. Connecting Example: Power Supply from USB Using the Internal LDOs




## 5. Crystals


The ATR0635P1 requires a GPS TCXO. The reference frequency is 23.104 MHz. By connecting an optional RTC crystal, different power modes are available. The reference frequency is 32.768 kHz.

#### 5.1 **GPS**

Figure 5-1. Equivalent Application Examples Using a GPS TCXO (See Table 5-1 on page 26)

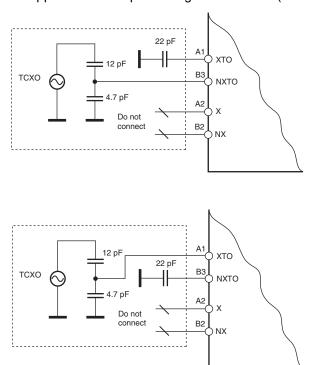

**Figure 5-2.** Application Example Using an External Reference Frequency and Balanced Inputs (See Table 5-2 on page 26)

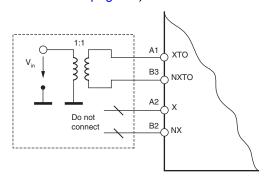





**Table 5-1.** Specification of GPS TCXOs Appropriate for the Application Example Shown in Figure 5-1 on page 25


Parameter	Comment	Min	Тур	Max	Units
Frequency Characteristics					
Nominal Frequency	Nominal frequency referenced to 25°C		23.104		MHz
	Over operating temperature range			0.5	±ppm
Frequency deviation	Including calibration, temperature, soldering and ageing effects			8	±ppm
Temperature range	Operating temperature range	-40.0		+85.0	°C
Electrical	Electrical				
Output waveform	DC coupled clipped sine wave				
Output voltage (peak-to-peak)	Operating range	0.8		1.5	V
Output load capacitance	Tolerable load capacitance	10			pF

**Table 5-2.** Specification of an External Reference Signal for the Application Example Shown in Figure 5-2 on page 25

Parameter	Comment	Min	Тур	Max	Units
Signal Characteristics					
Nominal Frequency			23.104		MHz
Waveform	Sine wave or clipped sine wave				
Amplitude	Voltage peak-to-peak	0.6	0.9	1.2	V

#### 5.2 RTC Oscillator

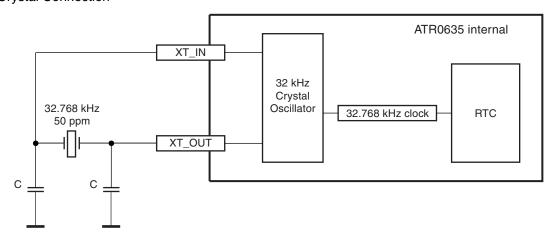Figure 5-3. Crystal Connection



 $C = 2 \times C_{load}$ ,  $C_{load}$  can be derived from the crystal datasheet. Maximum value for C is 25 pF.

## 6. Absolute Maximum Ratings

Stresses beyond those listed under "Absolute Maximum Ratings" may cause permanent damage to the device. This is a stress rating only and functional operation of the device at these or any other conditions beyond those indicated in the operational sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect device reliability.

Parameters	Pins	Symbol	Min	Max	Unit
Operating temperature		T <sub>op</sub>	-40	+85	°C
Storage temperature		T <sub>stg</sub>	<b>–</b> 55	+125	°C
Analog supply voltage	VCC1, VCC2, VBP	V <sub>cc</sub>	-0.3	+3.7	V
Digital supply voltage RF	VDIG	$V_{DIG}$	-0.3	+3.7	V
DC supply voltage core	VDD18	VDD18	-0.3	+1.95	V
DC supply voltage VDDIO domain	VDDIO	VDDIO	-0.3	+3.6	V
DC supply voltage USB	VDD_USB	VDD_USB	-0.3	+3.6	V
DC supply voltage LDO18	LDO_IN	LDO_IN	-0.3	+3.6	V
DC supply voltage LDOBAT	LDOBAT_IN	LDOBAT_IN	-0.3	+3.6	V
DC supply voltage VBAT	VBAT	VBAT	-0.3	+3.6	V
Digital input voltage	P0, P15, P30, XT_IN, TMS, TCK, TDI, NTRST, DBG_EN, LDO_EN, NRESET		-0.3	+1.95	V
Digital input voltage	USB_DM, USB_DP		-0.3	+3.6	V
Digital input voltage	P1, P2, P8, P9, P12 to P14, P16 to P27, P29, P31		-0.3	+5.0	V

Note: Minimum/maximum limits are at +25°C ambient temperature, unless otherwise specified.

## 7. Handling

The ATR0635P1 is an ESD-sensitive device. The current ESD values are to be defined. Observe proper precautions for handling.



## 8. Thermal Resistance

Parameters	Symbol	Value	Unit
Junction ambient according to JEDEC51-5	R <sub>thJA</sub>	49.5	K/W





## 9. Operating Range

Parameters	Pins	Symbol	Min	Тур	Max	Unit
Analog supply voltage RF	VCC1, VCC2, VBP	V <sub>cc</sub>	2.70		3.30	V
Digital supply voltage RF	VDIG	$V_{DIG}$	1.65	1.8	1.95	V
Digital supply voltage core	VDD18	VDD18	1.65	1.8	1.95	V
Digital supply voltage VDDIO domain <sup>(1)</sup>	VDDIO	VDDIO	1.65	1.8/3.3	3.6	V
Digital supply voltage USB <sup>(2)</sup>	VDD_USB	VDD_USB	3.0	3.3	3.6	V
DC supply voltage LDO18	LDO_IN	LDO_IN	2.3		3.6	V
DC supply voltage LDOBAT	LDOBAT_IN	LDOBAT_IN	2.3		3.6	V
DC Supply voltage VBAT	VBAT	VBAT	1.5		3.6	V
Supply voltage difference $(V_{\Delta} = V_{CC} - V_{DIG})$		$V_{\scriptscriptstyle{\Delta}}$		≥ 0.80		V
Temperature range		Temp	-40		+85	°C
Input frequency		f <sub>RF</sub>		1575.42		MHz
Reference frequency GPS XTAL		f <sub>TCXO</sub>		23.104		MHz
Reference frequency RTC		f <sub>XTC</sub>		32.768		KHz

Notes: 1. VDDIO is the supply voltage for the following GPIO-pins: P1, P2, P8, P12, P14, P16, P17, P18, P19, P20, P21, P23, P24, P25, P26, P27 and P29

2. Values defined for operating USB Interface. Otherwise VDD\_USB may be connected to ground.

## 10. Electrical Characteristics

If no additional information is given in column Test Conditions, the values apply to temperature range from -40°C to +85°C.

No.	Parameters	Test Conditions	Pin	Symbol	Min	Тур	Max	Unit	Type*
1	RF Front-end								
1.1	Output frequency	f <sub>TXCO</sub> = 23.104 MHz	C3	f <sub>IF</sub>		96.764		MHz	Α
1.2	Input impedance (balanced)	f <sub>RF</sub> = 1575.42 MHz	D1, C1	Z <sub>11</sub>		10 – j80		Ω	С
1.3	Mixer conversion gain		C3	G <sub>MIX</sub>		10		dB	С
1.4	Mixer noise figure (SSB)		C3	NF <sub>MIX</sub>		6		dB	С
1.5	Maximum total gain	$V_{AGCO} = 2.2V$		G <sub>max_tot</sub>		90		dB	С
1.6	Total noise figure (SSB)			NF <sub>tot</sub>		6.8		dB	С
2	VGA/AGC								
2.1	Minimum gain	$V_{AGCO} = 1.0V$		G <sub>VGA,min</sub>		0		dB	С
2.2	Maximum gain	$V_{AGCO} = 2.2V$		G <sub>VGA,max</sub>		70		dB	С
2.3	Control-voltage sensitivity	$V_{AGCO} = 2.2V$		$N_{VGA,min}$		6.6		dB/V	D
2.3	Control-voltage sensitivity	V <sub>AGCO</sub> = 1.0V		N <sub>VGA,max</sub>		150		dB/V	D

<sup>\*)</sup> Type means: A = 100% tested, B = 100% correlation tested, C = Characterized on samples, D = Design parameter

- 2. The LDOBAT is a built in low dropout voltage regulator, which provides the supply voltage VBAT18 for the RTC, backup SRAM, P9, P13, P22, P31, NSLEEP and NSHDN. The LDOBAT voltage regulator switches in battery mode if LDOBAT\_IN falls below 1.5V.
- 3. Supply voltage VBAT18 for backup domain is generated internally by the LDOBAT.
- 4. If no current is caused by outputs (pad output current as well as current across internal pull-up resistors)

## 10. Electrical Characteristics (Continued)

If no additional information is given in column Test Conditions, the values apply to temperature range from -40°C to +85°C.

No.	Parameters	Test Conditions	Pin	Symbol	Min	Тур	Max	Unit	Type*
2.4	AGC cut-off frequency	C <sub>ext</sub> = open	A4	f <sub>3dB_AGC</sub>		250		kHz	D
2.5	AGC cut-off frequency	C <sub>ext</sub> = 100 pF	A4	f <sub>3dB_AGC</sub>		33		kHz	D
3	PMSS								
3.1	Voltage level power-on		F4, G4, H4	V <sub>PU,on</sub>	1.3			V	А
3.2	Voltage level power-off		F4, G4, H4	$V_{PU,off}$			0.5	V	Α
4	LDO18 <sup>(1)</sup>								
4.1	Output voltage		LDO_OUT		1.65	1.8	1.95	V	Α
4.2	Output current		LDO_OUT				30	mA	Α
4.3	Current consumption	After startup, no load, at room temperature					80	μΑ	А
4.4	Current consumption	Standby mode (LDO_EN = 0), at room temperature				1	5	μΑ	А
5	LDOBAT <sup>(2)</sup>		•						•
5.1	Output voltage <sup>(3)</sup>		VBAT18		1.65	1.8	1.95	V	Α
5.2	Current consumption LDOBAT_IN <sup>(4)</sup>	After startup (sleep/backup mode), at room temperature					15	μΑ	А
5.3	Current consumption VBAT	After startup (backup mode and LDOBAT_IN = 0V), at room temperature					10	μΑ	А
5.4	Current consumption	After startup (normal mode), at room temperature					1.5	mA	С
6	Core								
6.1	DC supply voltage VDD18			V <sub>O,18</sub>	0		VDD18	V	D
6.2	DC supply voltage VDDIO			V <sub>O,IO</sub>	0		VDDIO	V	D
6.3	Low-level input voltage VDD18 domain	VDD18 = 1.65V to 1.95V		V <sub>IL,18</sub>	-0.3		0.3 × VDD18	V	С
6.4	High-level input voltage VDD18 domain	VDD18 = 1.65V to 1.95V		V <sub>IH,18</sub>	0.7 × VDD18		VDD18 + 0.3	V	С
6.5	Schmitt trigger threshold rising	VDD18 = 1.65V to 1.95V	CLK23	V <sub>th+,CLK23</sub>			0.7 × VDD18	V	С
6.6	Schmitt trigger threshold falling	VDD18 = 1.65V to 1.95V	CLK23	V <sub>th-,CLK23</sub>	0.3 × VDD18			V	С

 $<sup>^{\</sup>star}$ ) Type means: A = 100% tested, B = 100% correlation tested, C = Characterized on samples, D = Design parameter

- 2. The LDOBAT is a built in low dropout voltage regulator, which provides the supply voltage VBAT18 for the RTC, backup SRAM, P9, P13, P22, P31, NSLEEP and NSHDN. The LDOBAT voltage regulator switches in battery mode if LDOBAT\_IN falls below 1.5V.
- 3. Supply voltage VBAT18 for backup domain is generated internally by the LDOBAT.
- 4. If no current is caused by outputs (pad output current as well as current across internal pull-up resistors)





## 10. Electrical Characteristics (Continued)

If no additional information is given in column Test Conditions, the values apply to temperature range from -40°C to +85°C.

No.	Parameters	Test Conditions	Pin	Symbol	Min	Тур	Max	Unit	Type*
6.7	Schmitt trigger hysteresis	VDD18 = 1.65V to 1.95V	CLK23	V <sub>hyst,CLK23</sub>	0.2		0.55	V	С
6.8	Schmitt trigger threshold rising	VDD18 = 1.65V to 1.95V	NRESET	V <sub>th+,NRESET</sub>	0.8		1.3	٧	С
6.9	Schmitt trigger threshold falling	VDD18 = 1.65V to 1.95V	NRESET	V <sub>th-,NRESET</sub>	0.46		0.77	V	С
6.10	Low-level input voltage VDDIO domain	VDDIO = 1.65V to 3.6V		$V_{\rm IL,IO}$	-0.3		+0.41	V	С
6.11	High-level input voltage VDDIO domain	VDDIO = 1.65V to 3.6V		$V_{\rm IH,IO}$	1.46		5.0	V	С
6.12	Low-level input voltage VBAT18 domain	VBAT18 = 1.65V to 1.95V	A11, B10, C10, D10	V <sub>IL,BAT</sub>	-0.3		+0.41	V	С
6.13	High-level input voltage VBAT18 domain	VBAT18 = 1.65V to 1.95V	A11, B10, C10, D10	$V_{IH,BAT}$	1.46		5.0	٧	С
6.14	Low-level input voltage USB	VDD_USB = 3.0V to 3.6V	C9, D9	$V_{\rm IL,USB}$	-0.3		+0.8	V	С
6.15	High-level input voltage USB	VDD_USB = 3.0V to 3.6V 39 $\Omega$ source resistance + 27 $\Omega$ external series resistor	C9, D9	V <sub>IH,USB</sub>	2.0		4.6	V	С
6.16	Low-level output voltage VDD18 domain	I <sub>OL</sub> = 1.5 mA, VDD18 = 1.65V		V <sub>OL,18</sub>			0.4	V	Α
6.17	High-level output voltage VDD18 domain	I <sub>OH</sub> = -1.5 mA, VDD18 = 1.65V		V <sub>OH,18</sub>	VDD18 - 0.45			V	Α
6.18	Low-level output voltage VDDIO domain	I <sub>OL</sub> = 1.5 mA, VDDIO = 3.0V		$V_{OL,IO}$			0.4	V	Α
6.19	High-level output voltage VDDIO domain	I <sub>OH</sub> = -1.5 mA, VDDIO = 3.0V		V <sub>OH,IO</sub>	VDDIO - 0.5			V	Α
6.20	Low-level output voltage VBAT18 domain	I <sub>OL</sub> = 1 mA	P9, P13, P22, P31	$V_{OL,BAT}$			0.4	V	Α
6.21	High-level output voltage VBAT18 domain	$I_{OH} = -1 \text{ mA}$	P9, P13, P22, P31	V <sub>OH,BAT</sub>	1.2			V	Α
6.22	Low-level output voltage USB	$I_{OL}$ = 2.2 mA, VDD_USB = 3.0V to 3.6V, 27 $\Omega$ external series resistor	DP, DM	V <sub>OL,USB</sub>			0.3	V	А
6.23	High-level output voltage USB	$I_{OH}$ = 0.2 mA, VDD_USB = 3.0V to 3.6V, 27 $\Omega$ external series resistor	DP, DM	$V_{OH,USB}$	2.8			V	А
6.24	Input-leakage current (standard inputs and I/Os)	VDD18 = 1.95V V <sub>IL</sub> = 0V		I <sub>LEAK</sub>	-1		+1	μΑ	С
6.25	Input capacitance			I <sub>CAP</sub>			10	pF	D

<sup>\*)</sup> Type means: A = 100% tested, B = 100% correlation tested, C = Characterized on samples, D = Design parameter

- 2. The LDOBAT is a built in low dropout voltage regulator, which provides the supply voltage VBAT18 for the RTC, backup SRAM, P9, P13, P22, P31, NSLEEP and NSHDN. The LDOBAT voltage regulator switches in battery mode if LDOBAT\_IN falls below 1.5V.
- 3. Supply voltage VBAT18 for backup domain is generated internally by the LDOBAT.
- 4. If no current is caused by outputs (pad output current as well as current across internal pull-up resistors)

## 10. Electrical Characteristics (Continued)

If no additional information is given in column Test Conditions, the values apply to temperature range from -40°C to +85°C.

No.	Parameters	Test Conditions	Pin	Symbol	Min	Тур	Max	Unit	Type*
6.26	Input pull-up resistor NRESET		A7	R <sub>PU</sub>	0.5		1.8	kΩ	Α
6.27	Input pull-up resistors TCK, TDI, TMS		G9, H10, G10	R <sub>PU</sub>	7		18	kΩ	Α
6.28	Input pull-up resistors P9, P13, P22, P31		A11, B10, C10, D10	R <sub>PU</sub>	100		235	kΩ	Α
6.29	Input pull-down resistors DBG_EN, NTRST		E8, H11	R <sub>PD</sub>	7		18	kΩ	Α
6.30	Input pull-down resistors P0, P15, P30		C8, F11, G12	R <sub>PD</sub>	100		235	kΩ	Α
6.31	Configurable input pull-up resistors P1, P2, P8, P12, P14, P16 to P21, P23 to P27, P29	VDDIO = 3.6V V <sub>PAD</sub> = 0V		R <sub>CPU</sub>	50		160	kΩ	A
6.32	Configurable input pull-down resistors P1, P2, P8, P12, P14, P16 to P21, P23 to P27, P29	VDDIO = 3.6V V <sub>PAD</sub> = 3.6V		R <sub>CPD</sub>	40		160	kΩ	Α
6.33	Configurable input pull-up resistor USB_DP (idle state)		C9	R <sub>CPU</sub>	0.9		1.575	kΩ	Α
6.34	Configurable input pull-up resistor USP_DP (operation state)		C9	R <sub>CPU</sub>	1.425		3.09	kΩ	A
6.35	Input pull-down resistors USB_DP, USB_DM		C9, D9	$R_{PD}$	10		500	kΩ	А

<sup>\*)</sup> Type means: A = 100% tested, B = 100% correlation tested, C = Characterized on samples, D = Design parameter

- 2. The LDOBAT is a built in low dropout voltage regulator, which provides the supply voltage VBAT18 for the RTC, backup SRAM, P9, P13, P22, P31, NSLEEP and NSHDN. The LDOBAT voltage regulator switches in battery mode if LDOBAT\_IN falls below 1.5V.
- 3. Supply voltage VBAT18 for backup domain is generated internally by the LDOBAT.
- 4. If no current is caused by outputs (pad output current as well as current across internal pull-up resistors)





## 11. Power Consumption

Table 11-1. Leakage Currents

Parameter	Conditions	Тур.	Max.	Unit	Type*
Leakage current VDD18	VDD18 = 1.95V, no currents across pull-up resistors, PLL disabled	10	200	μΑ	Α
Leakage current VDDIO	VDDIO = 1.95V no currents across pull-up resistors	2	5	μΑ	Α
Leakage current LDOBAT + backup domain	No currents across pull-up resistors	7	20	μΑ	Α

 $<sup>^{\</sup>star}$ ) Type means: A = 100% tested, B = 100% correlation tested, C = Characterized on samples, D = Design parameter

Table 11-2. Power Consumption

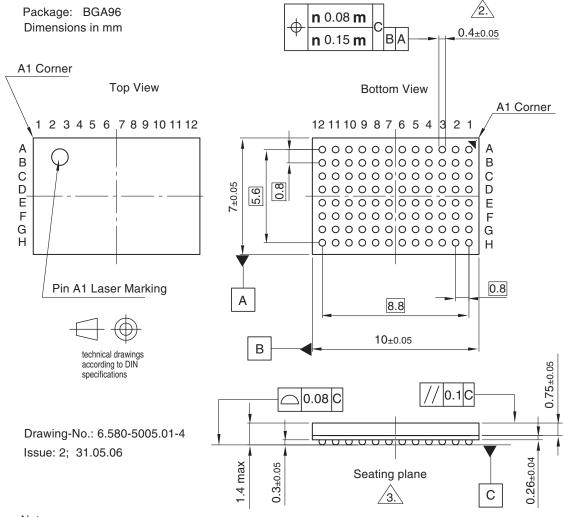
Mode	Conditions	Тур.	Unit	Type*
Sleep	At 1.8V, no CLK23	0.065		С
Shutdown	RTC, backup SRAM and LDOBAT	0.007	0.007	
	atellite acquisition 40		mA	С
Normal	Normal tracking on 6 channels with 1 fix/s; each additional active tracking channel adds 0.5 mA	29		
	All channels disabled	26		С

 $<sup>^{\</sup>star}$ ) Type means: A = 100% tested, B = 100% correlation tested, C = Characterized on samples, D = Design parameter

## 12. Ordering Information

Extended Type Number	Package	MPQ	Remarks
ATR0635P1-7KQY	BGA96	3000	7 mm $\times$ 10 mm, 0.8 mm pitch, Pb-free, RoHS-compliant
ATR0635-EK1	-	1	Evaluation kit/Road test kit
ATR0635-DK1	-	1	Design kit including design guide and PCB Gerber files

## 13. Package Information



#### Note:

- 1. All dimensions and tolerance conform to ASME Y 14.5M-1994
- Dimension is measured at the maximum solder ball diameter, parallel to primary datum  $\boxed{C}$ Primary datum  $\boxed{C}$  and seating plane are defined by the spherical crowns of the solder balls
- 4. The surface finish of the package shall be EDM CHARMILLE #24 #27
- 5. Unless otherwise specified tolerance: Decimal ±0.05, Angular ±2°
- 5. Raw ball diameter: 0.4 mm ref.





# 14. Revision History

Please note that the following page numbers referred to in this section refer to the specific revision mentioned, not to this document.

Revision No.	History
4979D-GPS-06/08	<ul> <li>Section 8 "Thermal Resistance" on page 27 added</li> <li>Section 10 "Electrical Characteristics" numbers 2.6 and 2.7 on page 29 deleted</li> <li>Section 10 "Electrical Characteristics" numbers 4.2, 6.7 and 6.26 to 6.35 on pages 29 to 31 changed</li> <li>Section 11 "Power Consumption" on page 32 changed</li> </ul>
4979C-GPS-07/07	Table 3-1 "ATR0635P1 Pinout" on page 6 changed     Section 9 "Electrical Characteristics" numbers 6.31 and 6.32 on page 31 changed
4979B-GPS-03/07	Table 3-2 "Signal Description" on pages 9 to 11 changed



#### Headquarters

Atmel Corporation

2325 Orchard Parkway San Jose, CA 95131 USA

Tel: 1(408) 441-0311 Fax: 1(408) 487-2600

#### International

Atmel Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimshatsui East Kowloon Hong Kong

Tel: (852) 2721-9778 Fax: (852) 2722-1369 Atmel Europe

Le Krebs 8, Rue Jean-Pierre Timbaud BP 309 78054

Saint-Quentin-en-Yvelines Cedex France

Tel: (33) 1-30-60-70-00 Fax: (33) 1-30-60-71-11

Atmel Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan

Tel: (81) 3-3523-3551 Fax: (81) 3-3523-7581

#### **Product Contact**

Web Site

www.atmel.com

Technical Support gps@atmel.com

Sales Contact
www.atmel.com/contacts

Literature Requests

www.atmel.com/literature

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN ATMEL'S TERMS AND CONDITIONS OF SALE LOCATED ON ATMEL'S WEB SITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.



© 2008 Atmel Corporation. All rights reserved. Atmel<sup>®</sup>, logo and combinations thereof, and others are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. ARM<sup>®</sup>, ARMPowered<sup>®</sup> logo, ARM7TDMI<sup>®</sup>, Thumb<sup>®</sup> and others are registered trademarks or trademarks of Atmel Corporation. Other terms and product names may be trademarks of others.