

300 to 850nm Response (S-20) 38mm(1-1/2 Inch) Diameter, 10-stage, Head-On Type

The configuration and basing diagram of the R1387 are identical with 6199 Photomultiplier tubes.

GENERAL

Parameter		Description/Value	Unit
Spectral Response		300 to 850	nm
Wavelength of Maximum Response		420	nm
Photocathode	Material	Multialkali	-
	Minimum Effective Area	34	mm dia.
Window Material		Borosilicate glass	-
Dynode	Structure	Circular-cage	-
	Number of Stages	10	-
Direct Interelectrode Capacitances	Anode to Last Dynode	3.0	pF
	Anode to All Other Electrodes	4.0	pF
Base		12-pin base JEDEC No.B12-43	-
Suitable Socket		E678-12A(supplied)	-
Weight		81	g

MAXIMUM RATINGS (Absolute Maximum Values)

Parameter		Value	Unit
Supply Voltage	Between Anode and Cathode	1250	Vdc
	Between Anode and Last Dynode	250	Vdc
Average Anode Current		0.2	mA
Ambient Temperature		-30 to +50	°C

CHARACTERISTICS (at 25°C)

Parameter		Min.	Typ.	Max.	Unit
Cathode Sensitivity	Luminous (2856K)	80	150	-	μA/lm
	Radiant at 420nm	-	64	-	mA/W
	Red/White Ratio (R-68)	-	0.2	-	-
Anode Sensitivity	Luminous (2856K)	10	50	-	A/lm
	Radiant at 420nm	-	2.1 × 10 ⁴	-	A/W
Gain		-	3.3 × 10 ⁵	-	-
Anode Dark Current (after 30min. storage in darkness)		-	4	25	nA
Time Response	Anode Pulse Rise Time	-	2.8	-	ns
	Electron Transit Time	-	40	-	ns

NOTE: Anode characteristics are measured with the voltage distribution ratio shown below.

VOLTAGE DISTRIBUTION RATIO AND SUPPLY VOLTAGE

Electrodes	K	Dy1	Dy2	Dy3	Dy4	Dy5	Dy6	Dy7	Dy8	Dy9	Dy10	P
Ratio	2	1	1	1	1	1	1	1	1	1	1	1

Supply Voltage : 1000Vdc, K : Cathode, Dy : Dynode, P : Anode

PHOTOMULTIPLIER TUBE R1387

Figure 1: Typical Spectral Response

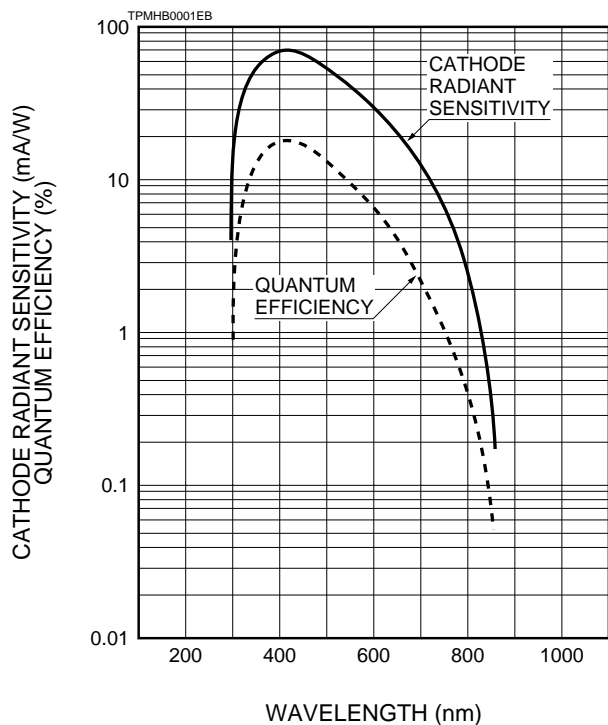


Figure 2: Typical Gain




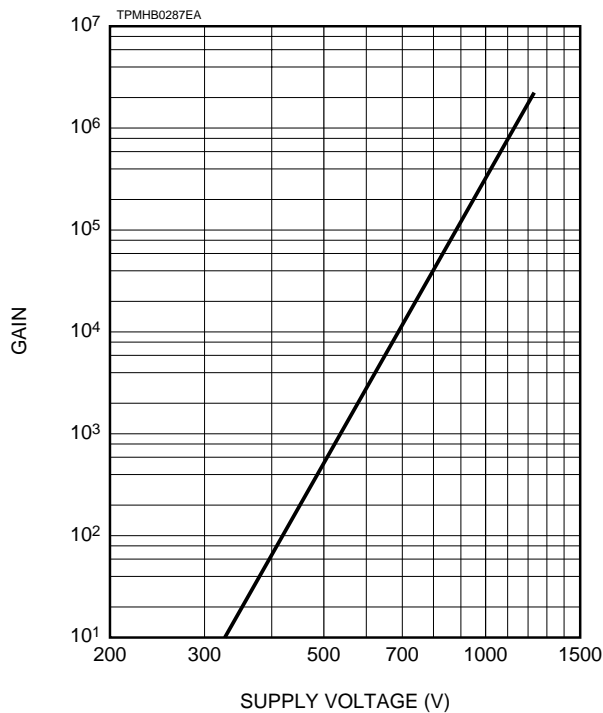


Figure 3: Dimensional Outline and Basing Diagram (Unit: mm)

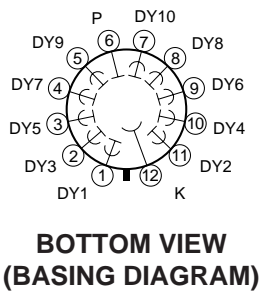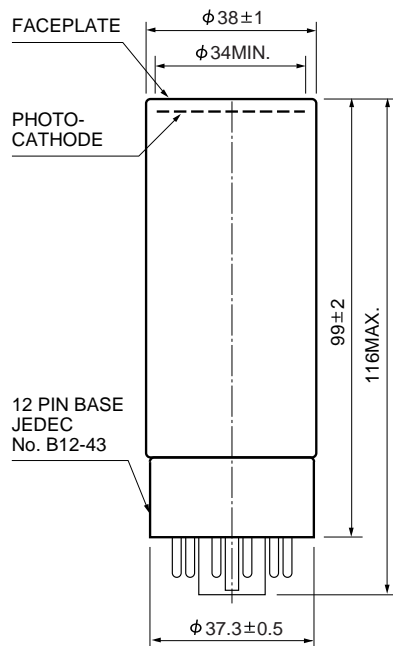

TPMHA0228EA

Socket (E678 - 12A)

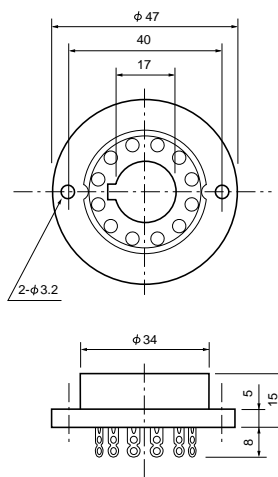

TACCA0009EB

HAMAMATSU

HOME PAGE URL <http://www.hamamatsu.com>

HAMAMATSU PHOTONICS K.K., Electron Tube Center

314-5, Shimokanzo, Toyooka-village, Iwata-gun, Shizuoka-ken, 438-0193, Japan, Telephone: (81)539/62-5248, Fax: (81)539/62-2205

U.S.A.: Hamamatsu Corporation: 360 Foothill Road, P. O. Box 6910, Bridgewater, N.J. 08807-0910, U.S.A., Telephone: (1)908-231-0960, Fax: (1)908-231-1218

Germany: Hamamatsu Photonics Deutschland GmbH: Arzbergerstr. 10, D-82211 Herrsching am Ammersee, Germany, Telephone: (49)8152-375-0, Fax: (49)8152-2658

France: Hamamatsu Photonics France S.A.R.L.: 8, Rue du Saule Trapu, Parc du Moulin de Massy, 91882 Massy Cedex, France, Telephone: (33)1 69 53 71 00, Fax: (33)1 69 53 71 10

United Kingdom: Hamamatsu Photonics UK Limited: Lough Point, 2 Gladbeck Way, Windmill Hill, Enfield, Middlesex EN2 7JA, United Kingdom, Telephone: 44(20)8-367-3560, Fax: 44(20)8-367-6384

North Europe: Hamamatsu Photonics Norden AB: Smidesvägen 12, SE-171-41 SOLNA, Sweden, Telephone: (46)8-509-031-00, Fax: (46)8-509-031-01

Italy: Hamamatsu Photonics Italia: S.R.L.: Strada della Moia, 1/E, 20020 Arese, (Milano), Italy, Telephone: (39)02-935 81 733, Fax: (39)02-935 81 741

TPMH1117E02
DEC. 1999