

INFRARED GAS ANALYZER (HIGH PERFORMANCE MODEL)

DATA SHEET

ZPB

This gas analyzer (ZPB) is capable of measuring the concentration of NO, SO₂, CO₂, CO and O₂ components in sample gas. NO, SO₂, CO₂, CO are measured by nondispersion infrared method (NDIR), While O₂ is measured by fuel cell or paramagnetic and zirconia method. Through use of the sample switching system, ZPB is capable of canceling drift in zero point of the measurable component by NDIR.

Optimum use as an analyzer unit of measurement system for combustion exhaust gas from refuse incinerator and boiler, or gas from various industrial furnaces.

FEATURES

1. High sensitivity

Equipped with the newest upgraded mass flow sensor. It is measurable of 0-50ppm range by newly-designed measurement unit.

2. Excellent stability

Due to adoption of sample switching method (note1). It is capable of canceling drift in zero point of measurable component.

3. Easy maintenance

Single beam design simplifies maintenance and minimizes maintenance costs compared with double beam or similarly equipper GFC based system.

4. Small and light

The size is small 133x483x382mm (HxWxD) and light (11kg). But it is capable max.5 component measurement in one analyzer.

5. Extensive functions

Various optional functions are available such as auto calibration control, atmospheric pressure correction, high and low concentration alarm, remote range switch, and range identification signal, etc.

note1) Excellent long term stability due to sample gas and relative gas introduced alternately to the measurement unit.

SPECIFICATIONS

Standard Specifications

Principle of measurement:

NO, SO₂, CO₂, CO;

Non-dispersion infrared-ray absorption method (NDIR method) Single light source and single beams (single beam system)



O₂ ;Fuel cell O₂ sensor (built in) or paramagnetic O₂ sensor (build-in) or zirconia O₂ sensor (externally installed TYPE: ZFK7)

Measurable gas components and measuring range:

	Minimum range	Maximum range		
NO	0 - 50ppm	0 - 5000ppm		
SO ₂	0 - 50ppm	0 - 5000ppm		
CO ₂	0 - 50ppm	0 - 25vol%		
CO	0 - 50ppm	0 - 5000ppm		
$O_2 \\ \left(\begin{array}{c} \text{built in} \\ \text{fuel cell} \end{array} \right)$	0 - 10vol%	0 - 25vol%		
O2 (built-in Paramagnetic)	0 - 5vol%	0 - 100vol%		
O₂ (External Zirconia	0 - 5vol%	0 - 25vol%		

- Max. 5 components measurement including O₂.
- Measuring range ratio max. 1:10 (except O₂)
- Measuring ranges are changeable between the specified minimum and maximum range

Settable one range or two ranges

- * In measurement range low range is called first range, high range is called second range.
- For possible combinations of components and ranges, refer to Table 1.

Measured value indication:

Digital indication in 4 digits (LCD panel with LED back light)

- Instantaneous value of each component
- Instantaneous value after O_2 correction (only in NO, SO₂, CO measurement with O_2)
- Average value after O₂ correction (only in NO, SO₂, CO measurement with O_2)
- O2 average value

EDS3-144 Date Oct. 24, 2011

Analog output signals:

4 to 20mA DC or 0 to 1V DC,

isolated internally from circuit and ground.Output lines are non-isolated each other.;12 outputs max.

- Allowable load 550 Ω for 4 to 20mA DC Allowable load 100k Ω for 0 to 1V DC
- * Refer to Table2 for the channel No. of displayed values and analog output signals.

Analog input signal:

For signal input from externally installed O_2 sensor.

- Signal requirement;
- Signal from Fuji's Zirconia O₂ sensor (TYPE: ZFK7)
- (2) 0 to 1V DC from an O₂ sensor Input section is not isolated. This feature is effective when an O₂ sensor is not built in.
- * Externally installed O₂ sensor should be purchased separately.

Digital output: (Option)

- 1c contact (24V DC/1A, resistive load) max.15 outputs
 - Instrument error, calibration error, range identification, auto calibration status, solenoid valve drive for auto calibration, High/Low limit alarm contact output
 - * All relay contacts are isolated mutually and from the internal circuit.

Digital input: (Option)

- Voltage contact (supply 12 to 24V DC (15mA max)) Max.9 inputs Remote range change over, auto cali
 - bration remote start, remote hold, average value reset, Isolated from the internal circuit with photocoupler.
- Power supply:
 Voltage rating
 ; 100V to 240V AC

 Allowable range
 ; 85V to 264V AC

 Frequency
 ; 50Hz/60Hz

 Power consumption
 ; 110VA max.

Operation conditions:

Ambient temperature;

-5°C to 45°C

- (40°C max. when 2 optical systemat 200V AC power source)
- Ambient humidity ; 90% RH max.,

non-condensing

Storage conditions:

Ambient temperature; -20°C to 60°C Ambient humidity ; 100% RH max., non-condensing

Dimensions ($H \times W \times D$):

	133 x 483 x 382mm
Mass:	Approx. 11 kg
Finish color:	Front panel; Cool gray (PANTON 1C-F)
Enclosure:	Steel casing, for indoor use
Material of gas-o	contacting parts:

Gas inlet/outlet; SUS304 Sample cell; SUS304,chloroprene rubber Infrared-ray transmitting window; CaF2 Paramagnetic O₂ sensor cell; SUS316 Fuel cell O₂ sensor cell; ABS resin Internal piping; Toaron, Teflon, Polypropylen Solenoid valve; fluoro-rubber Gas inlet/outlet: Rc1/4 or NPT1/4 internal thread Purge gas flow rate: 1L/min (when required) Life time of fuel cell O₂ sensor: 2 years

Standard Functions

Output signal holding:

	Output signals are held unchanged during manual and auto calibrations by activation of holding (turning "ON" its setting). The values held are those just before start calibration mode or setting value. It is selectable. Indication of instantaneous values will not
Switch ranges:	be held. The switch ranges function is available in manual, auto, and remote modes. Only
	preset switch method is effective.
Manual:	Allows range to switch by key operation.
Auto:	Automatically switched from first range to
	second range when the measured value
	exceeds to 90%FS of first range.
	Automatically switched from second range
	to first range when the measured value drops to 80% or less first range.
Remote:	Voltage contact input (for measurable
(Option)	components)
	Allows range to switch via an external
	signal when remote range switch input
	is received.
	When the contact input terminals for
	each component are input voltage, the
	first range is selected, and it is switched
	to the second range when the terminals
× T I	are open.
* Ihese r	ange value are settable between original

 These range value are settable between origin first range and second range.

Optional Functions

Remote output I	holding:
	Output signal is held at the last value or preset value by voltage input the remote
	output holding input terminals.
	Holding is maintained while the voltage
	input the terminals. Indication of instan-
	taneous values are not held.
Range identifica	tion signal:
	The present measuring range is identified
	by a contact position.
	The contact output terminals for each component close when the first range is selected, and when the second range is selected, the terminals are open.
Auto calibration	:
	Auto calibration is carried out periodically at the preset cycle.
	When a standard gas cylinder for calibration and a solenoid valve for opening/closing the gas flow line are prepared externally

the gas flow line are prepared externally by the customer, calibration will be carried out with the solenoid valve drive contacts for zero calibration and each span calibration turned on/off sequentially at the set auto calibration timing.

Auto calibration cycle setting:	Correction formula:
Auto calibration cycle is set.	
Setting is variable within 1 to 99 hours (in	$C = \frac{21-On}{21-Os} \times Cs$
increments of 1 hour) or 1 to 40 days (in	21-Os
increments of 1 day).	C : Sample gas concentration after O2
Gas flow time setting:	correction
The time for flowing each calibration gas	Cs : Measured concentration of sample
in auto calibration is set.	gas
Settable within 60 to 900 seconds (in	Os : Measured O ₂ concentration (Limit
increments of 1 second)	setting: 1 to 20% O ₂)
Auto calibration remote start:	On : Reference O ₂ concentration
Auto calibration starts by opening the auto	(value changeable by setting.0 to
calibration remote start input terminal after	19% O ₂)
short circuiting for 1.5 sec or longer.	Average value after O ₂ correction and O ₂ average value
Auto calibration starts when contacts	calculation:
open.	The result of O ₂ correction or instantaneous
Auto zero calibration:	O2 value can be output as an average value
Auto zero calibration is carried out periodi-	over the preset period of time.
cally at the preset cycle.	Used for averaging is the moving average
This cycle is independent on "Auto calibra-	method in which sampling is carried out
tion" cycle.	at intervals of 30 seconds.
When zero calibration gas and solenoid	(Output is updated every 30 seconds. It is
valve for opening/closing the calibration	the average value in the determined period
gas flow line are prepared externally by	of time just before the latest updating.)
the customer, zero calibration will be	Averaging time is settable within 1 to 59
carried out with the solenoid valve drive	minutes (in increments of 1 minute) or 1
contact for zero calibration turned on/off	to 4 hours (in increments of 1 hour).
at the set auto zero calibration timing.	Average value resetting:
Auto zero calibration cycle setting:	The above-mentioned output of average
Auto zero calibration cycle is set.	value is started from the initial state by
Setting is variable within 1 to 99 hours (in	opening the average value resetting input
increments of 1 hour) or 1 to 40 days (in	terminals after short circuiting for 1.5 sec
increments of 1 day)	or longer.
Gas flow time setting:	Output is reset by input voltage and re-
The timing for flowing zero gas in auto	started by opening.
zero calibration is set.	Communication function:
Settable within 60 to 900 seconds (in	RS-485 (9pins D-sub connector)
increments of 1 second)	Half-duplex bit serial
High/low limit alarm:	Start-stop synchronization
Alarm contact output turns on when	ModbusTM protocol
measurement value reaches the preset	Contents : Read/Write parameters
high or low limit alarm value.	Read measurement concen-
Contacts close when the instantaneous	tration and instrument status.
value of each channel exceeds the high	Remark : When connecting via RS-
alarm limit value or falls below the low	232C interface, an RS-232C
alarm limit value.	↔ RS-485 converter should
Instrument error contact output:	be used.
Contacts turn on at occurrence of analyzer	Atmospheric pressure correction:
error No. 1, 2, 3 or 10.	Measure atmospheric pressure and cal-
Calibration error contact output:	culate compensation (for use, be sure to
Contacts turn on at occurrence of manual	relieve the exhaust gas from analyzer to
or auto calibration error (any of errors No.	the atmosphere)
4 to 9).	After atmospheric pressure correction;
Auto calibration status contact outputs:	Zero point : No influenced
Contacts turn on during auto calibration.	Span point: The change is 0.5% measured
O correction of management NO. SO, and CO.	value or less relating to the
O ₂ correction: Correction of measured NO, SO ₂ and CO gas concentrations into values at reference	change of the atmospheric
O ₂ concentrations into values at reference	pressure 1%.
S2 Sonoontration.	Correction range: 700hPa-1050hPa

Performance

Repeatability: Linearity:	±0.5% of full scale ±1% of full scale				
	prior to atmospheric pressure correction (option)				
Zero drift:	±0.5% of full scale/week (measurable component of NDIR) ±2.0% of full scale/week (O ₂ sensor)				
Span drift:	±2.0% of full scale/week				
Response time (T90) :				
	30 seconds or better				
	Response interval is changed depending				
on timing of the switching gas by samp					
	switching operation. (Td=5-20 seconds)				
Interference from	n other gases:				
	Sample switching design effectively				

Sample switching design effectively minimizes interference. But it may occur depending on component gas and its concentration.

Preprocessing can further decrease influence in this ease.

Contact manufacturer.

EC Directive Compliance

The product conforms to the requirements of the Low Voltage Directive 2006/95/EC and EMC directive 89/336/EEC (as amended by Directive 92/31/EEC), both as amended by Directive 93/68/EEC.

It conforms to following standards for product safety and electromagnetic compatibility ;

EN61010-1 : 2010 Safety requirements for electrical equipment for measurement, control and laboratory use. "Installation Category II" "Pollution Degree 2"

EN61326-1 : 2006

Electrical equipment for measurement, control and laboratory use — EMC requirements.

Standard Requirements for Sample Gas

Flow rate: Temperature:	1.0L / min ±0.2L / min 0 to 50°C
Pressure:	10 kPa or less (Gas outlet side should be
	open to the atmospheric air.)
Dust:	100 µg/Nm ³ or less in particle size of 0.3
	µm or less
Mist:	Unallowable
Moisture:	Below a level where saturation occurs at
	2°C or less. (Contain comparable sample
	gas and relative gas)
Corrosive comp	onent:
	1 ppm or less
Standard gas fo	r calibration:
	Zero gas ; Dry N ₂
	Span gas : Each sample gas having con-

Span gas ; Each sample gas having concentration 90 to 100% of its measuring range (recommended). In case a zirconia O_2 analyzer is installed externally and calibration is carried out on the same calibration gas line:

- Zero gas ; Dry air or atmospheric air (Do not use with CO₂ measurement)
- Span gas ; For other than O₂ measurement, each sample gas having concentration 90 to 100% of its measuring range For O₂ measurement, O₂ gas of 1 to 2 vol%/remains N₂ gas

Relative gas for sample switching:

For sample gas dewpoint > 2°C sample switching relative gas is wet N₂ or atmospheric air.


For sample gas dewpoint < $2^{\circ}C$ use dry N₂ or dry air. (Not contain measurement component gas.)

With CO_2 measurement, do not use atmospheric air and use N_2 .

Installation Requirements

- Indoor use (Select a place where the equipment does not receive direct sunlight, draft/rain or radiation from hot substances. If such a place cannot be found, a roof or cover should be prepared for protection.)
- Avoid a place where unit receives heavy vibration.
- Select a place where atmospheric air is clean.


Principle diagram of NDIR type measurement (For NO, SO₂, CO₂, CO)

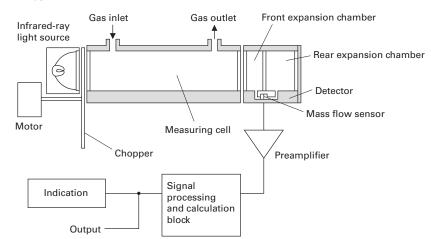


Principle diagram of fuel cell type measurment (For O₂)


Principle diagram of paramagnetic type measurment (For O₂)

Output

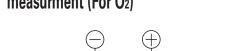

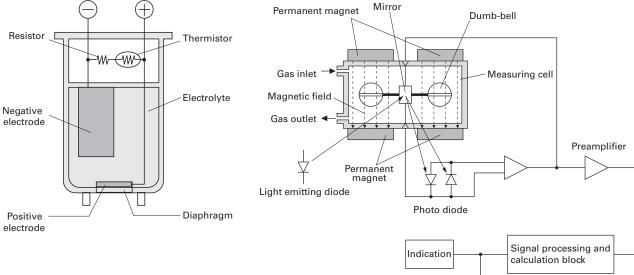

Principle diagram of Sample switching method

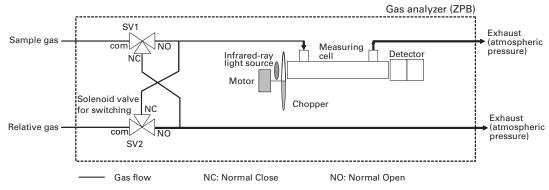

Explanation of the sample switching method

Sample gas and relative gas are introduced alternately and constantly to the sample cell of the analyzer by Solenoid valve for switching flow (SV1,SV2)

Solenoid valve SV1 and Solenoid valve SV2 are switched by the signal sending from the analyzer. Analyzer measures each sample gas and each relative gas on proper timing and transform the change of the relative gas and sample gas as the concentrate value (= gas concentration of the measurable component) and send output signal.

Due to monitoring the change of the relative gas and sample gas all the time, Influence of the interference components and zero drift are eliminated.

Drain 🖌

Examples of sampling system configuration including gas analyzer

* This is a typical configuration. As configuration might be different depending on measuring objects. Please consult with us.

⑦Solenoid valve


Reference gas for span calibration

⋟

Gas

analyzei (ZPB)

Exhaust (atmospheric pressure)

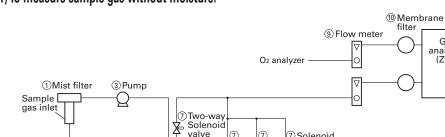

Solenoid valve

1

⋟

 \bigcirc


⋟

1) To measure sample gas without moisture.


⑤Drain pot

⑥Ball valve 6 Ball valve

11 Demister

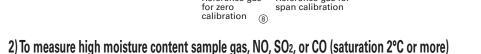

Reference gas

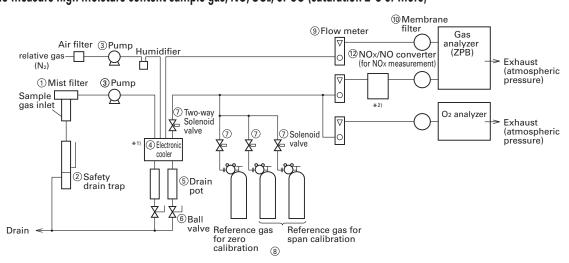

*1) Be sure to remove the moisture to be temperature 5°C or lower from measuring gas by electronic cooler and water concentration should be equalized in reference gas and sample gas.

*2) Be sure to use NO $_2$ /NO converter in case of measuring NOx.

List of sampling devices (example)

No.	Device name	Fuji's type
1	Mist filter	ZBBK1V03-0
2	Safety drain trap	ZBH51603
3	Pump	ZBG80
4	Electoric cooler	ZBC92004
5	Drain pot	ZBH13003 (Length 255mm)
6	Ball valve	ZBFB1
$\overline{\mathcal{O}}$	Two-way solenoid valve	
8	Standard gas for calibration	ZBM Y04-0 (Codes in to be selected depending on application)
9	Flow meter	ZBD42203
10	Membrane filter	ZBBM2V03-0
11	Demister	ZBH35003
(12)	NO ₂ /NO converter	ZDL02001
(13)	Three-way solenoid valve	

Note) The above is a typical configuration example. As configuration may differ depending on measuring objects, please consult us.

Table 1 Measurable component and range - availability check table -

Procedure of range selection

On one component analyzer:

First determine 1st range, then select 2nd range from the right of your determination range in following tables. More than two components:

The procedure is same as one component. Difference is 2nd range in the tables.

The 2nd range in the tables for two and more components is maximum available range.

2nd range is selectable from 1st range to 2nd range(max) on the table.

1-component analyzer:NO

1st range				2nd rang	le		
0-50ppm	None	0-100ppm	0-200ppm	0-250ppm	0-300ppm	0-500ppm	
0-100ppm	None	0-200ppm	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	
0-200ppm	None	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	
0-250ppm	None	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm		
0-300ppm	None	0-500ppm	0-1000ppm	0-2000ppm			
0-500ppm	None	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	
0-1000ppm	None	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm		
0-2000ppm	None	0-2500ppm	0-3000ppm	0-5000ppm			
0-2500ppm	None	0-3000ppm	0-5000ppm				
0-3000ppm	None	0-5000ppm					
0-5000ppm	None						

1-component analyzer:SO₂

1st range	2nd range						
0-50ppm	None	0-100ppm	0-200ppm	0-250ppm	0-300ppm	0-500ppm	
0-100ppm	None	0-200ppm	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	
0-200ppm	None	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	
0-250ppm	None	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	0-2500ppm	
0-300ppm	None	0-500ppm	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	
0-500ppm	None	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	
0-1000ppm	None	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	0-1%	
0-2000ppm	None	0-2500ppm	0-3000ppm	0-5000ppm			
0-2500ppm	None	0-3000ppm	0-5000ppm				
0-3000ppm	None	0-5000ppm					
0-5000ppm	None						

1-component analyzer:CO

1st range				2nd rang	le		
0-50ppm	None	0-100ppm	0-200ppm	0-250ppm	0-300ppm	0-500ppm	
0-100ppm	None	0-200ppm	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	
0-200ppm	None	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	
0-250ppm	None	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	0-2500ppm	
0-300ppm	None	0-500ppm	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	
0-500ppm	None	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	
0-1000ppm	None	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	0-1%	
0-2000ppm	None	0-2500ppm	0-3000ppm	0-5000ppm			
0-2500ppm	None	0-3000ppm	0-5000ppm				
0-3000ppm	None	0-5000ppm					
0-5000ppm	None						

$1\text{-}component \ analyzer: CO_2$

1st range				2nd rang	je		
0-50ppm	None	0-100ppm	0-200ppm	0-250ppm	0-300ppm	0-500ppm	
0-100ppm	None	0-200ppm	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	
0-200ppm	None	0-250ppm	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	
0-250ppm	None	0-300ppm	0-500ppm	0-1000ppm	0-2000ppm	0-2500ppm	
0-300ppm	None	0-500ppm	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	
0-500ppm	None	0-1000ppm	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	
0-1000ppm	None	0-2000ppm	0-2500ppm	0-3000ppm	0-5000ppm	0-1%	
0-2000ppm	None	0-2500ppm	0-3000ppm	0-5000ppm			
0-2500ppm	None	0-3000ppm	0-5000ppm				
0-3000ppm	None	0-5000ppm					
0-5000ppm	None						

2-component analyzer:NO/SO2

2-componen	Lanalyzel.NO/	302	-
1-component	t:NO		
1st range	2nd range (max)		
0-50ppm	0-500ppm		
0-100ppm	0-1000ppm		
0-200ppm	0-2000ppm		
0-250ppm	0-2500ppm		
0-300ppm	0-2500ppm		
0-500ppm	0-5000ppm		->
0-1000ppm	0-5000ppm		
0-2000ppm	0-5000ppm		
0-2500ppm	0-5000ppm		
0-3000ppm	0-5000ppm		
0-5000ppm	None		

The second component

should be selected as shown in the right table.

2-component:SO2 2nd range (max) 1st range 0-500ppm 0-50ppm 0-100ppm 0-1000ppm 0-200ppm 0-2000ppm 0-250ppm 0-2500ppm 0-300ppm 0-2500ppm 0-500ppm 0-5000ppm 0-5000ppm 0-1000ppm 0-5000ppm 0-2000ppm 0-2500ppm 0-5000ppm 0-3000ppm 0-5000ppm 0-5000ppm None

1-component:NO 2nd range (max) 1st range 0-500ppm 0-50ppm 0-100ppm 0-1000ppm 0-200ppm 0-2000ppm 0-250ppm 0-2500ppm 0-300ppm 0-2500ppm 0-500ppm 0-5000ppm 0-1000ppm 0-5000ppm 0-2000ppm 0-5000ppm 0-2500ppm 0-5000ppm 0-3000ppm 0-5000ppm 0-5000ppm None

2-component analyzer:NO/CO

	2-component:CO							
	1st range	2nd range (max)						
(0-50ppm	0-500ppm						
	0-100ppm	0-1000ppm						
	0-200ppm	0-2000ppm						
	0-250ppm	0-2500ppm						
	0-300ppm	0-2500ppm						
	0-500ppm	0-5000ppm						
	0-1000ppm	0-5000ppm						
	0-2000ppm	0-5000ppm						
	0-2500ppm	0-5000ppm						
	0-3000ppm	0-5000ppm						
	0-5000ppm	None						

The second component should be selected as shown in the right table.

2-component analyzer:CO₂/CO

1-component:CO ₂		2-component:CO				
1st range 2nd range (max)		1st range/2nd range (max)				
0-50ppm	0-500ppm					
0-100ppm						
0-200ppm		0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2000ppm, 0-300/2000ppm, 0-500/5000ppm, 0-1000/5000ppm,				
0-250ppm	0-1000ppm	0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm				
0-300ppm						
0-500ppm						
0-200ppm	0-2000ppm					
0-250ppm	0-2500ppm					
0-300ppm	0-2500ppm					
0-500ppm						
0-1000ppm						
0-2000ppm		0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm				
0-2500ppm	— 0-5000ppm					
0-3000ppm						
0-3000ppm	4					
0-3000ppm						
0-5000ppm						
0-5%	0-25%					
0-10%	0-25%	0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2000ppm, 0-300/2000ppm, 0-500/5000ppm, 0-1000/5000ppm,				
0-20%	0-25%	0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm				
0-25%	0-25%					

3-component analyzer:NO/SO₂/CO >>> Combination of 1st component NO and 2nd component SO₂/3rd component CO

1-component:NO					
1st range	2nd range (max)				
0-50ppm	0-500ppm				
0-100ppm	0-1000ppm				
0-200ppm	0-2000ppm				
0-250ppm	0-2500ppm				
0-300ppm	0-2500ppm				
0-500ppm	0-5000ppm				
0-1000ppm	0-5000ppm				
0-2000ppm	0-5000ppm				
0-2500ppm	0-5000ppm				
0-3000ppm	0-5000ppm				
0-5000ppm	None				

+

2-componen	t:SO ₂	3-component:CO
1st range	2nd range (max)	1st range/2nd range (max)
0-50ppm	0-500ppm	0.50/2002222 0.400/10002222 0.200/20002222 0.200/20002222 0.200/20002222 0.400/20002222 0.2000222
0-100ppm	0-1000ppm	0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2000ppm, 0-300/2000ppm, 0-500/2000ppm, 0-1000/2000ppm, 0-2000ppm
0-200ppm	0-2000ppm	0.50/500-5-5-0.500/5000-5-5-0.500/5000-5-5-0.500/5500-5-5-0.500/5000-5-5-0.500/5000-5-5-0.500/5000-5-5-
0-250ppm	0.2500mmm	0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/3000ppm, 0-1000/3000ppm,
0-300ppm	0-2500ppm	0-2000/3000ppm, 0-2500/3000ppm, 0-3000ppm
0-500ppm		
0-1000ppm		0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/5000ppm, 0-1000/5000ppm,
0-2000ppm	0-3000ppm 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm	0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm
0-2500ppm		
0-500ppm		
0-1000ppm		0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/5000ppm,
0-2000ppm	0-5000ppm	0-3000/5000ppm, 0-5000ppm
0-2500ppm		
0-3000ppm	0-5000ppm	0.500//000/
0-5000ppm	None	0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm

4-component analyzer:NO/SO₂/CO₂/CO >>> 1st NO/4th CO and 2nd SO₂/3rd CO₂

1-component:NO					
1st range	2nd range (max)				
0-50ppm	0-500ppm				
0-100ppm	0-1000ppm				
0-200ppm	0-2000ppm				
0-250ppm	0-2500ppm				
0-300ppm	0-2500ppm				
0-500ppm	0-5000ppm				
0-1000ppm	0-5000ppm				
0-2000ppm	0-5000ppm				
0-2500ppm	0-5000ppm				
0-3000ppm	0-5000ppm				
0-5000ppm	None				

+

2-component:SO2		4-component:CO			
1st range	2nd range (max)	1st range/2nd range (max)			
0-50ppm	0-500ppm	0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2000ppm, 0-300/2000ppm, 0-500/2000ppm, 0-1000/2000ppm, 0-2000ppm			
0-100ppm	0-1000ppm	0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-200/2000ppm, 0-300/2000ppm, 0-300/2000ppm, 0-2000ppm, 0-2000ppm			
0-200ppm	0-2000ppm	0.50/500-5-5-0.100/2000-5-5-0.200/2000-5-5-0.200/2000-5-5-0.200/2000-5-5-0.100/2000-5-5-0.100/2000-5-5-			
0-250ppm	0.2500mmm	0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/3000ppm, 0-1000/3000ppm,			
0-300ppm	0-2500ppm	0-2000/3000ppm, 0-2500/3000ppm, 0-3000ppm			
0-500ppm					
0-1000ppm		0-50/500ppm, 0-100/1000ppm, 0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/5000ppm, 0-1000/5000ppm,			
0-2000ppm	0-3000ppm 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm	0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm			
0-2500ppm					
0-500ppm					
0-1000ppm	0-200/2000ppm, 0-250/2500ppm, 0-300/2500ppm, 0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/				
0-2000ppm	0-5000ppm	0-3000/5000ppm, 0-5000ppm			
0-2500ppm					
0-3000ppm	0-5000ppm	0 500/5000222 0 1000/5000222 0 2000/5000222 0 2500/5000222 0 2000/5000222 0 5000222			
0-5000ppm	None	0-500/5000ppm, 0-1000/5000ppm, 0-2000/5000ppm, 0-2500/5000ppm, 0-3000/5000ppm, 0-5000ppm			
	+				

CO2 component analyzer

3-component:CO ₂					
1st range 2nd range (max)					
0-5vol%	0-25vol%				

Code sym	bol		
		21st digit	Display /output contents
Р	Y	Y	Ch1:NO
А	Y	Y	Ch1:SO ₂
D	Y	Y	Ch1:CO ₂
В	Y	Y	Ch1:CO
F	Y	Y	Ch1:NO, Ch2:SO ₂
G	Y	Y	Ch1:NO, Ch2:CO
J	Y	Y	Ch1:CO ₂ , Ch2:CO
Ν	Y	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO
V	Y	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO
Р	1to 3	Y	Ch1:NO, Ch2:O ₂
Α	1to 3	Y	Ch1:SO ₂ , Ch2:O ₂
D	1to 3	Y	Ch1:CO ₂ , Ch2:O ₂
В	1to 3	Y	Ch1:CO, Ch2:O ₂
F	1to 3	Y	Ch1:NO, Ch2:SO ₂ , Ch3:O ₂
G	1to 3	Y	Ch1:NO, Ch2:CO, Ch3:O ₂
J	1to 3	Y	Ch1:CO ₂ , Ch2:CO, Ch3:O ₂
Ν	1to 3	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO, Ch4:O ₂
V	1to 3	Y	Ch1:NO, Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO, Ch5:O ₂
Р	1to 3	A *	Ch1:NOx, Ch2:O ₂ , Ch3:corrected NOx
Α	1to 3	A *	Ch1:SO ₂ , Ch2:O ₂ , Ch3:corrected SO ₂
В	1to 3	A *	Ch1:CO, Ch2:O ₂ , Ch3:corrected CO
F	1to 3	A *	Ch1:NOx, Ch2:SO ₂ , Ch3:O ₂ , Ch4:corrected NOx, Ch5:corrected SO ₂
G	1to 3	A *	Ch1:NOx, Ch2:CO, Ch3:O ₂ , Ch4:corrected NOx, Ch5:corrected CO
J	1to 3	A *	Ch1:CO ₂ , Ch2:CO, Ch3:O ₂ , Ch4:corrected CO
Ν	1to 3	A *	Ch1:NOx, Ch2:SO ₂ , Ch3:CO, Ch4:O ₂ , Ch5:corrected NOx, Ch6:corrected SO ₂ , Ch7:corrected CO
V	1to 3	A *	Ch1:NOx, Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO, Ch5:O ₂ , Ch6:corrected NOx, Ch7:corrected SO ₂ , Ch8:corrected CO
Р	1to 3	C *	Ch1:NOx, Ch2:O ₂ , Ch3:corrected NOx, Ch4:corrected NOx average
А	1to 3	C *	Ch1:SO ₂ , Ch2:O ₂ , Ch3:corrected SO ₂ , Ch4:corrected SO ₂ average
В	1to 3	C *	Ch1:CO, Ch2:O ₂ , Ch3:corrected CO, Ch4:corrected CO average
F	1to 3	C *	Ch1:NOx, Ch2:SO ₂ , Ch3:O ₂ , Ch4:corrected NOx, Ch5:corrected SO ₂ , Ch6:corrected NOx average,
			Ch7:corrected SO ₂ average
G	1to 3	C *	Ch1:NOx, Ch2:CO, Ch3:O ₂ , Ch4:corrected NOx, Ch5:corrected CO, Ch6:corrected NOx average,
			Ch7:corrected CO average
J	1to 3	C *	Ch1:CO ₂ , Ch2:CO, Ch3:O ₂ , Ch4:corrected CO, Ch5:corrected CO average
Ν	1to 3	C *	Ch1:NOx, Ch2:SO ₂ , Ch3:CO, Ch4:O ₂ , Ch5:corrected NOx, Ch6:corrected SO ₂ , Ch7:corrected CO,
			Ch8:corrected NOx average, Ch9:corrected SO2 average, Ch10:corrected CO average
V	1to 3	C *	Ch1:NOx, Ch2:SO ₂ , Ch3:CO ₂ , Ch4:CO, Ch5:O ₂ , Ch6:corrected NOx, Ch7:corrected SO ₂ , Ch8:corrected CO,
			Ch9:corrected NOx average, Ch10 :corrected SO2 average, Ch11:corrected CO average

Table 2 Channel (Ch) No. and display/output contents comparison table

 \ast When the 21st digit code is A or C, the component of the NO analyzer is displayed as NOx.

CODE SYMBOLS

						12345678	9 10 1	1 12 13	14 15	16 17 1	8 19 20	212	2 23 24	25 -
Digit	0 10	Description			note	ZPB B 1	-ЩТ	ЦŪ	\square	Щ	Ш	-	Υ	Ц
4		<specification structure=""> Horizontal type(Terminal block for power supply) A</specification>												
	Horizontal typ Horizontal typ			suppiy)	note1	A								
5	<mounting></mounting>	e(i ower iniet,	with looky				+++	+ + +			+ + +			-
U	19 inch rack m	ounting type E	IA comformity(horizontal type)		в								
6	<measurable< td=""><td>component (N</td><td>IDIR)></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></measurable<>	component (N	IDIR)>											
		2nd component	3rd component	4th component										
	NO SO2	-	-	-		P								
	502 CO2	-	-	-		A								
	co	-	-	-		B								
	NO	SO ₂			+	F							+	
	NO	CO	-	-		G								
	CO ₂	со	-	-		J								
	NO	SO ₂	CO	-		N] []					
	NO	SO ₂	CO ₂	CO		V								
_	Others				<u> </u>	Z	++++				+ + +			4
7	<measurable< td=""><td>component (C</td><td>)2)></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></measurable<>	component (C)2)>											
	None External O2 ar	aluzor			note2									
	External zirco	nia O2 sensor	(ZEK7)		linez	2								
	Built-in fuel ce		(2110)			3								
	Built-in param		nsor			4								
8	<revision coc<="" td=""><td>e></td><td></td><td></td><td></td><td>1</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></revision>	e>				1								
9	<measuring r<="" td=""><td></td><td></td><td></td><td>note3</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></measuring>				note3									
	<measuring r<="" td=""><td></td><td></td><td></td><td>note3</td><td></td><td></td><td>+ + + +</td><td></td><td></td><td>+ + +</td><td></td><td></td><td>4</td></measuring>				note3			+ + + +			+ + +			4
11	<measuring r<="" td=""><td></td><td></td><td></td><td>note3</td><td></td><td>-+</td><td>+++</td><td></td><td></td><td>+ + +</td><td></td><td></td><td>Н</td></measuring>				note3		-+	+++			+ + +			Н
<u>12</u> 13	<measuring <="" raises="" td=""></measuring>	ange (NDIK)>2	and component	t, ∠nd range	note3 note3			+					+ -	Η
13	<measuring r<="" td=""><td></td><td></td><td></td><td>note3</td><td></td><td></td><td>-+++</td><td></td><td></td><td></td><td></td><td>+</td><td>Η</td></measuring>				note3			-+++					+	Η
15	<measuring r<="" td=""><td></td><td></td><td></td><td>note3</td><td></td><td></td><td></td><td>††</td><td></td><td></td><td></td><td></td><td>Η</td></measuring>				note3				††					Η
16	<measuring r<="" td=""><td></td><td></td><td></td><td>note3</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></measuring>				note3									
17	<measuring r<="" td=""><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></measuring>													
	None									Y				
	0-5/10%									A				
	0-5/25%									В				
	0-10/25%									- 121				-
	0-5% 0-10%													
	0-25%									V				
	0-50%									P				
	0-100%									R				
	Others									z				
18	<gas connect<="" td=""><td>ion></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></gas>	ion>												
	Rc ¹ /4									ŀ	1			
	NPT ¹ /4									2	2		1	4
19	<output></output>													
	DC0-1V DC4-20mA										A B			
	DC4-20mA DC0-1V+Com	munication fu	nction											
	DC4-20mA+C										C			
20	<language po<="" td=""><td></td><td></td><td></td><td>1</td><td></td><td></td><td></td><td></td><td></td><td>╧┼┤</td><td></td><td></td><td>Η</td></language>				1						╧┼┤			Η
	Janpanese (P				note4						IJ			
	English (UL)				note4						E			
	English (CEE)				note4						U			
0.6	Chinese (CCC				note4						C			4
21	<o<sub>2 correction</o<sub>	and O ₂ correc	ction average	output>	note5									
	None O ₂ correction											Y		
	O ₂ correction O ₂ correction	average										B		
	O ₂ correction		tion average									c		
22	<optional fun<="" td=""><td>ction (DIO)></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>1</td><td></td></optional>	ction (DIO)>											1	
	FAULT A. C		n <u>R</u> angeID/R	emote range										
	None											N	1	
												A		
												E		
	0											[E		
												F		
												C		
		0										F	1	
23	<pressure cor<="" td=""><td>ļ</td><td>· · ·</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>!'</td><td> </td><td>Η</td></pressure>	ļ	· · ·									!'	 	Η
	None												Y	
	Pressure com	pensation											1	
24	<unit></unit>													Π
	ppm, Vol%												A	
	mg/m³, g/m³				note6								В	Ц
					note7									
25	<adjustment></adjustment>	1												
25	For standard	combustion ex	khaust)											ź

RANGE CODE

Range	Code	Range	Code
0~50ppm	Α	0~5000ppm	Н
0~100ppm	B	0~1%	J
0~200ppm	C	0~2%	K
0~250ppm	D	0~3%	Q
0~300ppm	S	0~5%	L
0~500ppm	E	0~10%	M
0~1000ppm	F	0~20%	N
0~2000ppm	G	0~25%	V
0~2500ppm	U	Others	Z
0~3000ppm	Т		

O₂ measurement range

Measurement range	Range code	sensor O2 sensor		Zirconia O2 sensor (external)
0~5/10 vol%	А		0	0
0~5/25 vol%	В		0	0
0~10/25 vol%	С	0	0	0
0~5 vol%	L		0	0
0~10 vol%	М	0	0	0
0~25 vol%	V	0	0	0
0~50 vol%	Р		0	
0~100 vol%	R		Ó	

- note1)When "D" is specified at 4th digit, Power cable is supplied in the scope of supply. Cable specification should be specified at the 20th digit.
- note2)When "1"is specified at 7th digit, O₂ pt sensor signal has to be set as 0-1V DC linear corresponding to full scale. External zirconia O₂ sensor and external O₂ analyzer are not included in the scope of supply, and has to be separately ordered.

note3)Select the range code for each range from the range code table shown above. Range of fuel cell O₂ sensor is 0-10% or more.

- note4)Select the type of voltage rating, plug type and applicable standard of the power cable by 20th digit. Select a power cable for using at the location of end-user.
- note5) O_2 correction is caluculated only for NO, SO₂ and CO.
- note6)When 5 components measurement is specified, "H" must not be specified at 22nd digit. When 4 components measurement is specified and "H" is specified at 22nd digit, 3 points is maximum for alarm output function.
- note7)When "B" is specified at 24th digit, measuring range should be specified by ppm range code. In this case NO,SO₂ and CO measuring range are corresponding range in mg/m³. Please refer to the table shown below for the corresponding range code based on "mg/m³".
- note8)When "A"is specified at 25th digit ,the analyzer will be adjusted and delivered with the balance gas N₂. When other adjustment is required, please specify "Z". When "Z" is specified, please attach a list of gas composition contained in the measuring gas.

	Corresponding range in mg/m ³						
Range code	Unit : ppm	NO	SO ₂	CO			
A	0-50ppm	0-65.0mg/m ³	0-140mg/m ³	0-60.0mg/m ³			
В	0-100ppm	0-130mg/m ³	0-280mg/m ³	0-125mg/m ³			
С	C 0-200ppm		0-570mg/m ³	0-250mg/m ³			
D	0-250ppm	0-325mg/m ³	0-700mg/m ³	0-300mg/m ³			
S	0-300ppm	0-400mg/m ³	0-850mg/m ³	0-375mg/m ³			
E 0-500ppm		0-650mg/m ³	0-1,400mg/m ³	0-600mg/m ³			
F	0-1,000ppm	0-1,300mg/m ³	0-2,800mg/m ³	0-1,250mg/m ³			
G	0-2,000ppm	0-2,600mg/m ³	0-5,600mg/m ³	0-2,500mg/m ³			
U	0-2,500ppm	0-3,300mg/m ³	0-7,100mg/m ³	0-3,000mg/m ³			
Т	0-3,000ppm	0-4,000mg/m ³	0-8,500mg/m ³	0-3,750mg/m ³			
Н	0-5,000ppm	0-6,600mg/m ³	0-14.00g/m ³	0-6,250mg/m ³			

Corresponding mg/m³

The conversion formula "ppm" unit into "mg/m³" unit. NO (mg/m³) = $1.34 \times NO$ (ppm) SO₂ (mg/m³) = $2.86 \times SO_2$ (ppm) CO (mg/m³) = $1.25 \times CO$ (ppm)

SCOPE OF DELIVERY


- Gas analyzer ... 1 unit
- Replacement fuse (250V, 2A AC, delay type) ... 2 pcs
- Instruction manual ... 1 copy
- Connector for I/O connection ... 1 set
- Power cable (standard inlet type 2m) ... 1 pc

ORDERING INFORMATION

- 1. Code symbols
- 2. Application and composition of sample gas

OUTLINE DIAGRAMS (Unit : mm)

<TOP VIEW>

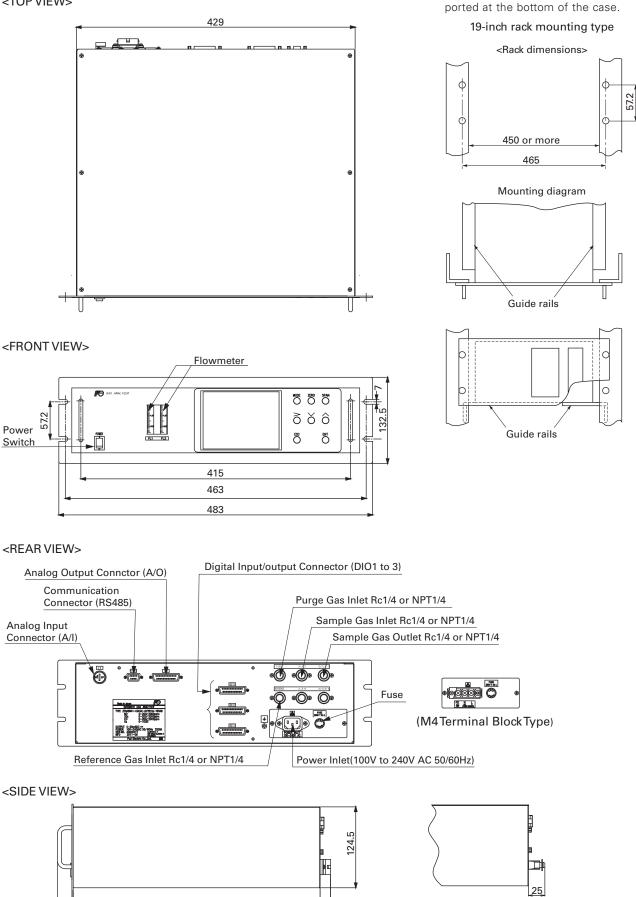

16

380

396 (Power Inlet Type(100V to 240V AC 50/60Hz))

(M4Terminal BlockType)


Mounting method

The analyzer weight should be sup-

24

EXTERNAL CONNECTION

<Analog output> A/O connector

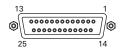



* In standard, displayed Channel No. and Analog Output No. are same.











1	- A01+
14	A01-
(2)	A02+
<u>_</u> 15	A02-
~	A03+
<u> </u>	A03-
(4)	
0	
	A05+
18	- AO5-
	AO6+
	AO6-
0	A07+
	A07-
~	A08+
<u> </u>	A08-
~~~	- A09+
0_	A03+
0	
10	
0	AO10-
<u> </u>	AO11+
0	AO11-
12	AO12+
	AO12-
(13)	NC
-	-

<RS485 communication signal>

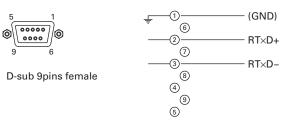

#### <Analog input> A/I connector (O2 signal input)

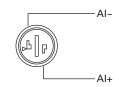

<Digital I/O> DIO 1 to 3 connector (option)

13		1
0	0000000000000 00000000000000	]@
25		14

D-sub 25pins female

* DIO 1 to 3 are all as same connector.

	DIO1 connector	DIO2 connector	DIO3 connecto	r
	- DI1+ - DI1–	DI4+ DI4-	DI7+ DI7-	Digital input
	- DI2+ - DI2–	DI5+ DI5-	DI8+ DI8-	OFF: 0V ON: 12 to 24V DC
	- DI3+ - DI3–	DI6+ DI6-	DI9+ DI9-	
(17) com (17) com (17) NO	DO1	D06	DO11	
(1) NC (1) NC (1) NC (1) NC (1) NC (1) NC (1) NC	DO2	DO7	DO12	
(NC) (NC) (NC) (NC) (NC) (NC) (NC) (NC)	DO3	DO8	DO13	Digital output max. contact load rating 24V DC/1A
2) NC 3) com 2) NO	DO4	DO9	DO14	0
() NC () NC	DO5	DO10	DO15	
20 12 23				
(13)				

# Contents of digital input signal

DI1	Remote hold		
DI2	Average value reset		
DI3	A. cal. start		
DI4	A. zero. cal. start		
DI5	Remote range Ch1		
DI6	Remote range Ch2		
DI7	Remote range Ch3		
DI8	Remote range Ch4		
DI9	Remote range Ch5		

#### Contents of digital output signal

	Independent on the number of component	1-component analyzer		2-component analyzer	3-component analyzer B, D, E, F, G, H	
22th digit → A, C		B, E	D, F, G, H	B, D, E, F, G, H		
DO1	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error	
DO2	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error	
DO3		A.cal.status	(A.cal.status)	(A.cal.status)	(A.cal.status)	
DO4		For zero gas	(For zero gas)	(For zero gas)	(For zero gas)	
DO5		For span gas Ch1	(For span gas Ch1)	(For span gas Ch1)	(For span gas Ch1)	
DO6	(Alarm1)	(Alarm1)		(For span gas Ch2)	(For span gas Ch2)	
D07	(Alarm2)	(Alarm2)			(For span gas Ch3)	
D08	(Alarm3)	(Alarm3)			(Range identification Ch1)	
DO9	(Alarm4)	(Alarm4)		(Range identification Ch1)	(Range identification Ch2)	
DO10	(Alarm5)	(Alarm5)	Range identification Ch1	(Range identification Ch2)	(Range identification Ch3)	
DO11			(Alarm1)	(Alarm1)	(Alarm1)	
DO12			(Alarm2)	(Alarm2)	(Alarm2)	
DO13			(Alarm3)	(Alarm3)	(Alarm3)	
DO14			(Alarm4)	(Alarm4)	(Alarm4)	
DO15			(Alarm5)	(Alarm5)	(Alarm5)	

The items in the parentheses may not be available depending on the selected type on 22th digit.

The normal open side (NO) of digital output is close when the function is active without range ID.

In case of range ID, normal open (NO) side is close with First-range. The normal close (NC) side is close with Second-range.

	4-component anal	yzer		5-component analyzer			
22th digit →	B, E	D, F	G	Н	B, E	D, F	G
DO1	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error	Instrument error
DO2	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error	Calibration error
DO3	A.cal.status		A.cal.status	A.cal.status	A.cal.status		A.cal.status
DO4	For zero gas		For zero gas	For zero gas	For zero gas		For zero gas
DO5	For span gas Ch1		For span gas Ch1	For span gas Ch1	For span gas Ch1		For span gas Ch1
DO6	For span gas Ch2		For span gas Ch2	For span gas Ch2	For span gas Ch2	Range identification Ch1	For span gas Ch2
D07	For span gas Ch3	Range identification Ch1	For span gas Ch3	For span gas Ch3	For span gas Ch3	Range identification Ch2	For span gas Ch3
DO8	For span gas Ch4	Range identification Ch2	For span gas Ch4	For span gas Ch4	For span gas Ch4	Range identification Ch3	For span gas Ch4
DO9		Range identification Ch3		Range identification Ch1	For span gas Ch5	Range identification Ch4	For span gas Ch5
DO10		Range identification Ch4		Range identification Ch2		Range identification Ch5	
DO11	(Alarm1)	(Alarm1)		(Alarm1)	(Alarm1)	(Alarm1)	Range identification Ch1
DO12	(Alarm2)	(Alarm2)	Range identification Ch1	(Alarm2)	(Alarm2)	(Alarm2)	Range identification Ch2
DO13	(Alarm3)	(Alarm3)	Range identification Ch2	(Alarm3)	(Alarm3)	(Alarm3)	Range identification Ch3
DO14	(Alarm4)	(Alarm4)	Range identification Ch3	Range identification Ch3	(Alarm4)	(Alarm4)	Range identification Ch4
DO15	(Alarm5)	Alarm5) (Alarm5) Range iden		Range identification Ch4	(Alarm5)	(Alarm5)	Range identification Ch5

### Exclusive Zirconia O₂ Sensor (to be purchased separately)

For O₂ correction, the gas analyzer ZPB can accept linearized 0 to 1V DC signal coming from analyzer calibrated 0 to 25% O₂ full scale. If the analyzer is not available, Fuji can supply exclusive Zirconia O₂ sensor Model ZFK. Measuring method:

Zirconia system

Measurable compone	ent and measu	ring range:
--------------------	---------------	-------------

	Measurable	component	Range		
	O2	Oxygen	0 to 25vol%		
Repeatability:		Within ± 0.5	5% of full scale		
Linearity:		Within $\pm$ 1% of full scale			
Zero drift:		Within ± 1% of full scale/week			
Span drift:		Within ± 2% of full scale/week			
Response time:		Approx. 20 seconds (for 90% response)			
Mea	asured gas fl	ow rate:			

 $0.5 \pm 0.25L$  / min


Remark: The Zirconia system, due to its principle, may produce a measuring error due to relative concentration versus the combustible O₂ gas concentration. Also, a corrosive gas (SO₂ of 250 ppm or more, etc.) may affect the life of the sensor.

### Gas inlet/outlet size:


	Rc ¹ /4 or NPT ¹ /4
Power supply:	Rated voltage ; 100 to 115V AC or
	200 to 240V AC
	Rated frequency ; 50Hz/60Hz
	Max. rated power; 215VA (during power
	ON)
	65VA (during steady-
	state operation)
Enclosure:	Steel casing, for indoor application
Indication:	Temperature indication (LED)
Temperature al	arm output:
	Contact output 1a contact,
	Contact capacity 220V, 1A AC (resistive
	load)
Outer dimensio	ns (H x W x D):
	141 x 170 x 190mm
Mass {weight}:	Approx. 3kg
Finish color:	Munsell 5Y 7/1

### **CODE SYMBOLS**

123 ZFK	456 7YY	7	8	9	10 11 12 13 Y 0 Y Y	Description
	7 Y Y					Measuring method Zirconia method
		9 B C				Power supply 100 to 115V AC 50/60Hz(Standard) 200 to 240V AC 50/60Hz(Standard) 200 to 240V AC 50/60Hz(CE mark)
				1 8		Gas inlet/outlet size Rc ¹ /4 NPT ¹ /4

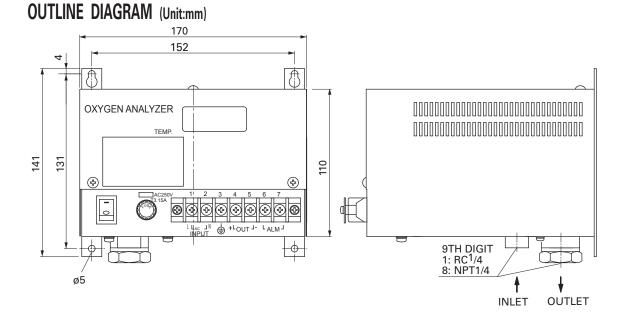

### EXTERNAL CONNECTION DIAGRAM

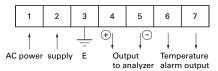

▲ Caution on Safety
 *Before using this product, be sure to read its instruction manual in advance.

### Fuji Electric Co., Ltd.

International Sales Div Sales Group Gate City Ohsaki, East Tower, 11-2, Osaki 1-chome, Shinagawa-ku, Tokyo 141-0032, Japan http://www.fujielectric.com Phone: 81-3-5435-7280, 7281 Fax: 81-3-5435-7425

http://www.fujielectric.com/products/instruments/